


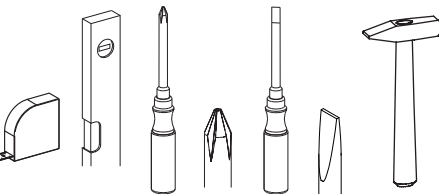


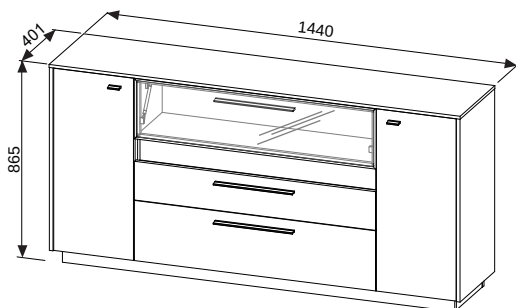

Sie benötigen:
You need:

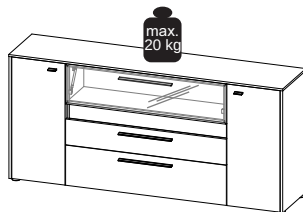

Type 630104 / 630204

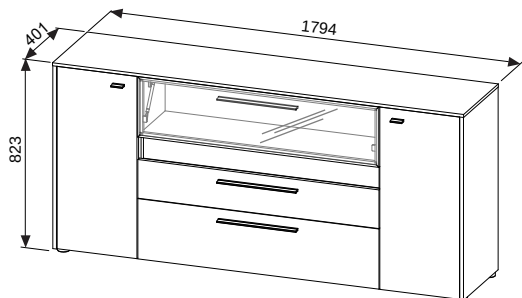

DIE HAUSMARKE
MÖBELPRODUKTION & VERTRIEB

DE

Wichtige Information!


Bitte die Montageanleitung vor Beginn sorgfältig studieren. Um eine ordnungsgemäße und mangelfreie Erstellung zu gewährleisten, muss die Montage exakt in der gezeigten Reihenfolge ausgeführt werden. Wir empfehlen die Montage nur durch fachkundiges Personal. Entsorgen Sie die Verpackung bzw. das Produkt nach Abnutzung umweltgerecht. Pflegehinweis! Bitte nur mit einem Staubtuch oder einem feuchten Lappen reinigen. Keine scheuernden Putzmittel verwenden! Hochglanzfronten erst 48 Std nach Entfernung der Schutzfolie reinigen. Hochglanzfronten nur mit weichem Tuch und 1%iger Wasser-Seife-Lösung reinigen - keine scheuernden Mittel, Säure, Lösungsmittel, Spiritus, Azeton etc. verwenden! Hochglanzfronten vor dauerhafter Feuchtigkeit schützen. Wandmontage: Der Untergrund der Wand ist vor der Montage auf die Eignung (Tragfähigkeit) zu prüfen. Das beiliegende Befestigungsmaterial ist nur für massives Mauerwerk geeignet! Beleuchtungen und Elektro Hinweise: Defekte Bauteile nur gegen solche gleicher Bauart umgehend ersetzen. Während der Reinigung des Möbels Stromzufuhr trennen. Elektrogeräte nicht verdecken (Wärmestau). Kleinkinder von Elektrogeräten fernhalten. Achtung, Heiße Oberflächen an Leuchtmitteln nicht berühren. Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

GB













Important Information!

Please carefully read through the assembly instructions before starting. To ensure proper, fault-free construction, assembly is to be carried out exactly as shown in the sequence. We recommend having the assembly done only by qualified personnel. Please dispose of the packaging and of an old product no longer in use without any danger to the environment. Care instructions! Please do only clean with a duster or a damp cloth. Do not use any scouring agents! After removing the protective foil, wait for 48 hours before cleaning high gloss fronts for the first time. Clean high gloss fronts only with a soft cloth and a 1% soap and water solution - do not use abrasive cleaning agents, acids, solvents, methylated spirits, or acetone etc.! Protect high gloss fronts from sustained exposure to moisture. Wall fixing: The foundation of the wall must be checked for suitability (stability) before assembly. The enclosed mounting material is only suitable for solid brickwork! Lighting and electrical instructions: Defective components must be replaced without delay and only with components of the same design. Disconnect from the power supply before cleaning the furniture. Do not cover electrical devices (heat build-up). Keep small children away from electrical devices. Attention! Do not touch the hot surfaces of light fittings. If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.


Type 630104 / 630204

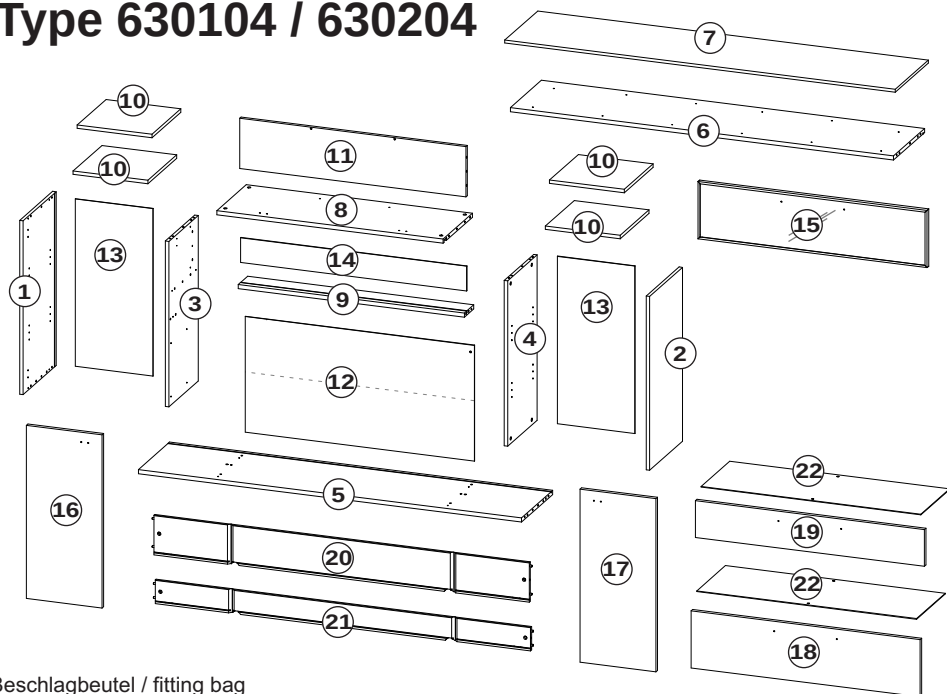


Beschlagbeutel / fitting bag

 KH1	2x	 KH2	2x	 KH3	2x	 3,9x22 KH4	2x	 GL	2x	 4,0x20 SD	4x				
 BD	28x	 AA	10x	 AB	14x	 12mm AC	4x	 8x30 DA	42x	 UN	4x	 NG	15x	 KS	20x
 350mm KAL	2x	 BB	16x	 4,0x30 SC	12x	 50mm GR1	2x	 345mm GR2	3x	 4,0x25 GS	8x	 4,0x10 GT	2x		
 350mm KAR	2x	 6,3x11 SS	8x	 FO	6x	 FU	6x	 LE	2x	 14mm AK4	12x	 WB	2x		
 TF	4x	 MP1	4x	 TA	2x	 H=2 MP2	2x	 3,5x12 SF	4x	 15mm AK5	4x	 15mm AK1	18x	 8mm AK2	2x
 10mm AK3	2x	 TD1	2x	 TD2	2x	 RK	6x	 RH	4x	 3,5x17 SA	28x	 3,0x15 SH	6x	 1038mm PR	1x




Type 630204

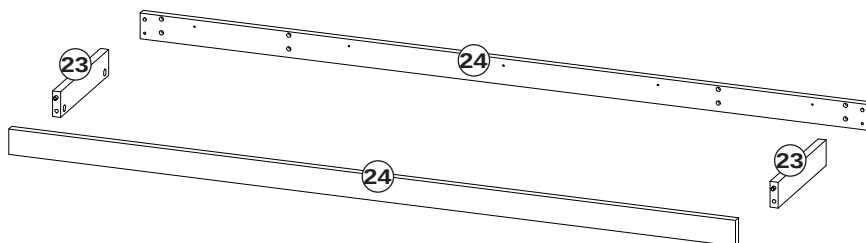

Beschlagbeutel / fitting bag




1

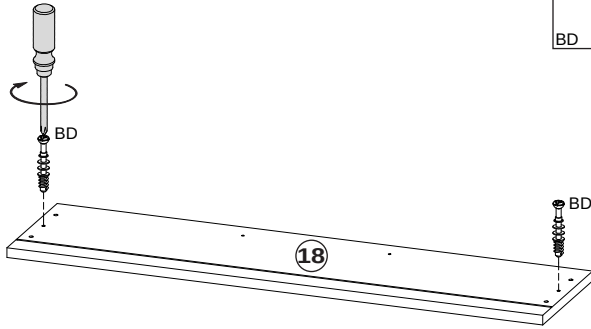


AC



12mm


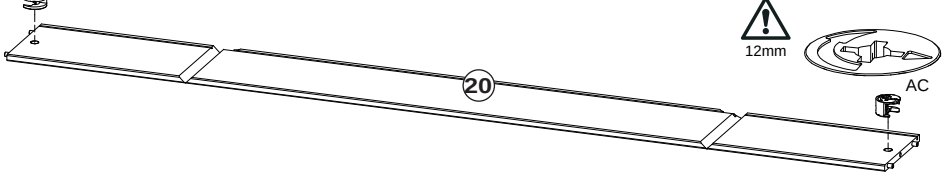


12mm






AC

2


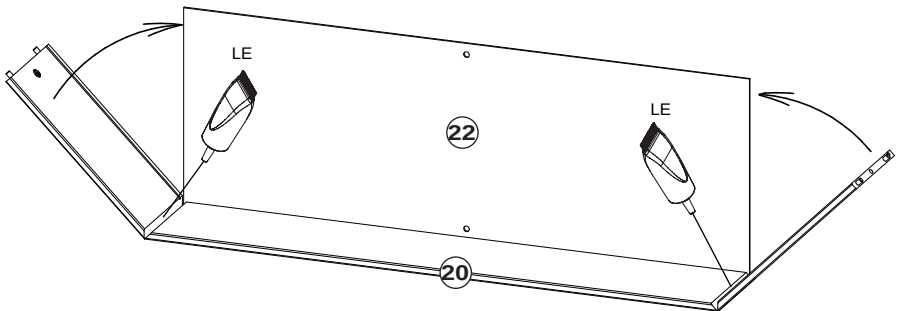



3




A

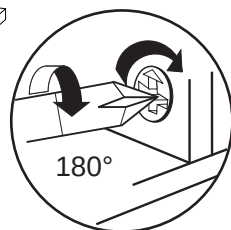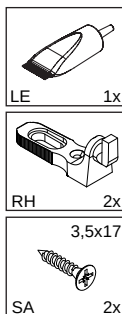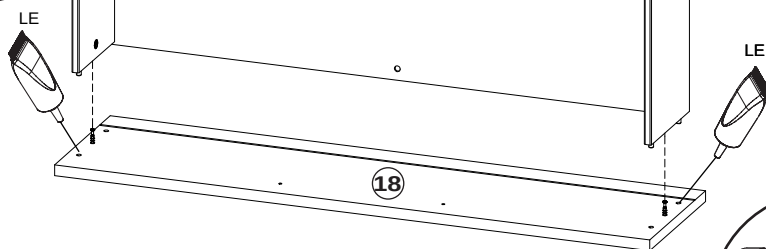





B

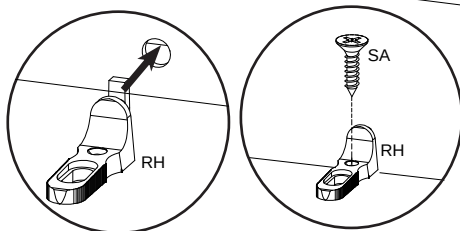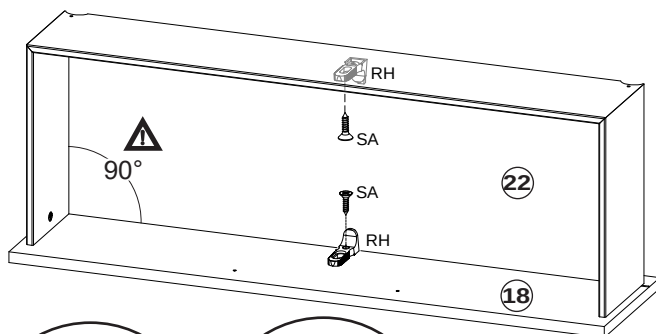



4

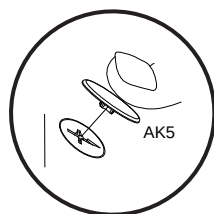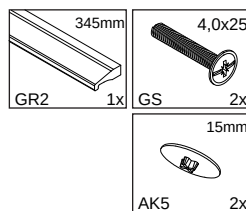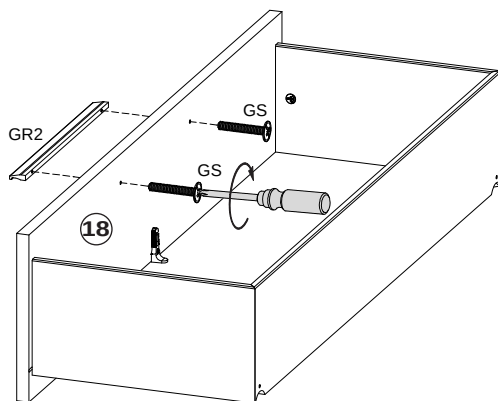

5

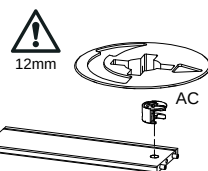
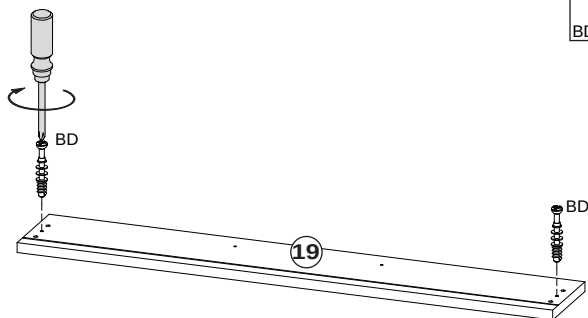



6


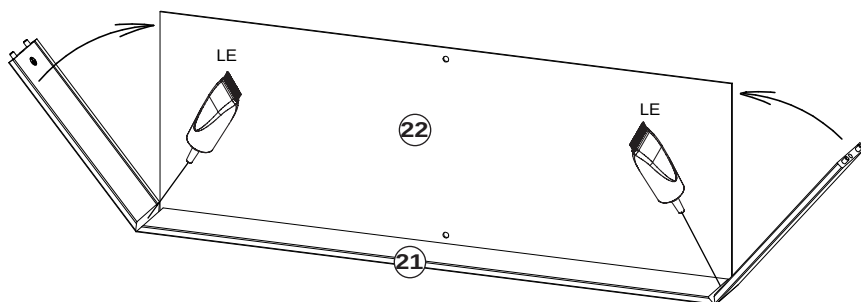



7




A

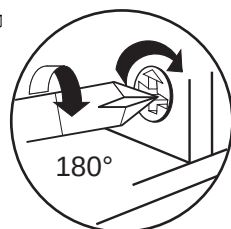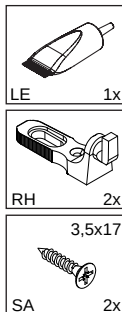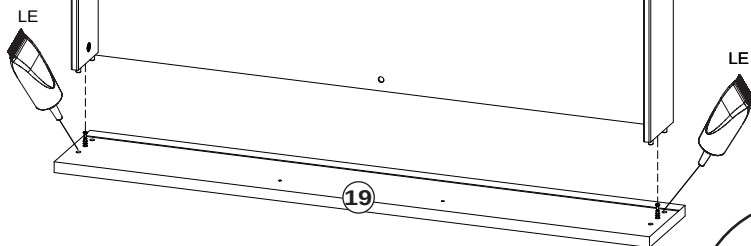





B

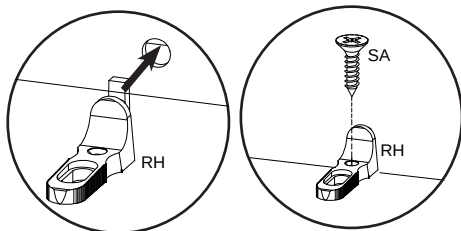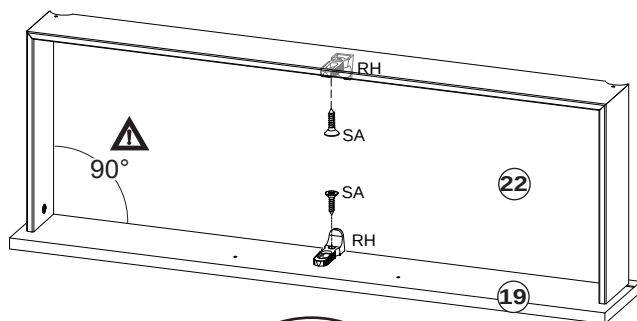







8

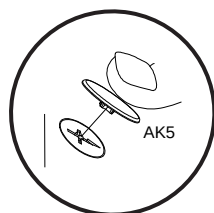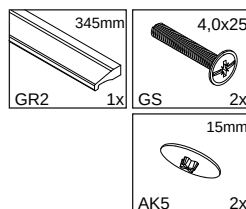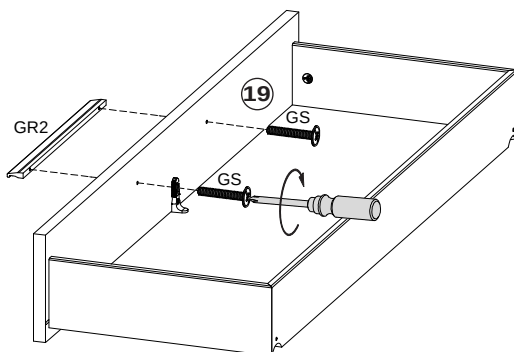

9

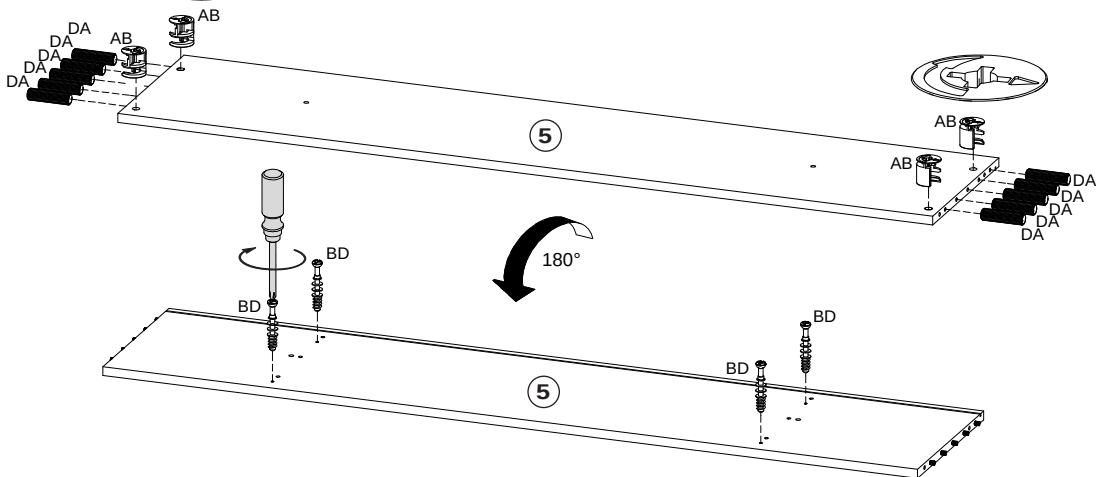


10

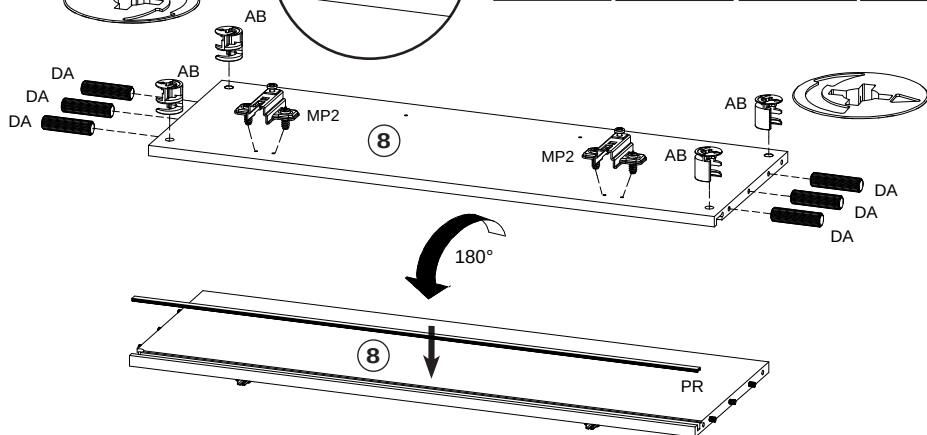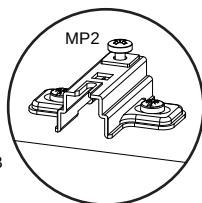


Beleuchtung / lighting




S.30

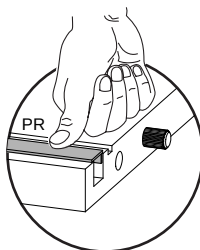


11

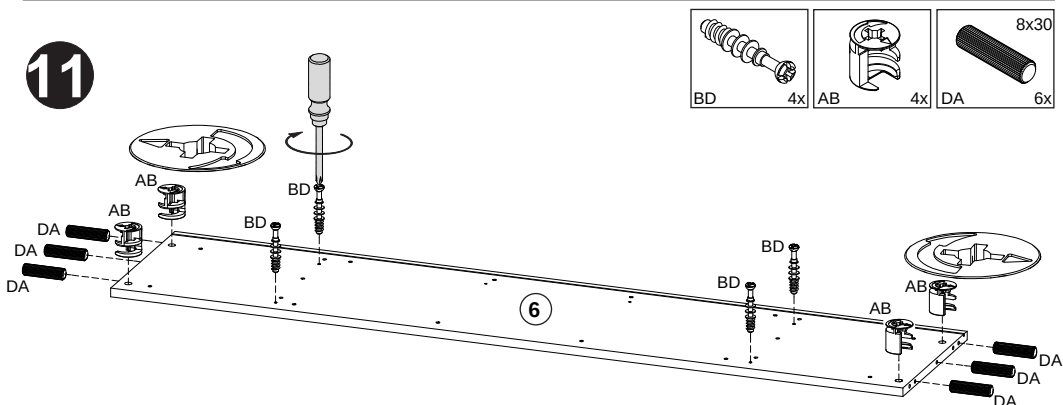






12

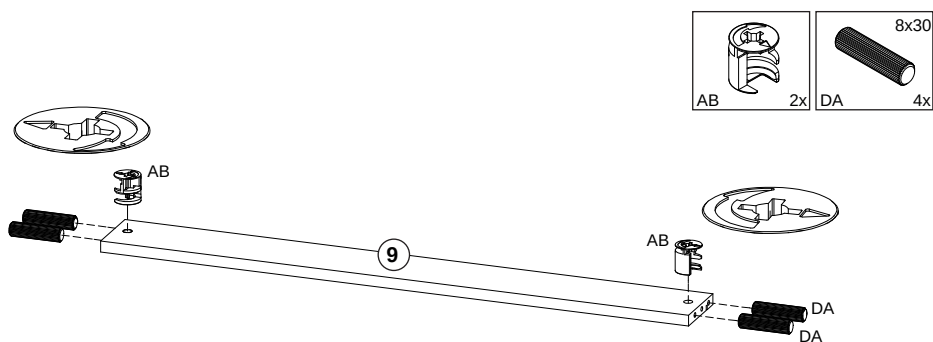


13


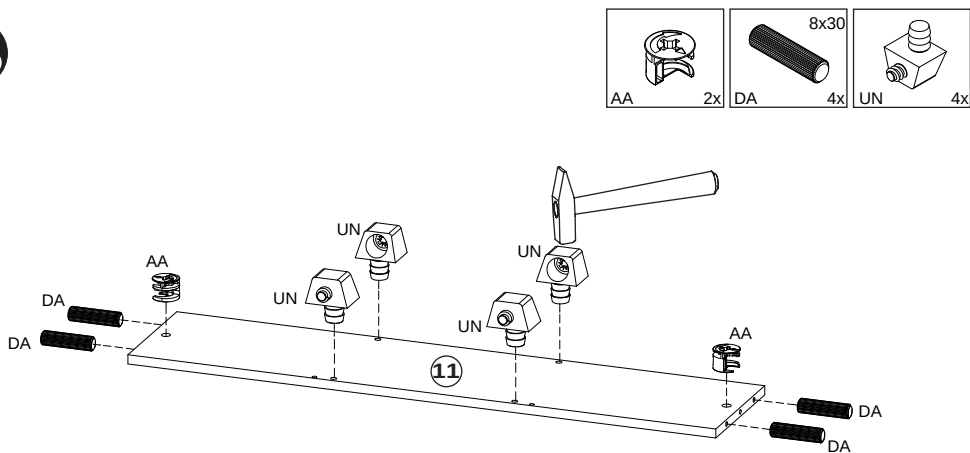


14



					
BD	AA	DA	GL	SD	KH2
8x	8x	12x	2x	4x	2x

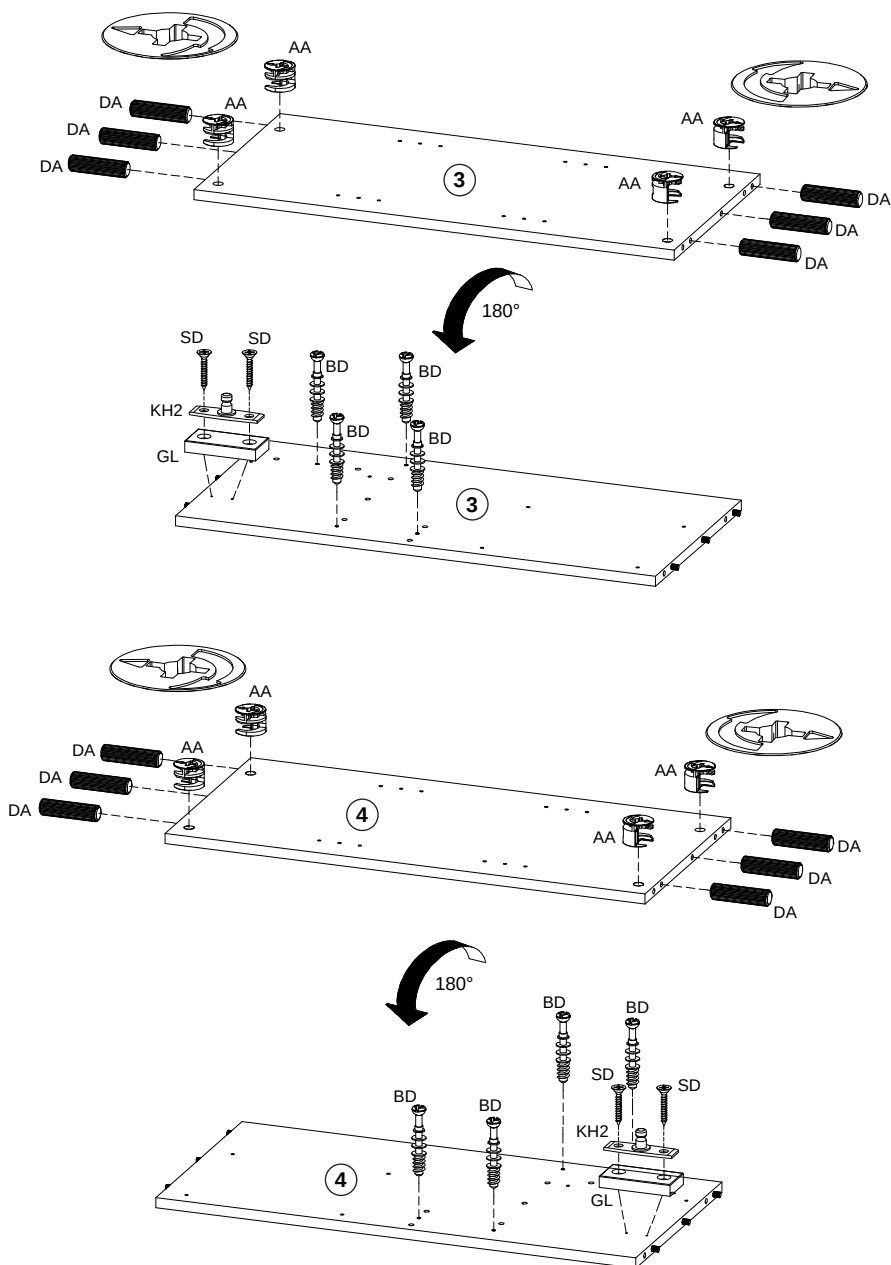



15

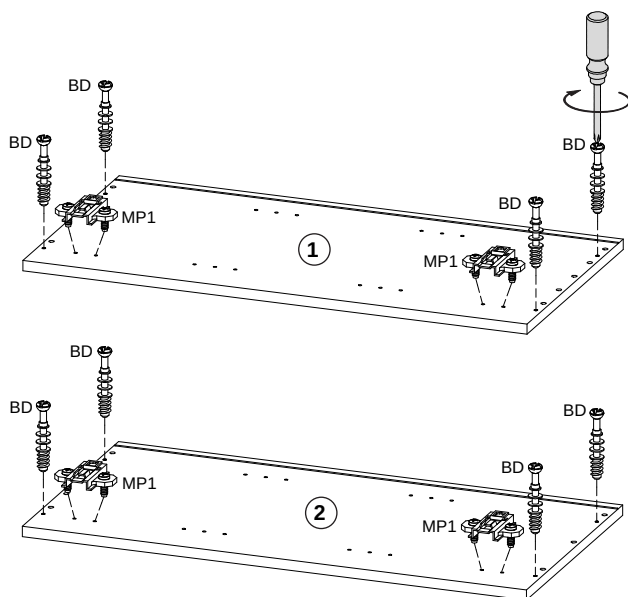


16

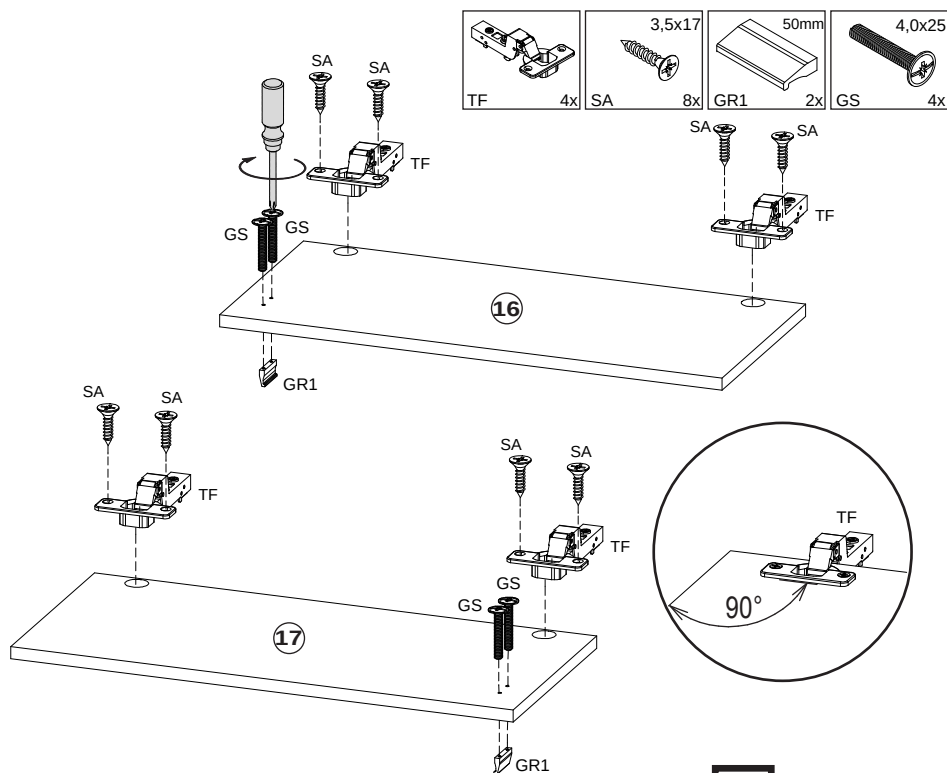


17

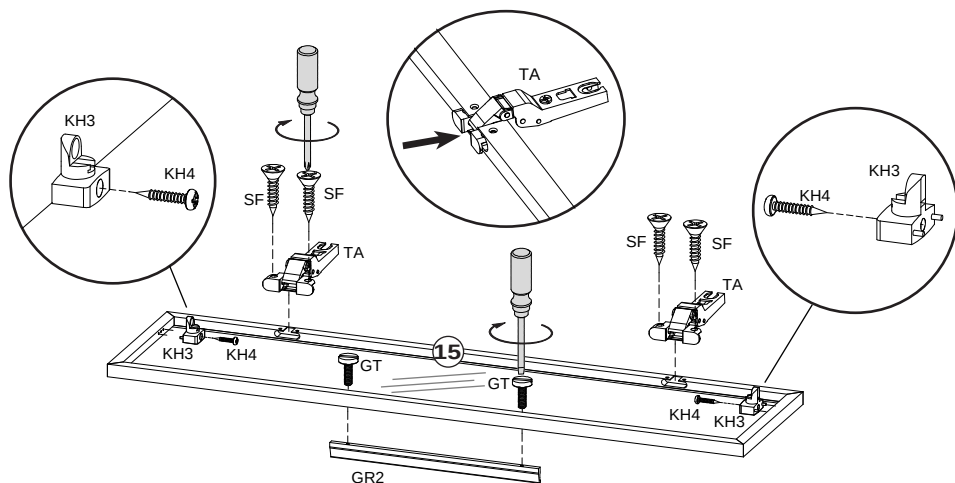


18

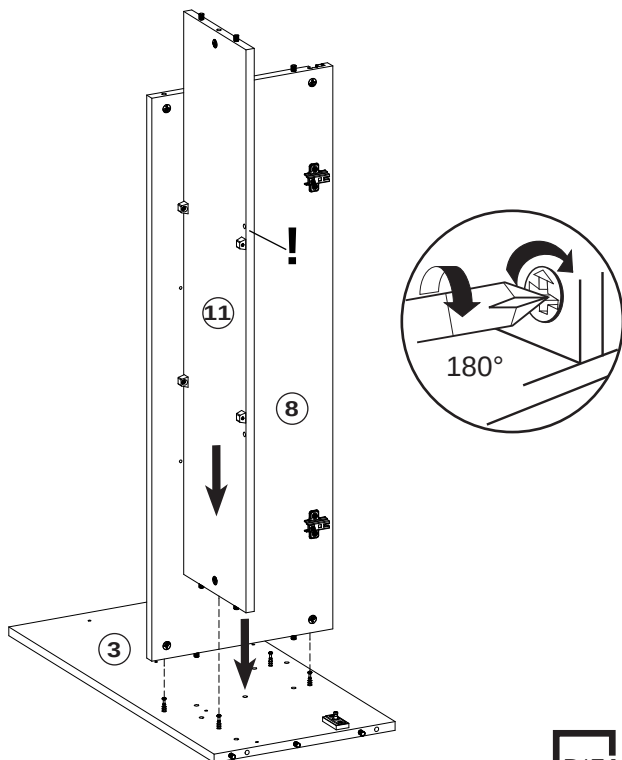

19

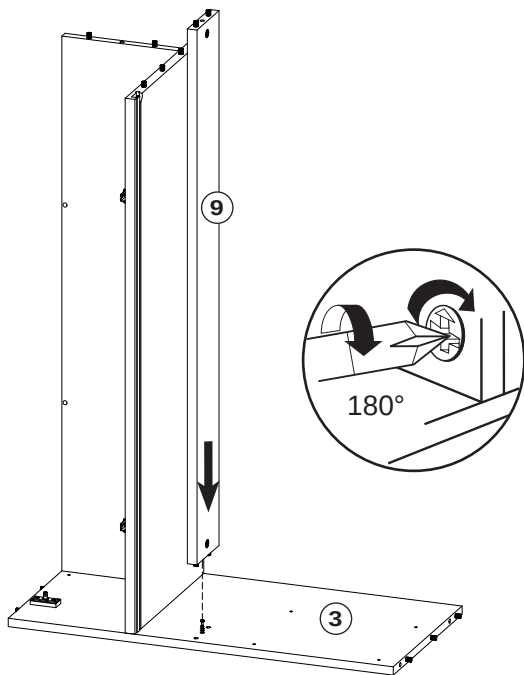


20

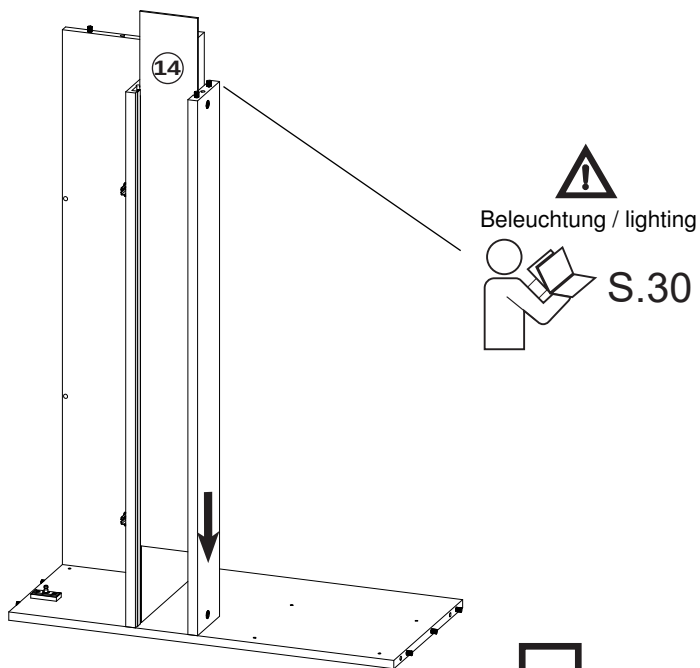


21


A

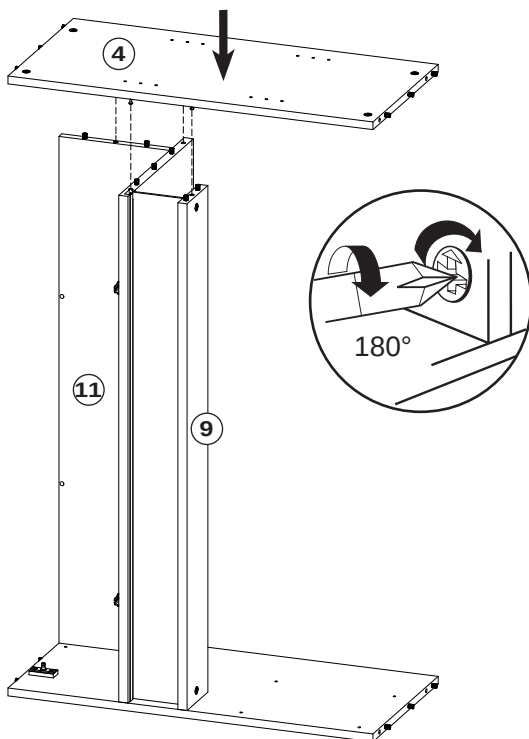


B

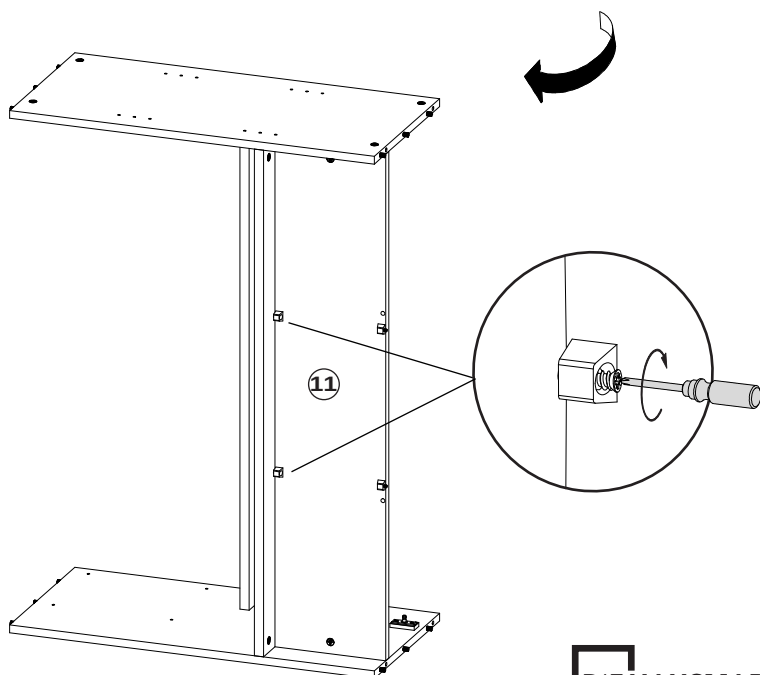


22

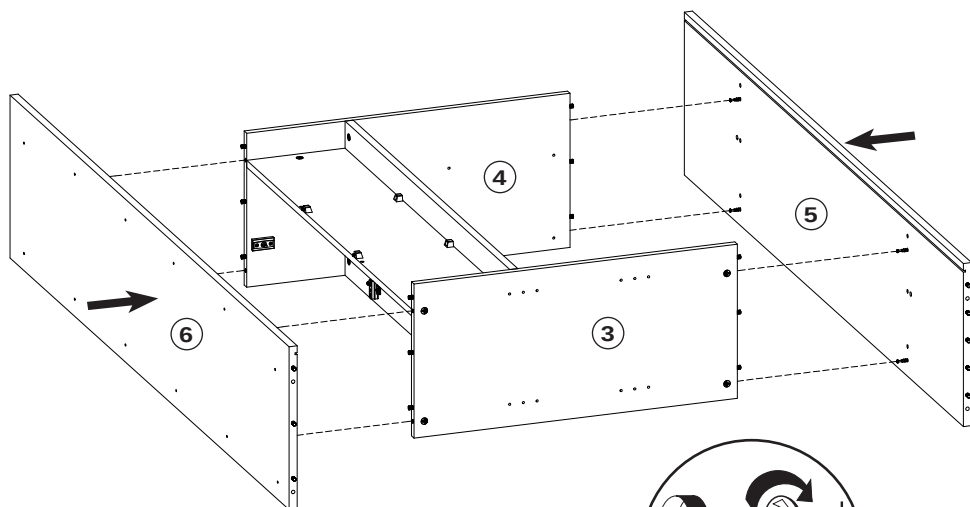


23

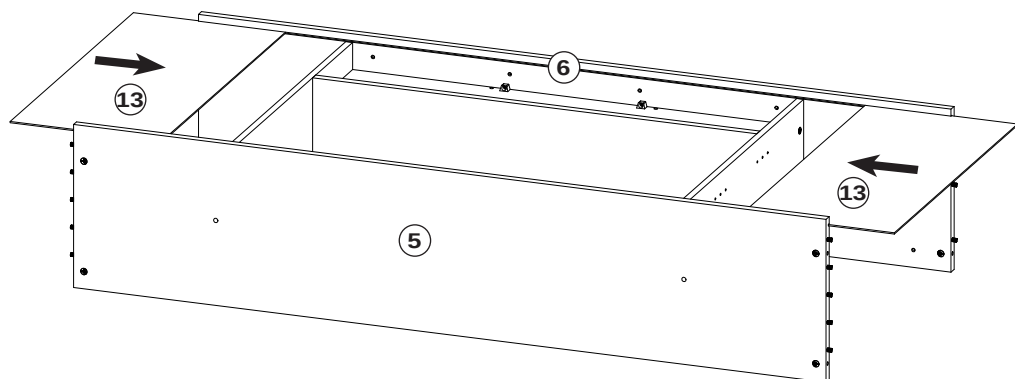


24


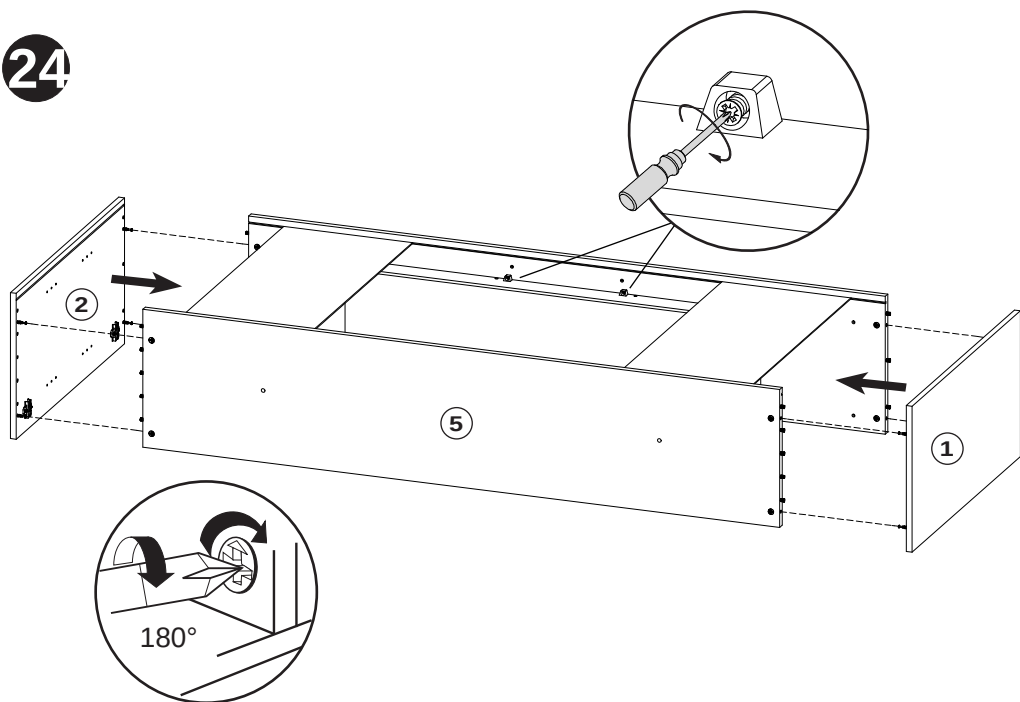


25

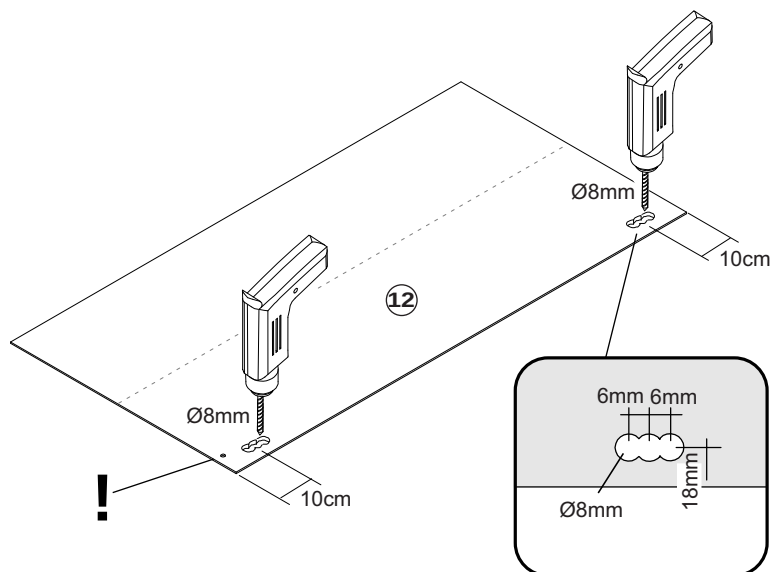





26

			
RK 6x	KH4 6x	KS 20x	NG 15x

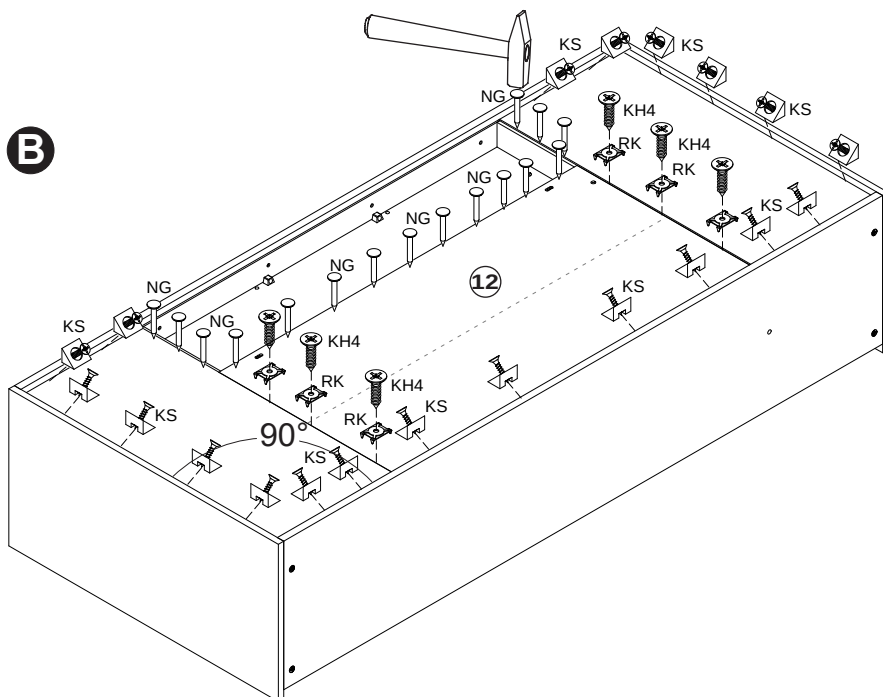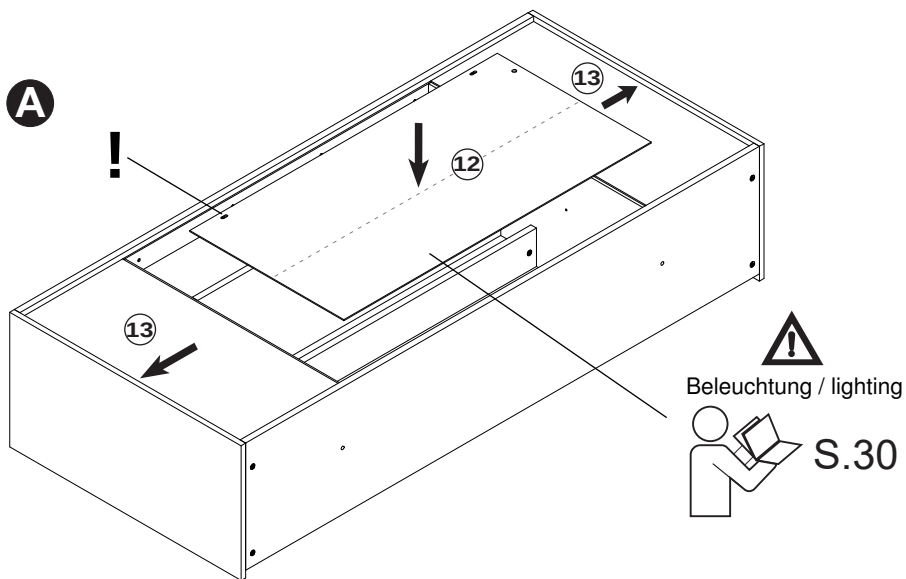




27

Type 630104

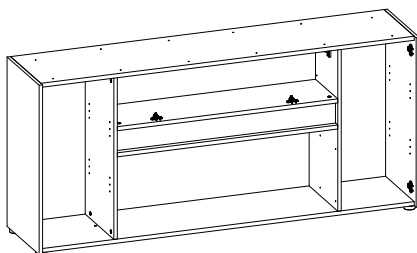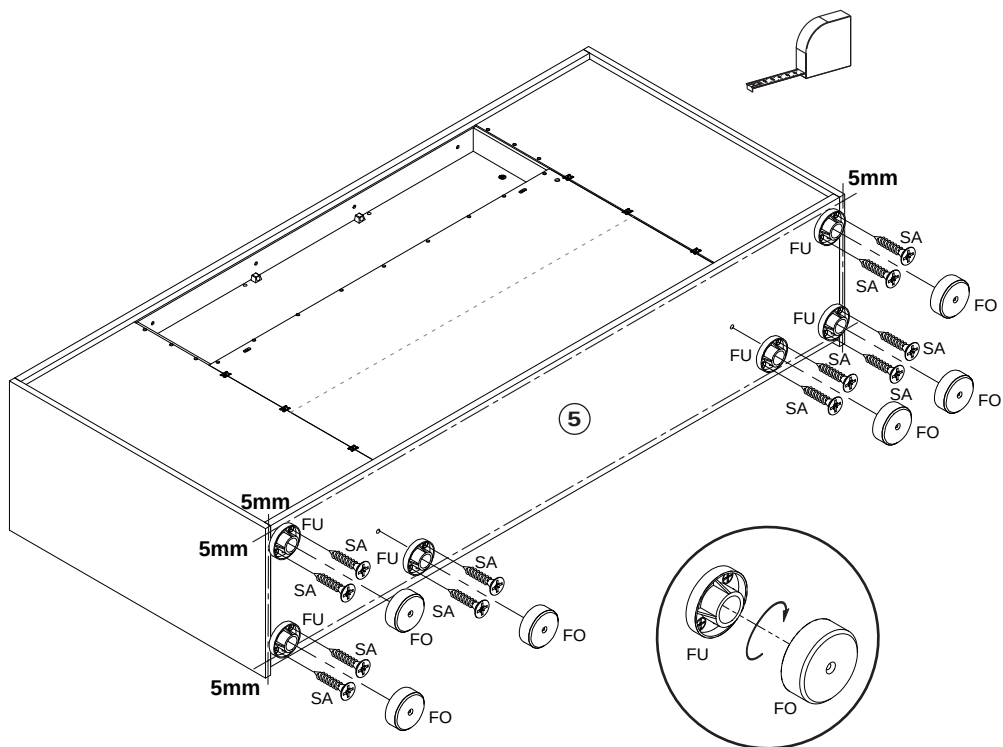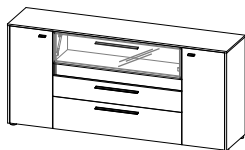


27






Type 630204

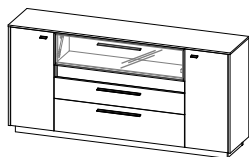


A

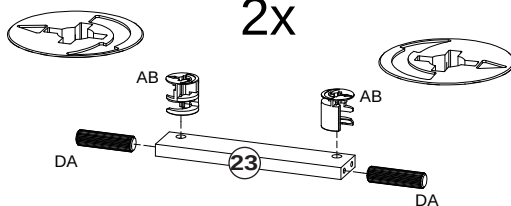



B

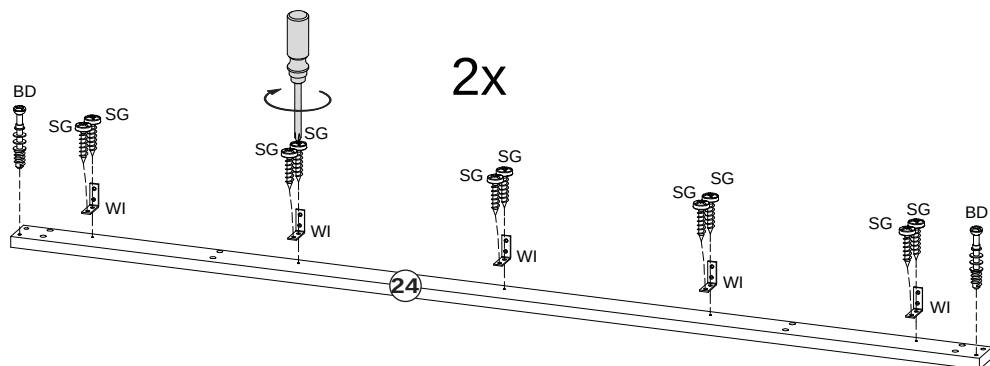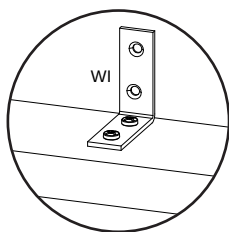




C

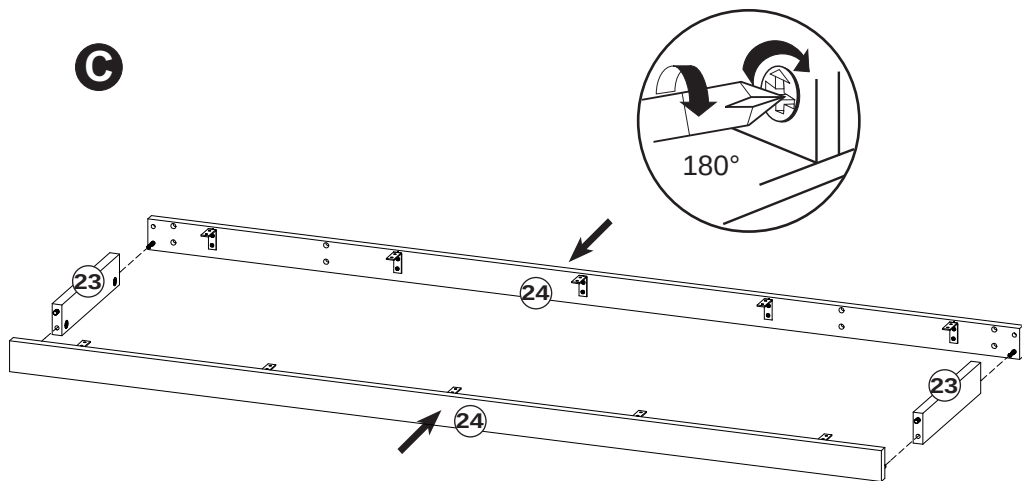



D

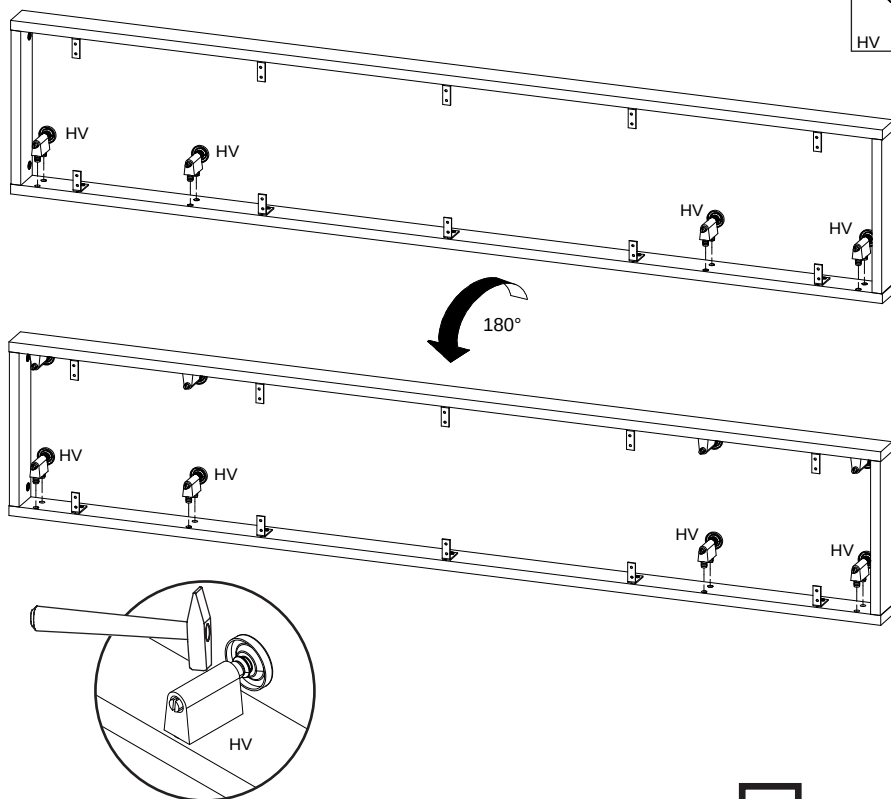




28

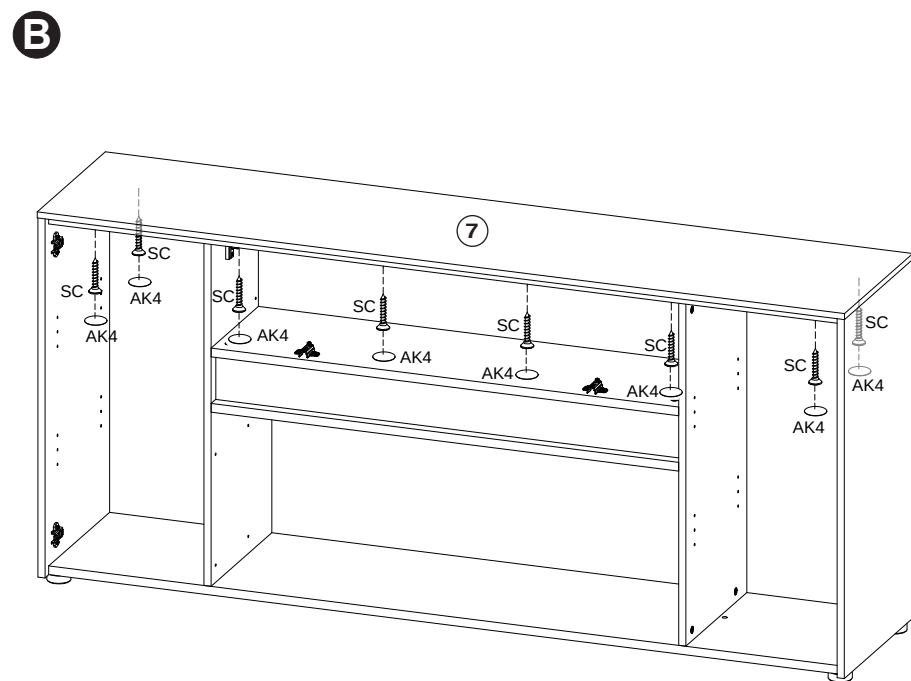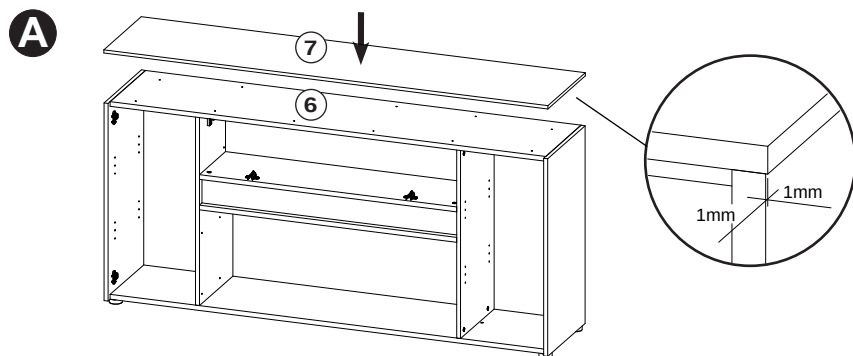

29

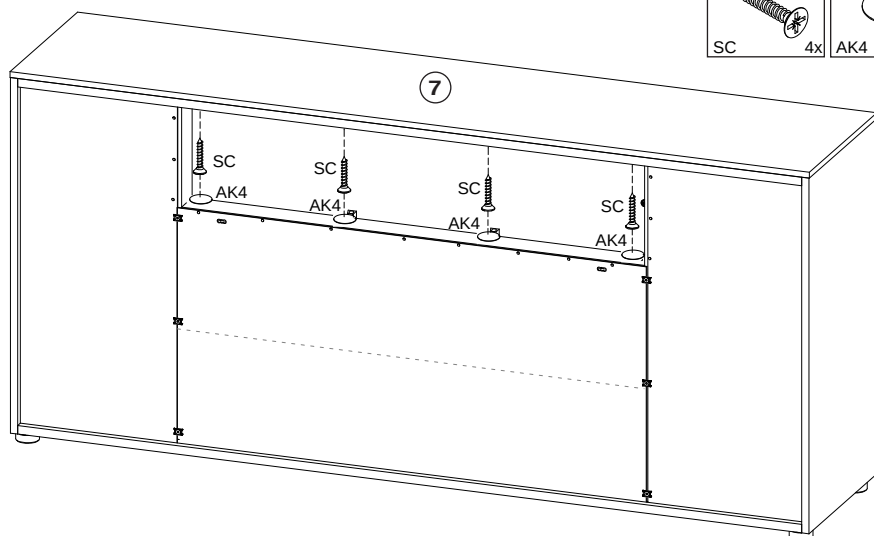


30

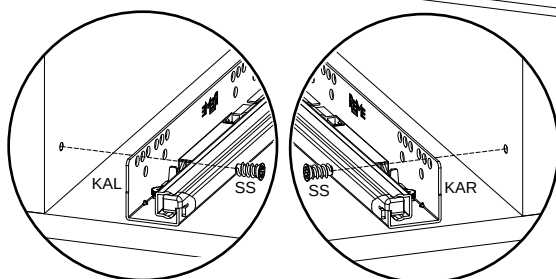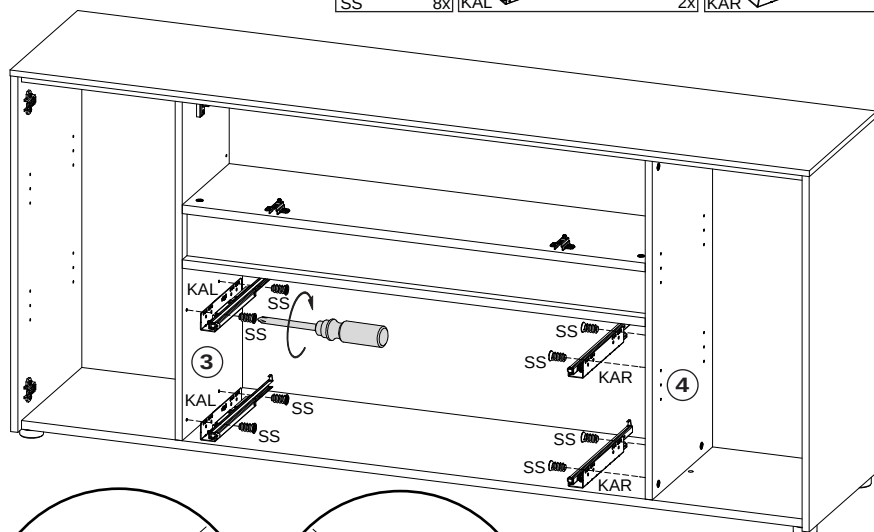





31

Type 630104


Type 630204



A

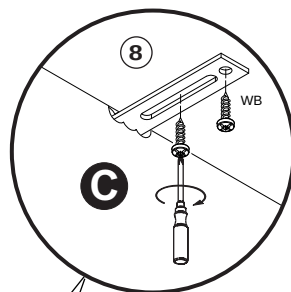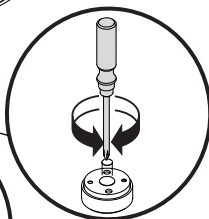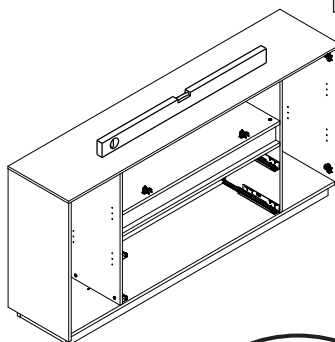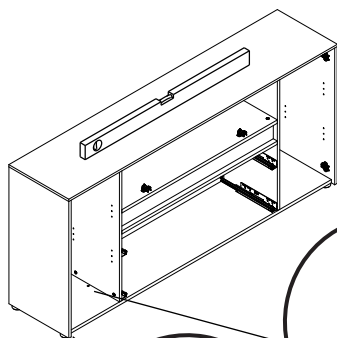



B

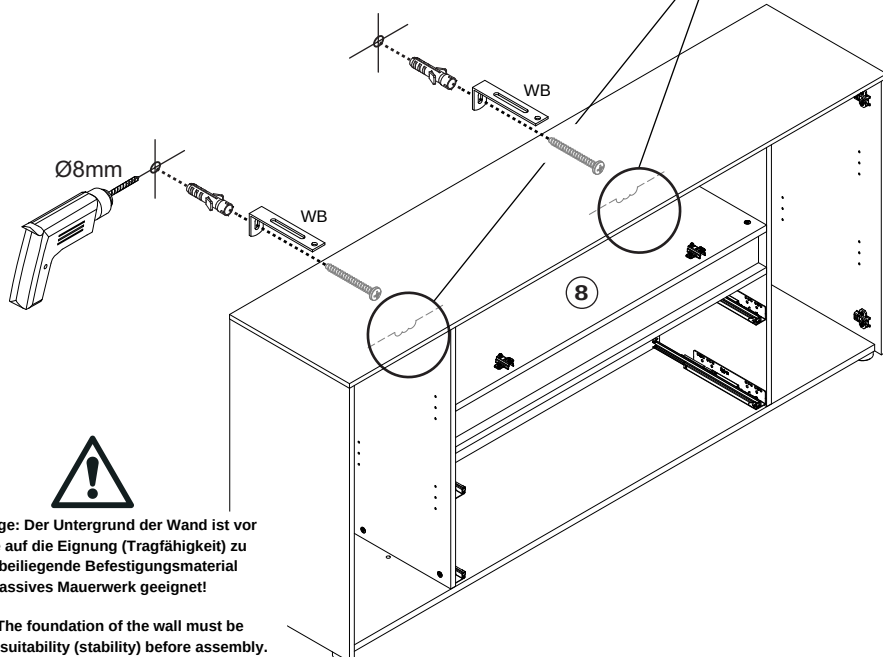





Wandmontage: Der Untergrund der Wand ist vor der Montage auf die Eignung (Tragfähigkeit) zu prüfen. Das beiliegende Befestigungsmaterial ist nur für massives Mauerwerk geeignet!

Wall fixing: The foundation of the wall must be checked for suitability (stability) before assembly. The enclosed mounting material is only suitable for solid brickwork!





32


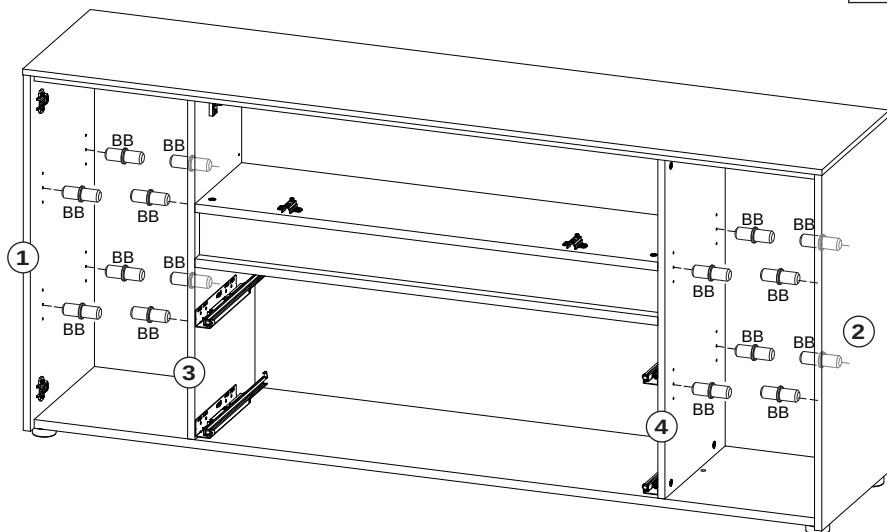











33

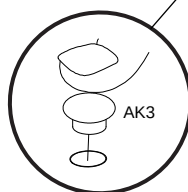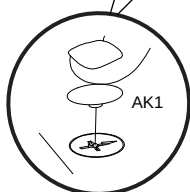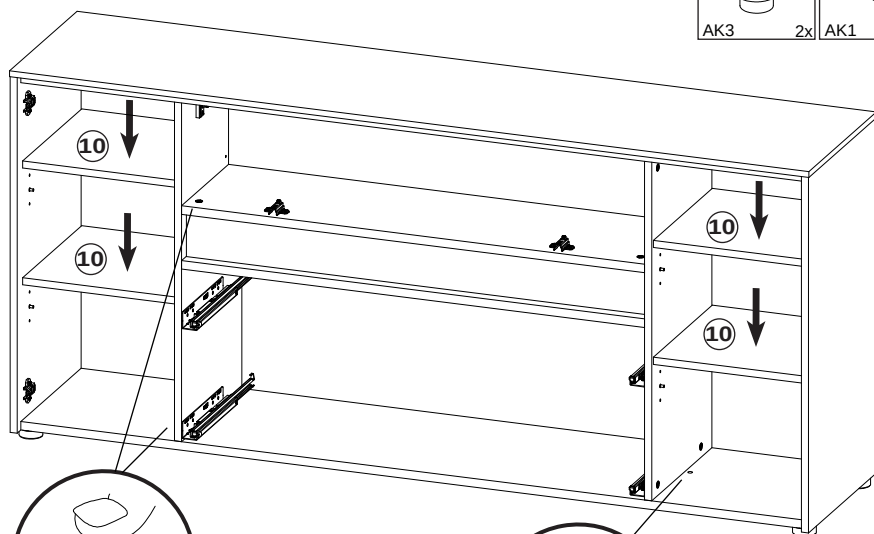









34

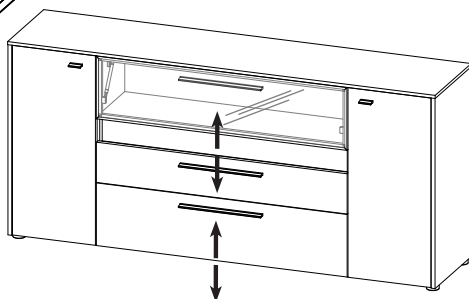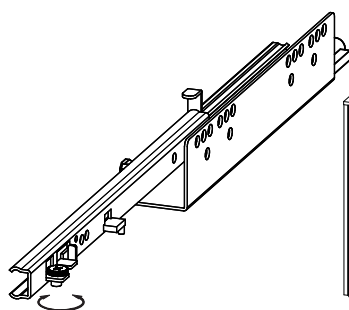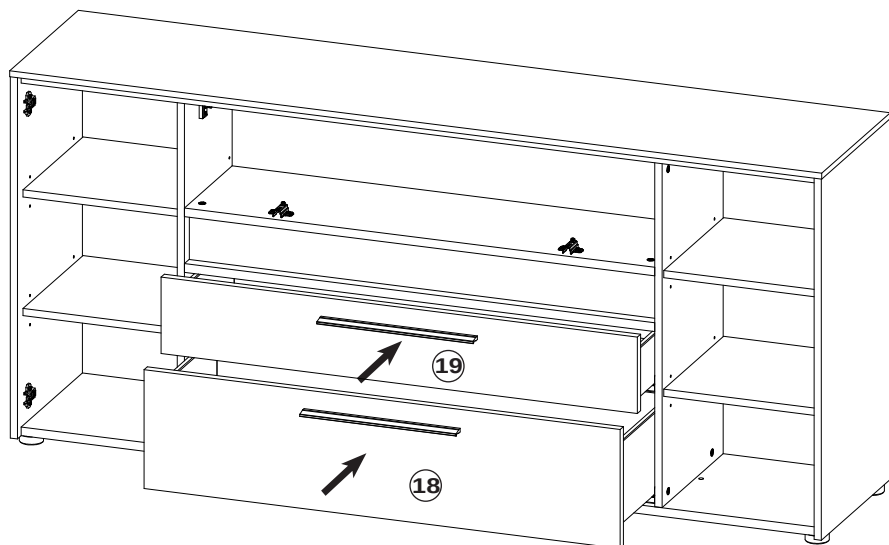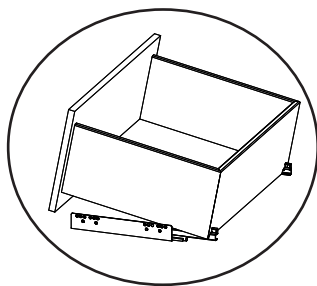





	2x		2x		4x
TD1		TD2		SA	

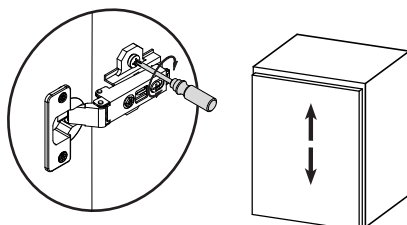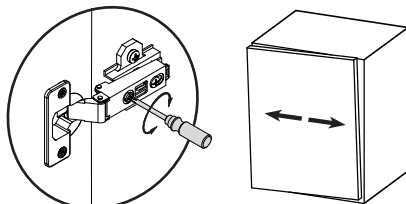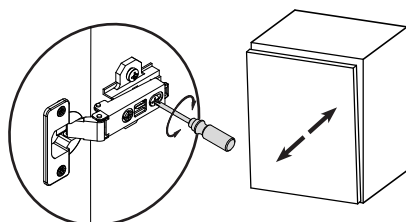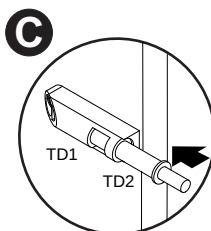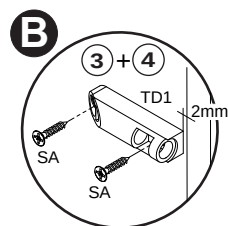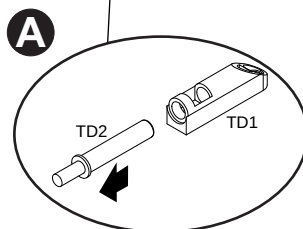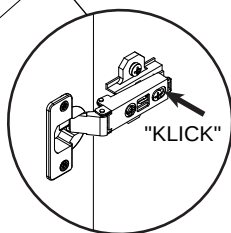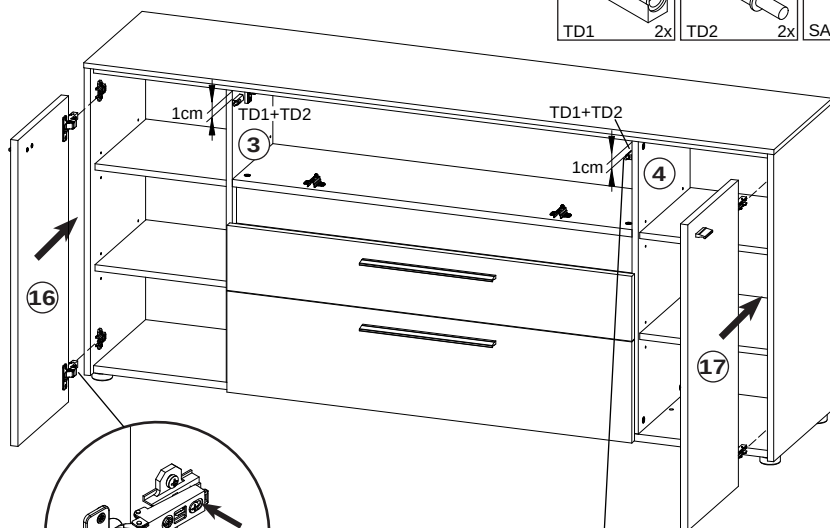



36

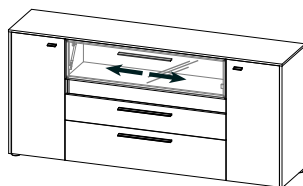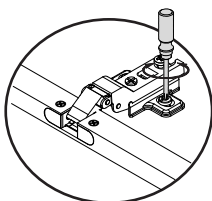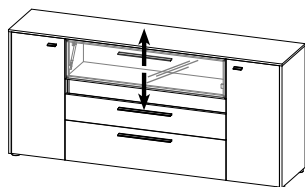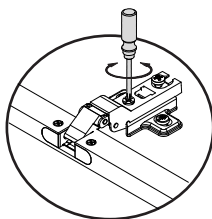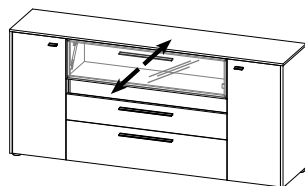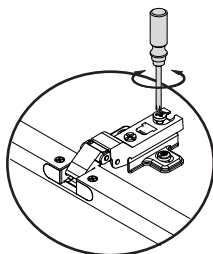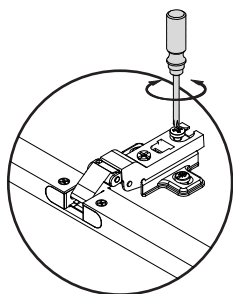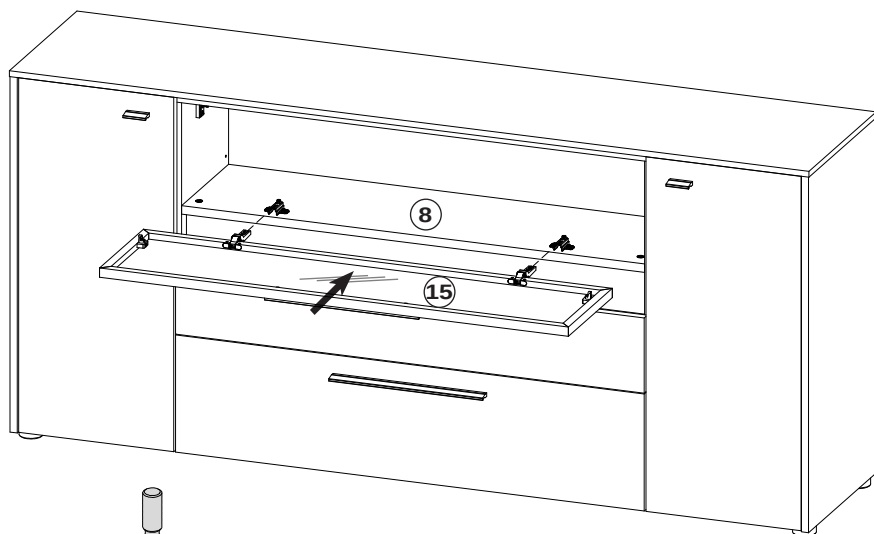



37

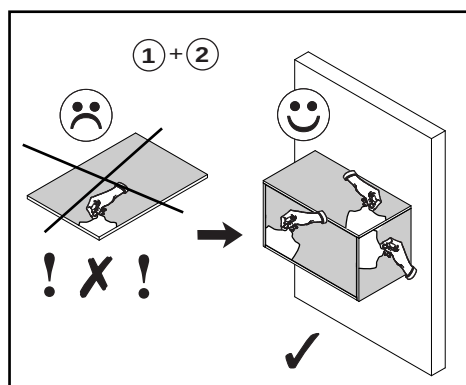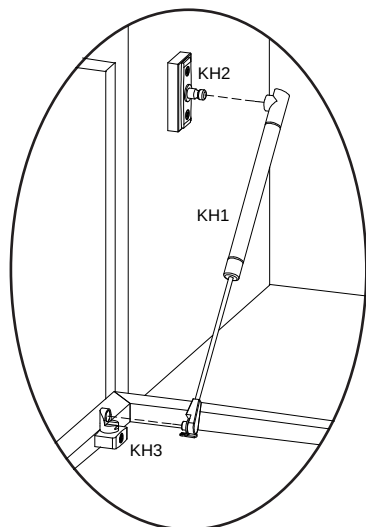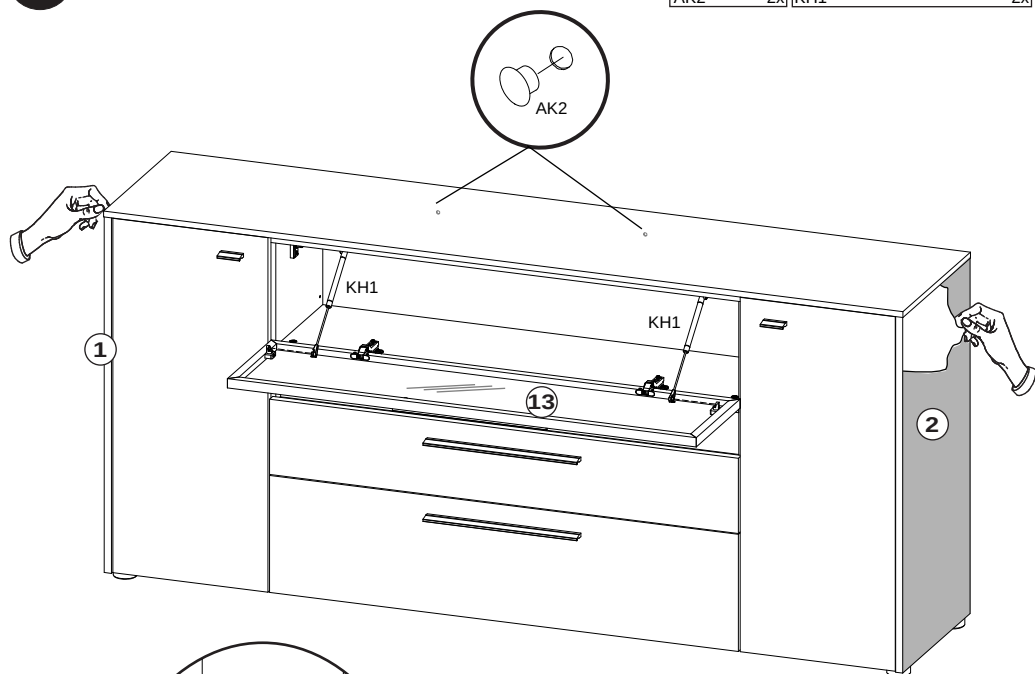

Type 22-71

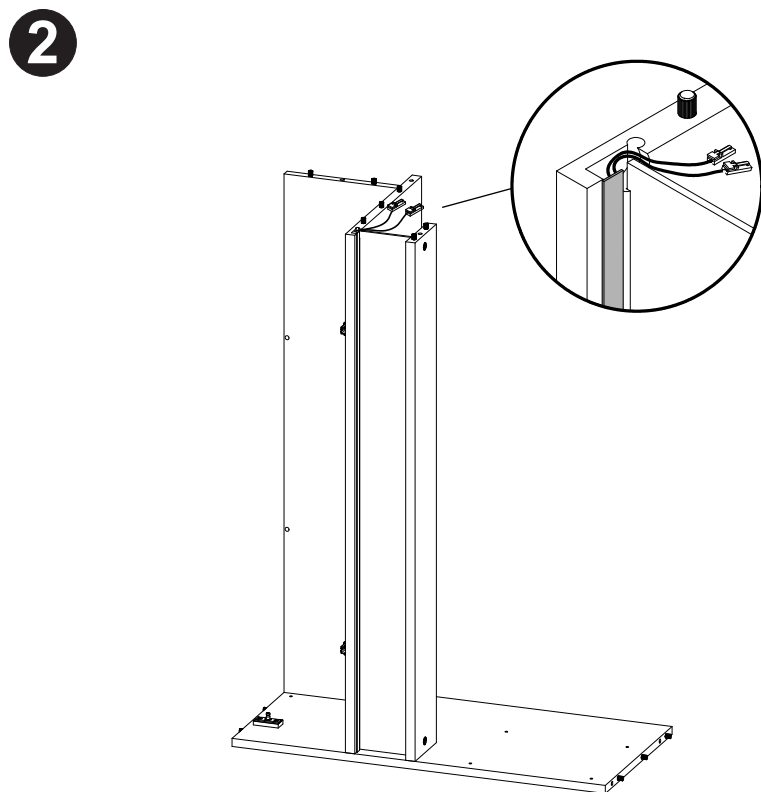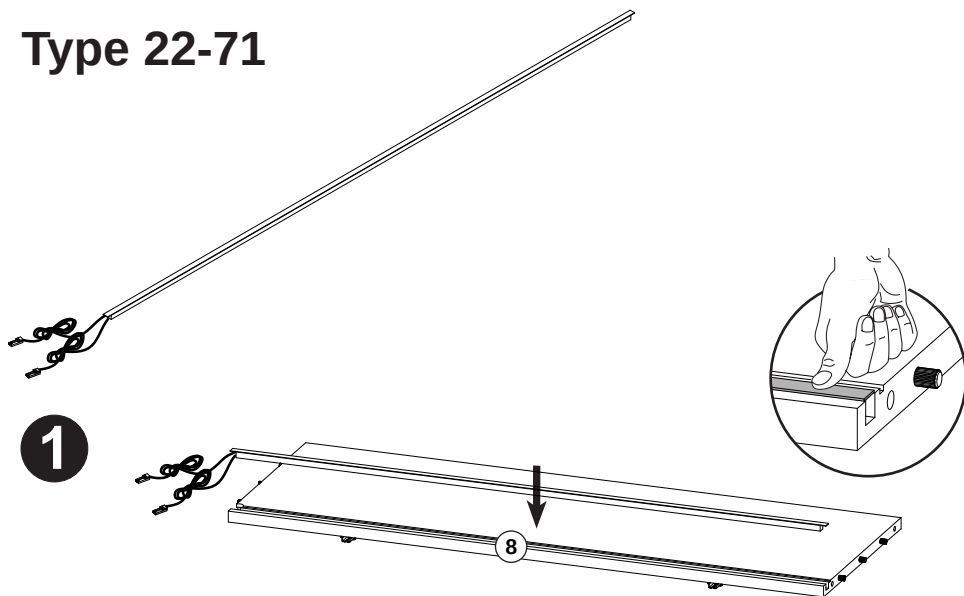


3

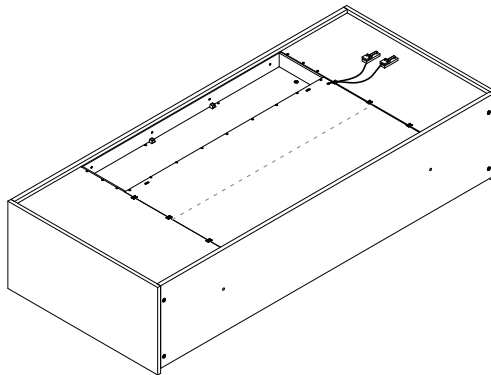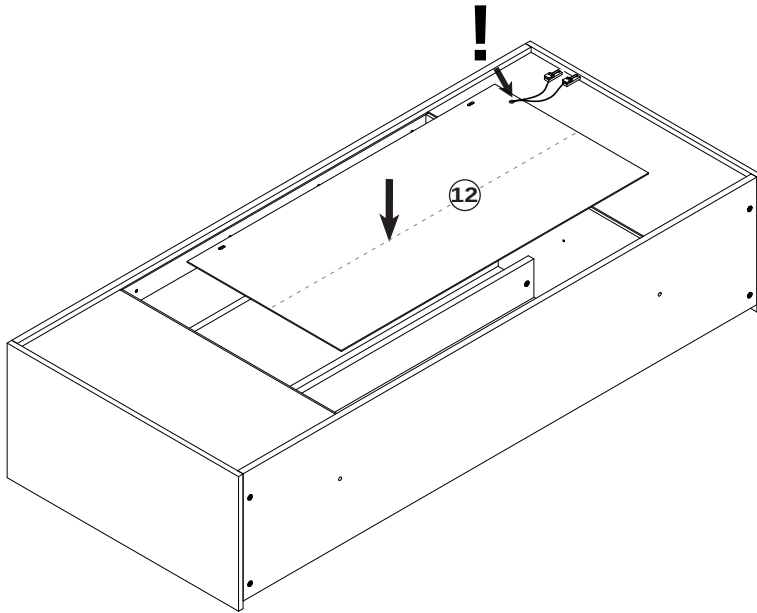


Verkabelung => Montageanleitung 22-71-K / 22-89-K
cabling = assembly instruction 22-71-K / 22-89-K


Type 22-86 2x

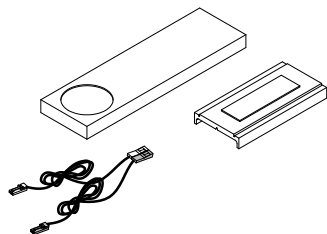


1

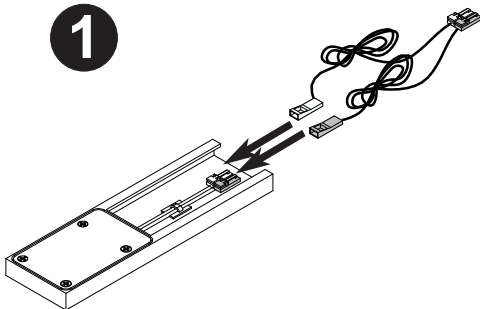



2

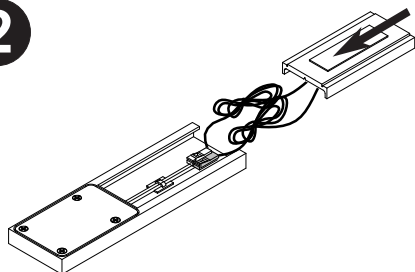

3

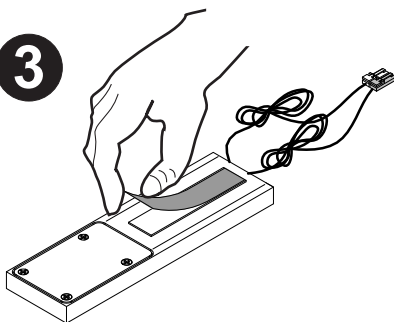

4

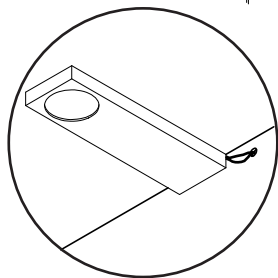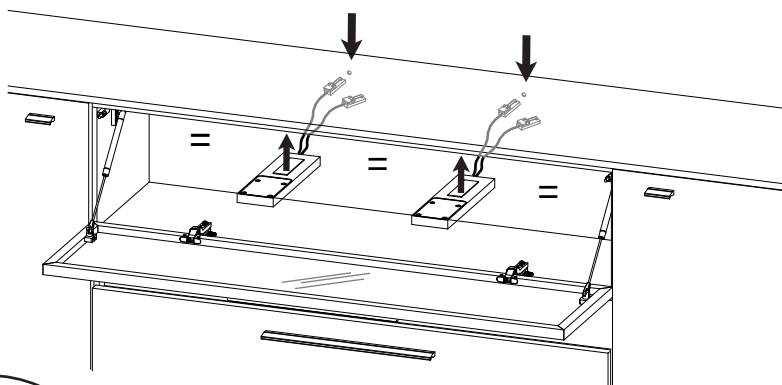

Verkabelung => Montageanleitung 22-86-K / 22-89-K
cabling = assembly instruction 22-86-K / 22-89-K