





Type 120-122

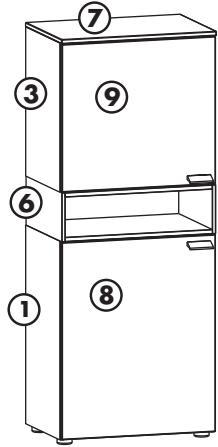

Type 120-123

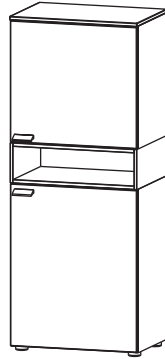

Sie brauchen:
You need:

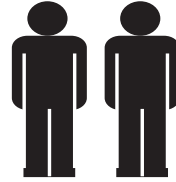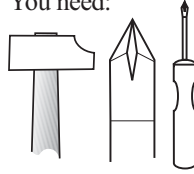

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.








Assemble your piece of new furniture using the assembly instructions one step at a time as shown.


After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth. Don't use strong detergents or solvents.


Beschlagliste Fittings

CAD und Design
Light Line 14 120_122 / 03.26


 2x 5 x 100 s28	 2x 3,5 x 15 s5	 2x wd	 2x rv	 36x 8 x 40 p1
 4x a1	 4x 1,5 mm tad4	 20x a4	 24x e4	 20x 3 x 20 s7
 4x fu	 4x fo	 4x M4 x 21 gs6	 8x 4 x 16 s4	 20x rh
 8x t4	 20x ak	 2x gr40	 4x D 2mm d18	 4x c16




A1

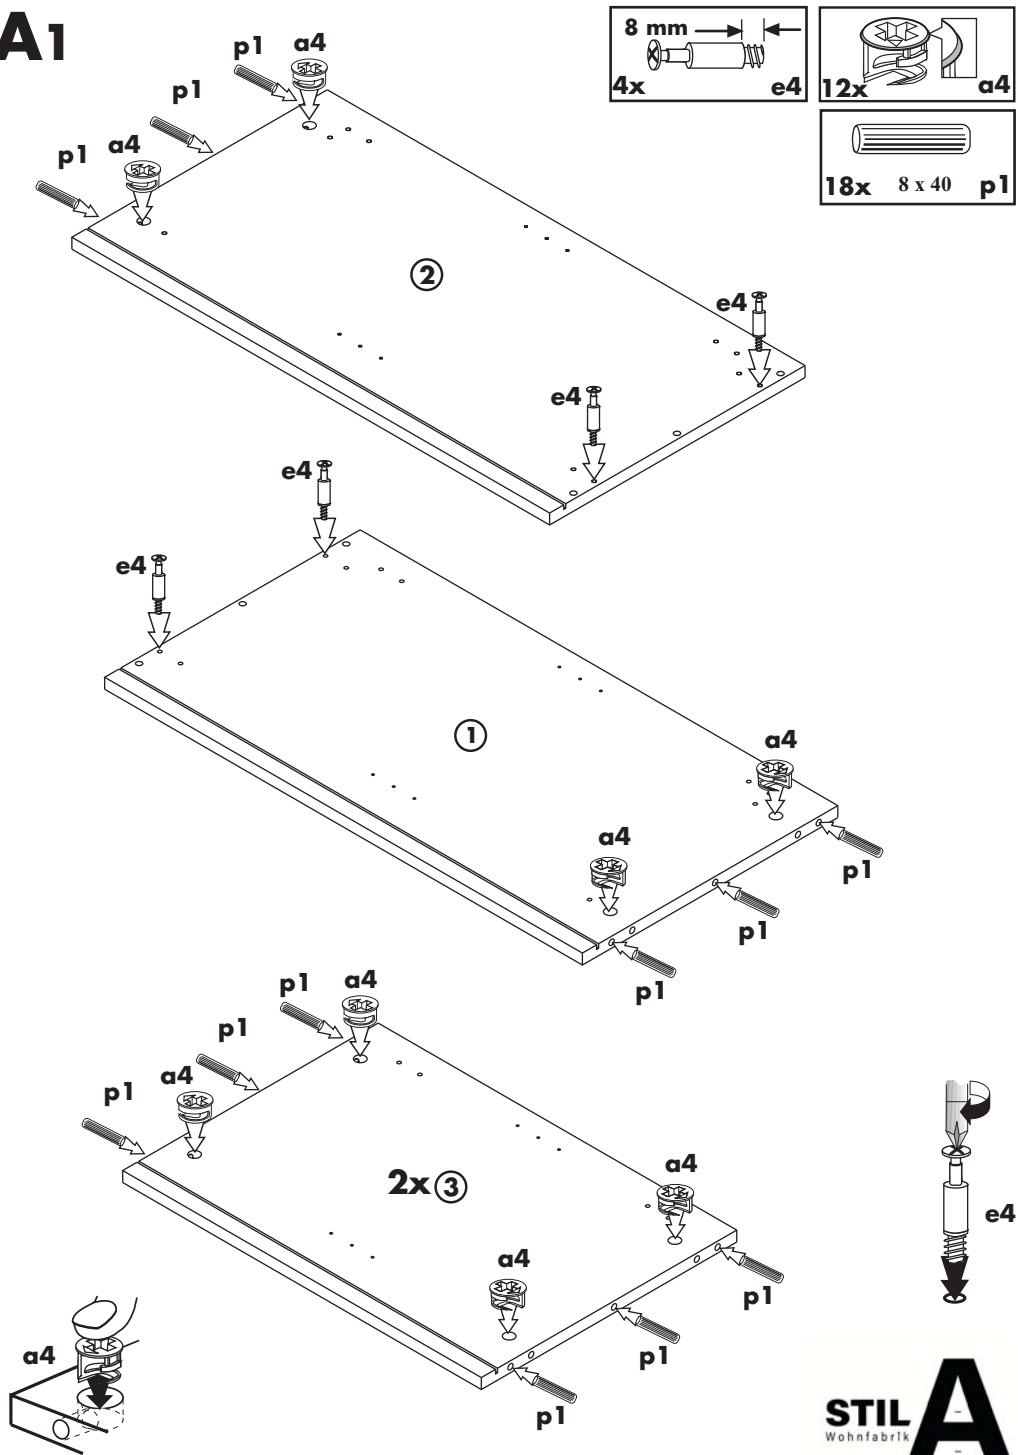




A2

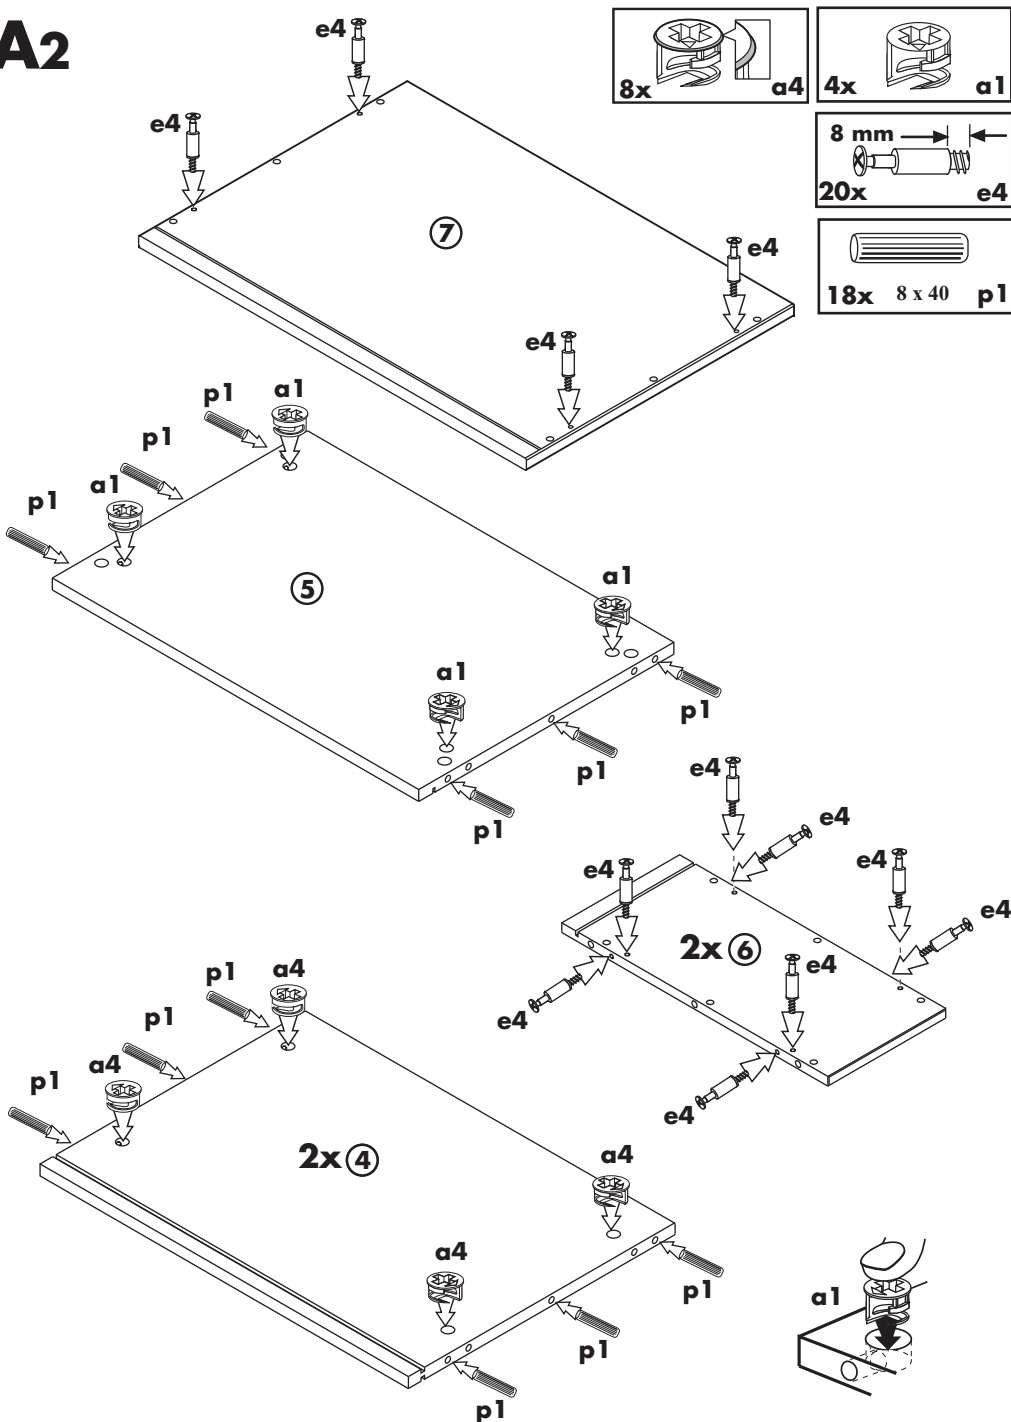


B

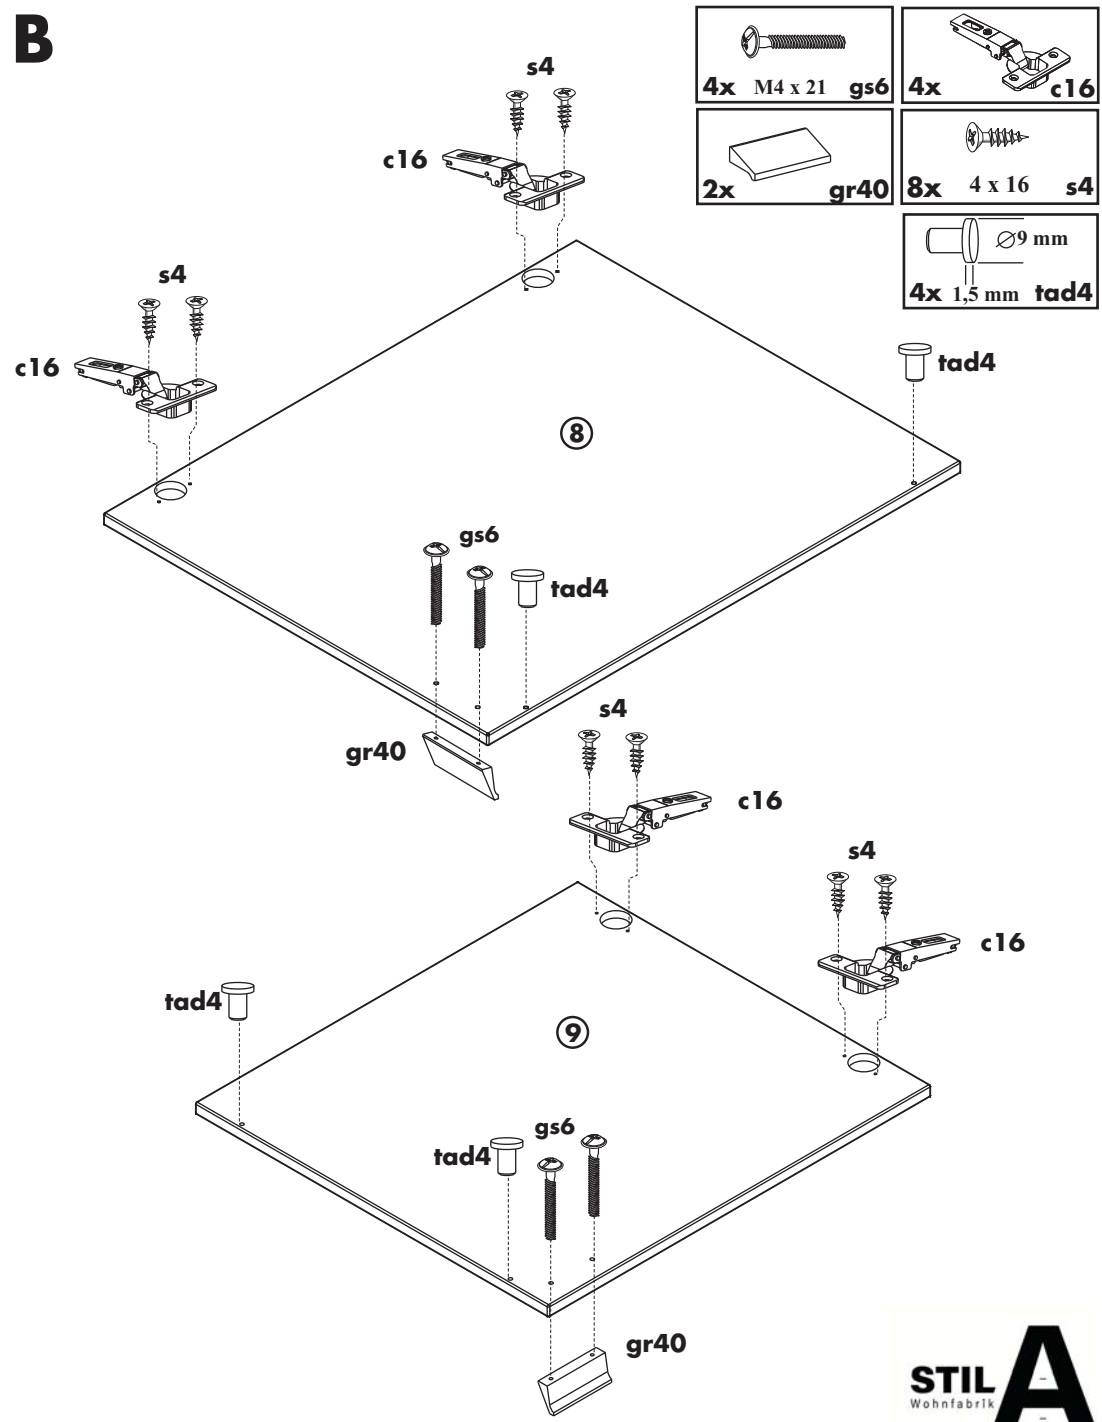




C

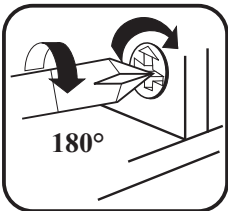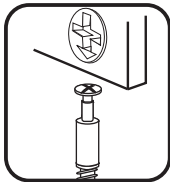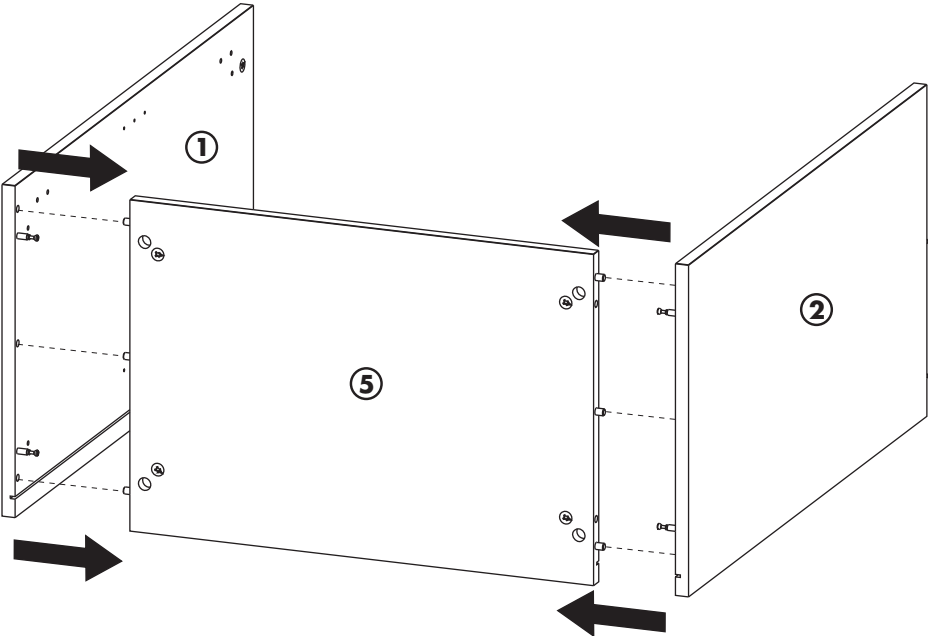




D

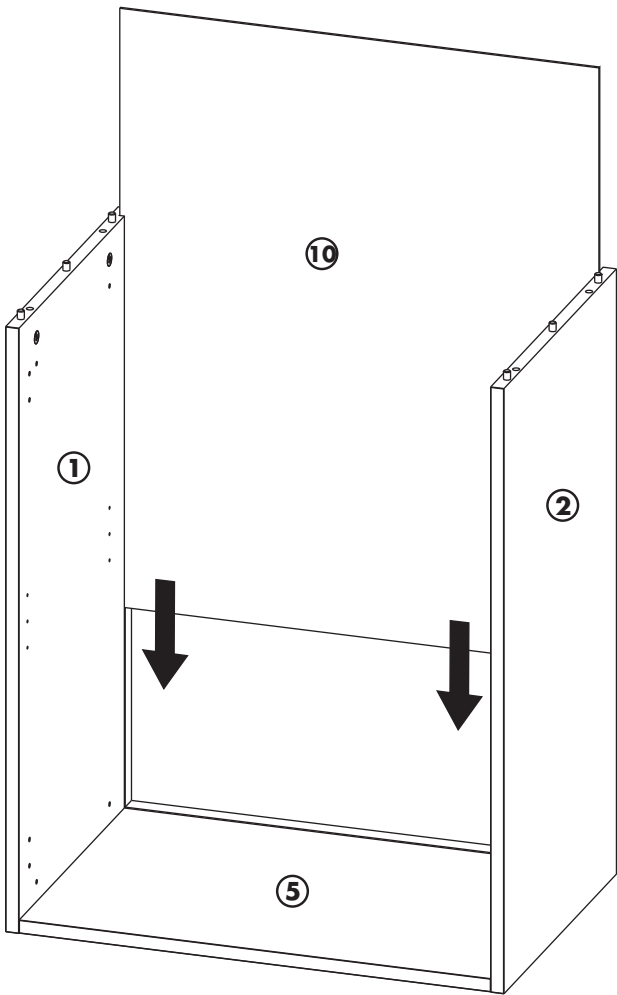




E

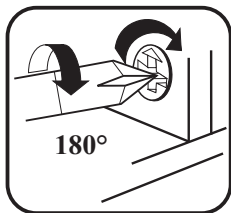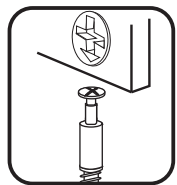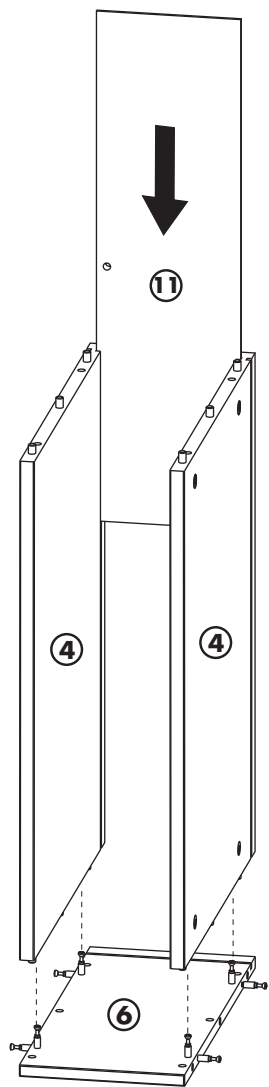




F

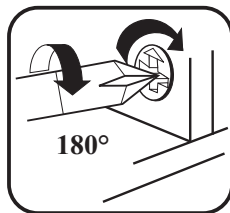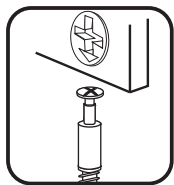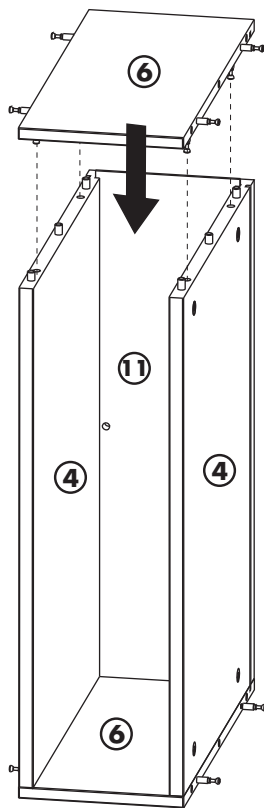


G

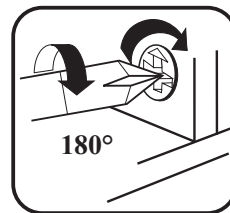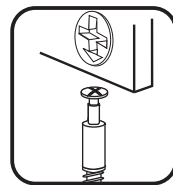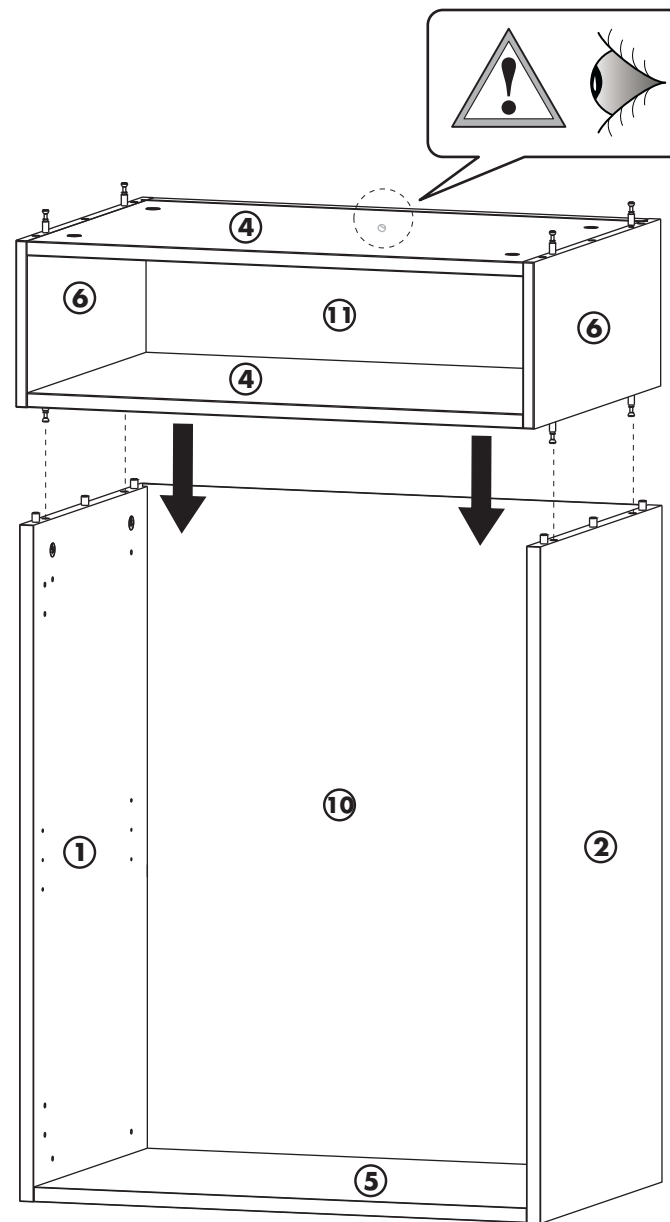


H

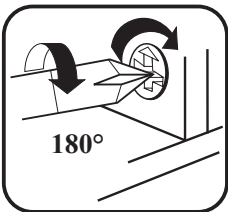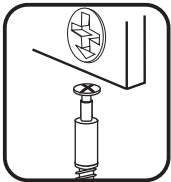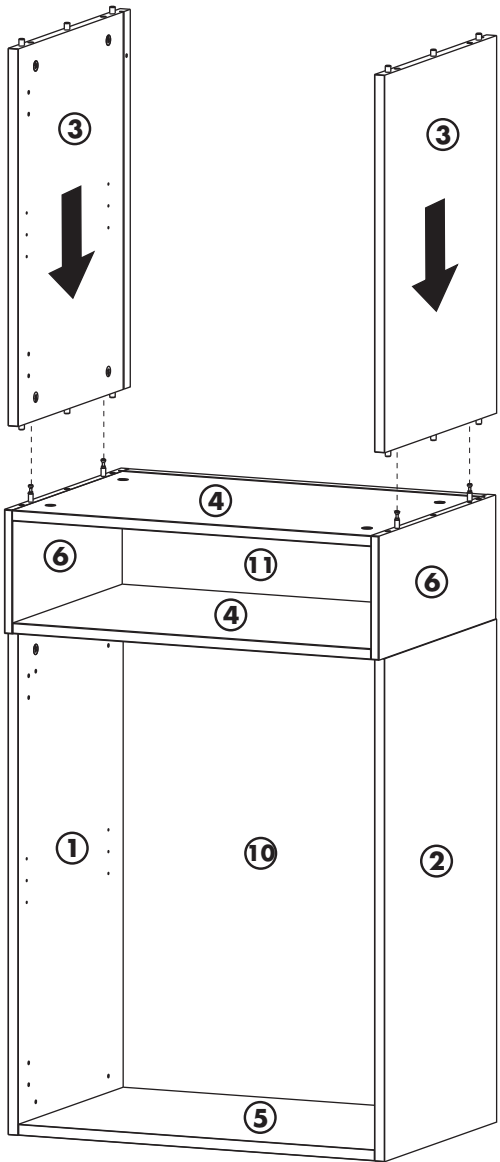



I

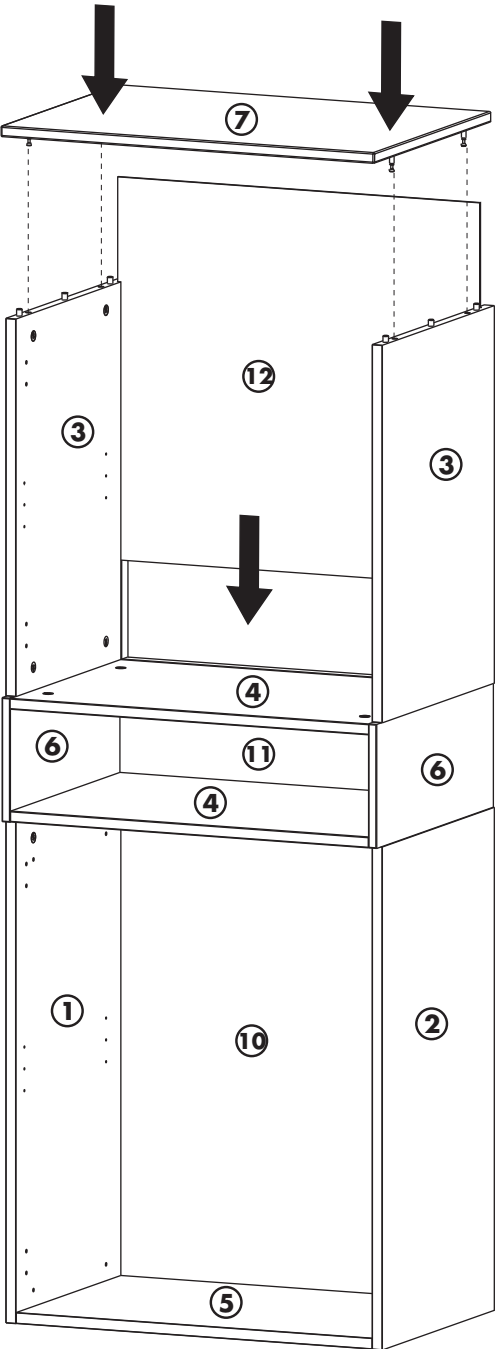


J

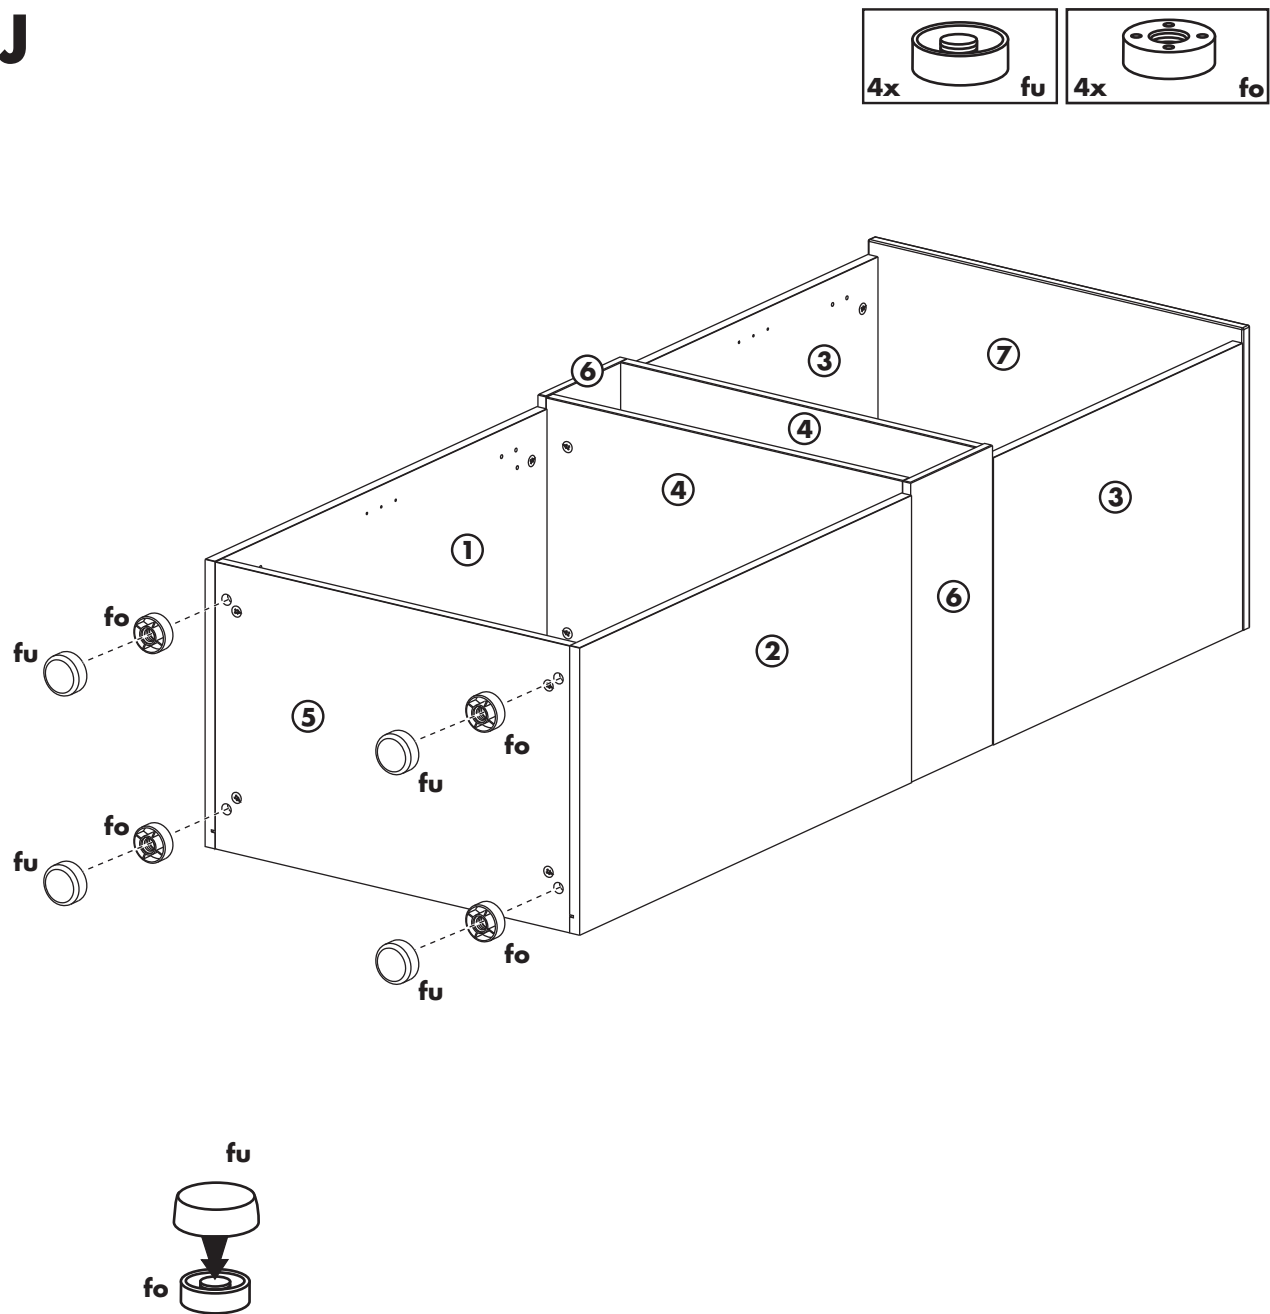

K

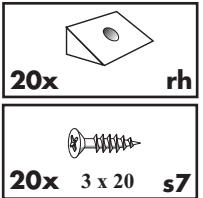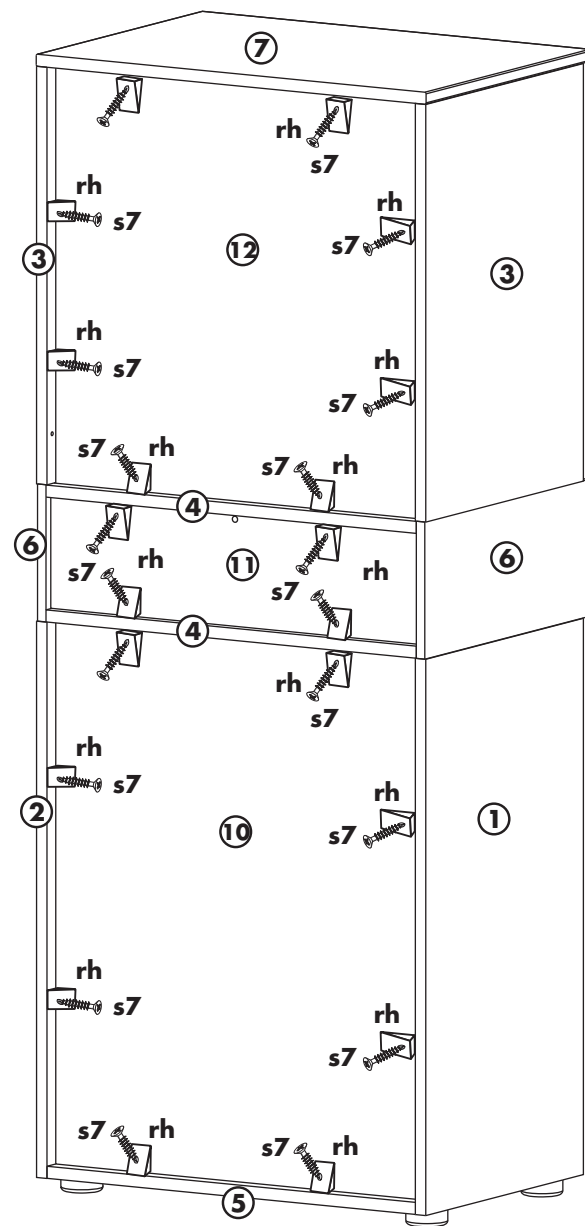


L1

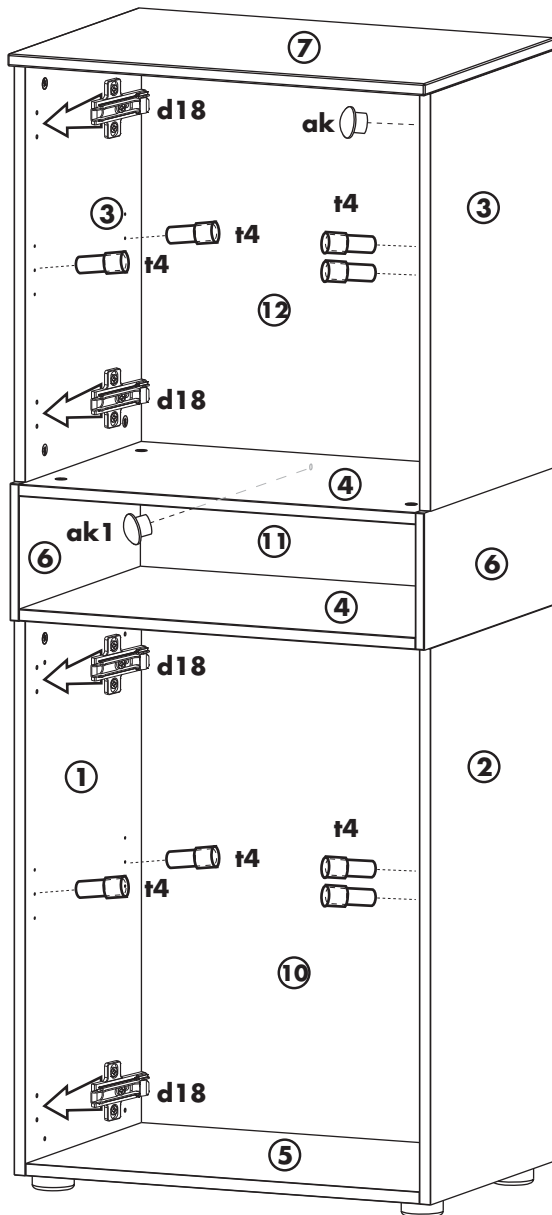

Type 120-122

- $\varnothing 5\text{ mm}$ $\varnothing 3\text{ mm}$
8x t4
- 4x D 2mm d18
- $\varnothing 8\text{ mm}$ $\varnothing 5\text{ mm}$
20x ak
- $\varnothing 13\text{ mm}$ $\varnothing 8\text{ mm}$
1x ak1


L2

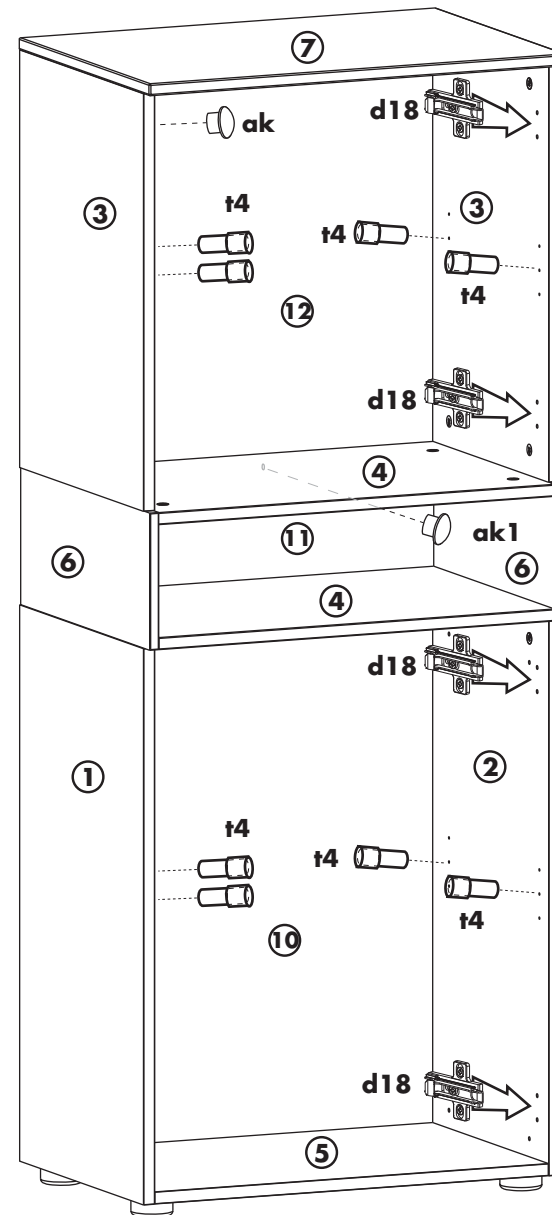



Type 120-123

- $\varnothing 5\text{ mm}$ $\varnothing 3\text{ mm}$
8x t4
- 4x D 2mm d18
- $\varnothing 8\text{ mm}$ $\varnothing 5\text{ mm}$
20x ak
- $\varnothing 13\text{ mm}$ $\varnothing 8\text{ mm}$
1x ak1

M

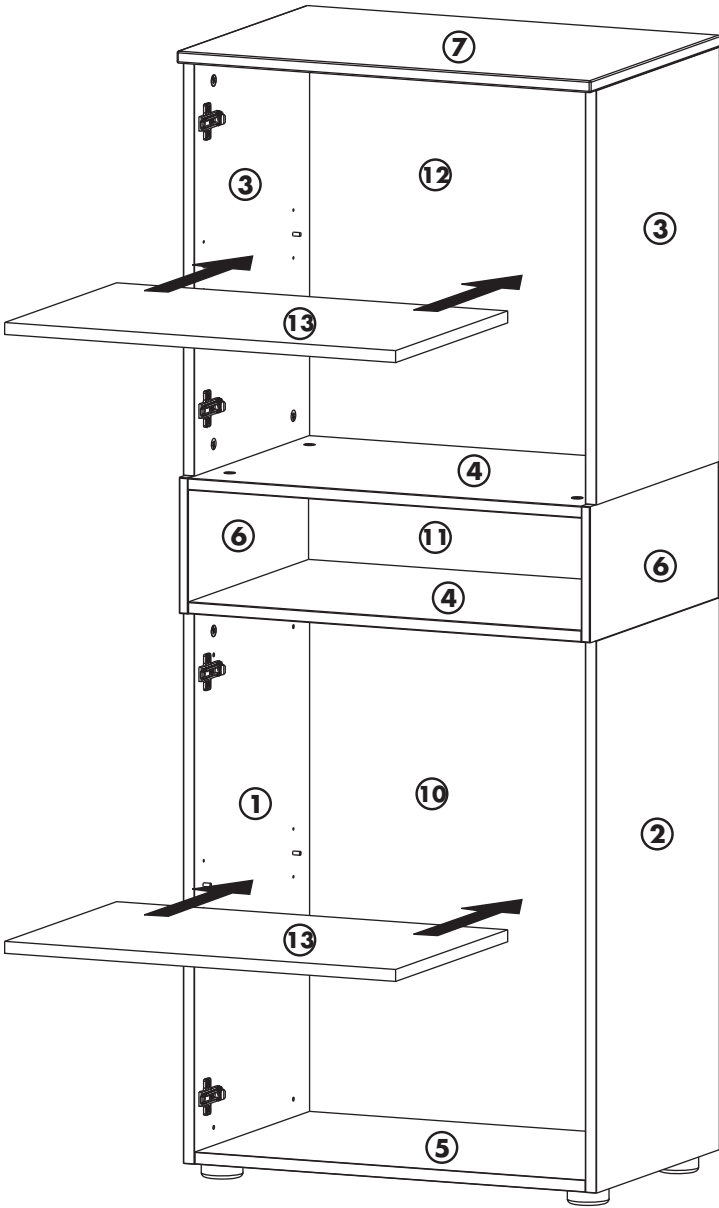


N

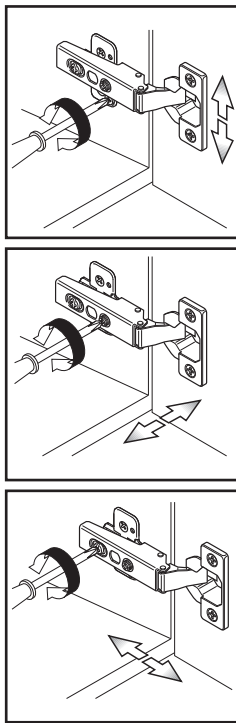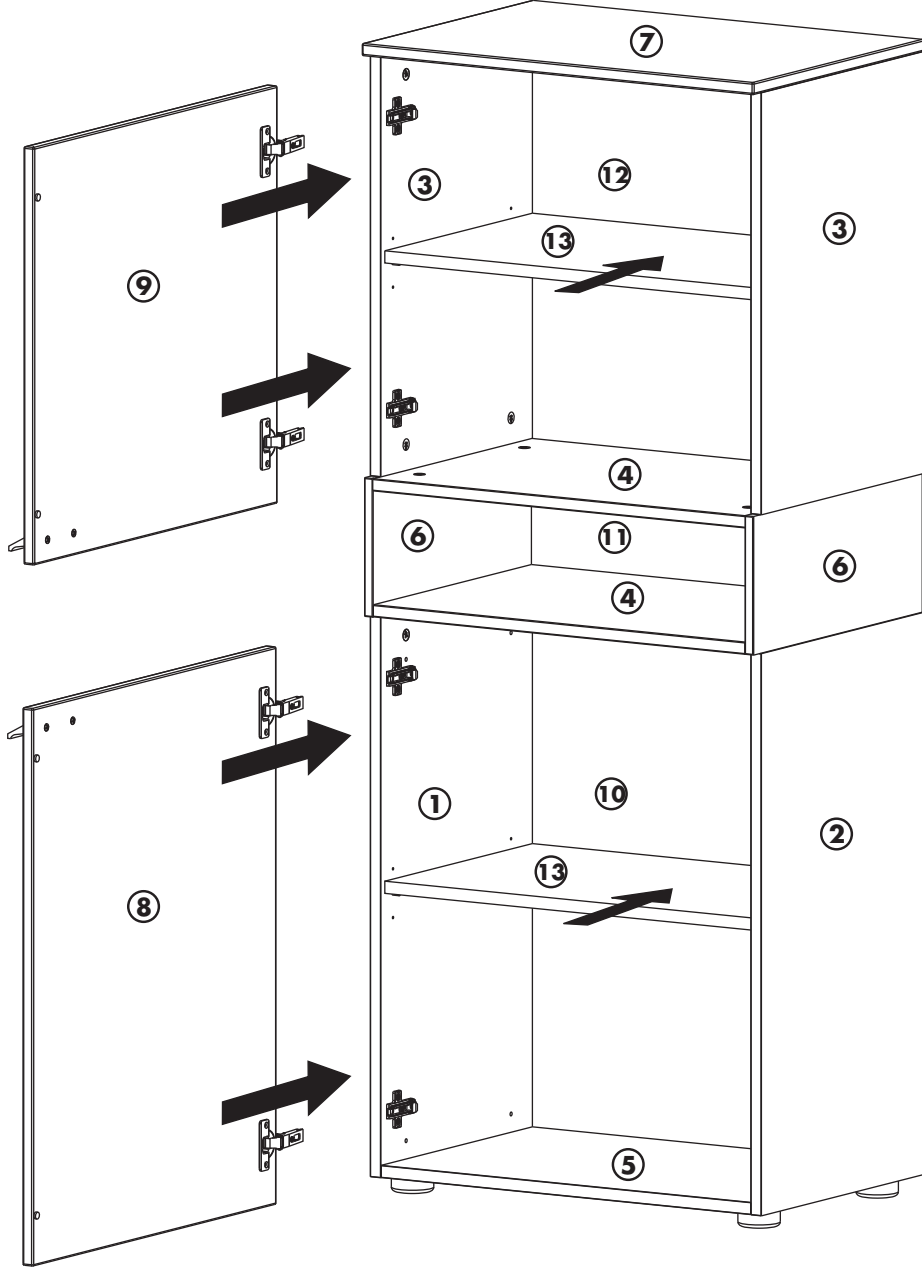






 2x 5 x 100 s28	 2x 3,5 x 15 s5	 2x wd	 2x rv
---	---	--	--

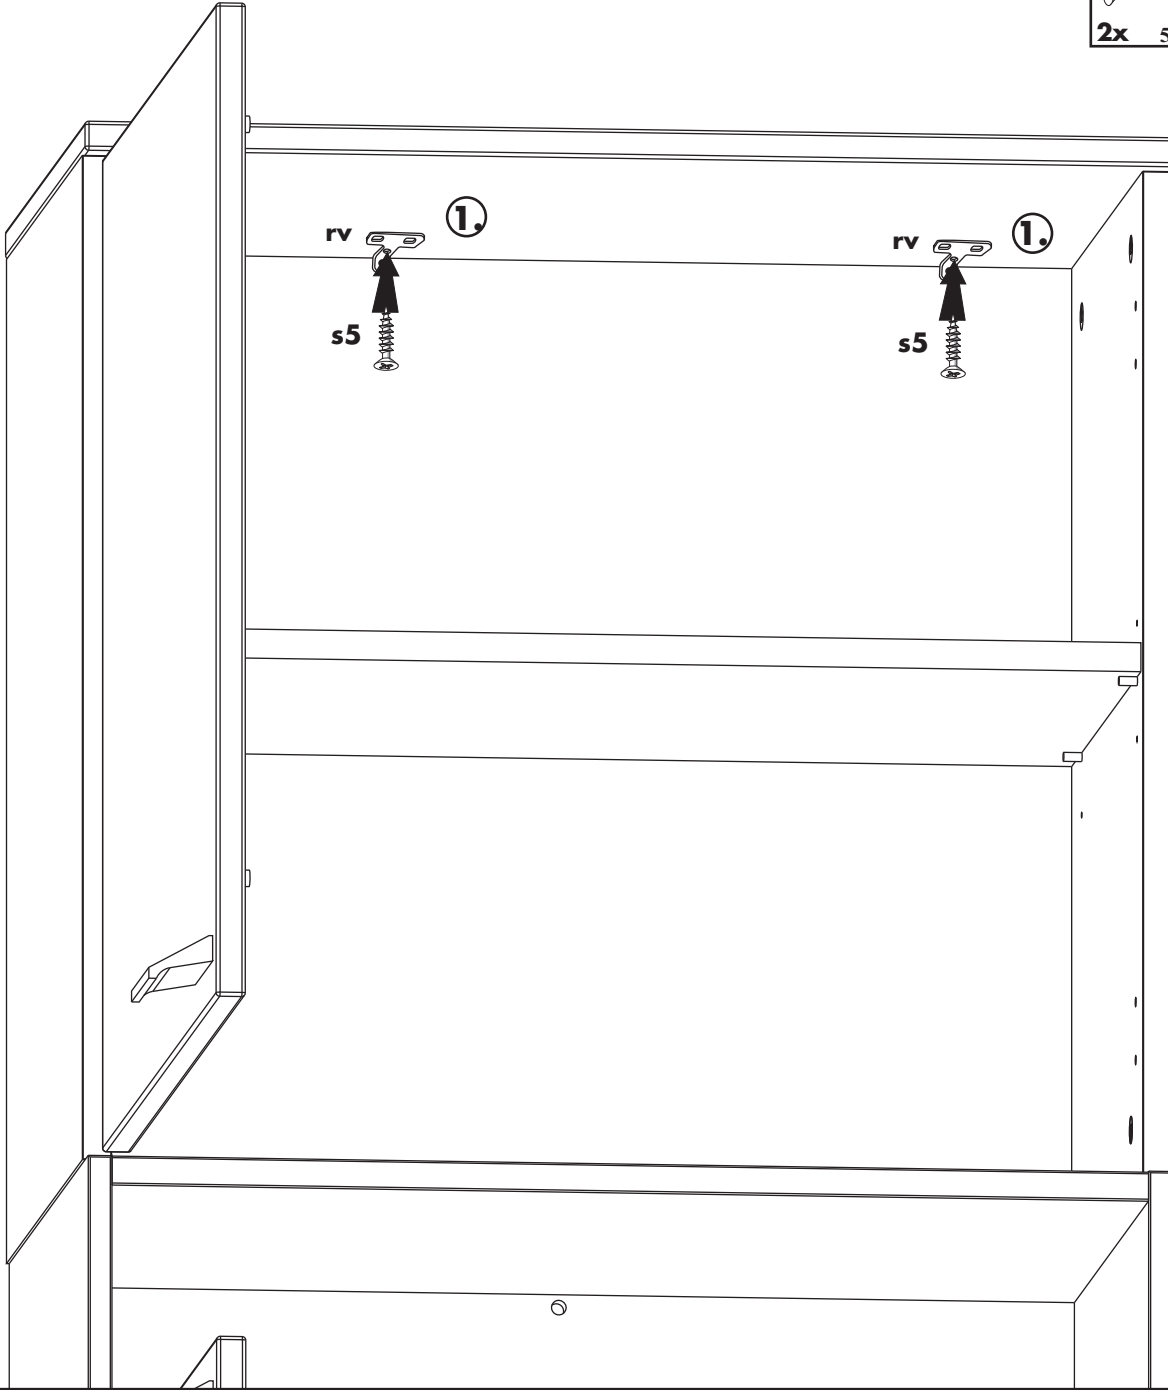

**Kippsicherung
anbringen**
Install anti-tip device

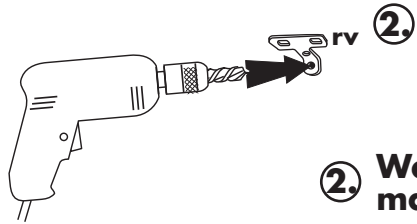

**2. Wand markieren
mark wall**

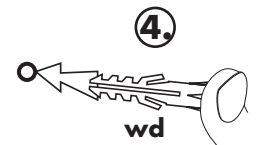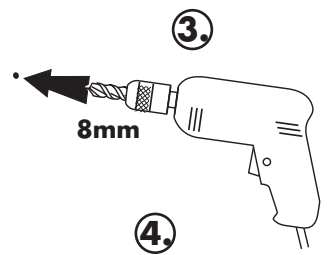

**5. Schraube eindrehen
Mount screw**

