





Type 120-124

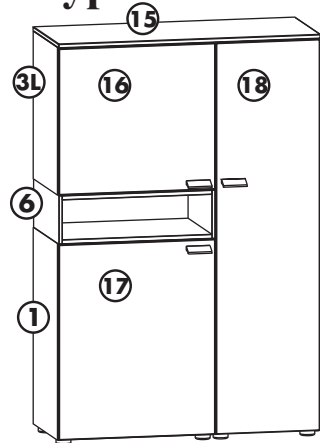

Type 120-125

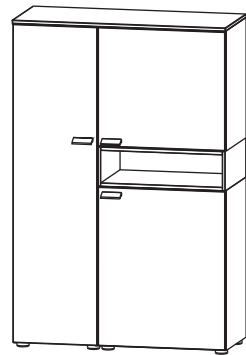

Sie brauchen:
You need:

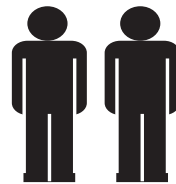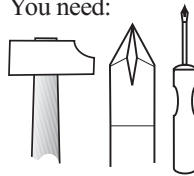

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.



If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


4x  gwh1	8x  M4 x 15 gs7	4x  3,5 x 30 rw2	4x  e5 3 mm	1x  ak1
2x  5 x 100 s28	2x  3,5 x 15 s5	2x  wd	2x  rv	42x  8 x 40 p1
8x  a1	7x  Ø9 mm 1,5 mm tad4	28x  a4	32x  8 mm e4	34x  3 x 20 s7
8x  fu	8x  fo	6x  M4 x 21 gs6	14x  4 x 16 s4	34x  rh
16x  Ø5 mm Ø3 mm t4	32x  8 mm Ø5 mm ak	3x  gr40	7x  D 2mm d18	7x  c16

CAD und Design
Light Line 14 120_124 / 03.26




A1

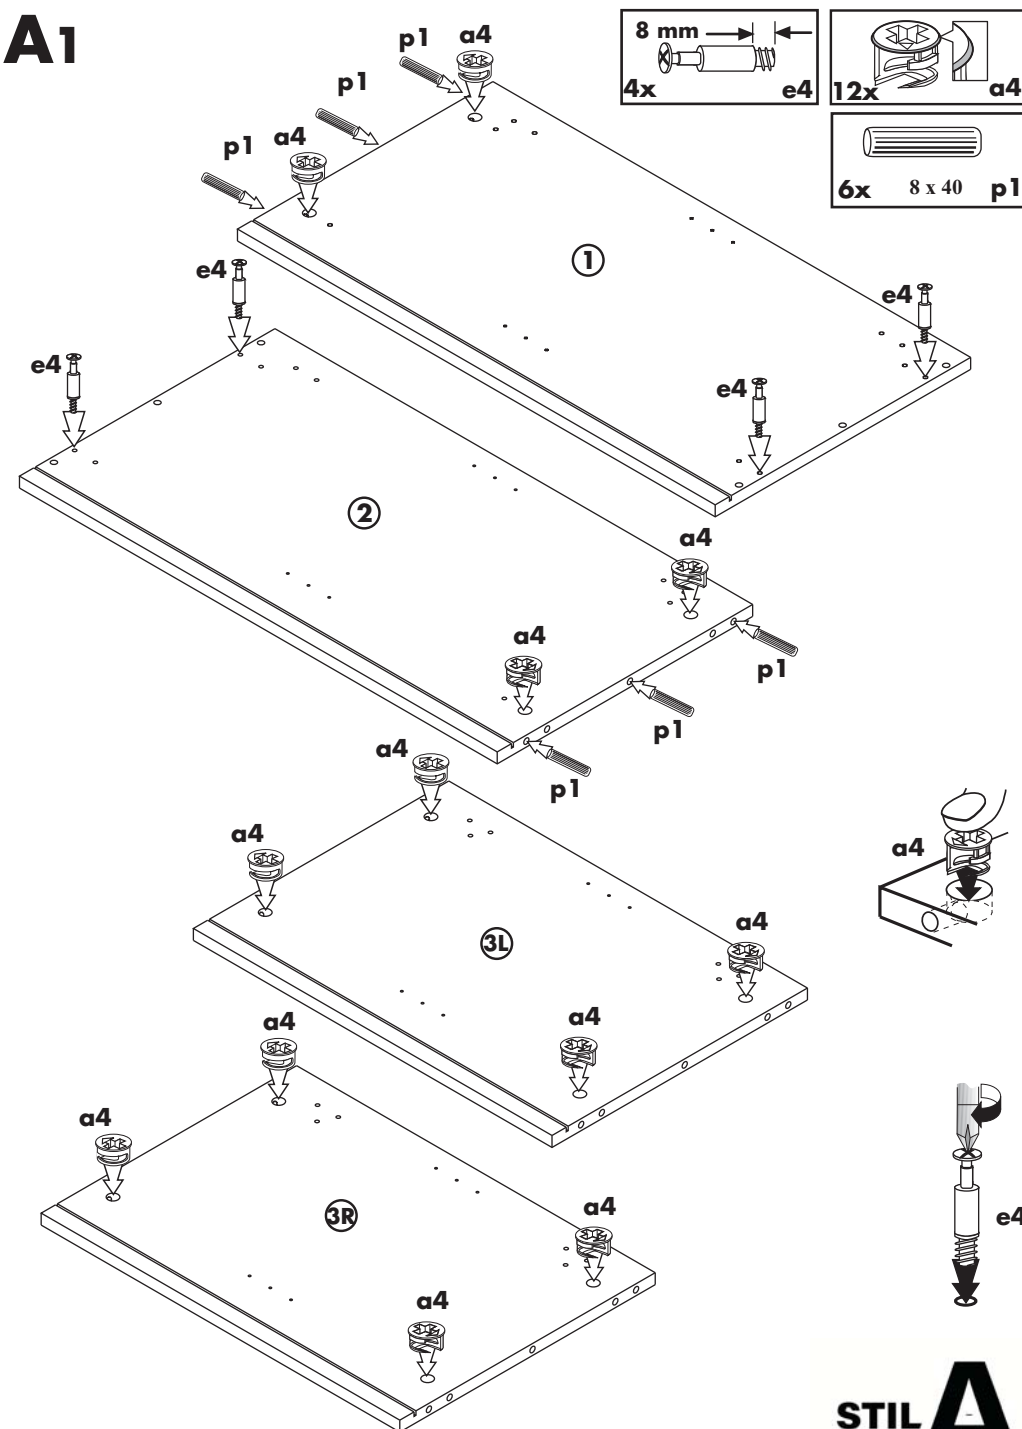


A2

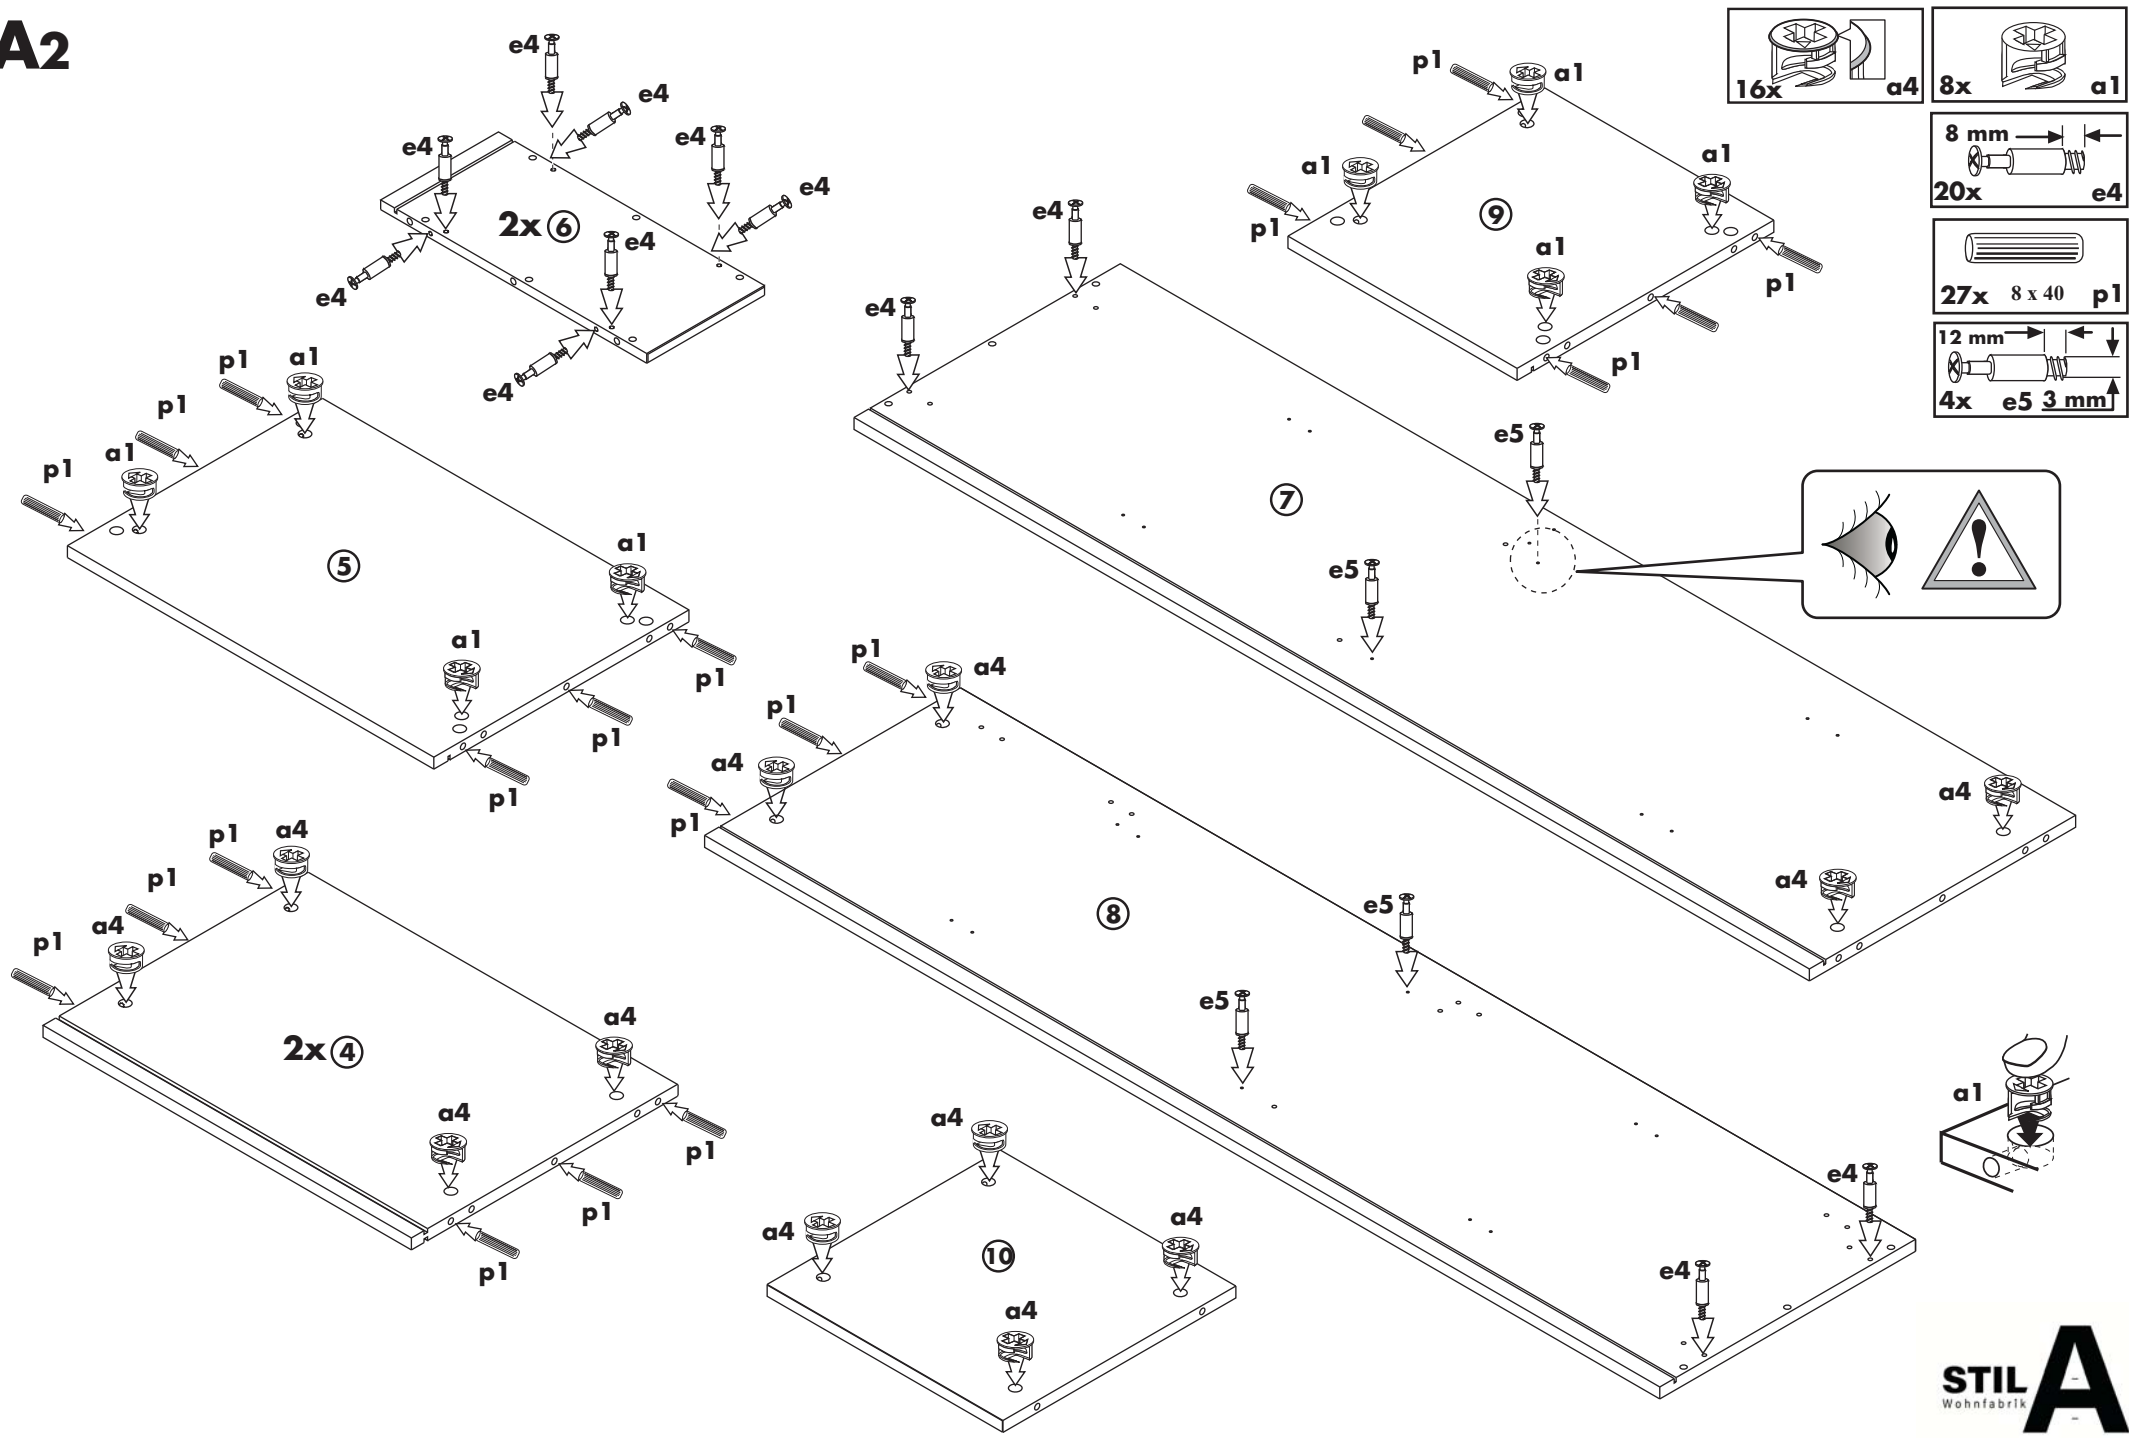


B

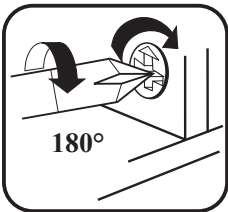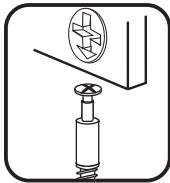
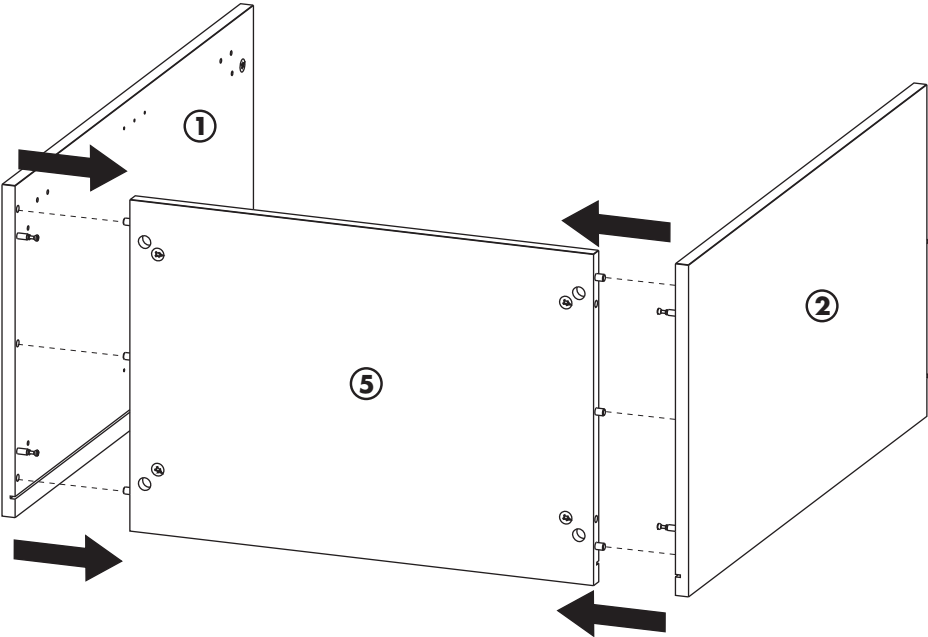


C

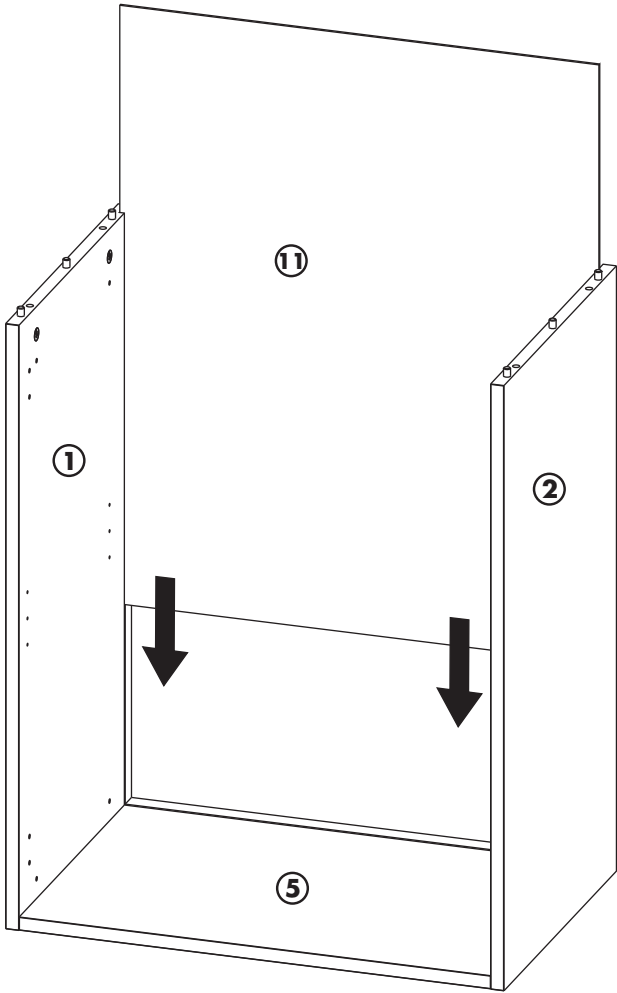




D

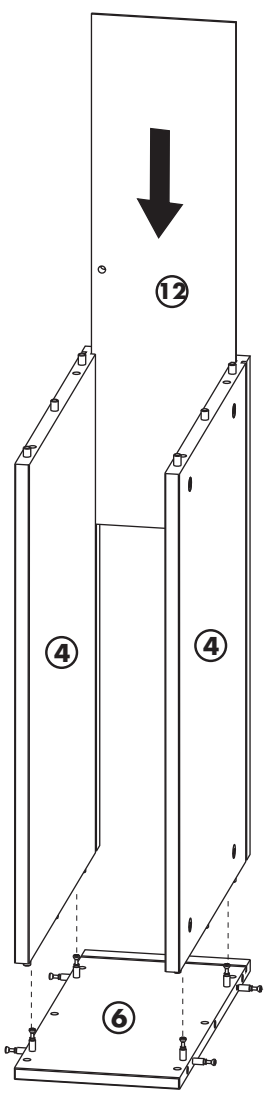

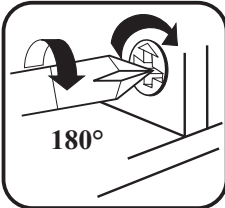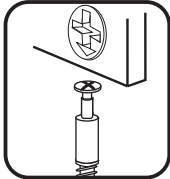




E

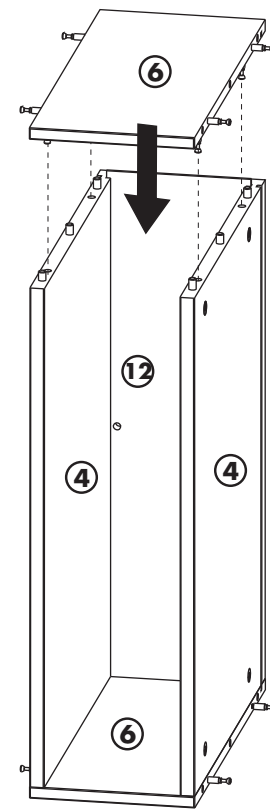

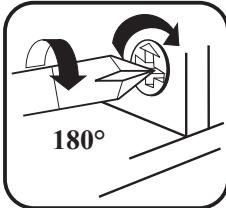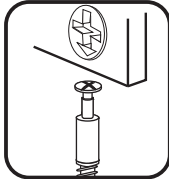



F

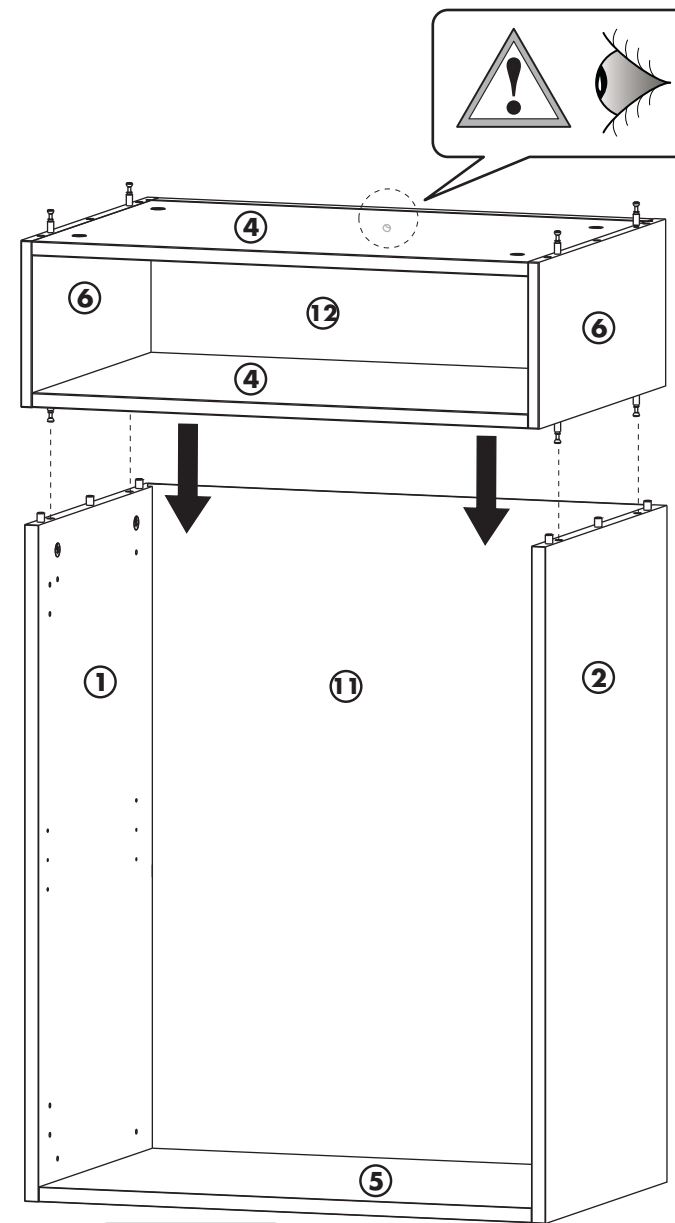

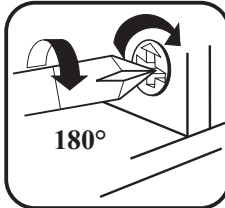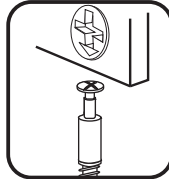






G1

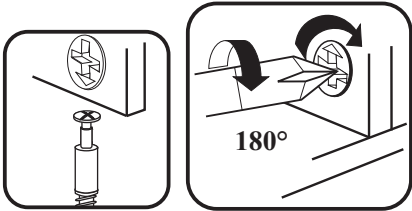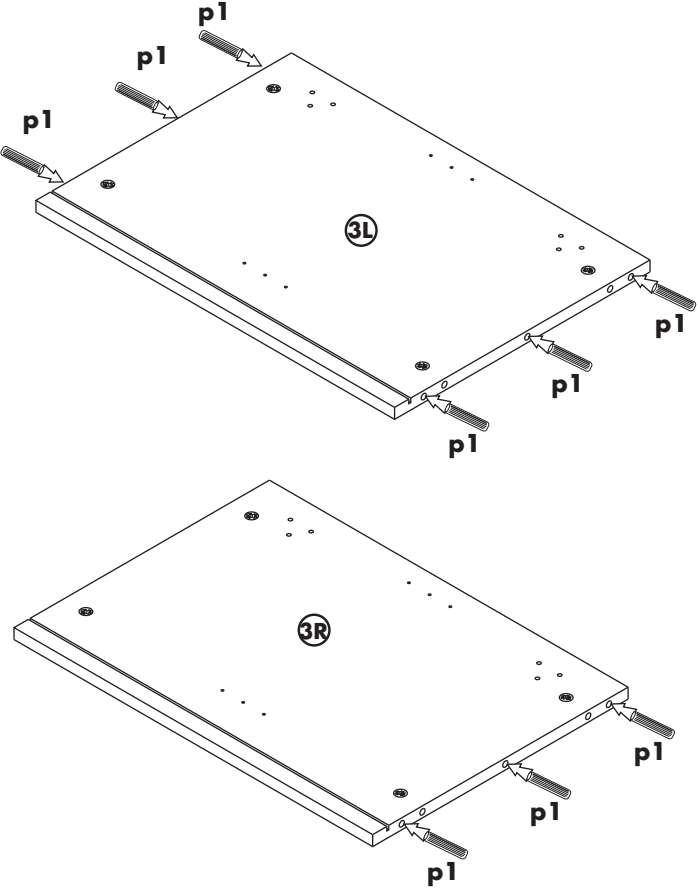

9x 8 x 40 p1

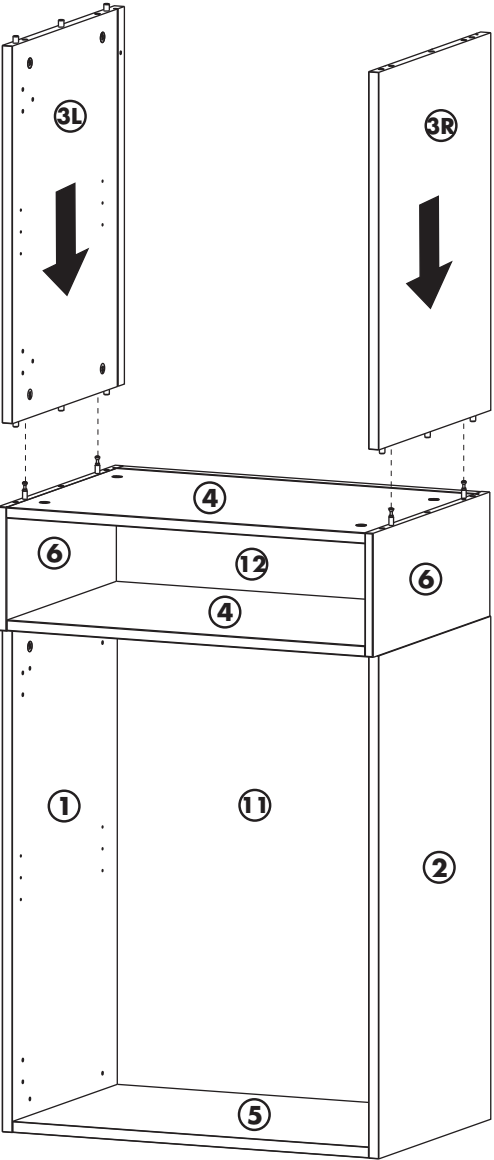


H1

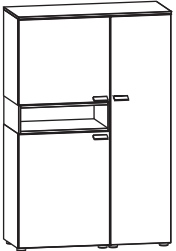
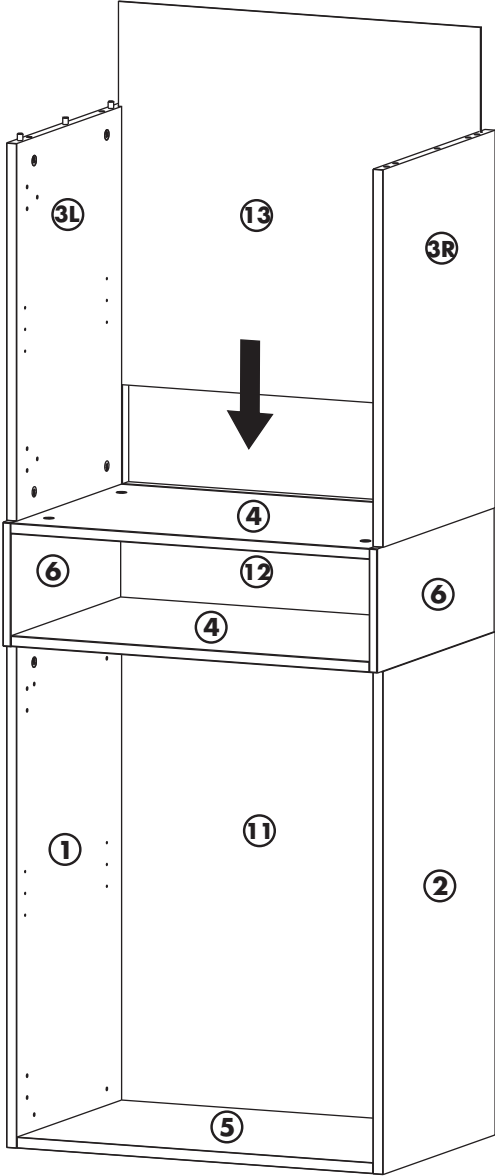


Type 120-124


G2

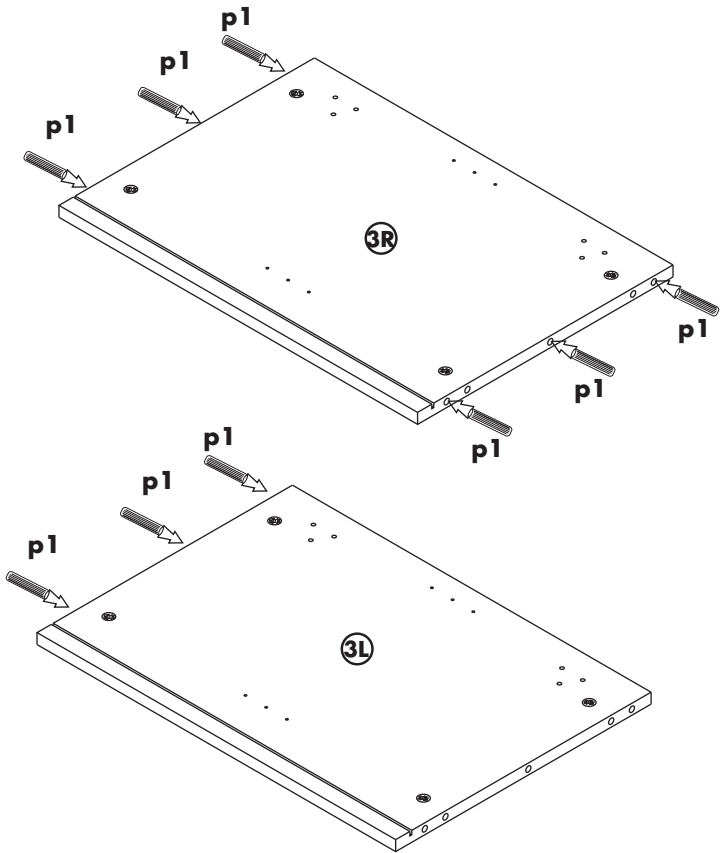

9x 8 x 40 p1

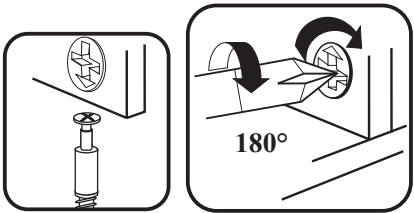
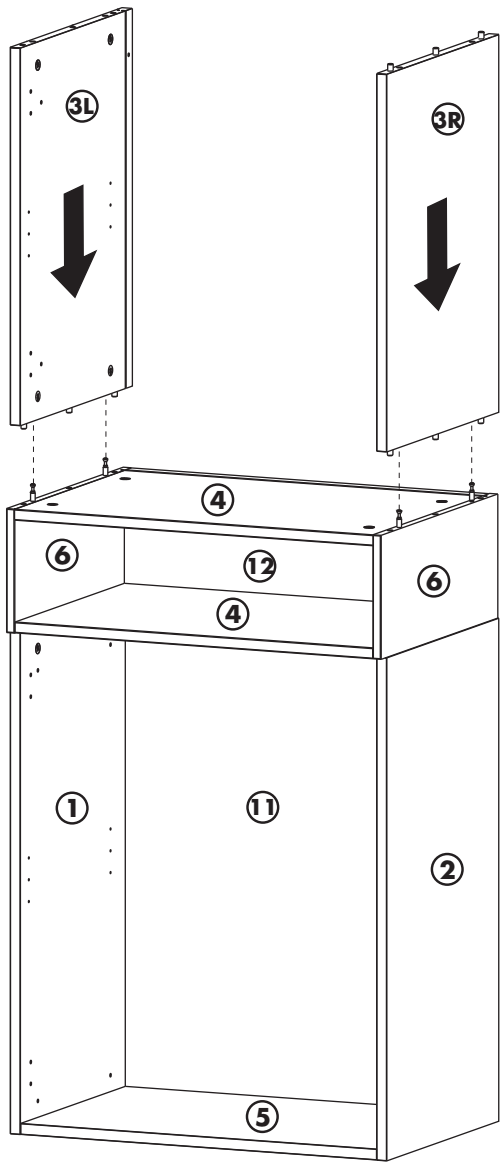


H2


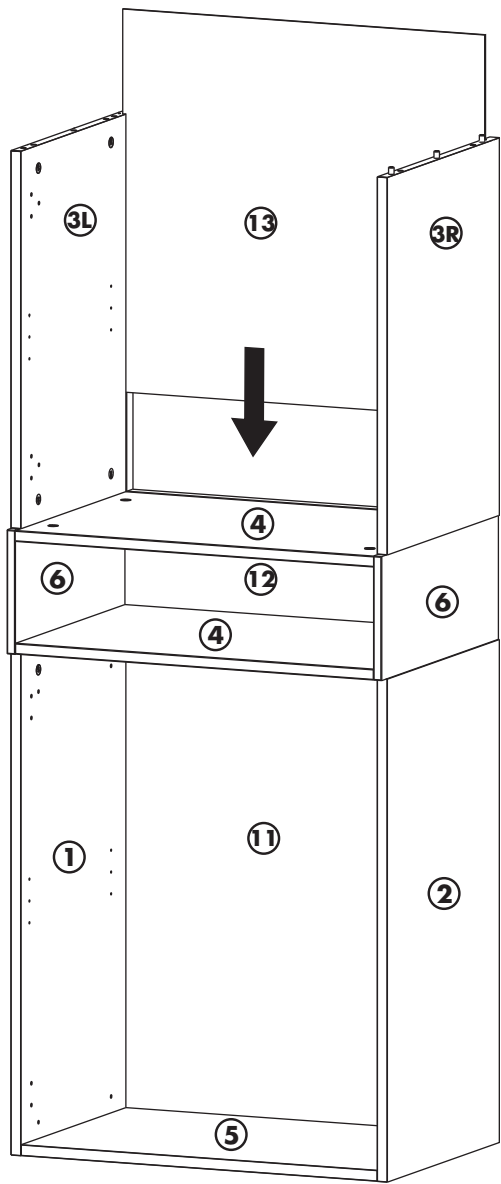


Type 120-125


I

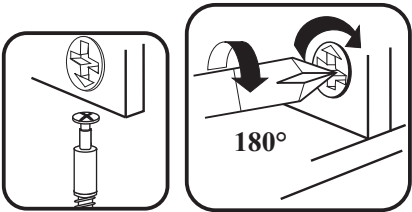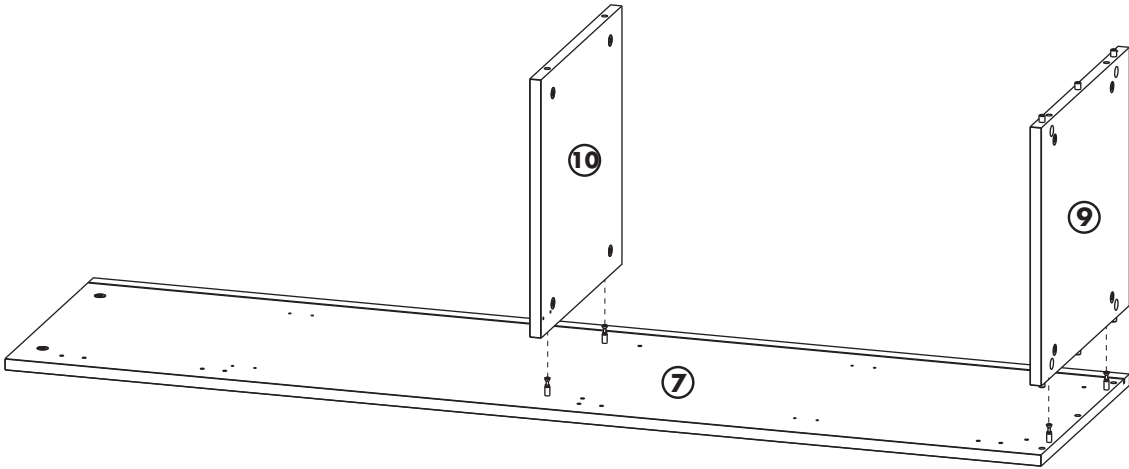

J

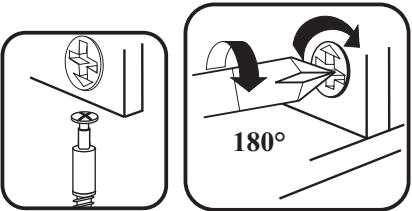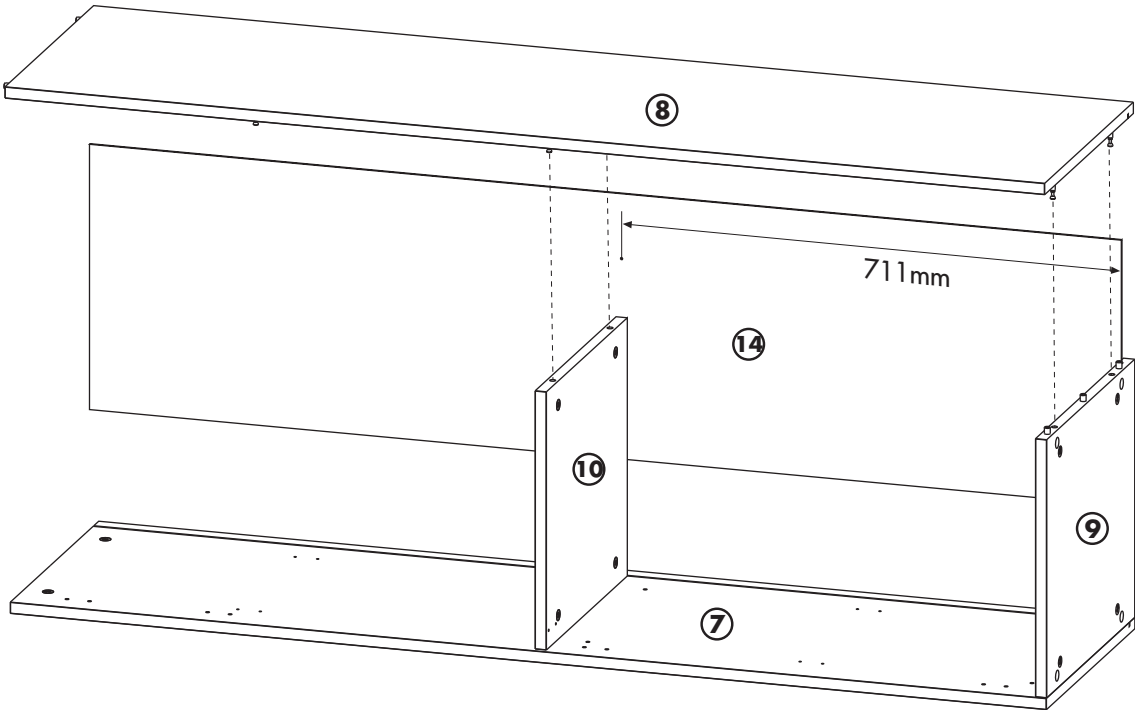

unten
below

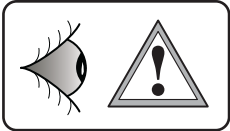

K1

Type 120-124



K2

Type 120-125


8 mm
8x e4

STIL
Wohnfabrik **A**

L

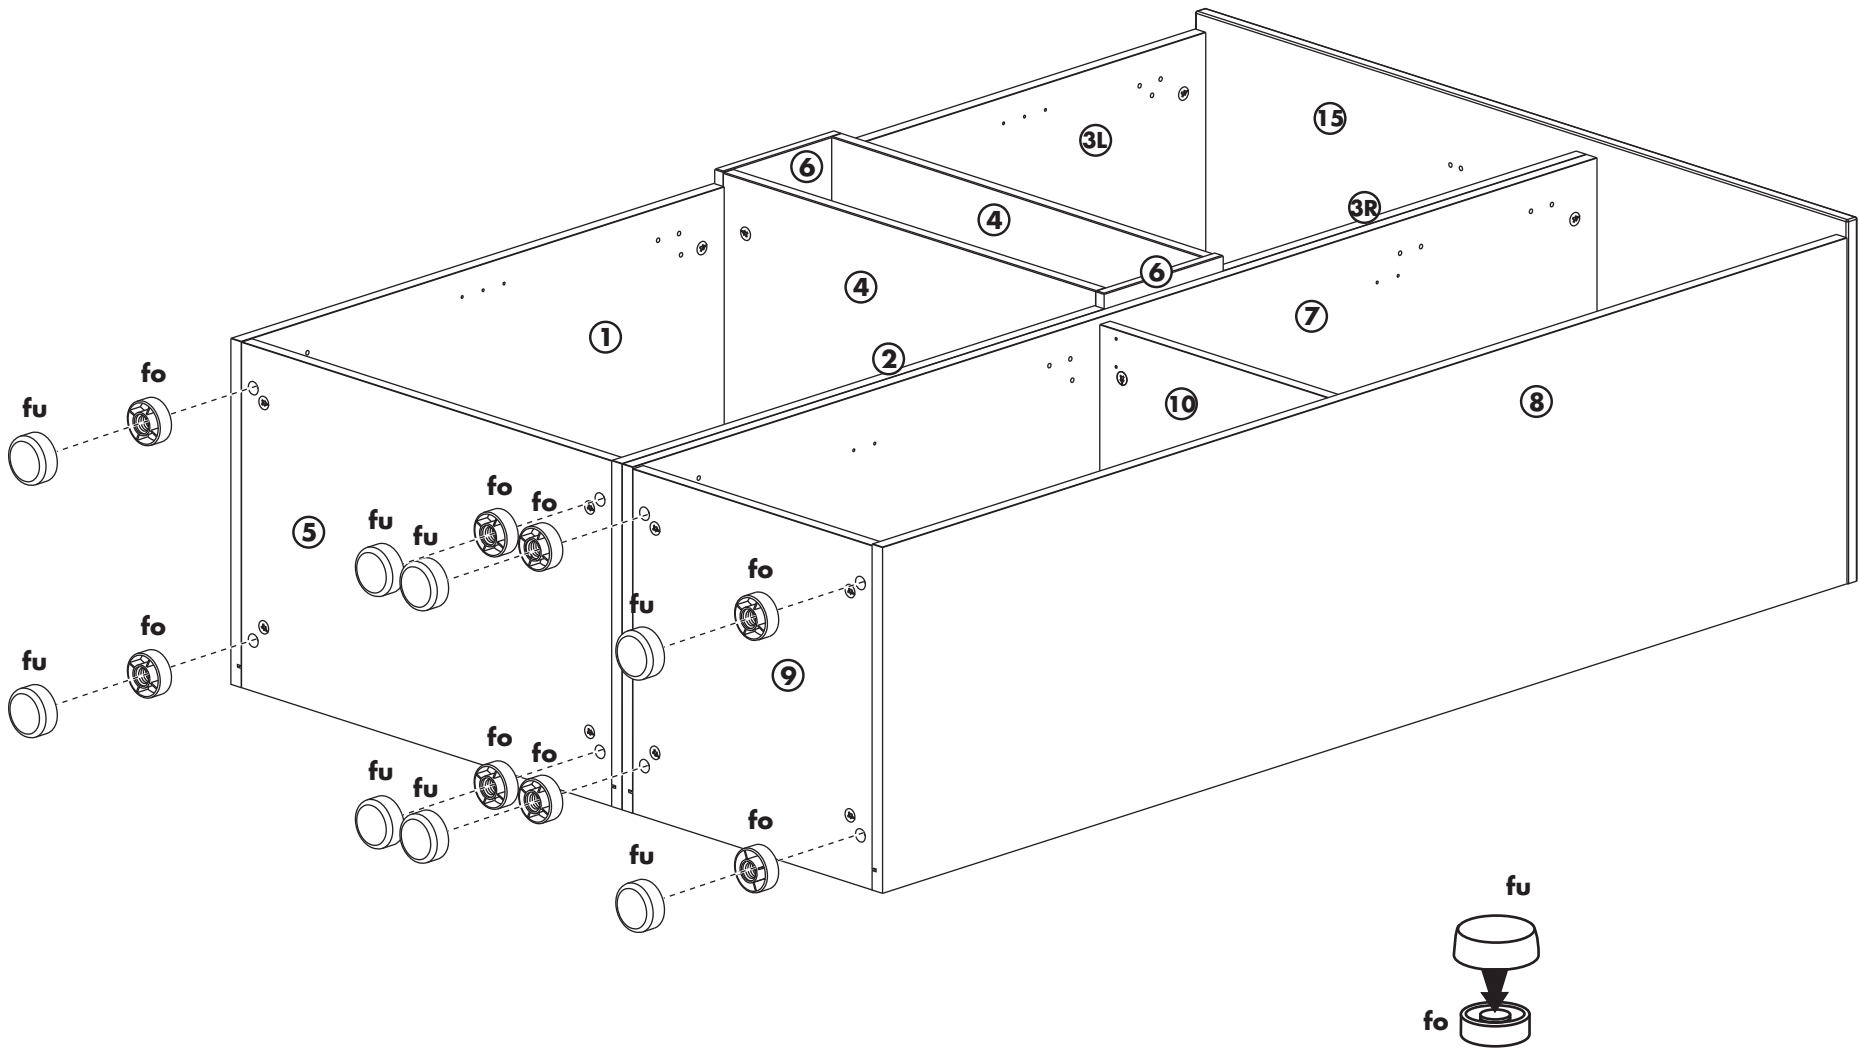

M

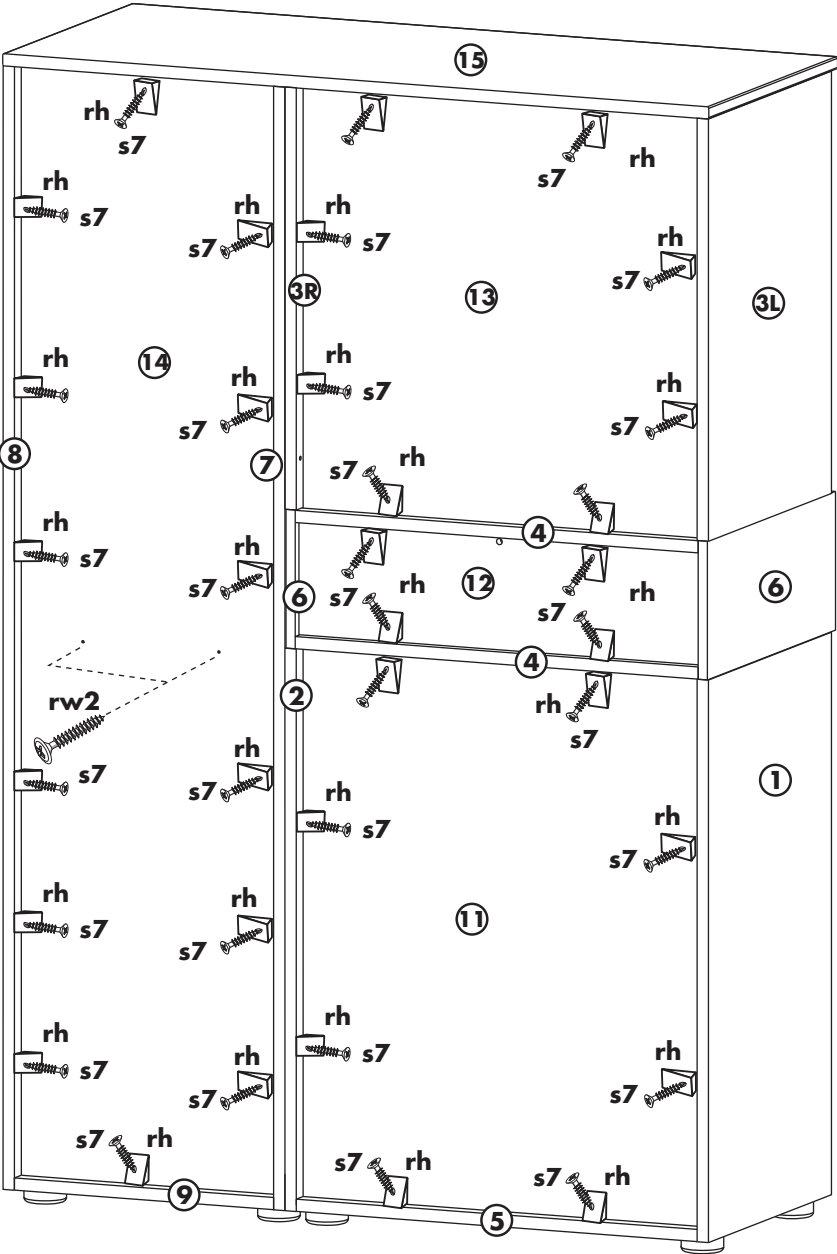



34x rh


34x 3 x 20 s7

2x 3,5 x 30 rw2




N1

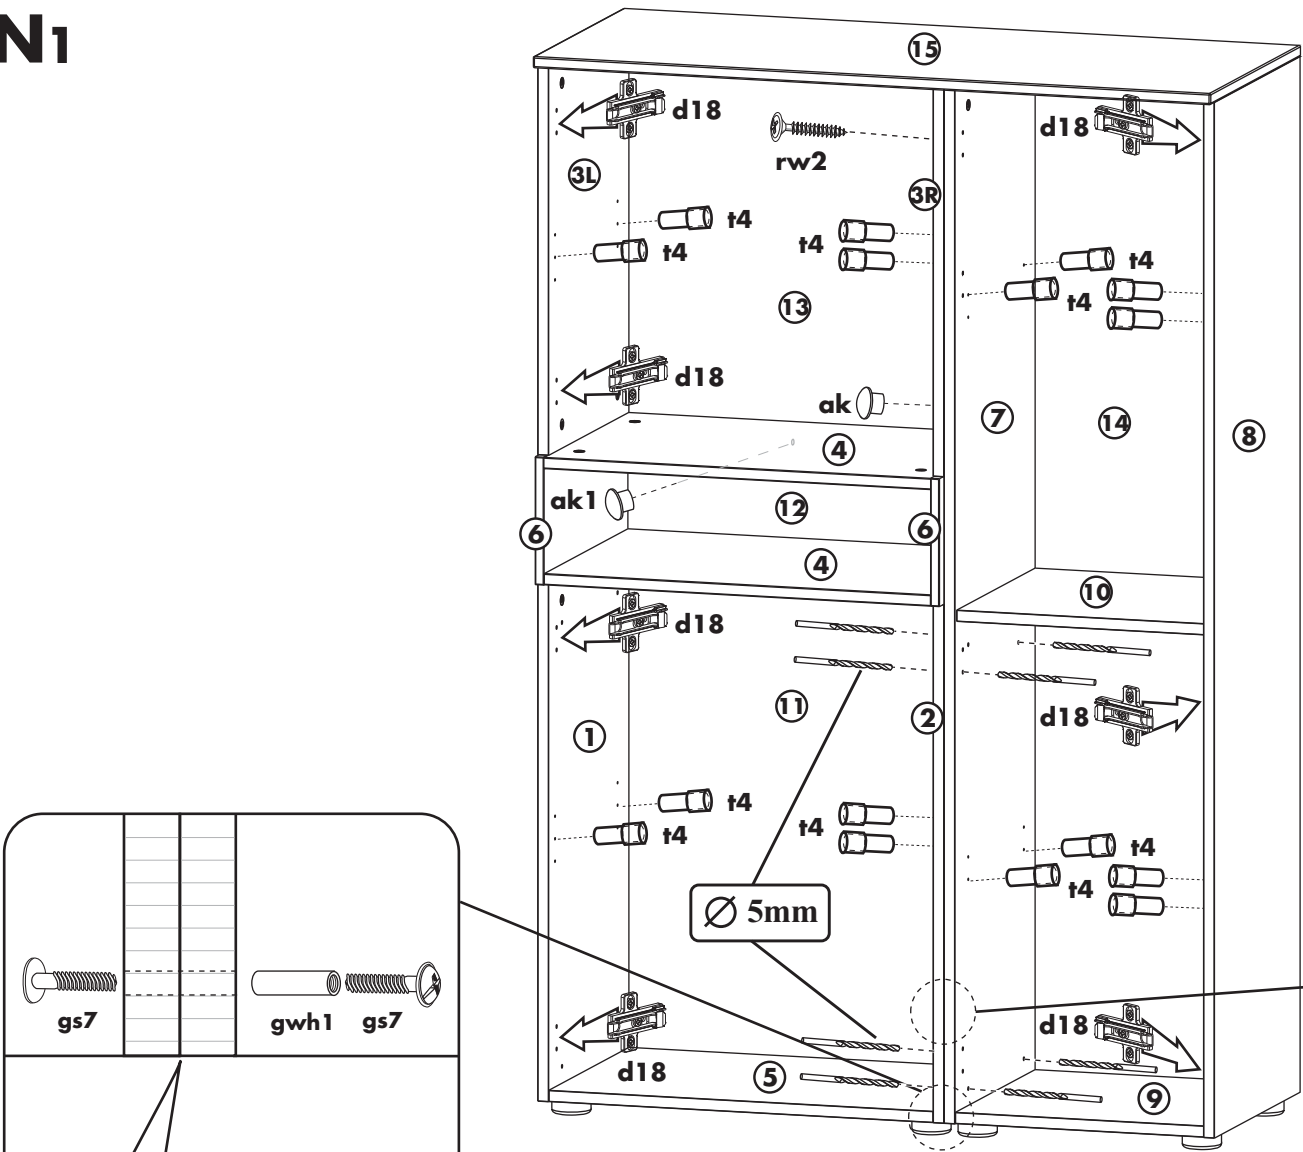



Type 120-124

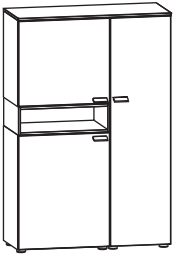

$\varnothing 5\text{ mm}$	$\varnothing 3\text{ mm}$
16x	t4
7x	D 2mm d18
$\varnothing 8\text{ mm}$	$\varnothing 5\text{ mm}$
32x	ak
$\varnothing 13\text{ mm}$	$\varnothing 8\text{ mm}$
1x	ak1
8x	M4 x 15 gs7
4x	gwh1
2x	3,5 x 30 rw2

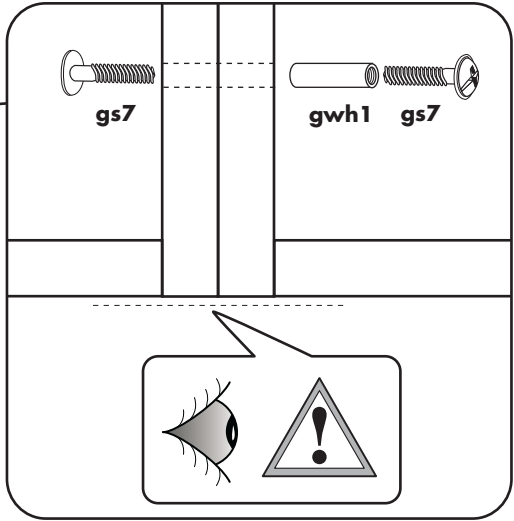
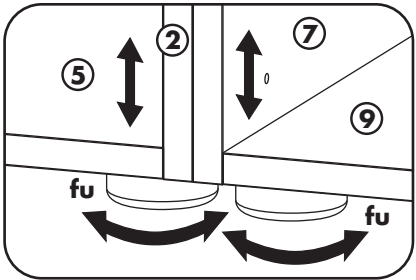
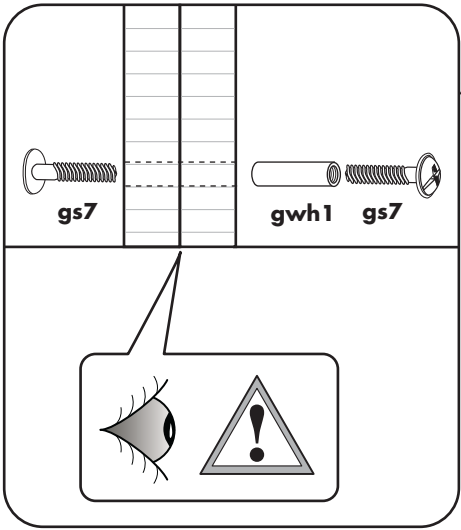



N2

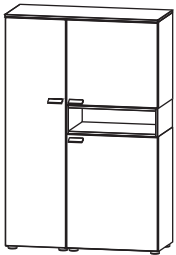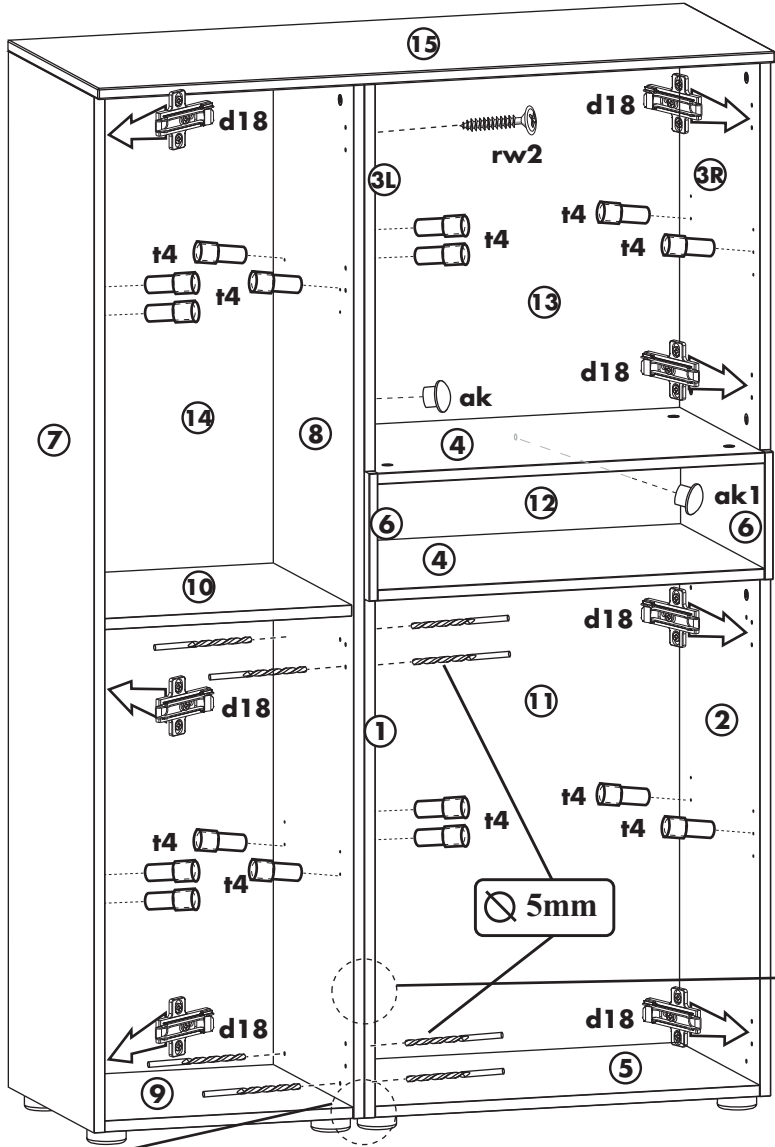


Type 120-125

$\varnothing 5 \text{ mm}$	$\varnothing 3 \text{ mm}$
	
16x	t4
	
7x	D 2mm d18
$\varnothing 8 \text{ mm}$	$\varnothing 5 \text{ mm}$
32x	ak
$\varnothing 13 \text{ mm}$	$\varnothing 8 \text{ mm}$
1x	ak1
	
8x	M4 x 15 gs7
	
4x	gwh1
	
2x	3,5 x 30 rw2

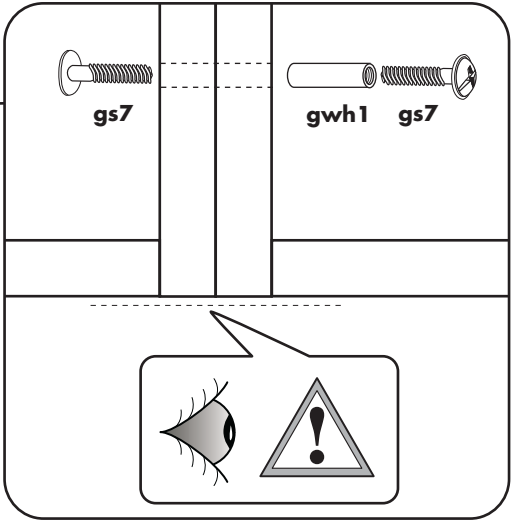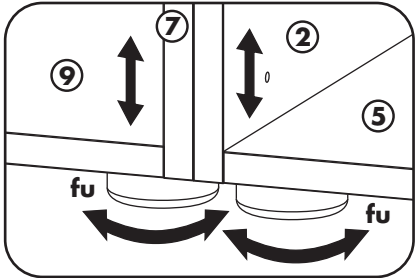
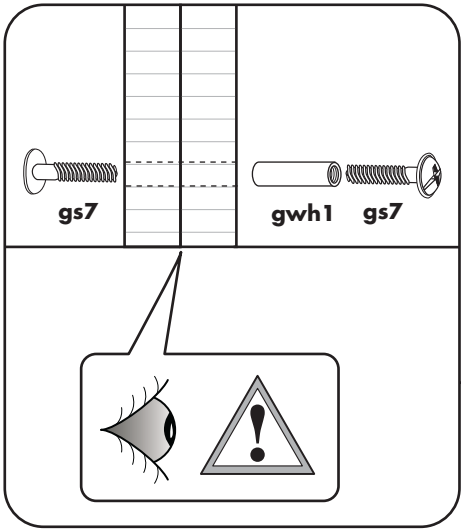


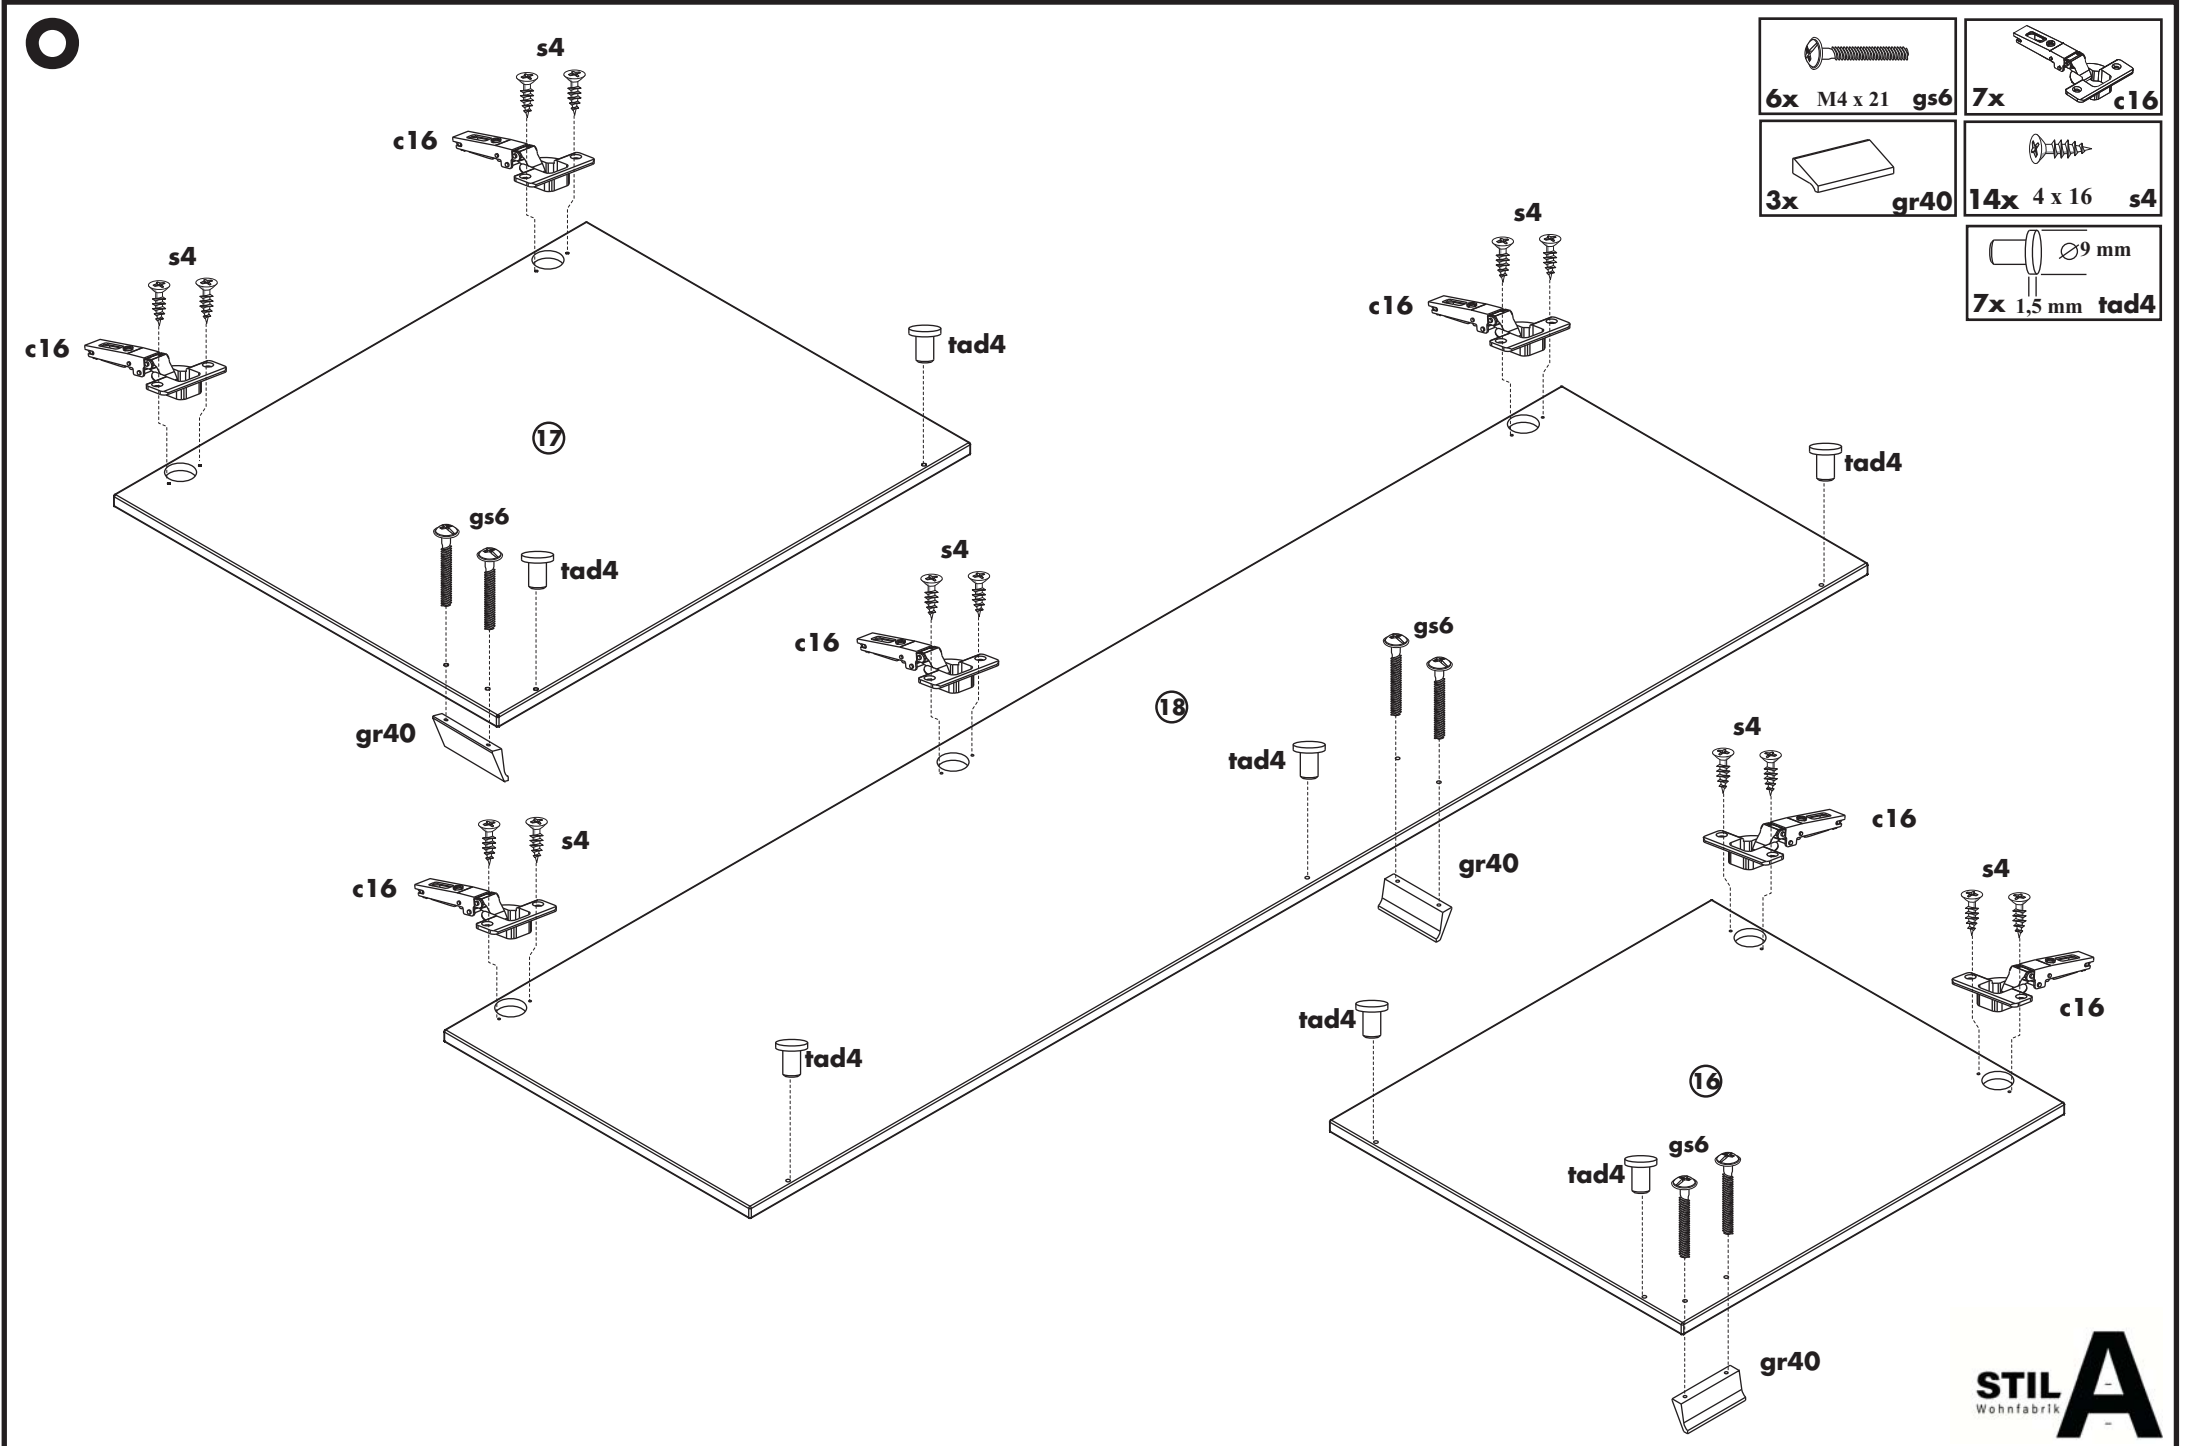


P

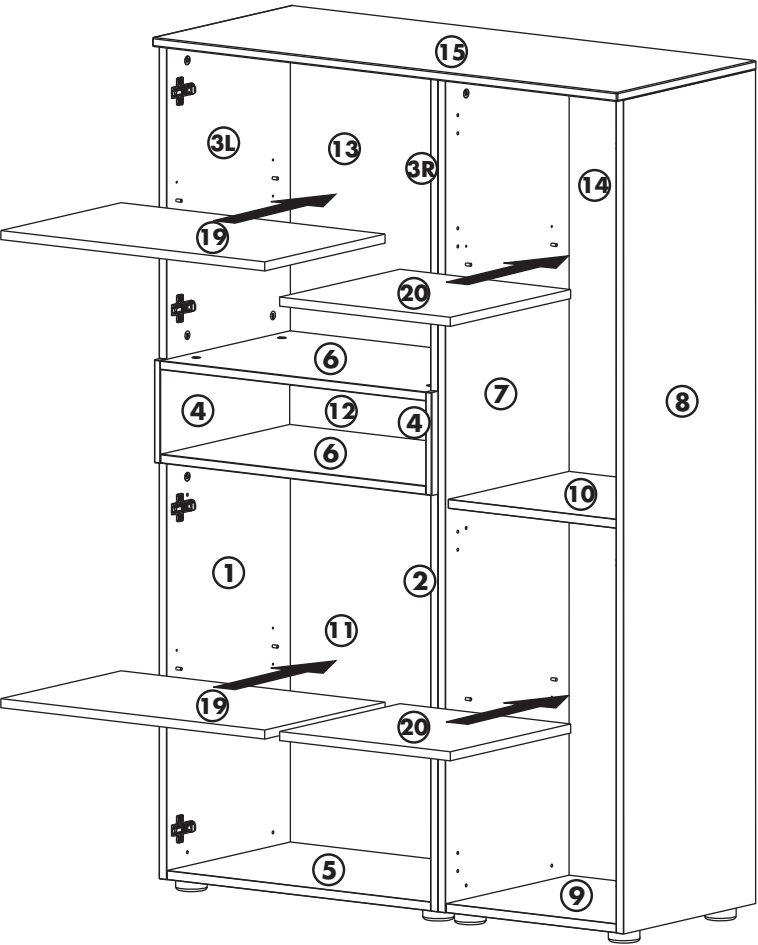


Q

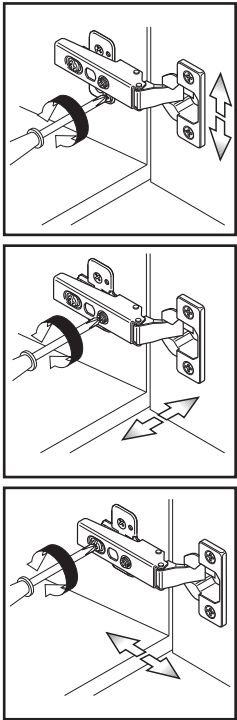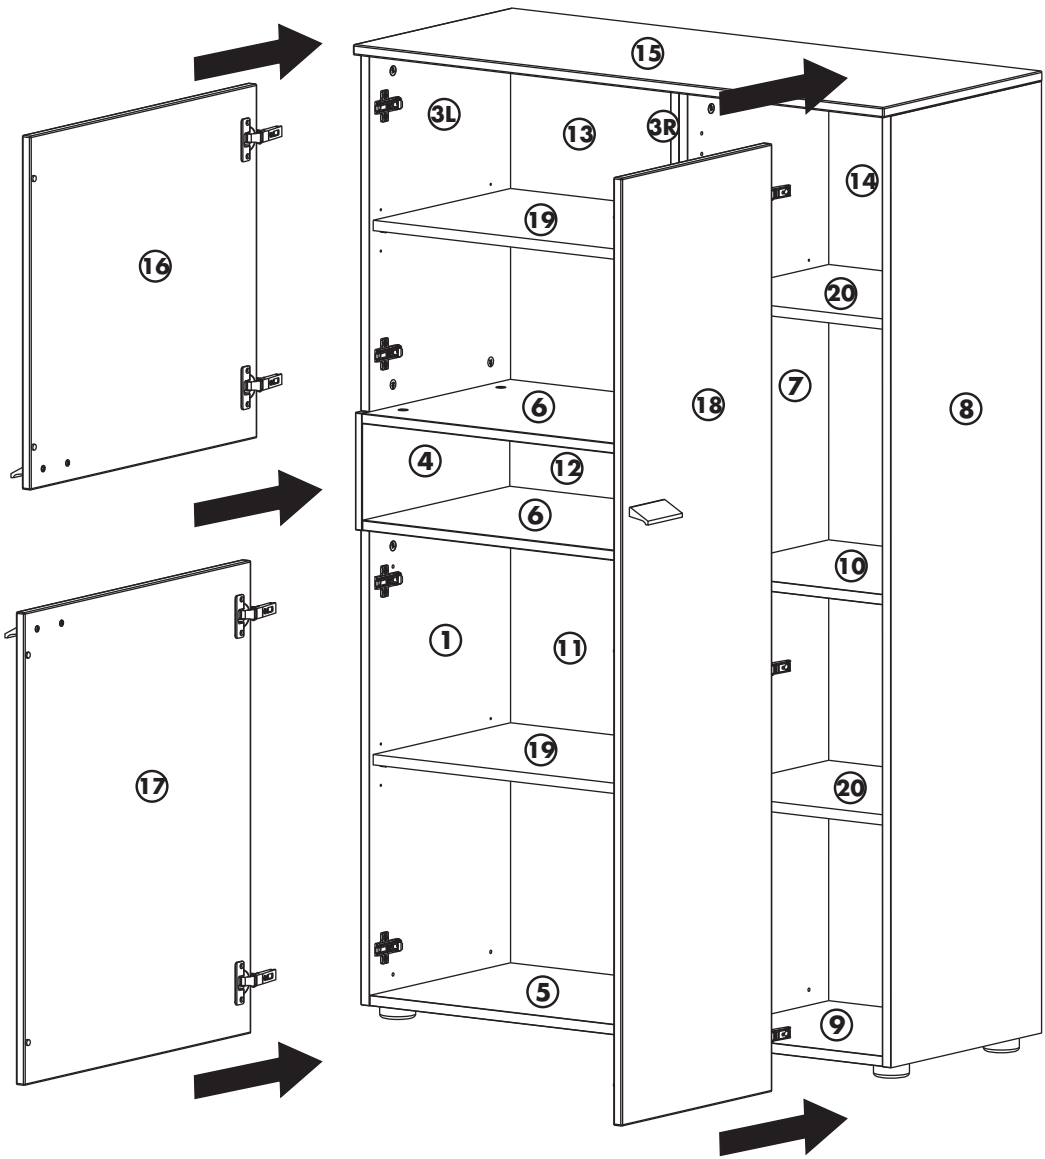


R



			
2x 5 x 100 s28	2x 3,5 x 15 s5	2x wd	2x rv

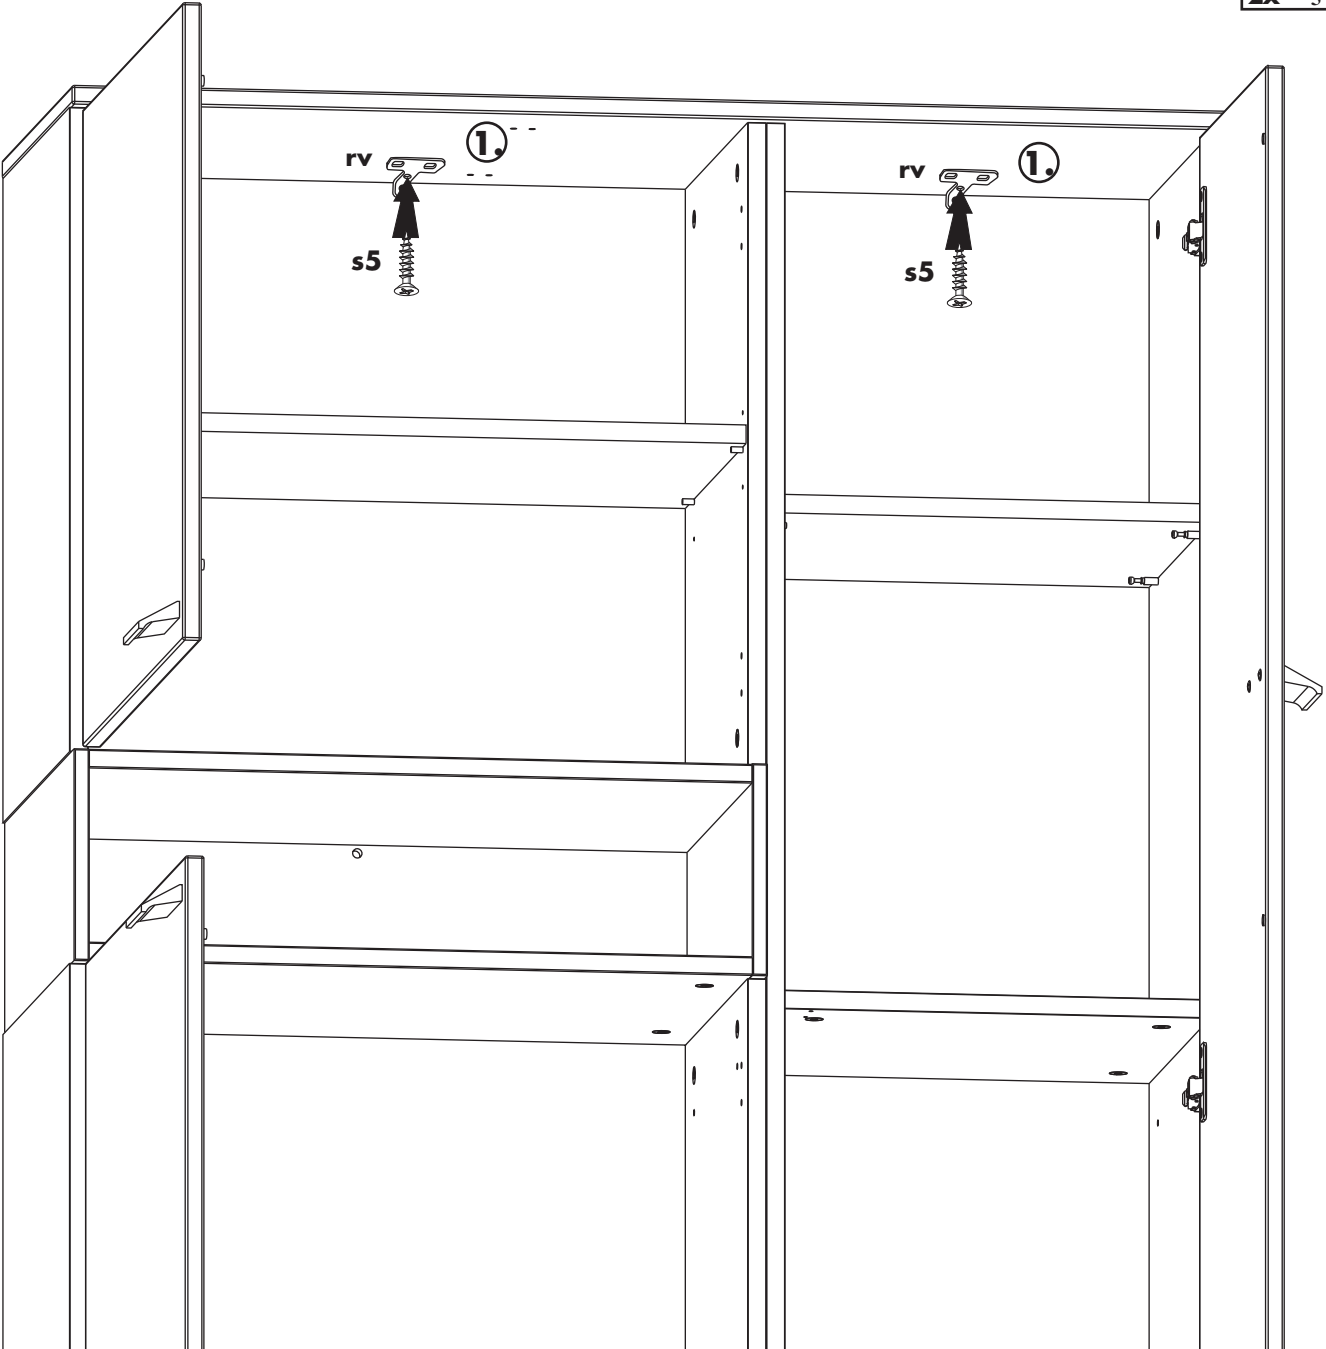

Kippsicherung
anbringen
Install anti-tip device

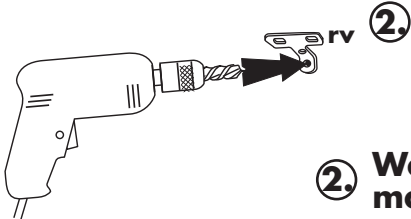

2. Wand markieren
mark wall

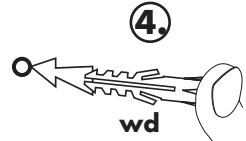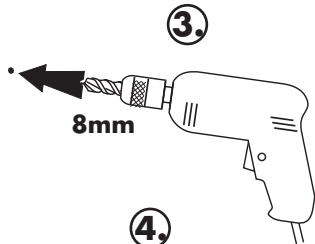

5. Schraube eindrehen
Mount screw

