





Type 120-130

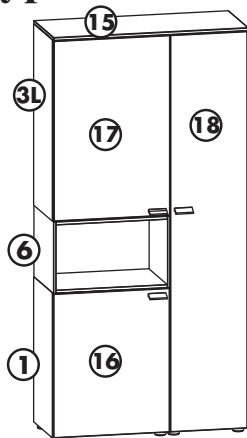

Type 120-131

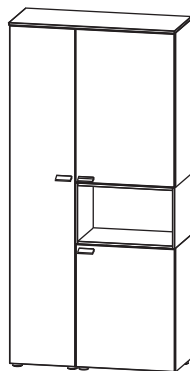

Sie brauchen:
You need:

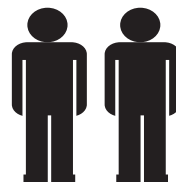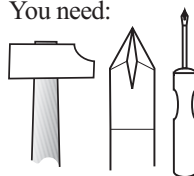

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.








Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Light Line 14 120_130 / 03.26

			
16x M4 x 15 gs7	2x 3,0 x 20 rw1	8x gwh1	1x ak1
			
2x 5 x 100 s28	2x 3,5 x 15 s5	2x wd	2x rv
			
8x a1	8x 1,5 mm tad4	28x a4	36x e4
			
8x fu	8x fo	6x M4 x 21 gs6	16x 4 x 16 s4
			
16x t4	36x ak	3x gr40	8x D 2mm d18
			
16x t4	36x ak	3x gr40	8x c16




A1

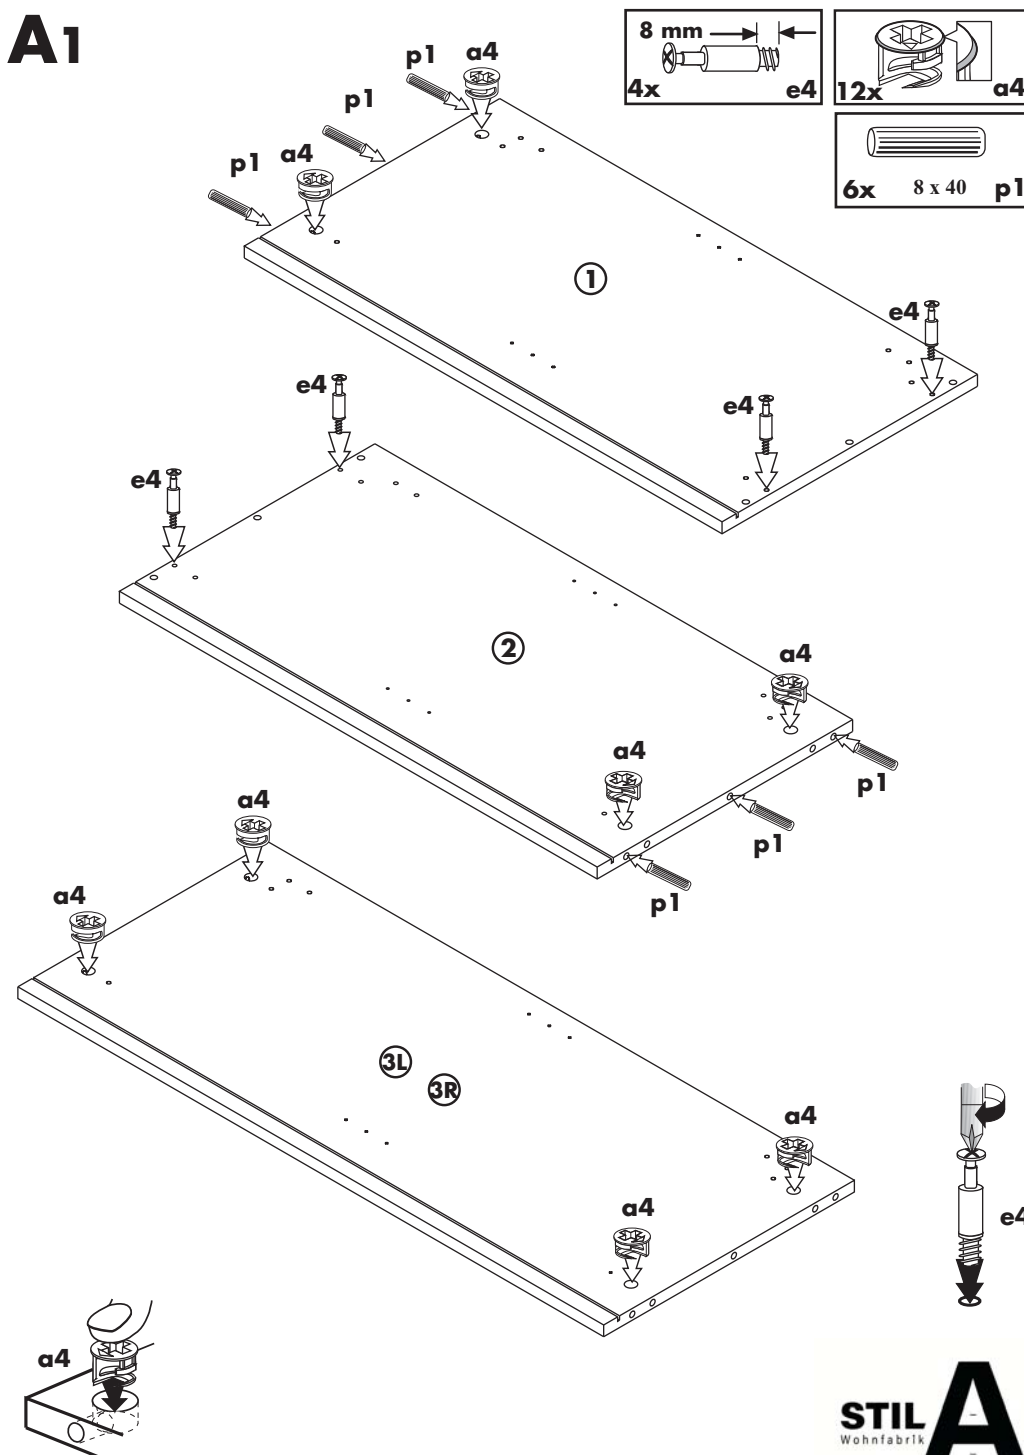


A2

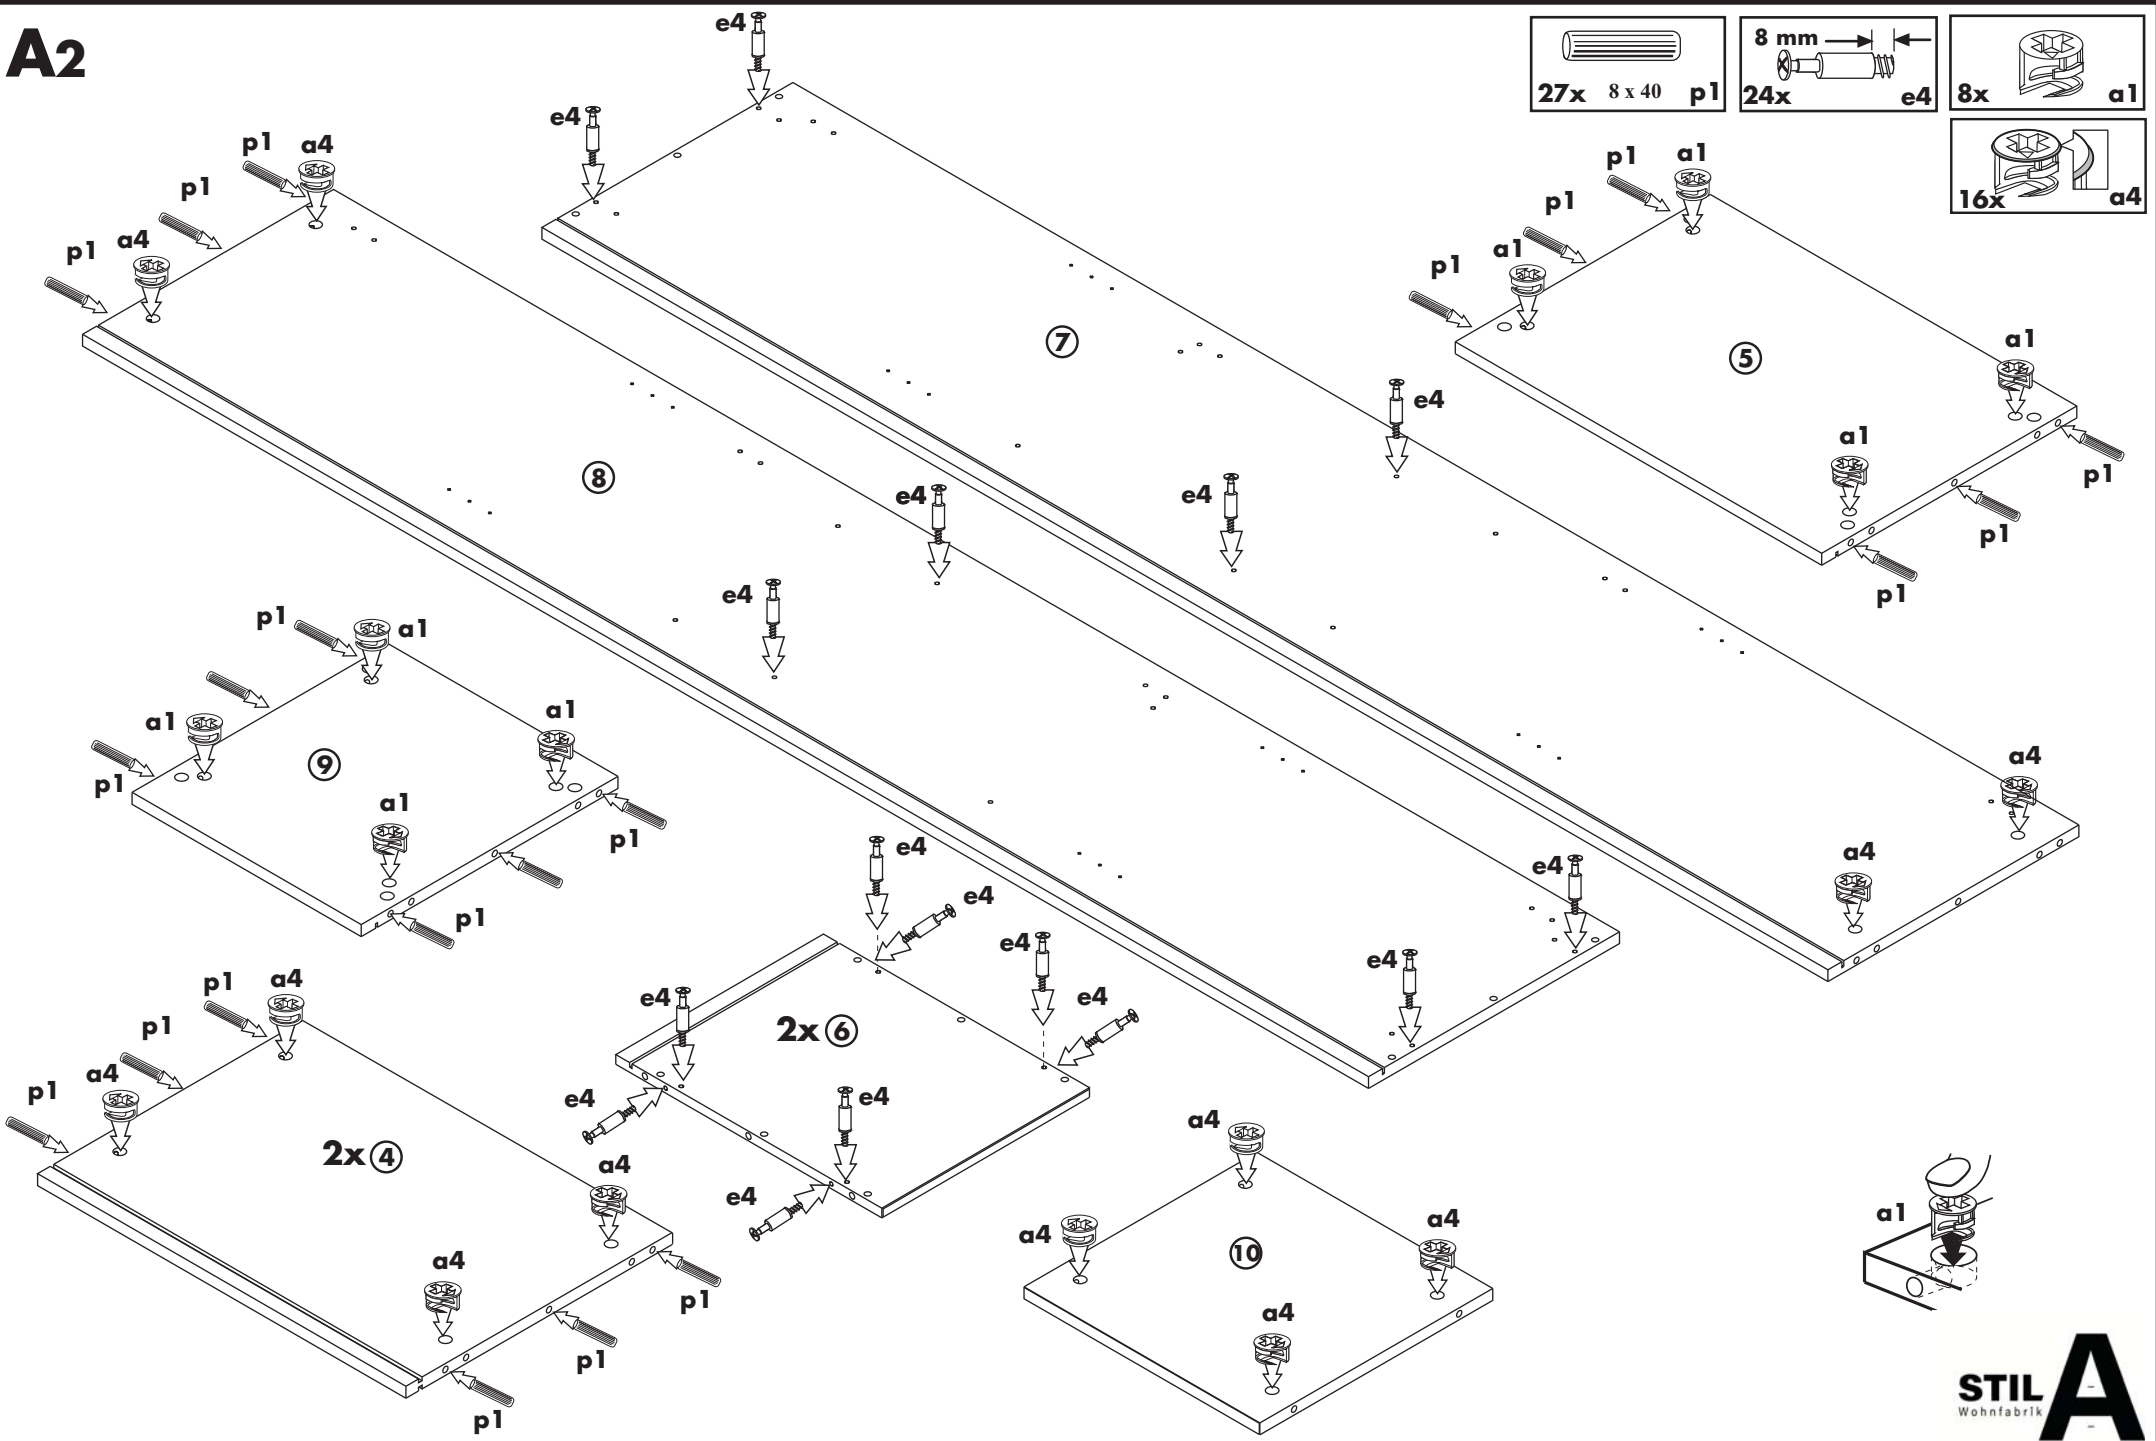

B

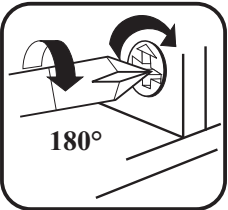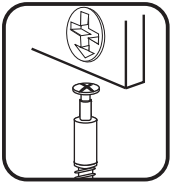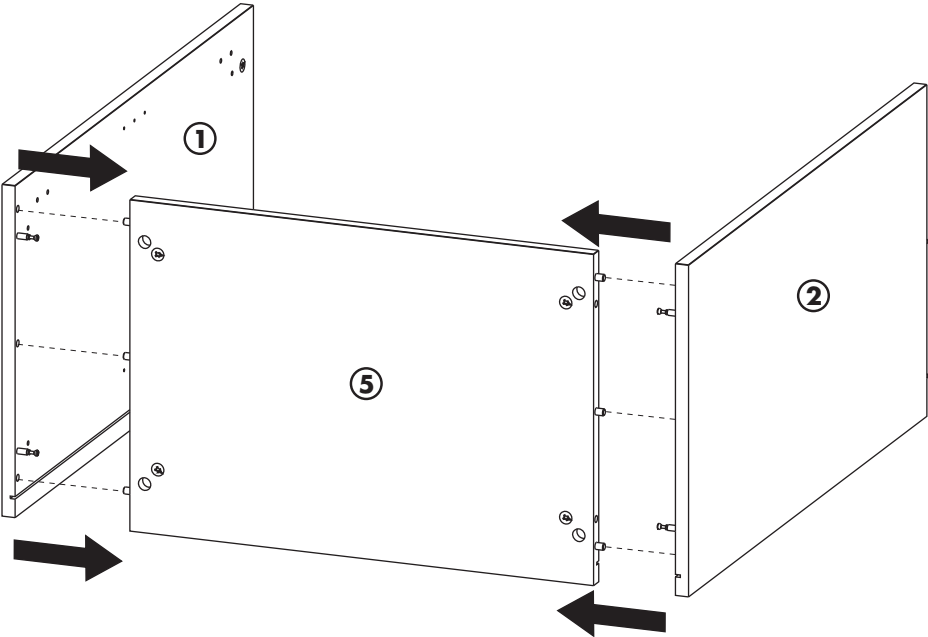

C

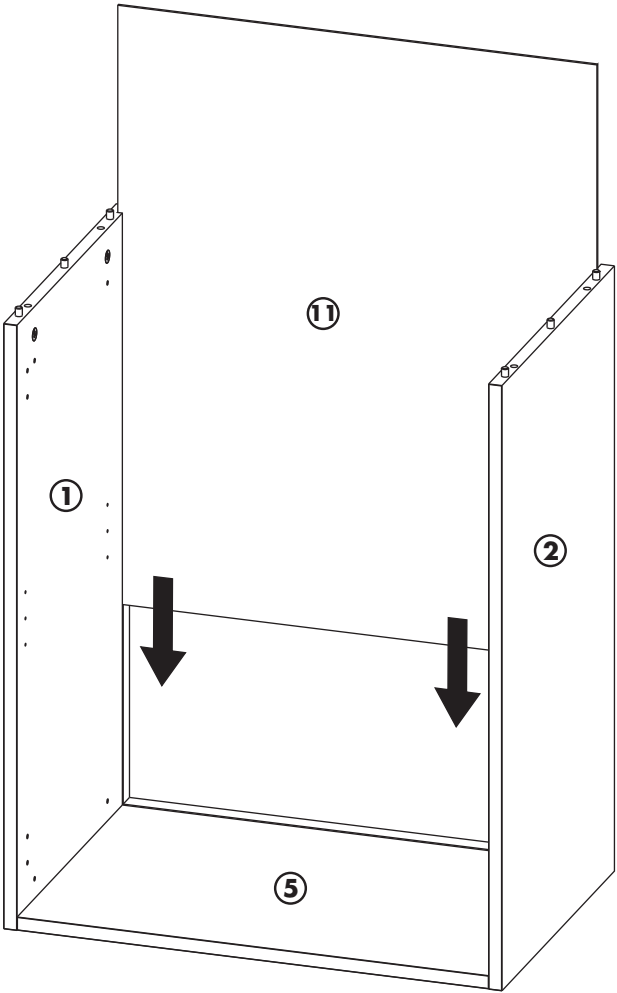

D

12

4

6

180°

E

6

4

12

6

180°

F

6

12

4

1

2





11

5



180°

STIL A
Wohnfabrik

G1

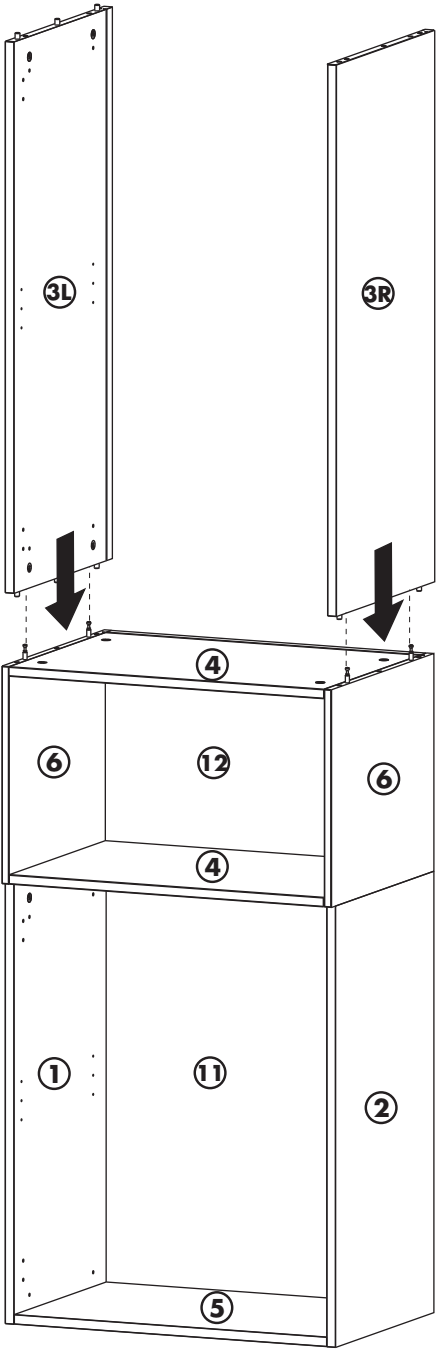
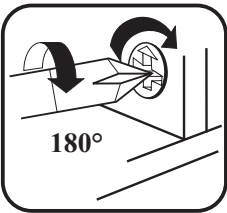
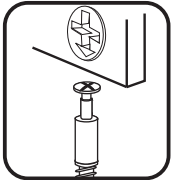
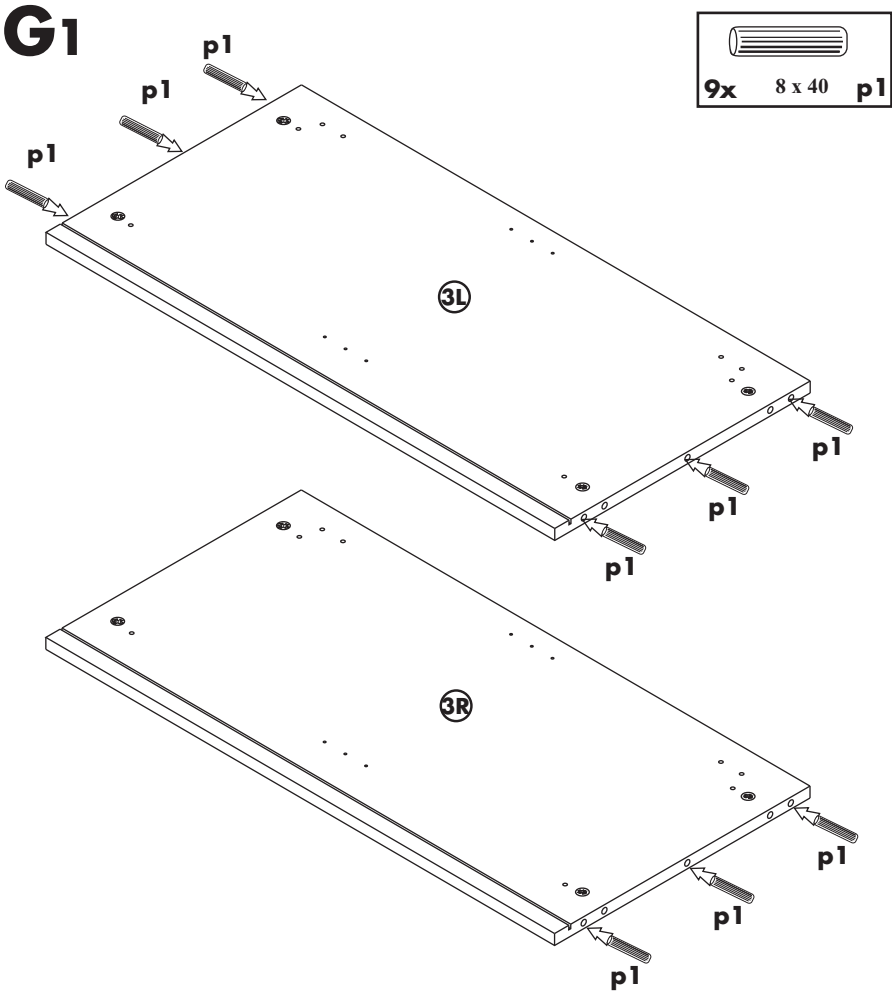


H1

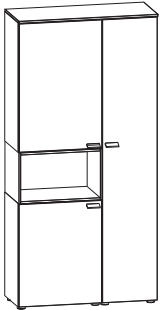
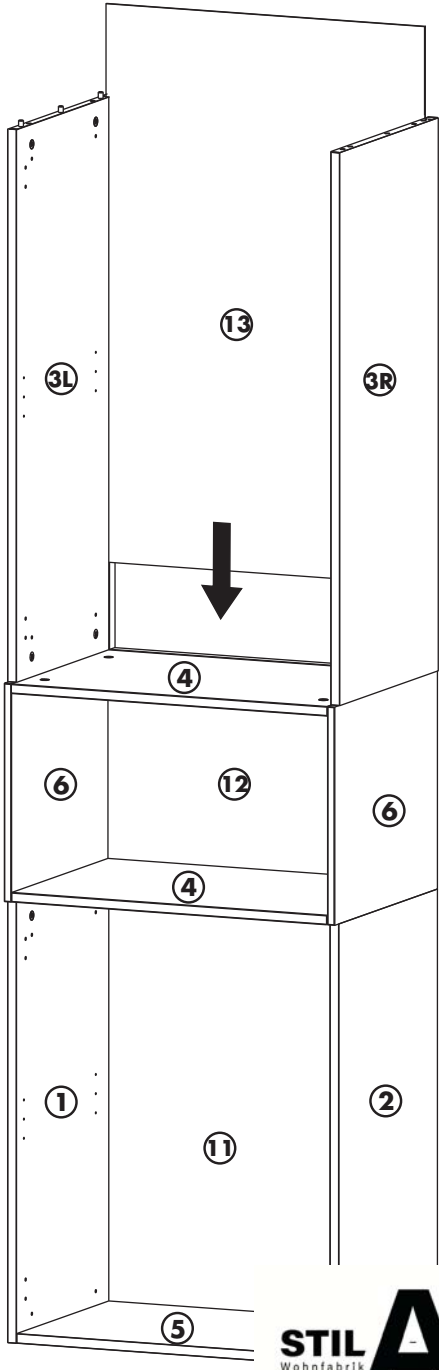


Type 120-130



G2

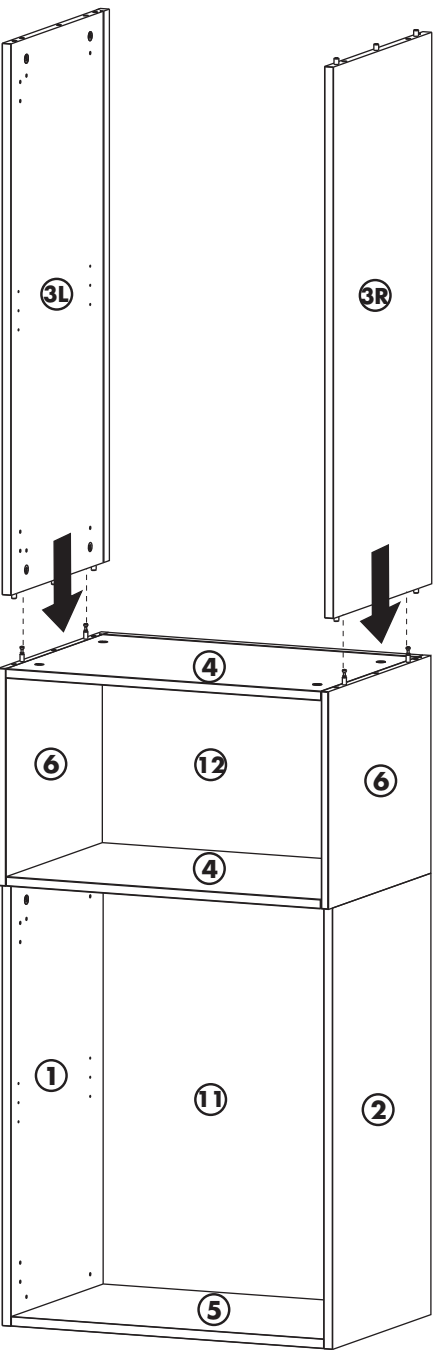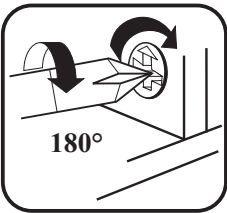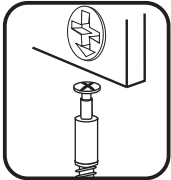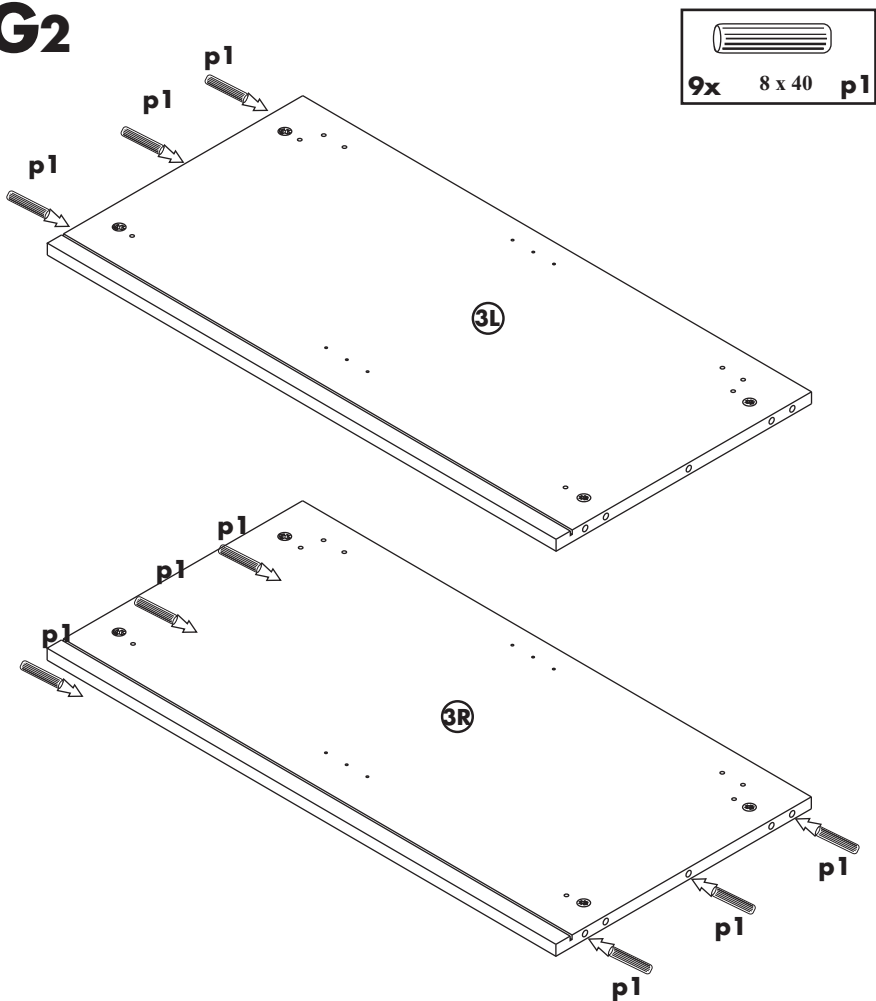


H2

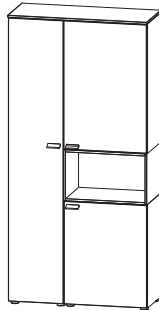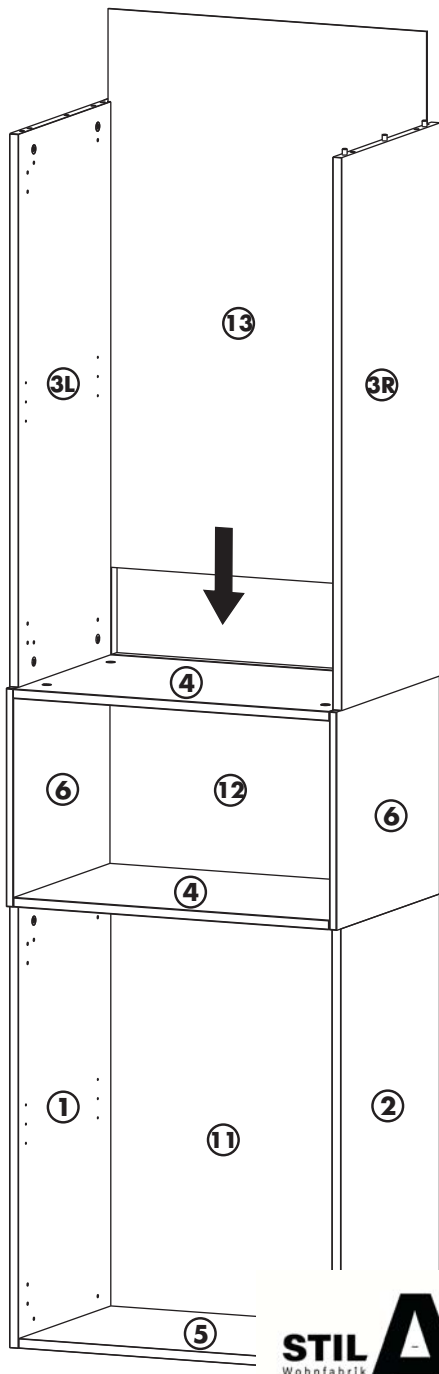


Type 120-131

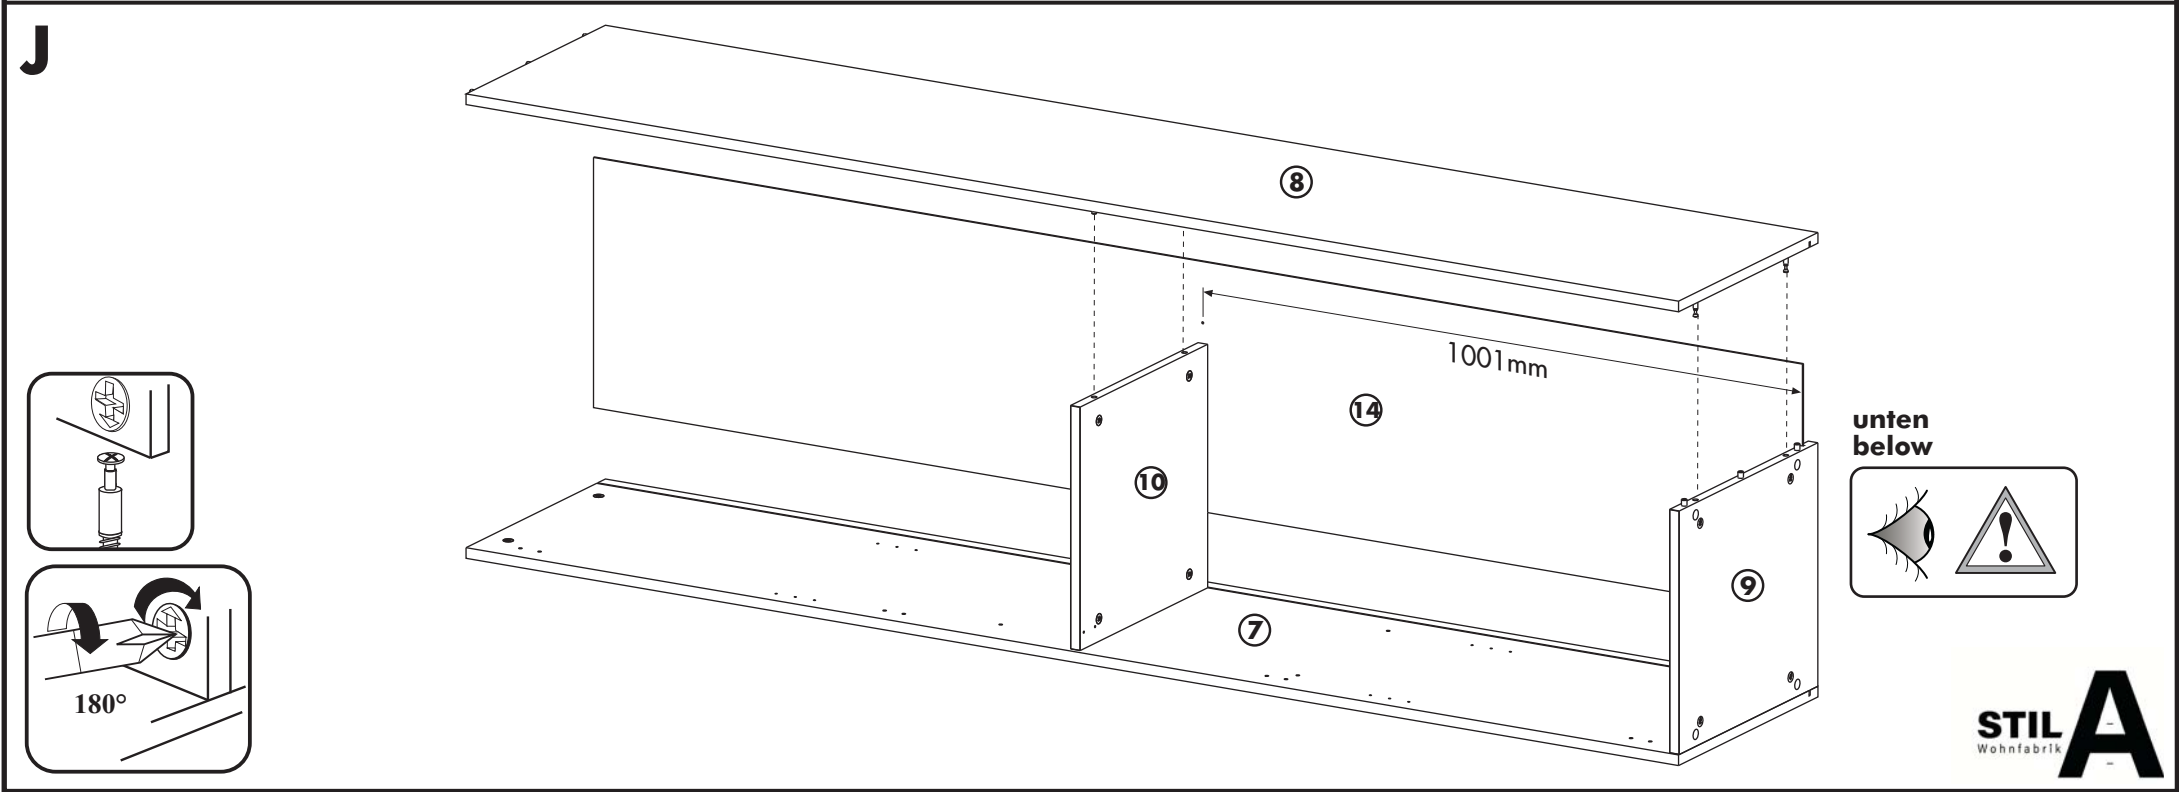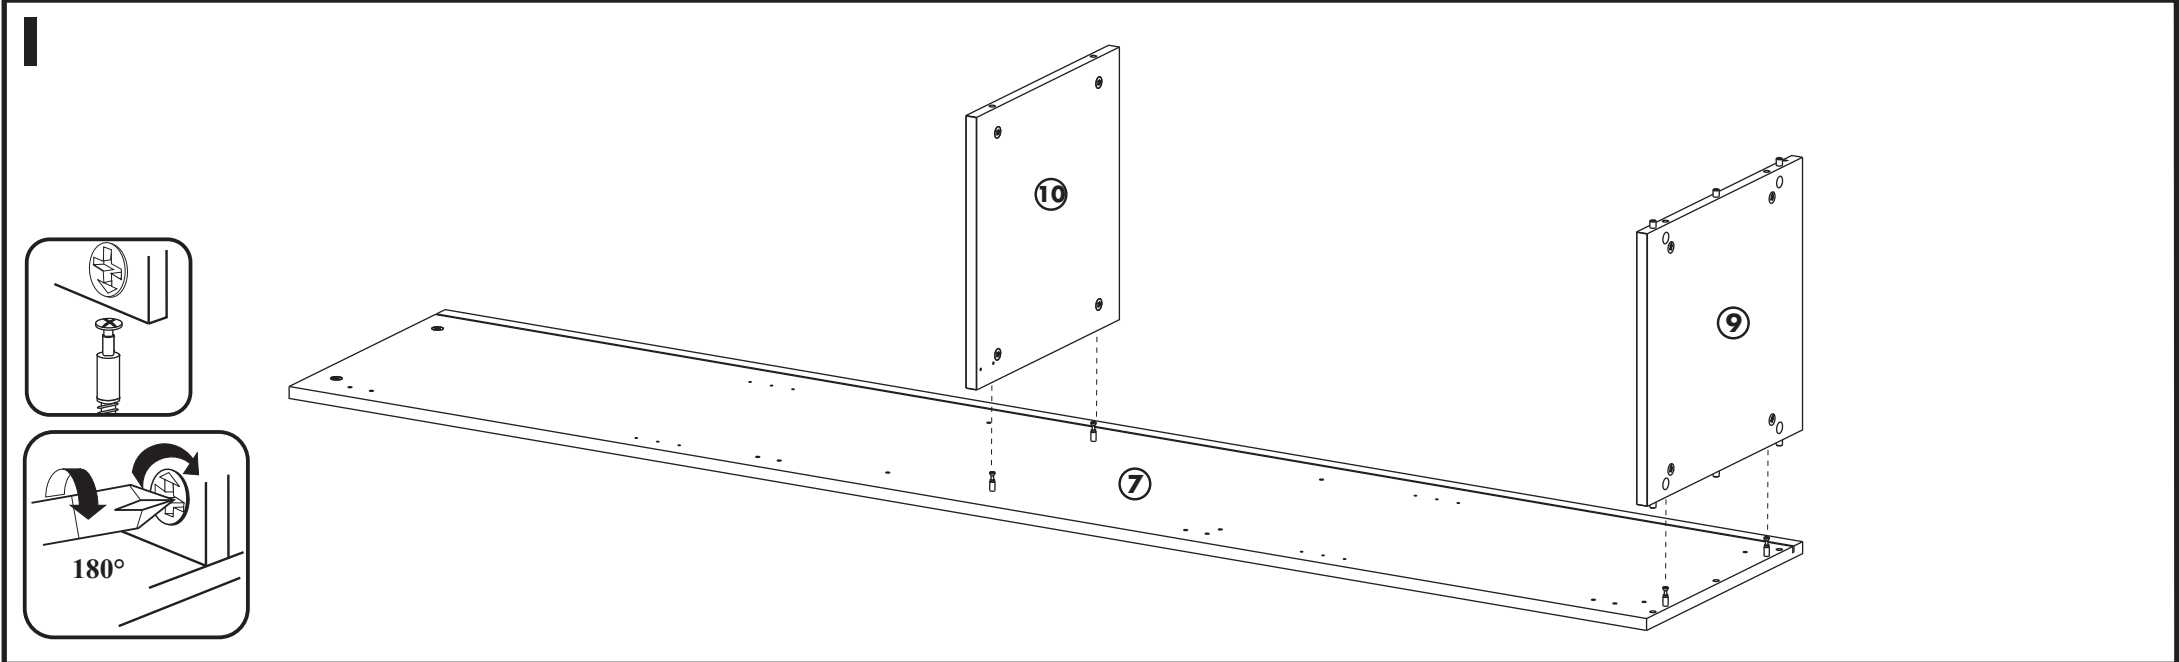


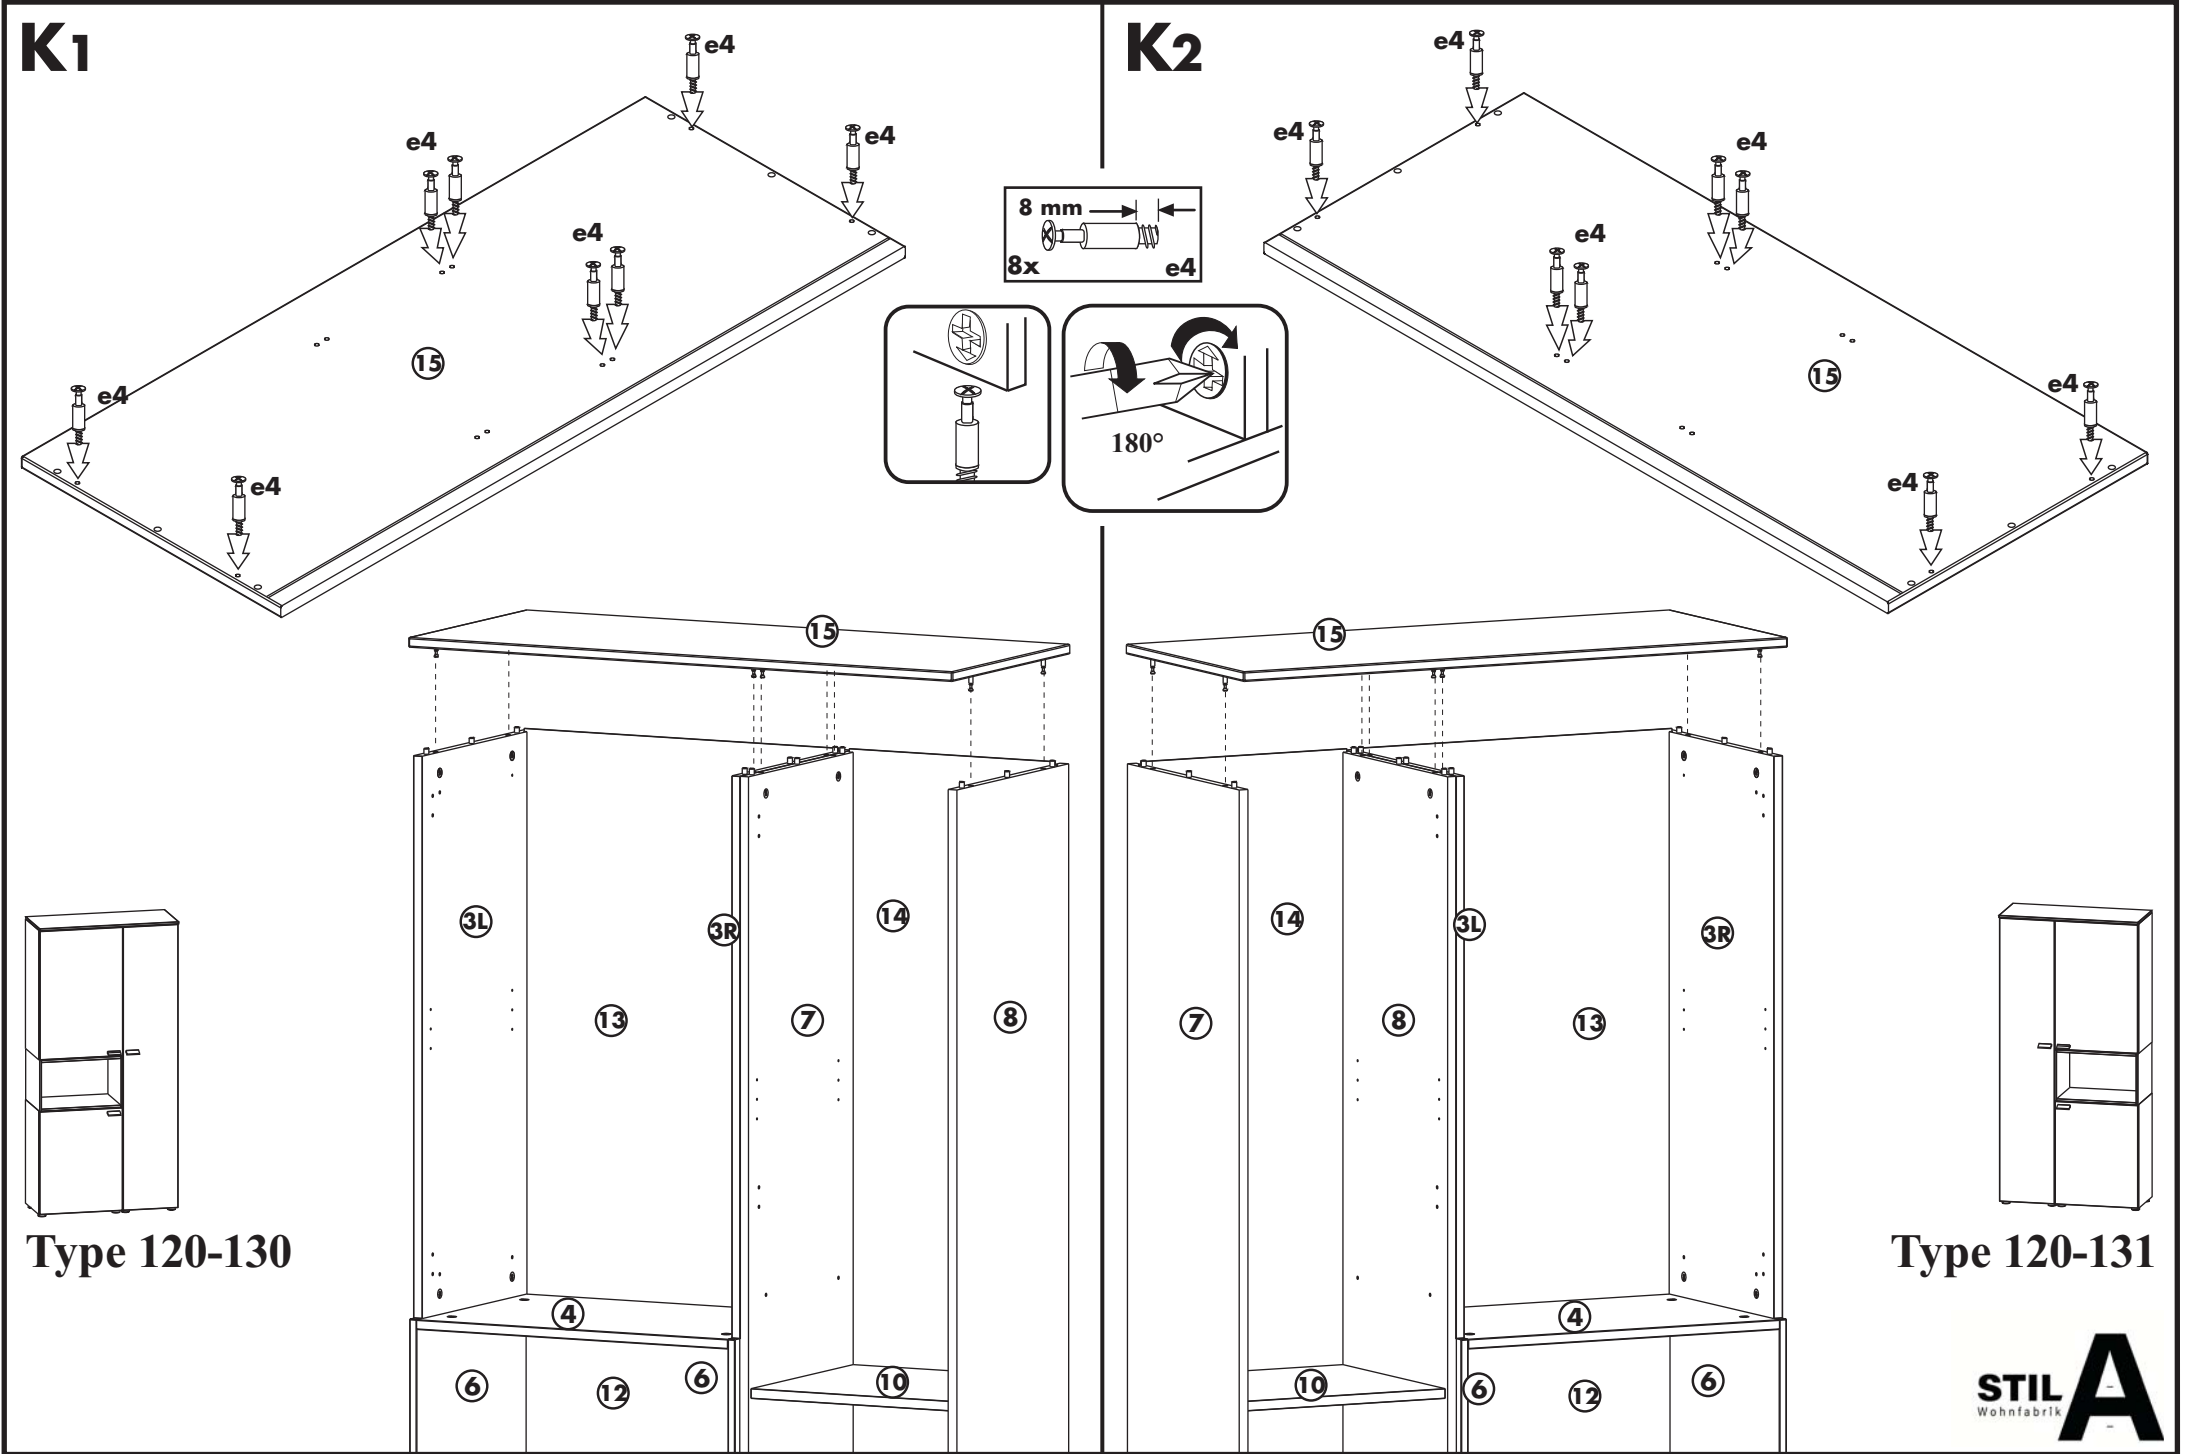


L

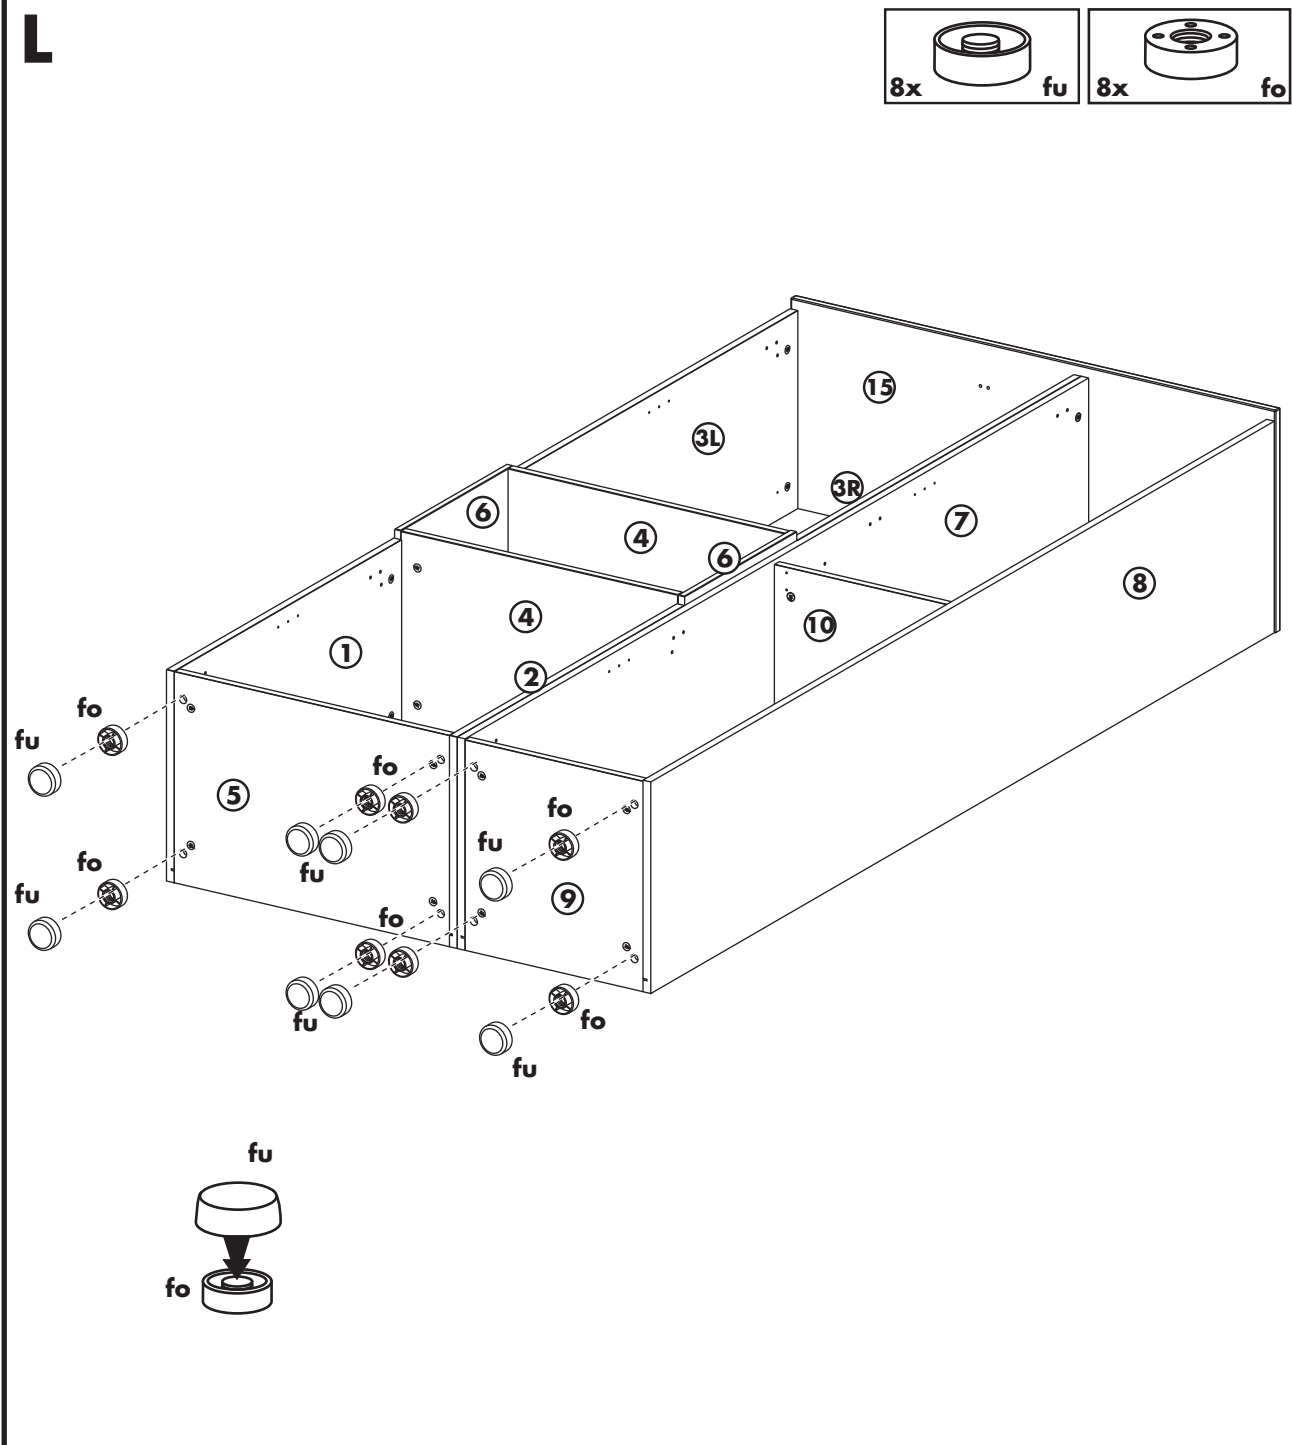



M

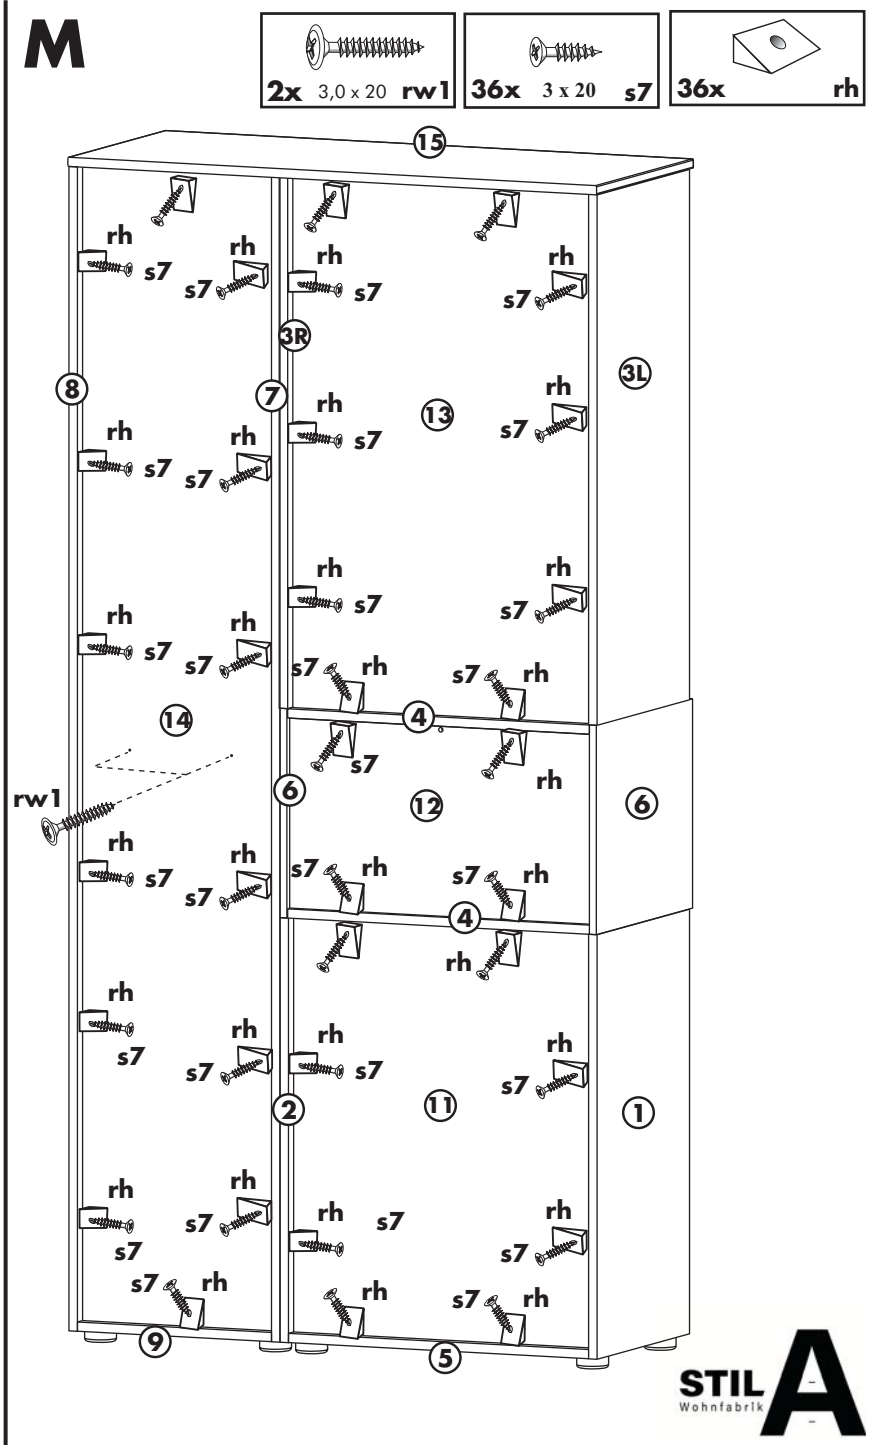

N1

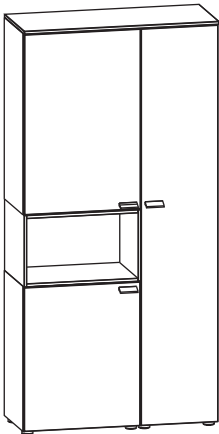


Type 120-130






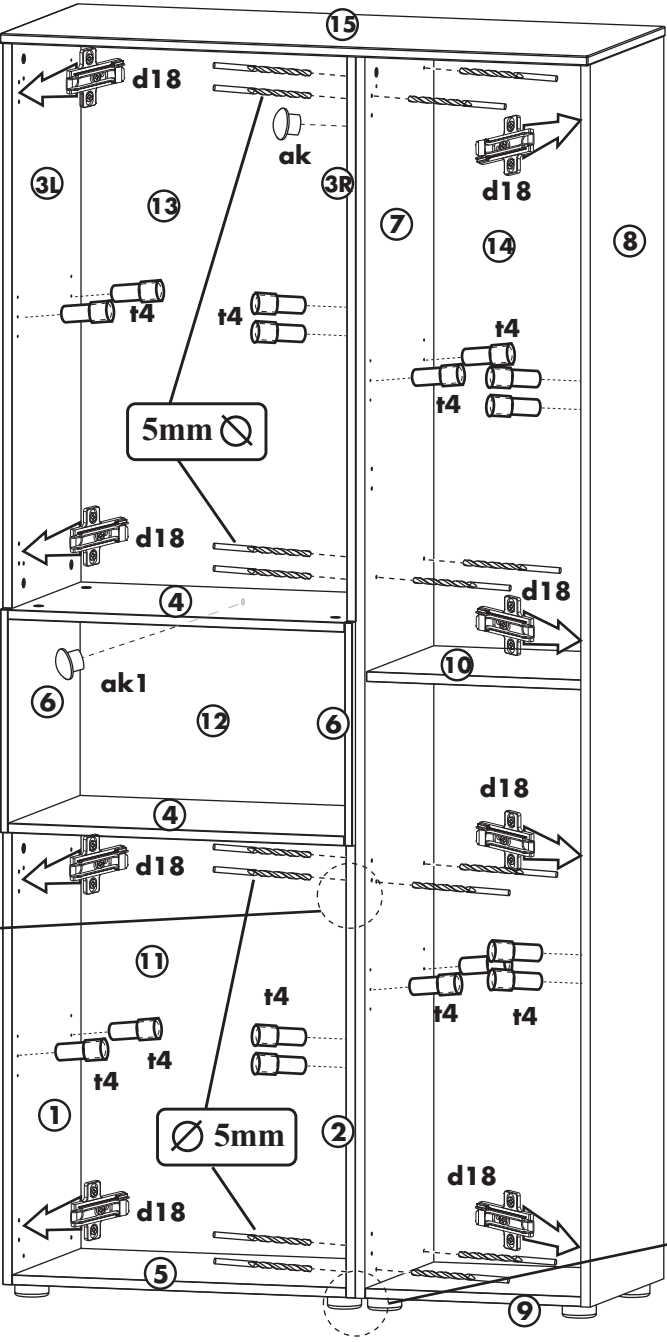
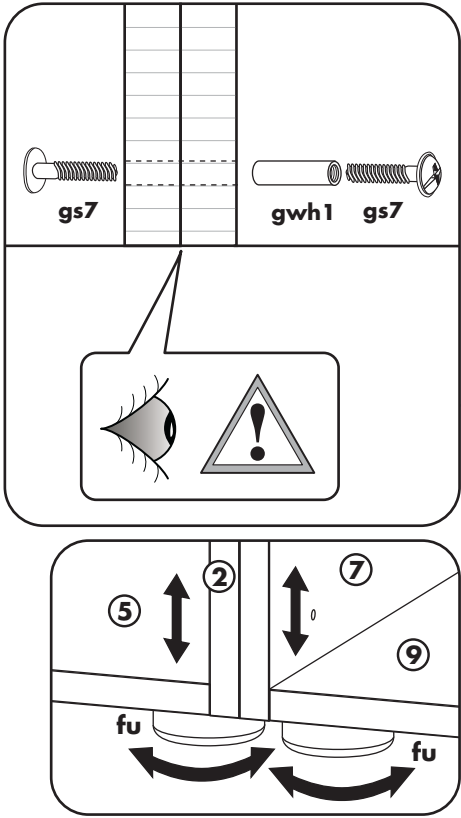



$\varnothing 5\text{ mm}$ $\varnothing 3\text{ mm}$
16x t4
8x D 2mm d18
$\varnothing 8\text{ mm}$ $\varnothing 5\text{ mm}$
36x ak
$\varnothing 13\text{ mm}$ $\varnothing 8\text{ mm}$
1x ak1
16x M4 x 15 gs7
8x gwh1

N2

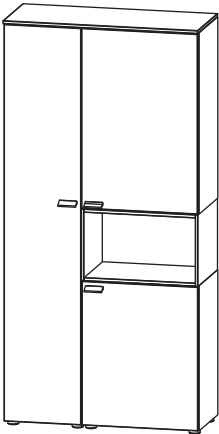


Type 120-131

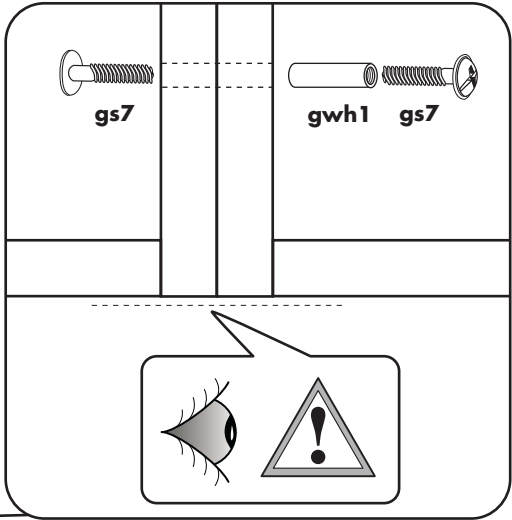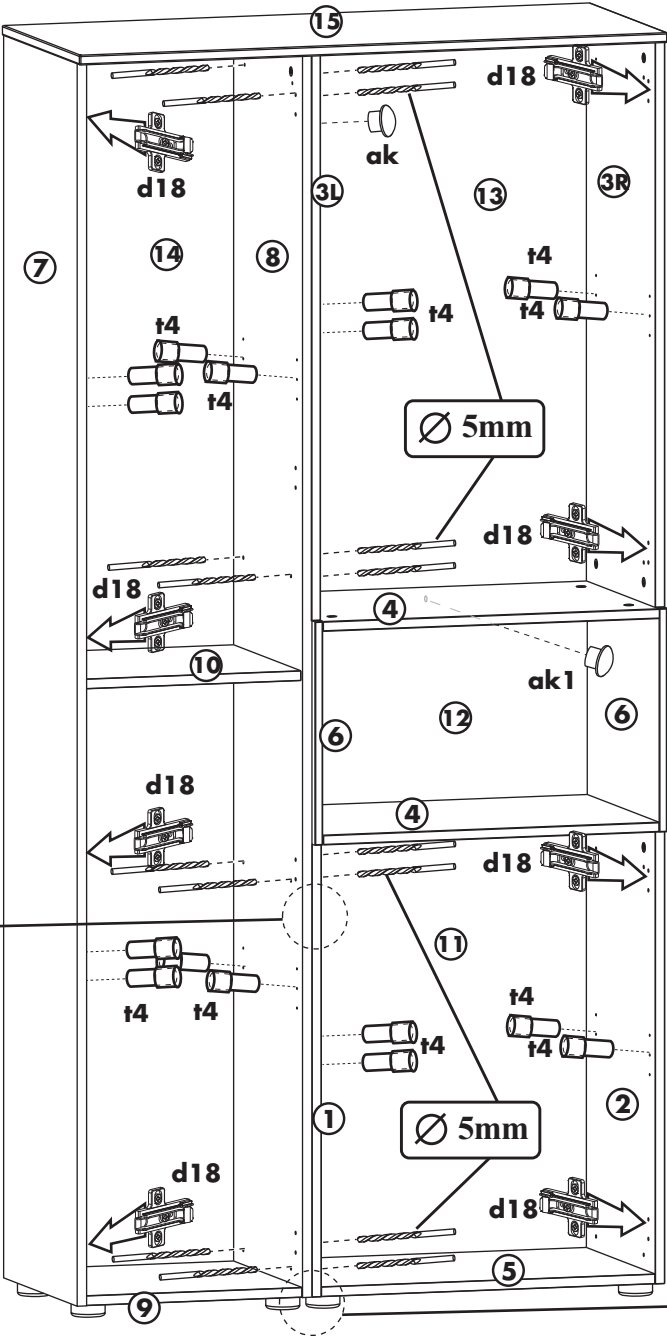
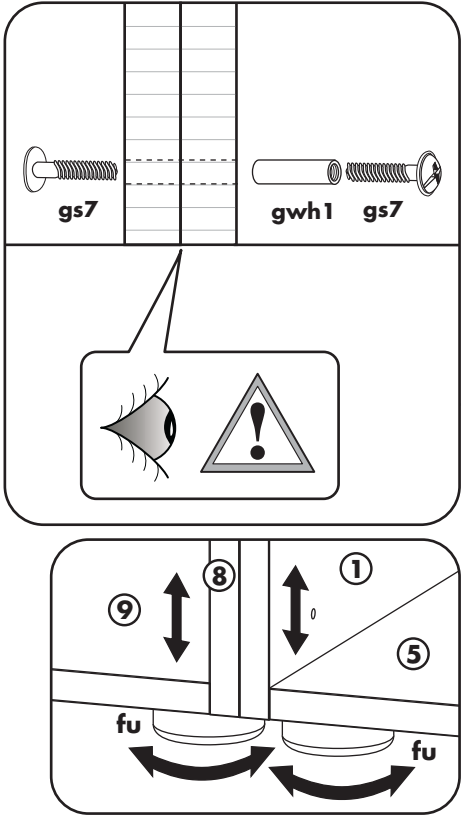


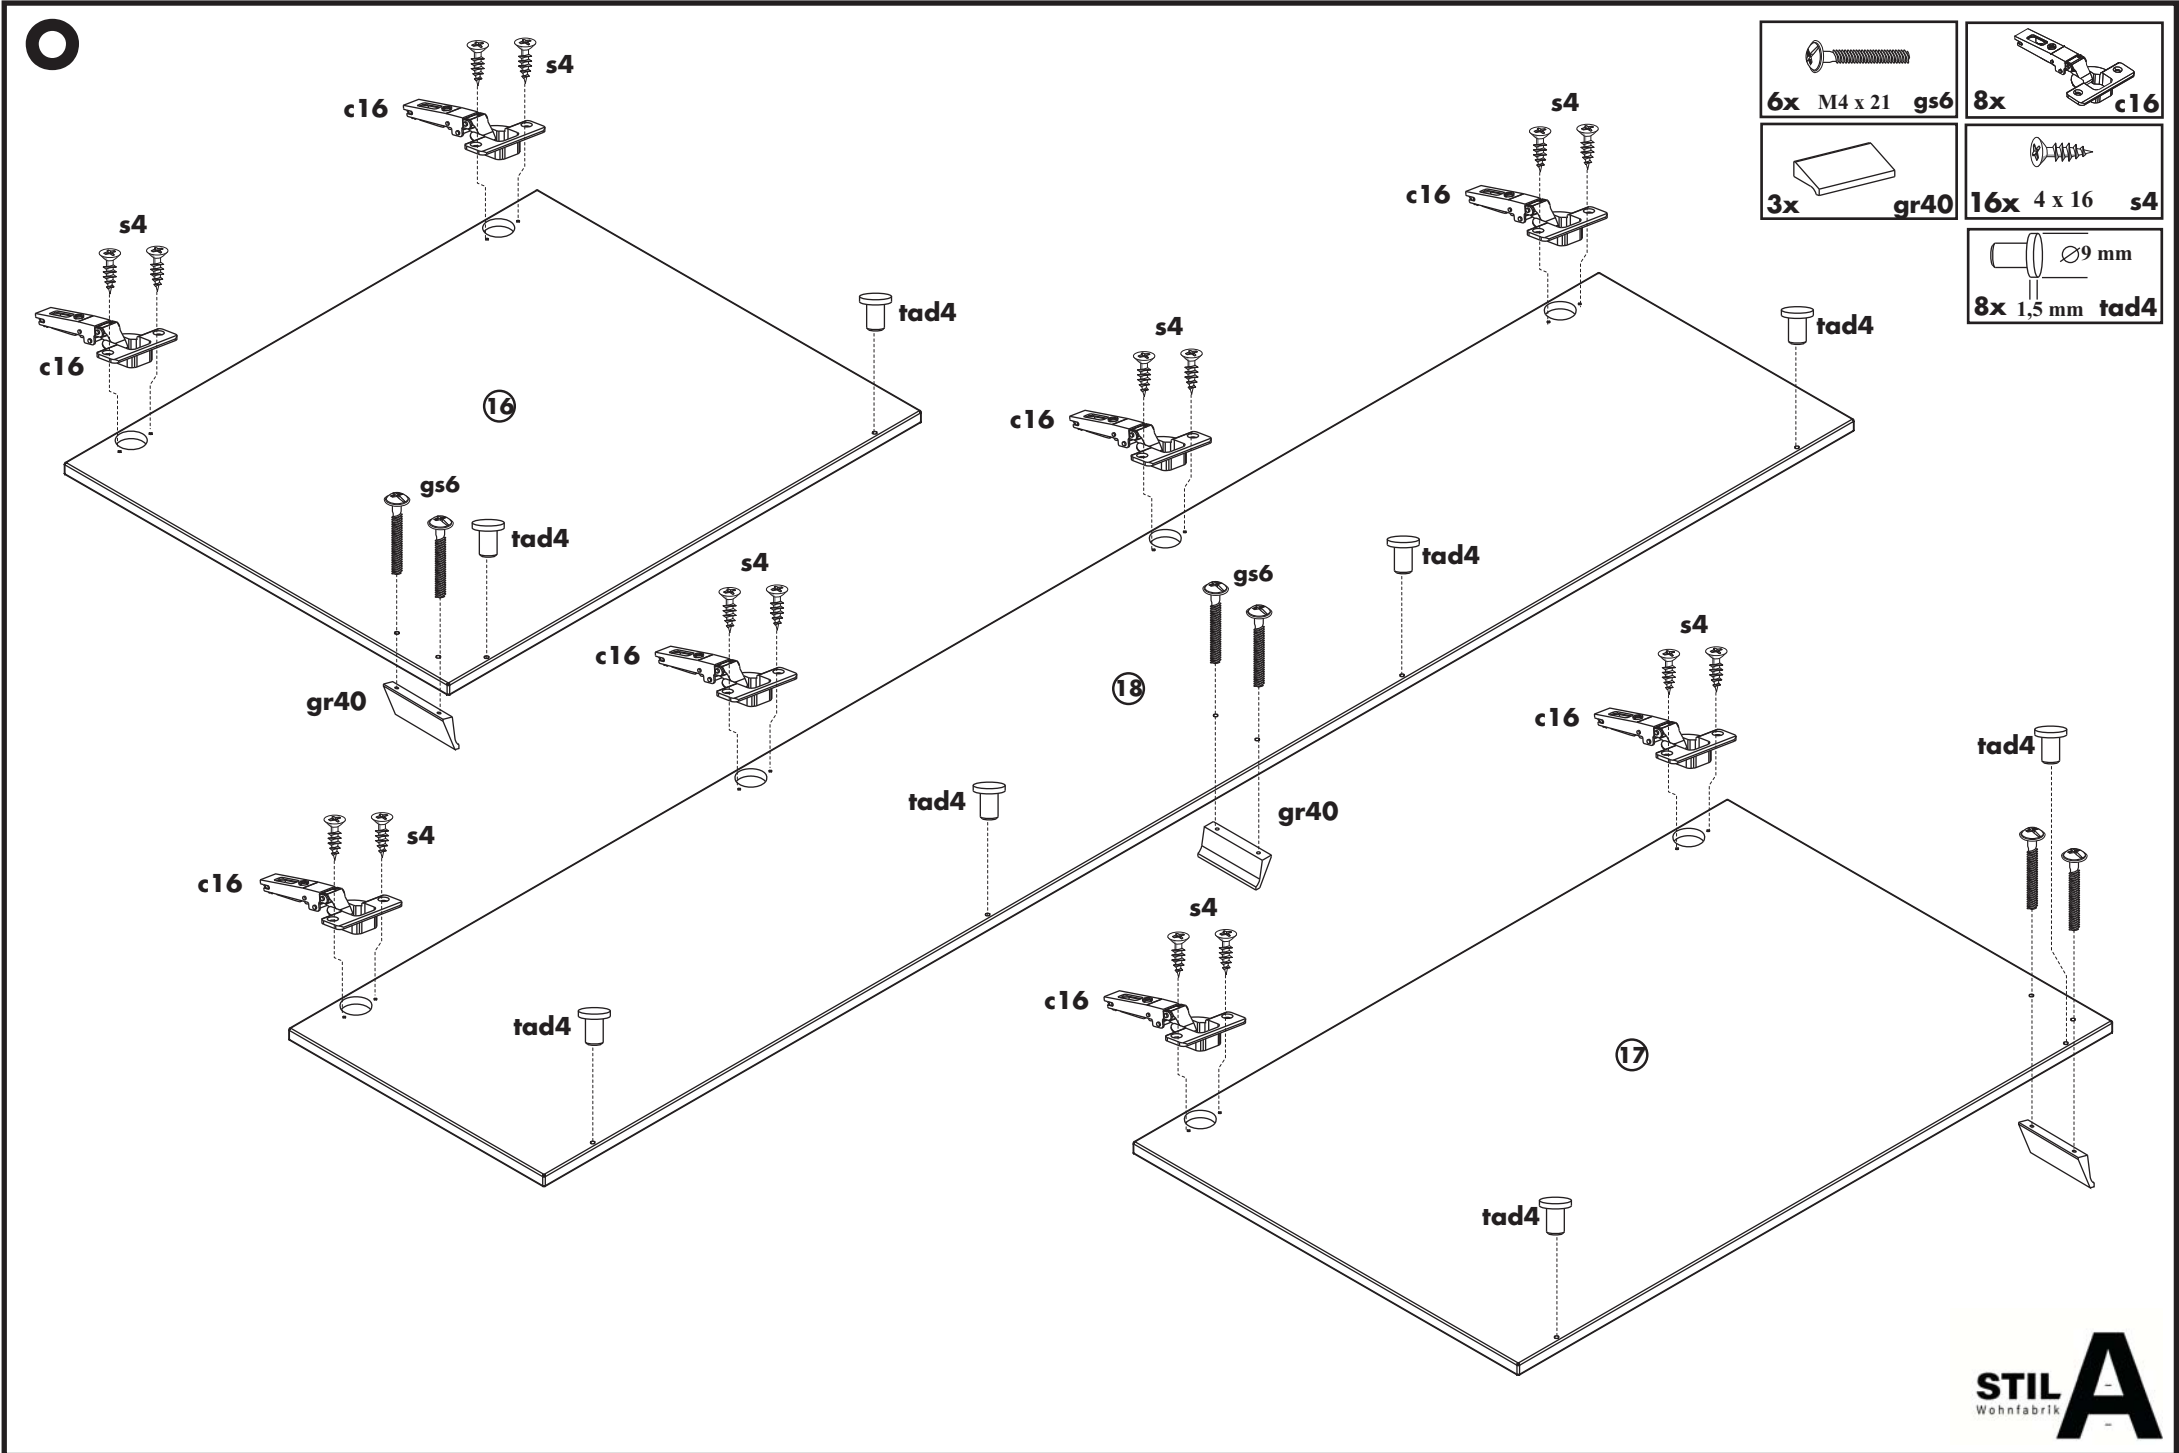

P

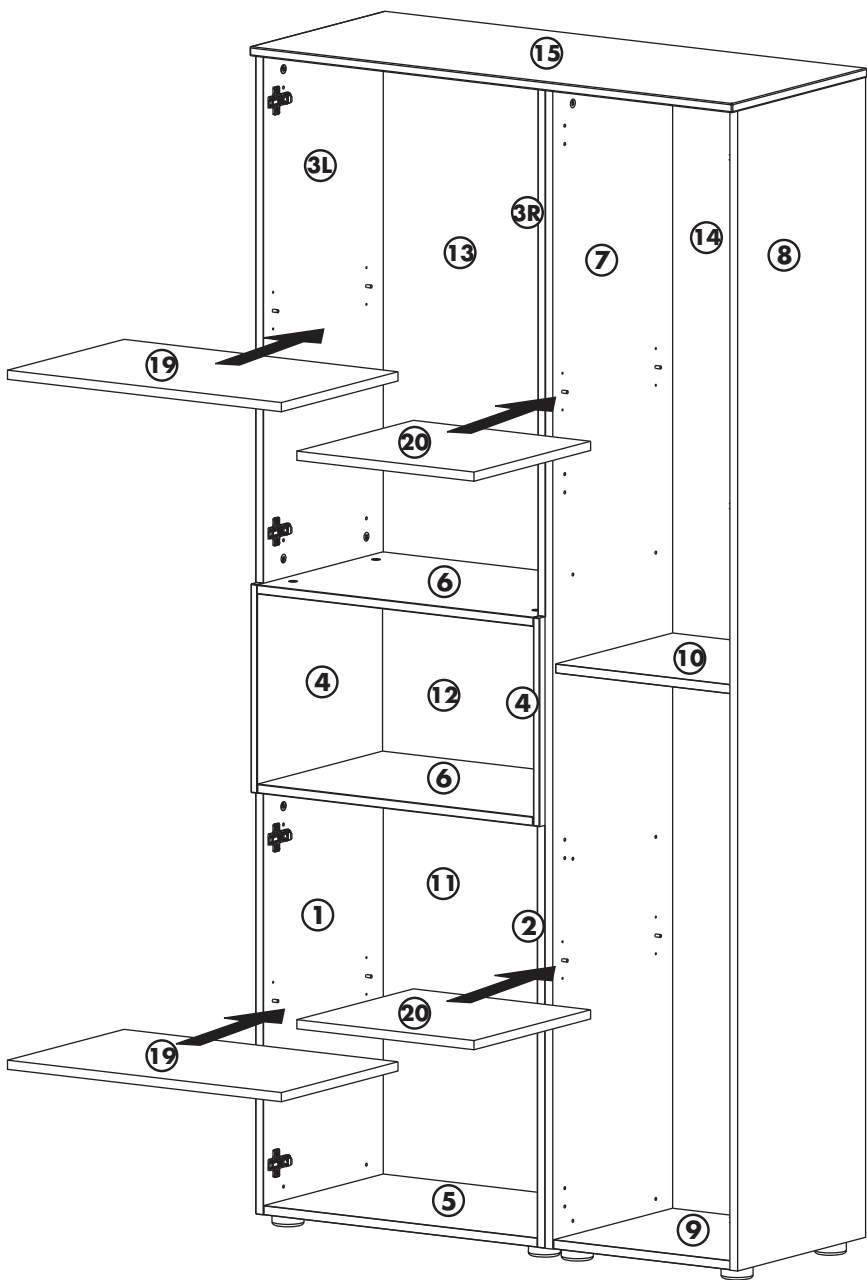


Q

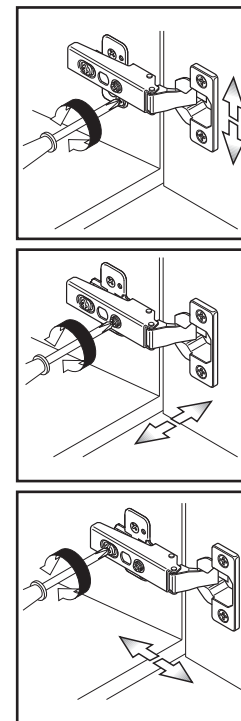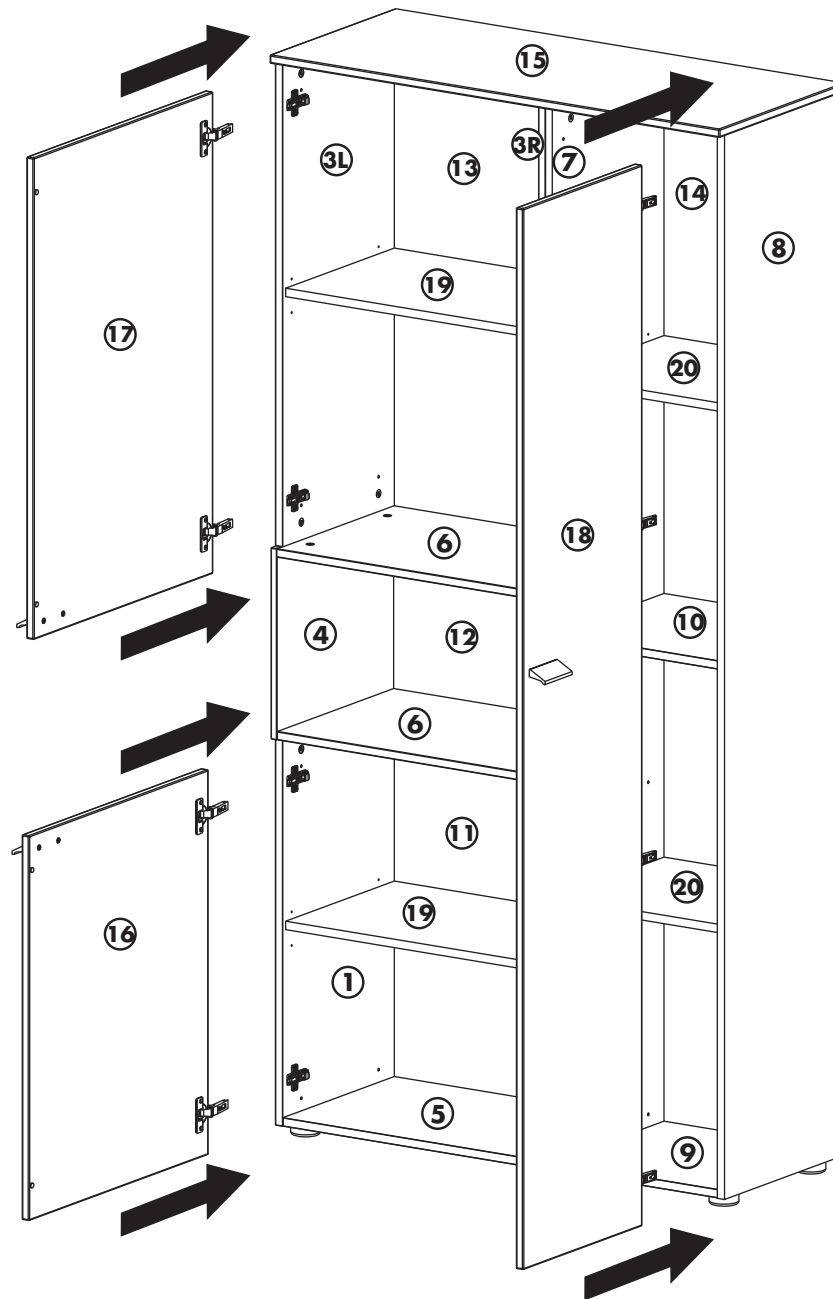


R



			
2x 5 x 100 s28	2x 3,5 x 15 s5	2x wd	2x rv

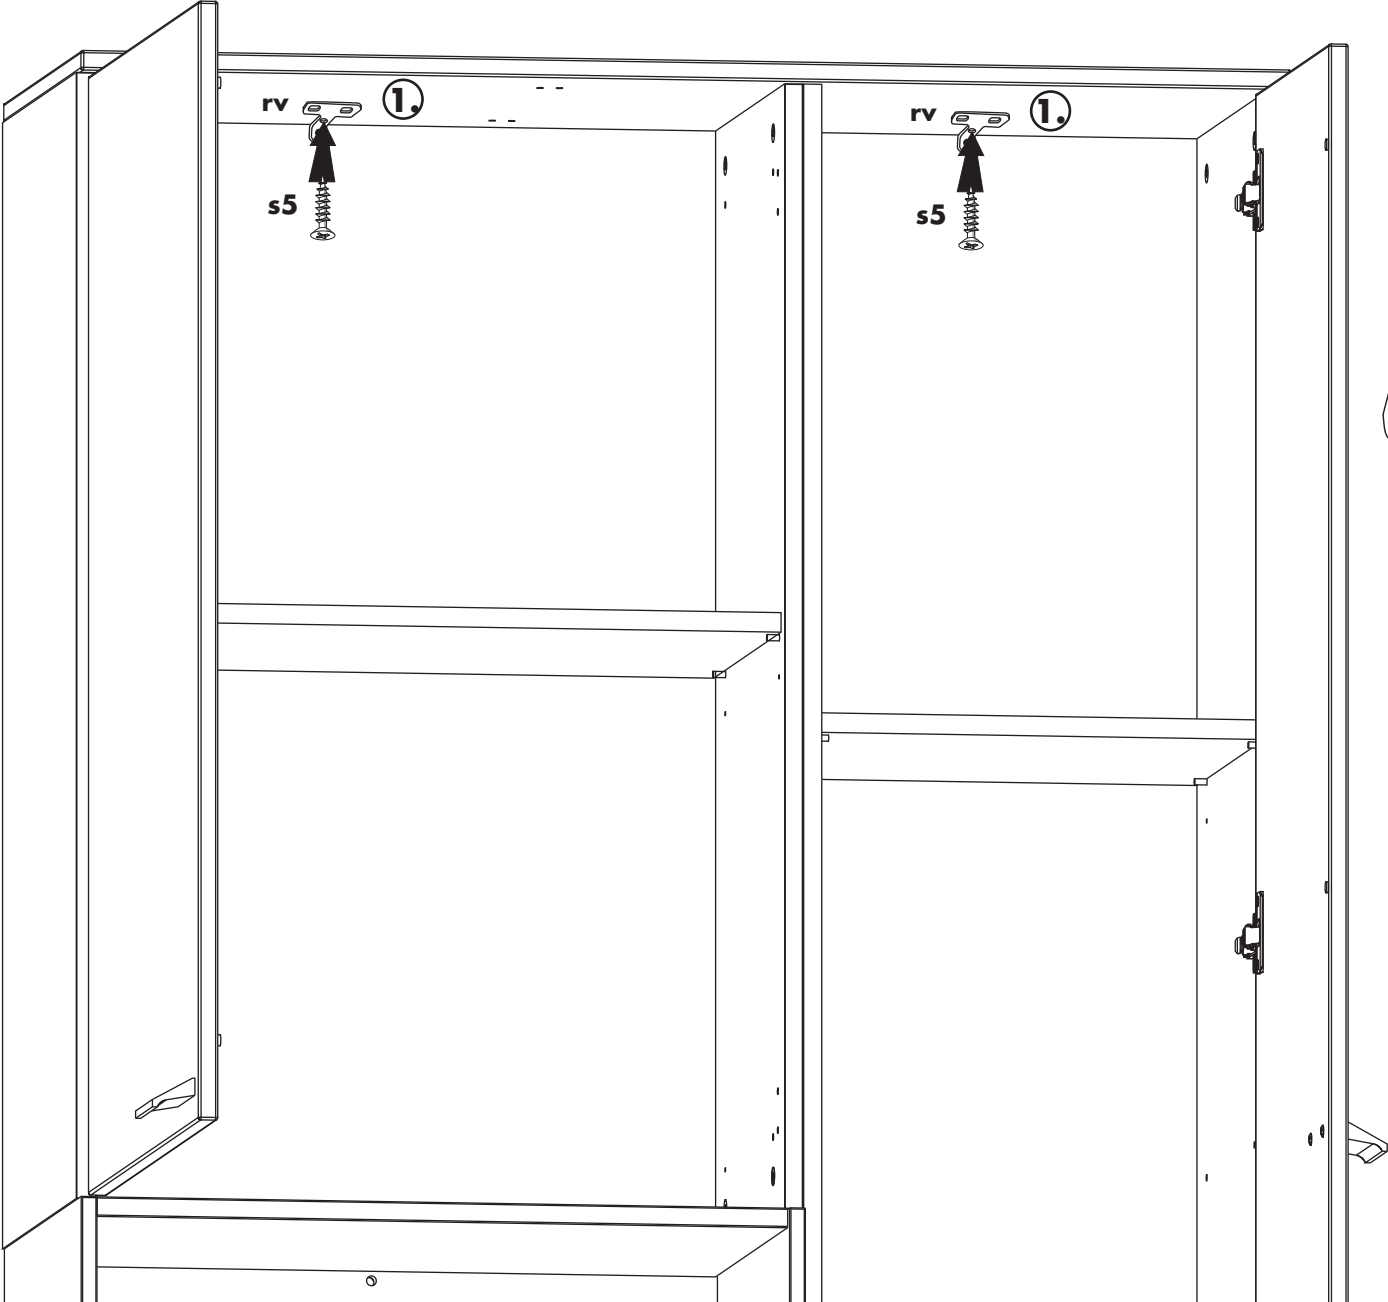

Kippsicherung
anbringen
Install anti-tip device

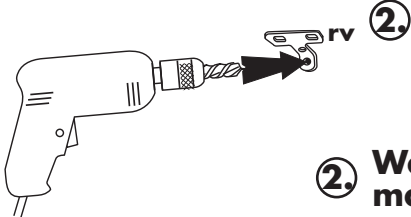

2. Wand markieren
mark wall

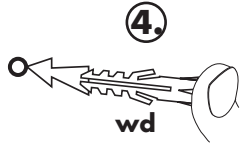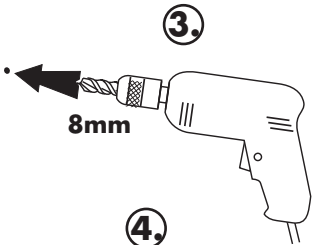

5. Schraube eindrehen
Mount screw

