





Type 100-102

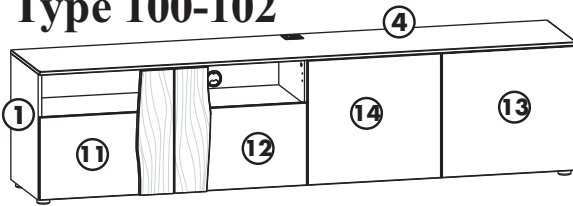


Sie brauchen:
You need:

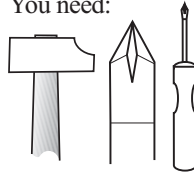

Type 100-103

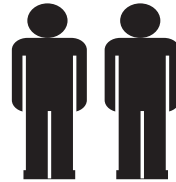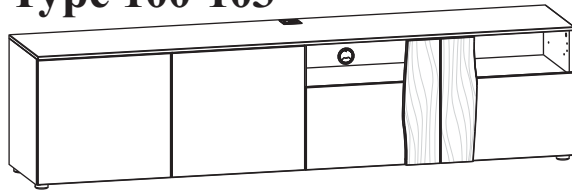

Type 100-112

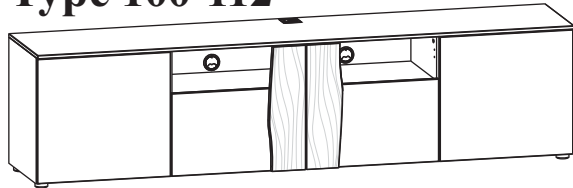

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Light Line 15 100_102/01.26

 4x 4,0 x 27 rw7	 16x Ø5 mm Ø3 mm t4	 2x mg5b	 2x mg5d	 2x mg5a
 6x a1	 18x a4	 24x e2	 4x 3 x 15 s6	 32x 3 x 20 s7
 7x fu	 7x fo	 4x M4 x 21 gs6	 16x 4 x 16 s4	 32x rh


Beschlagliste Fittings

 44x 8 mm 5 mm ak	 6x 13 mm 8 mm ak1	 8x D 2mm d18	 4x c16
 4x 2,7 mm tad7	 2x kbs1	 1x kbs4	 28x 8 x 40 p1
			 4x c17


A1

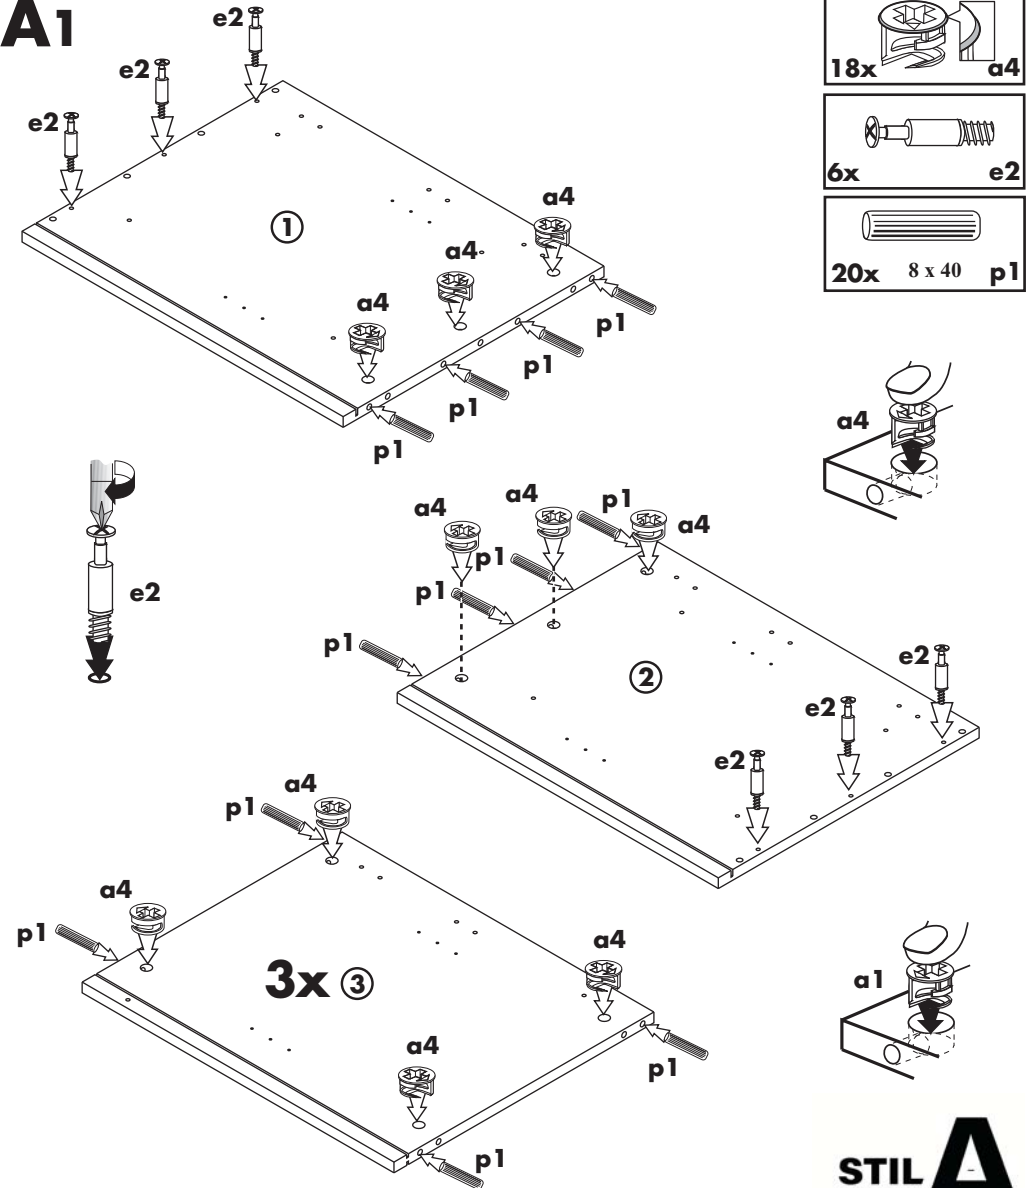

A2

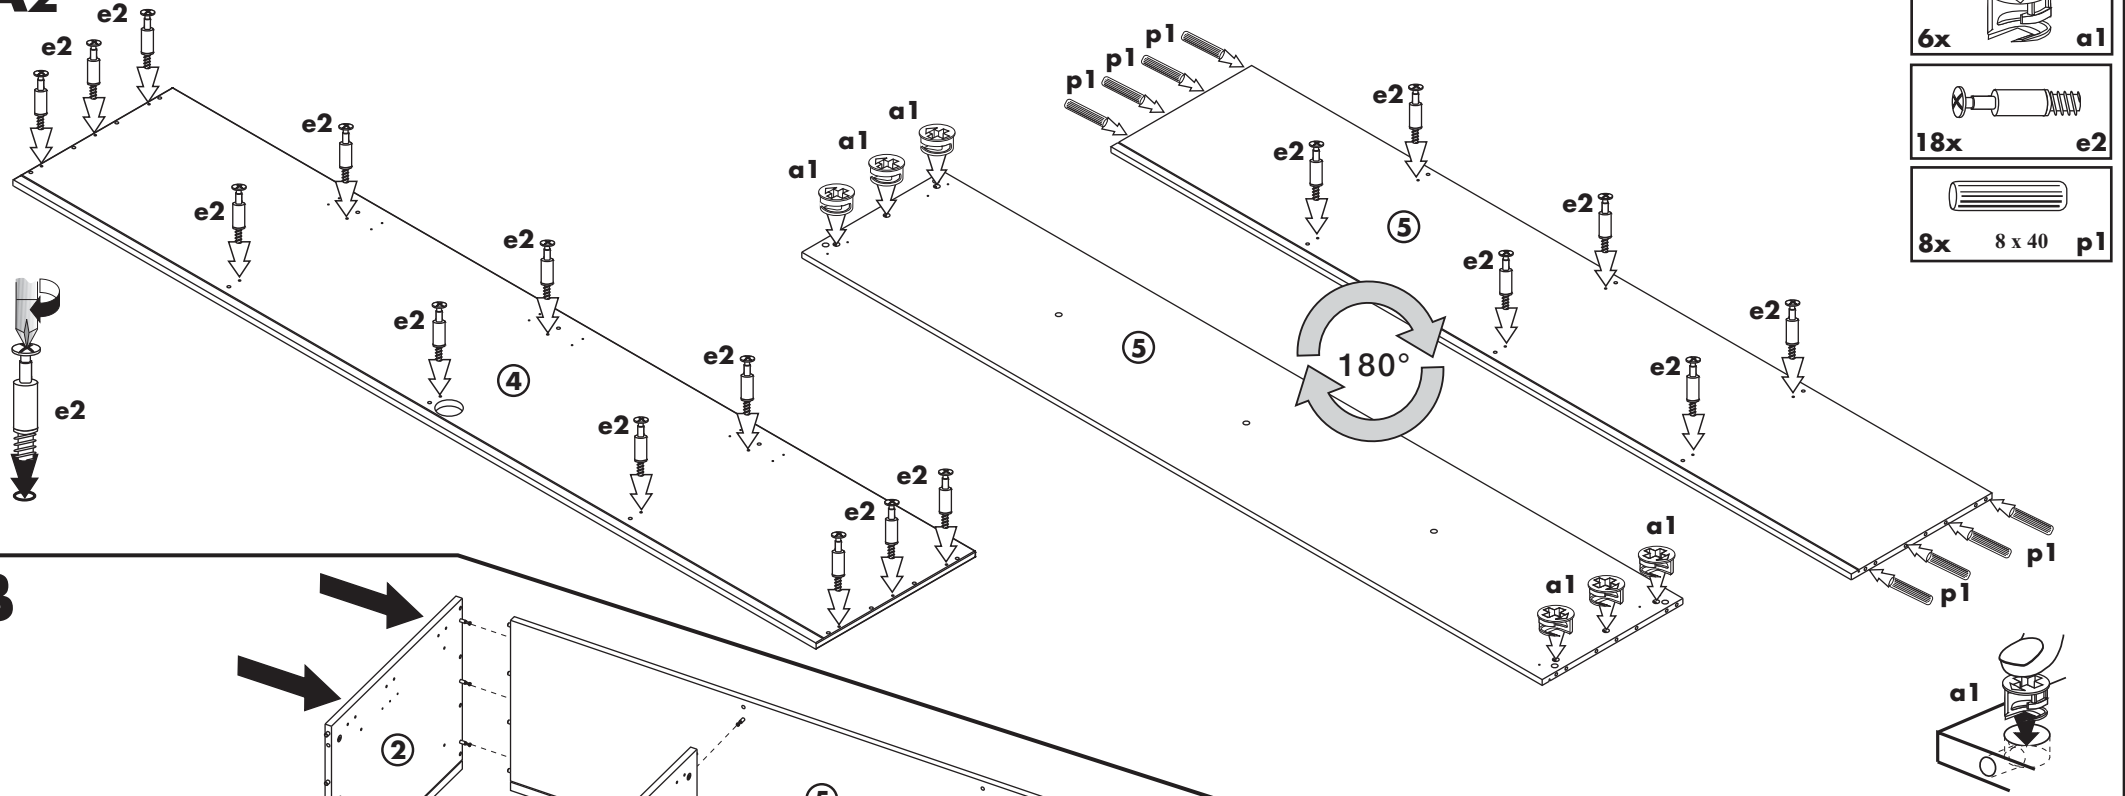


B


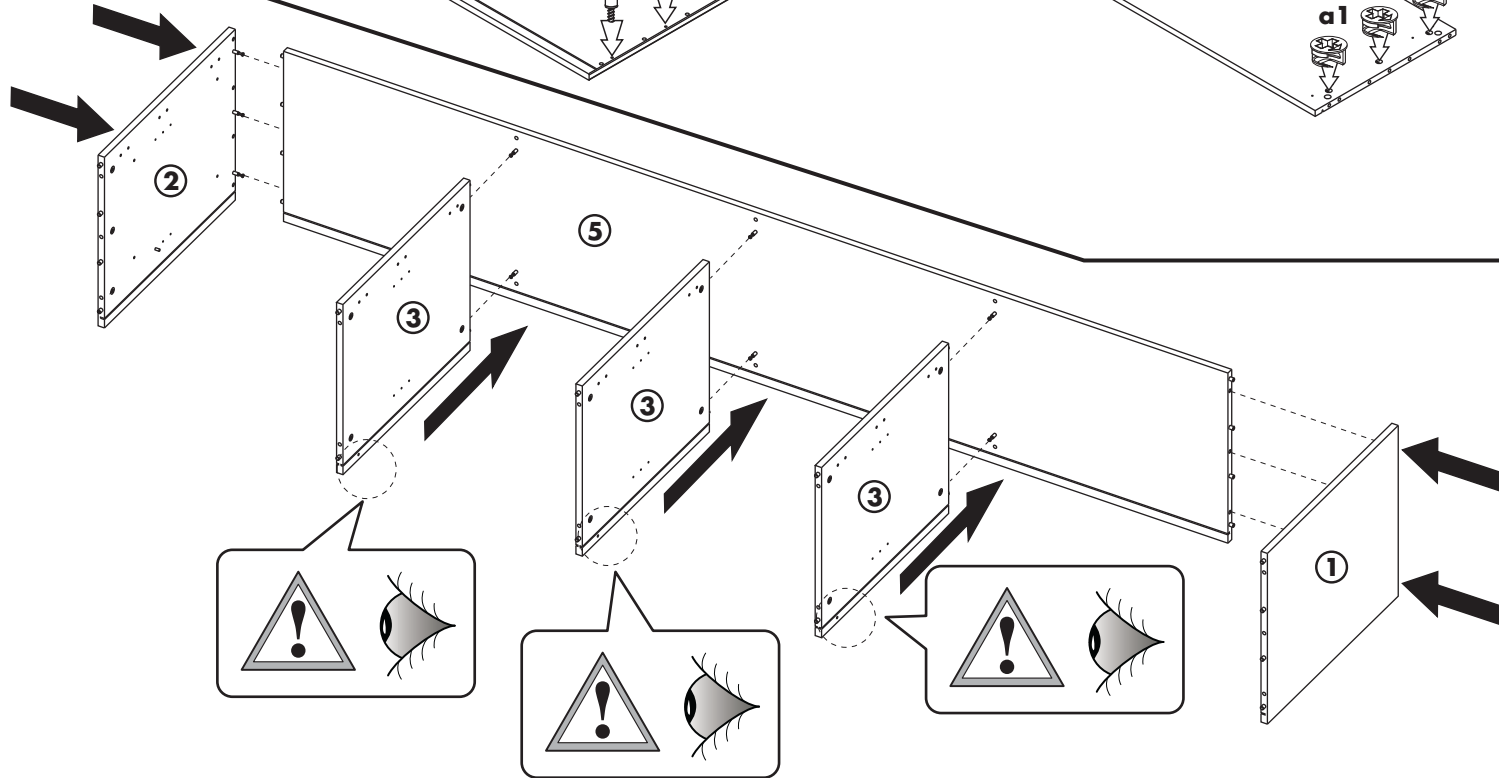


C1

Type 100-102




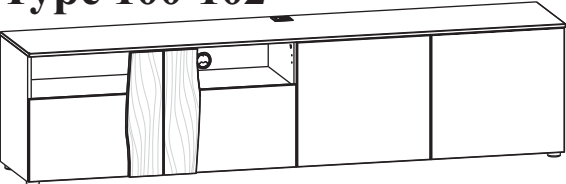


Type 100-112

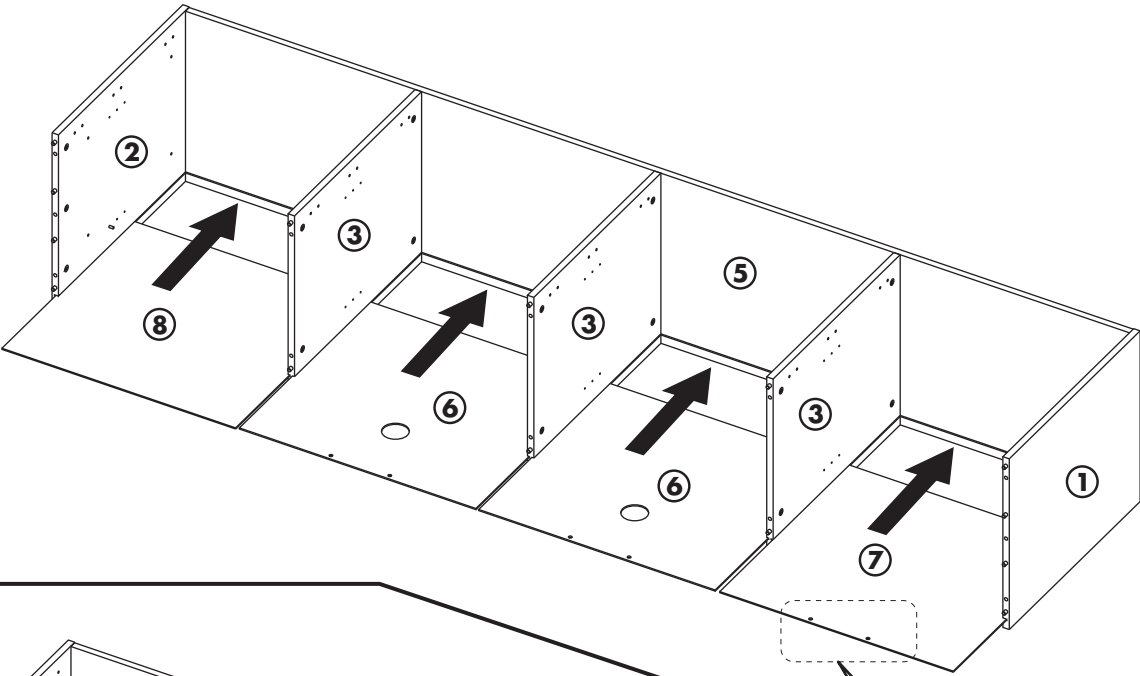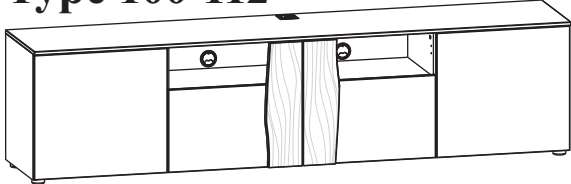


C2



Type 100-103

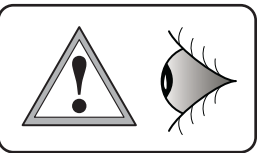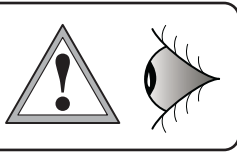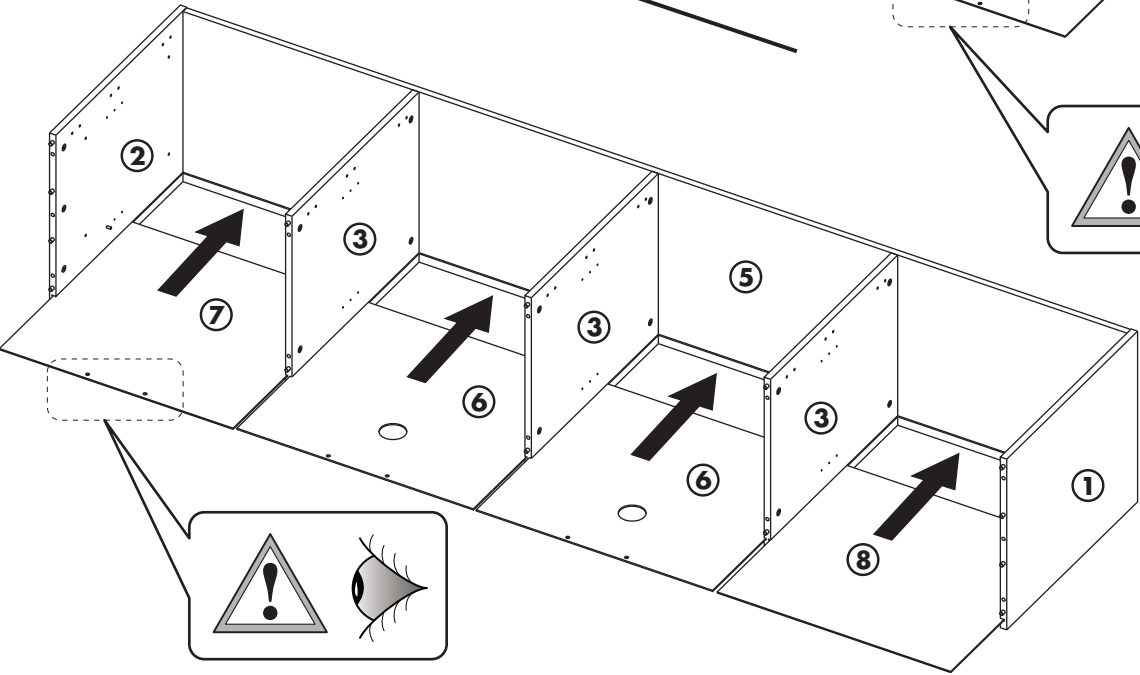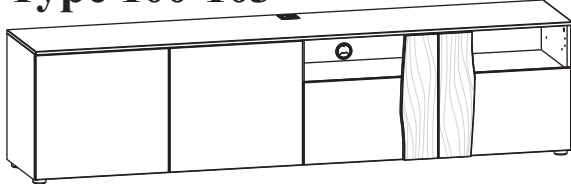


D

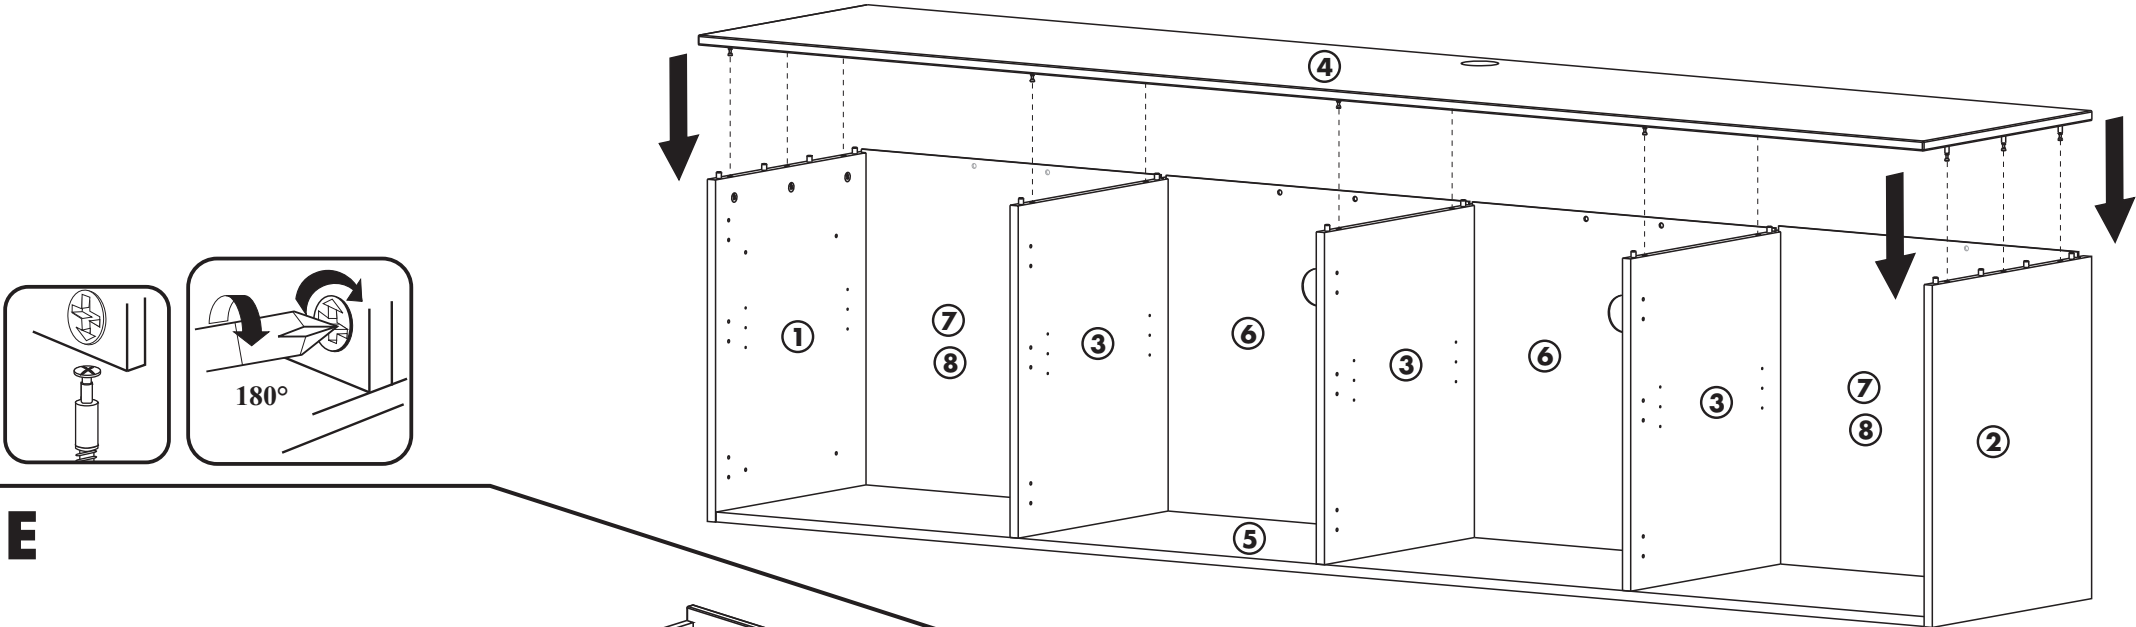


E

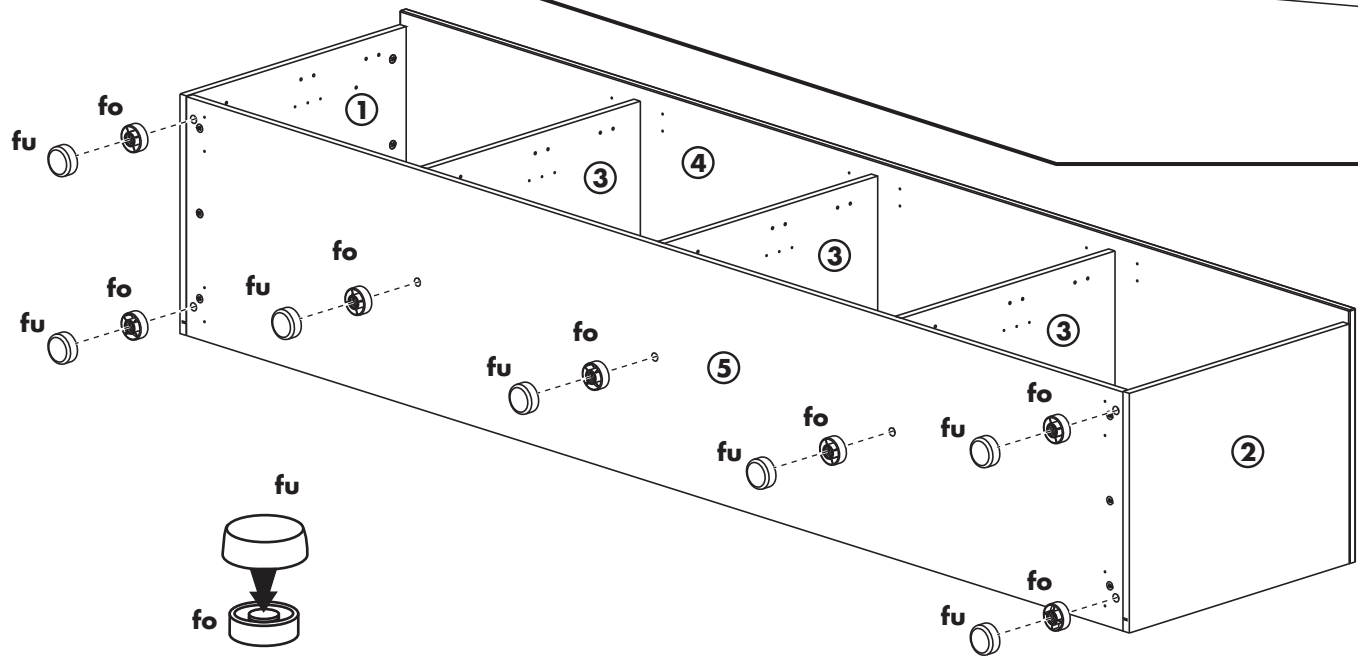


F

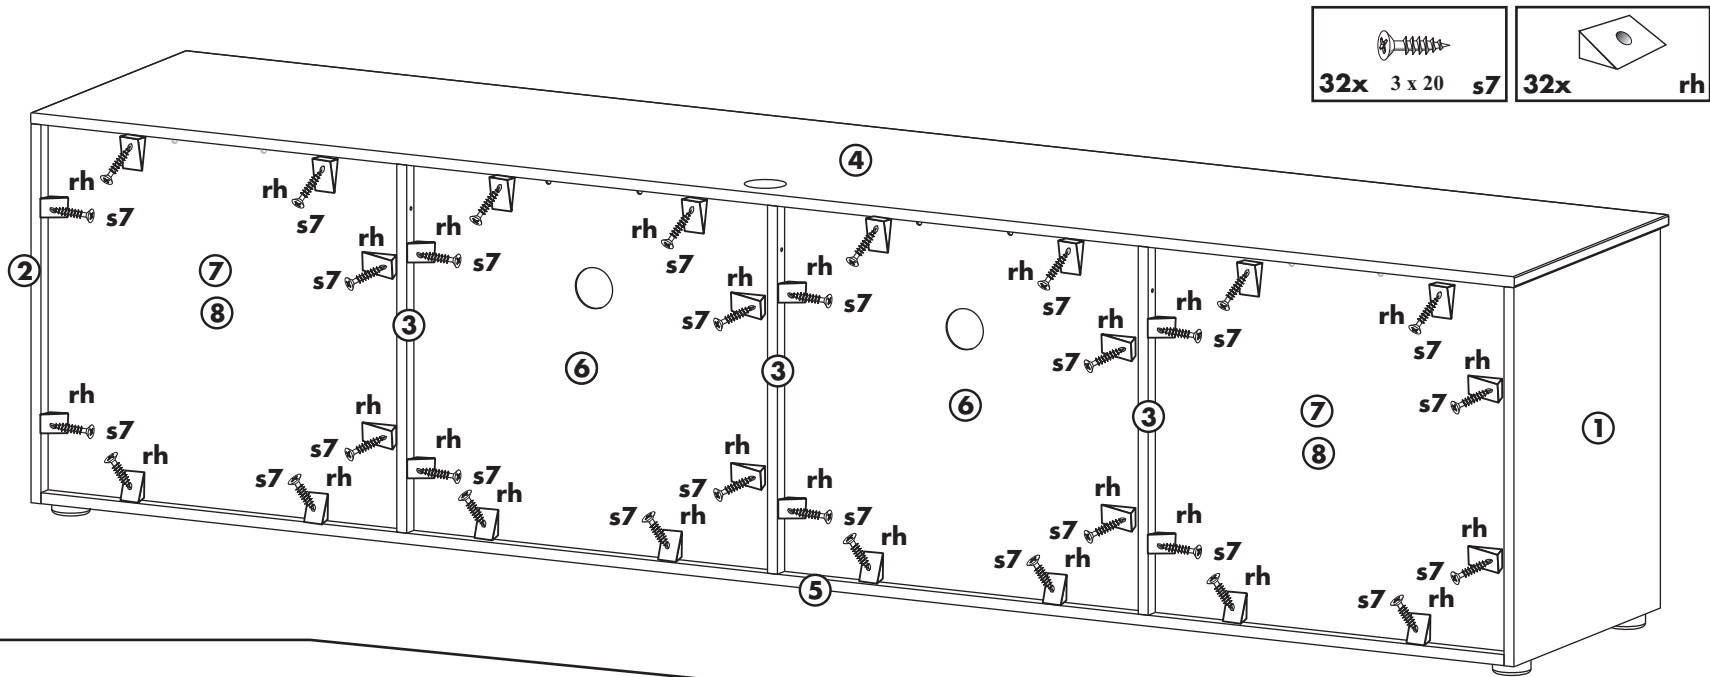


G

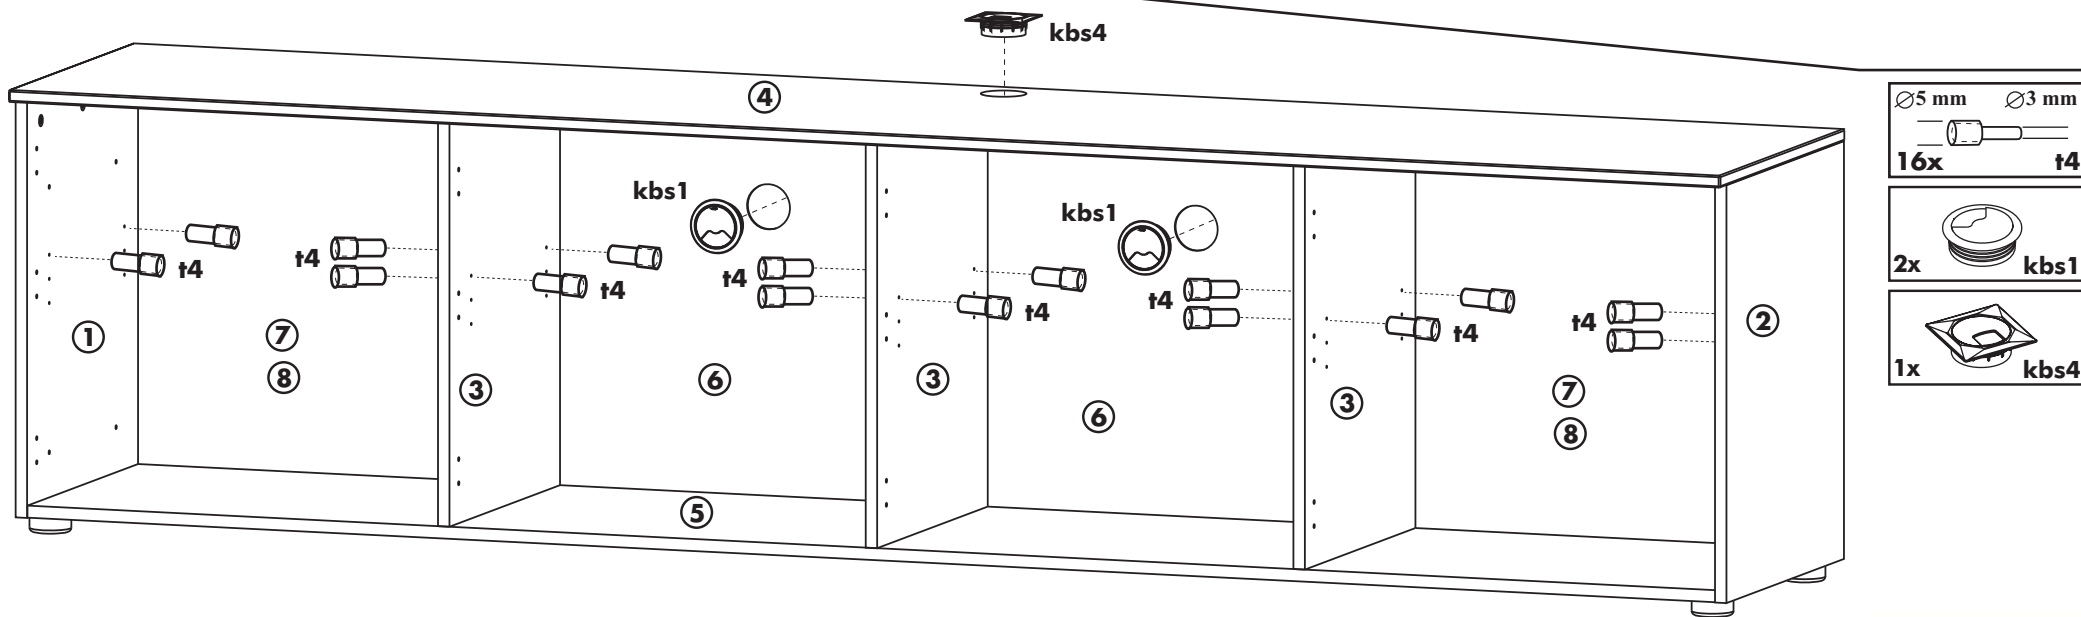

H

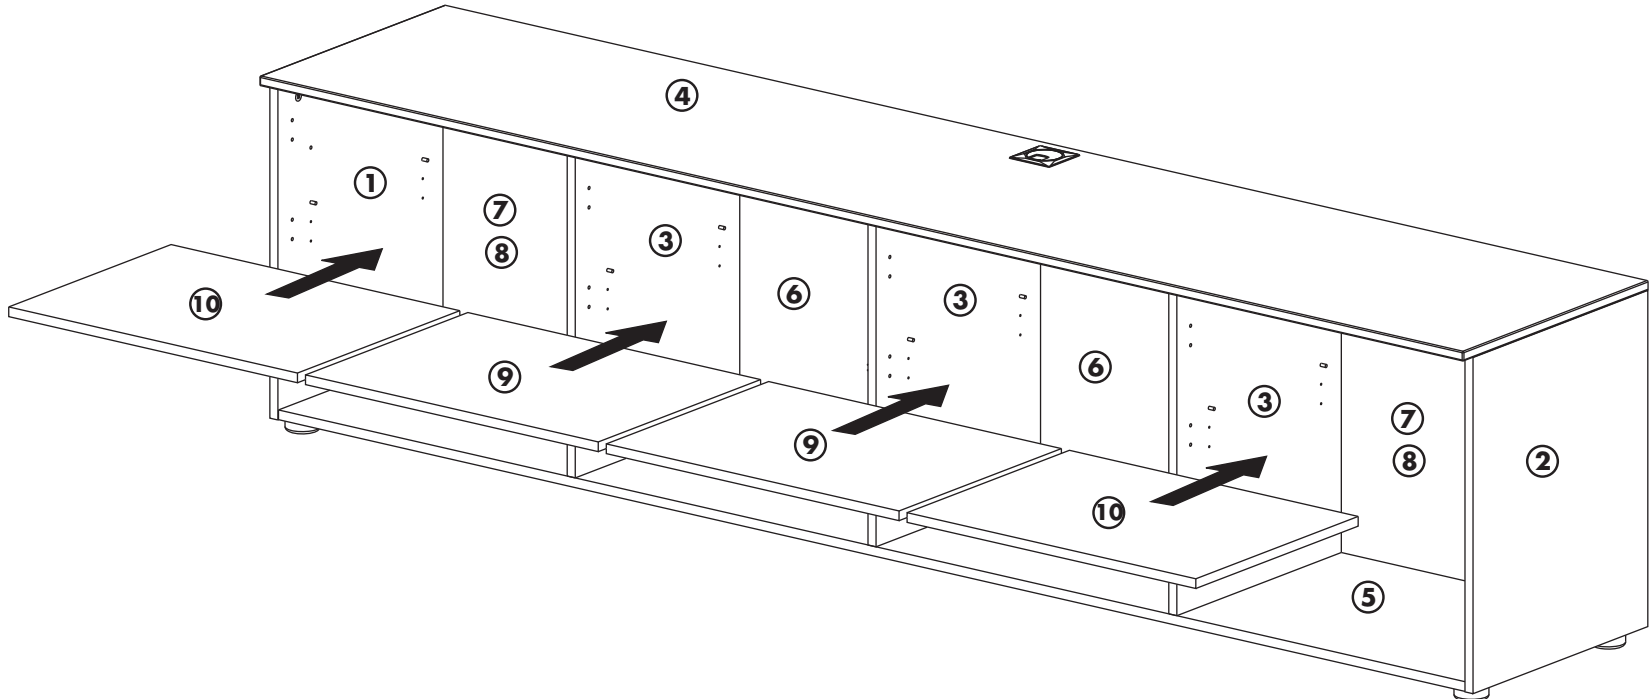


Type 100-102

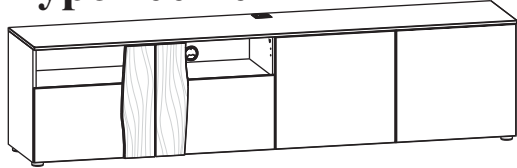

weiter mit Schritt I1
continued with step I1

Type 100-103

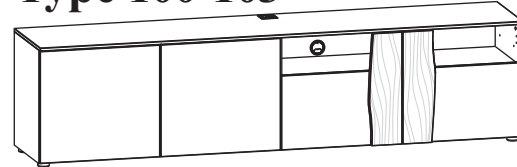









weiter mit Schritt I2
continued with step I2

Type 100-112




weiter mit Schritt I3
continued with step I3

1 Type 100-102

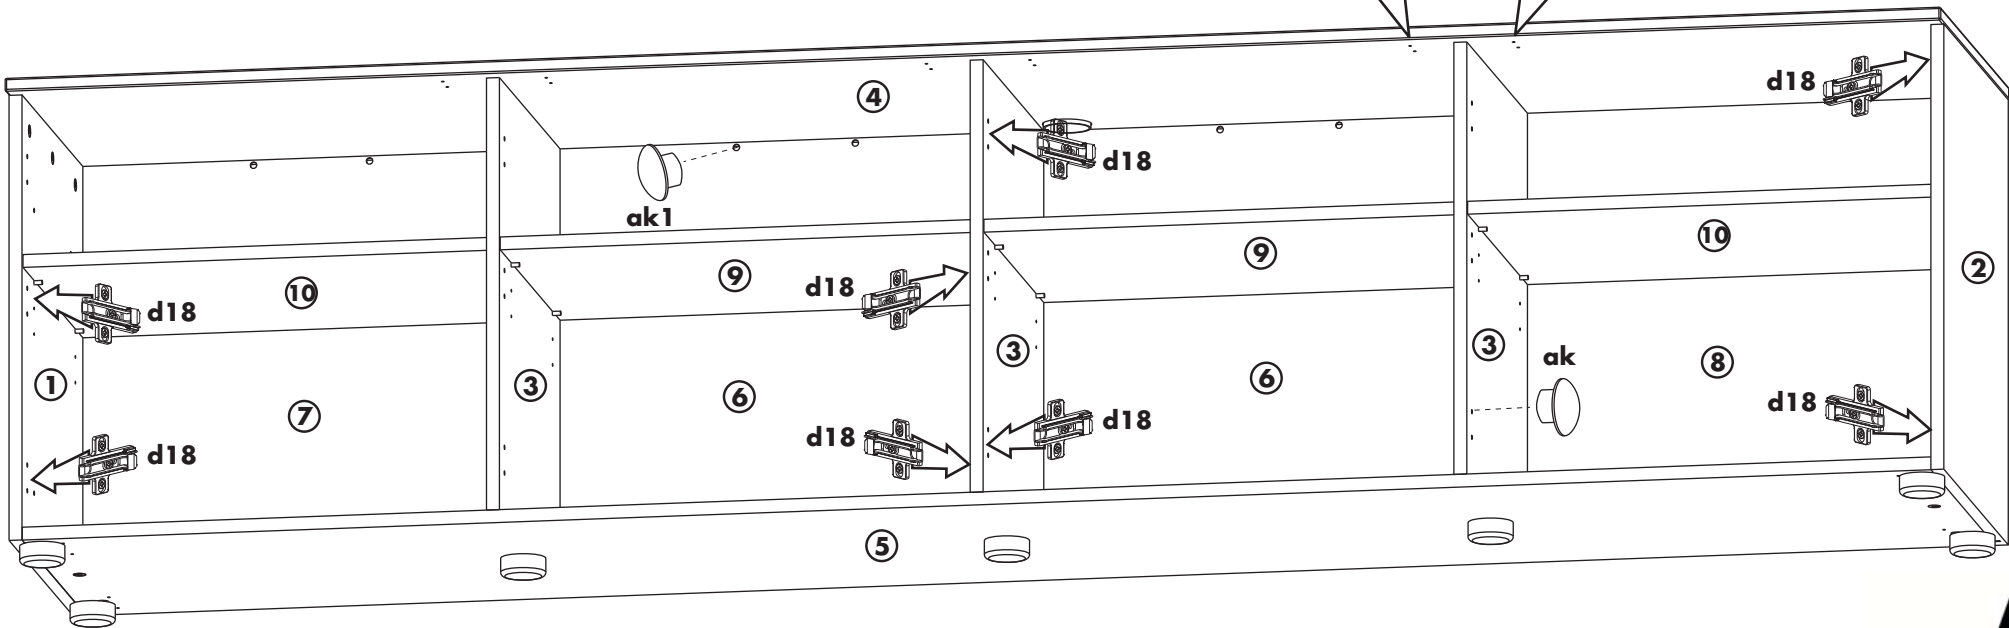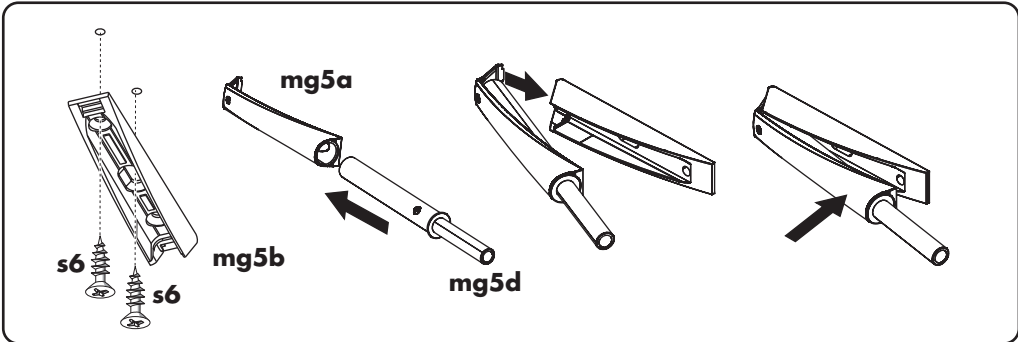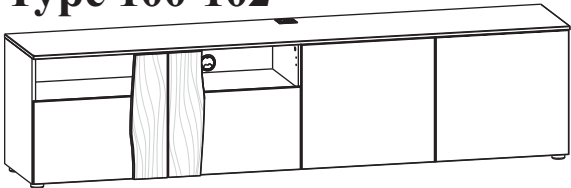

J1

Type 100-102

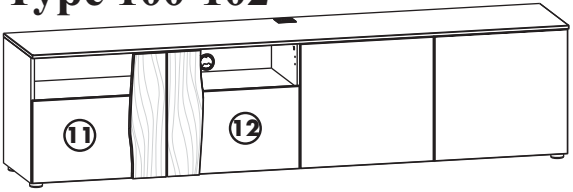

4x M4 x 21 gs6




2x c16

8x 4 x 16 s4



2x c17

4x 2,7 mm tad7


4x 4,0 x 27 rw7

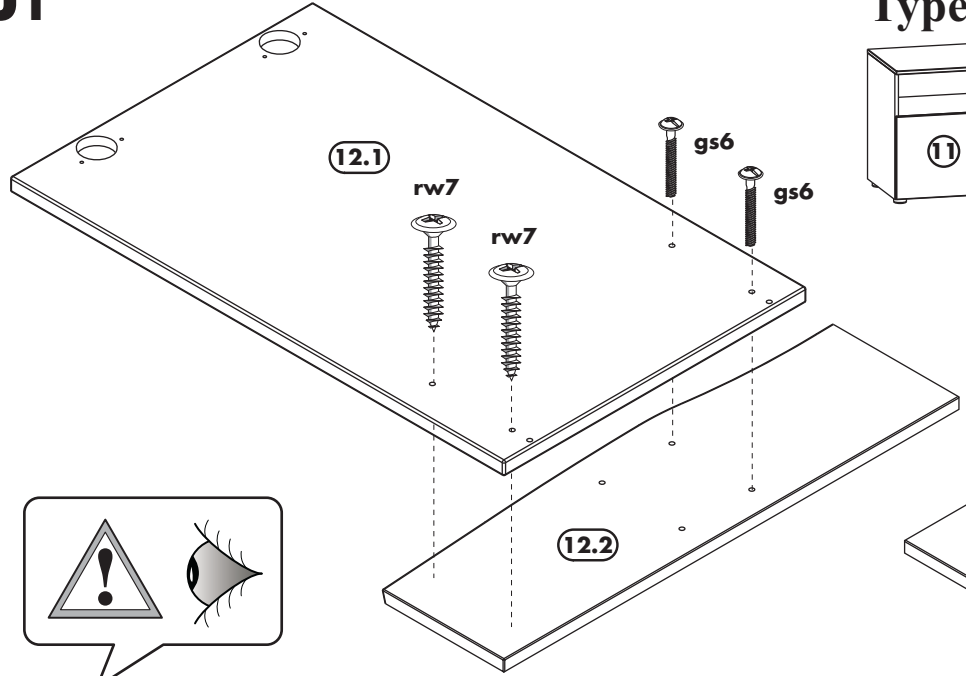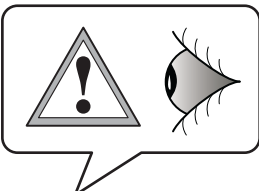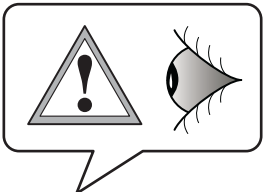

12.1 + 12.2
↓
12

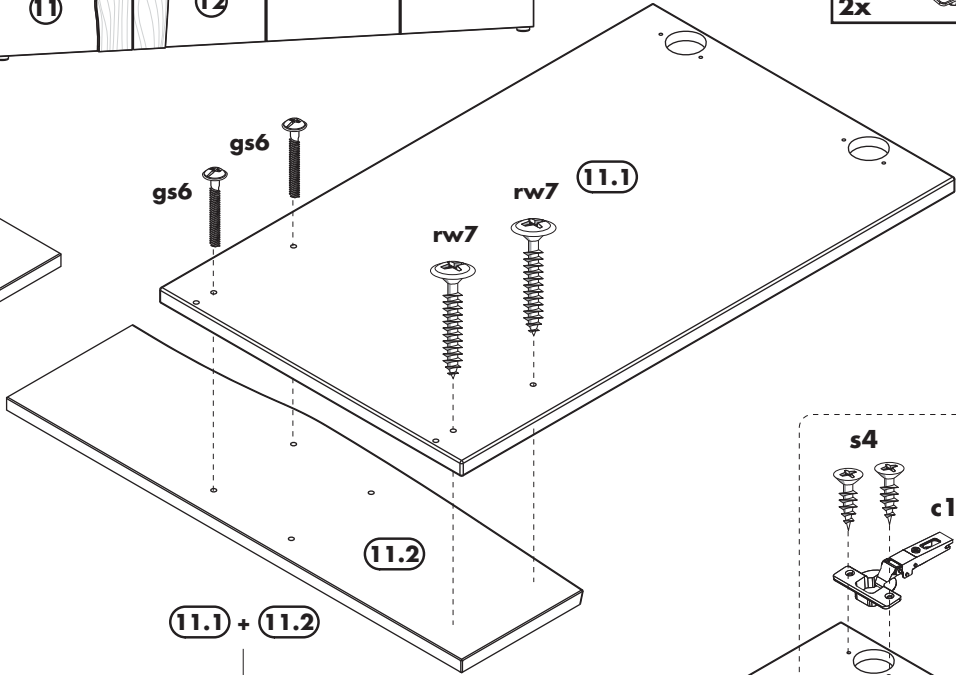
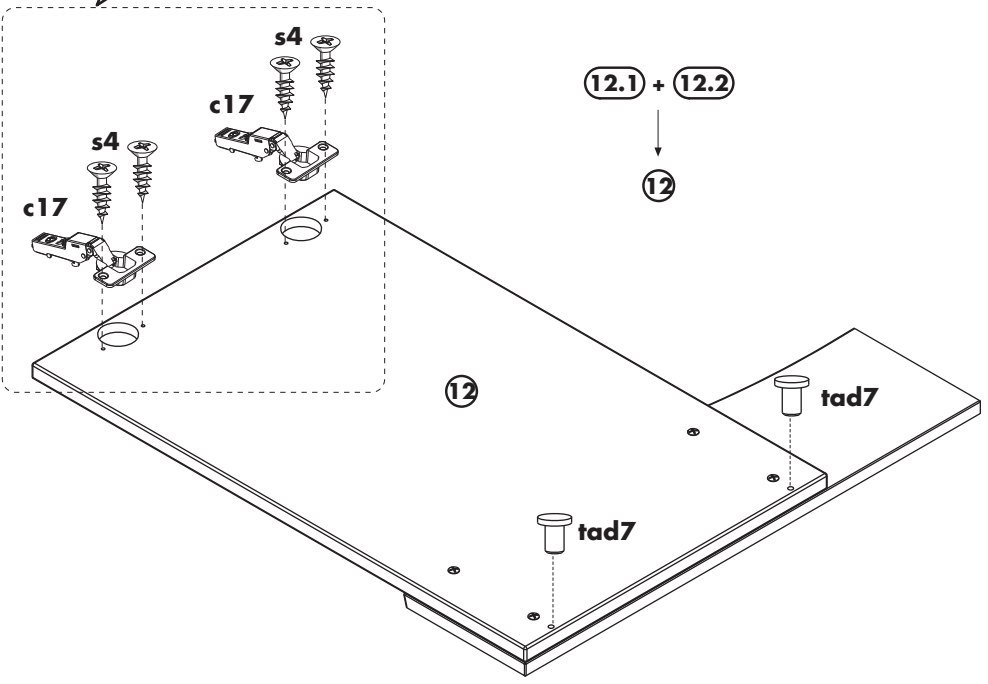



11.1 + 11.2
↓
11

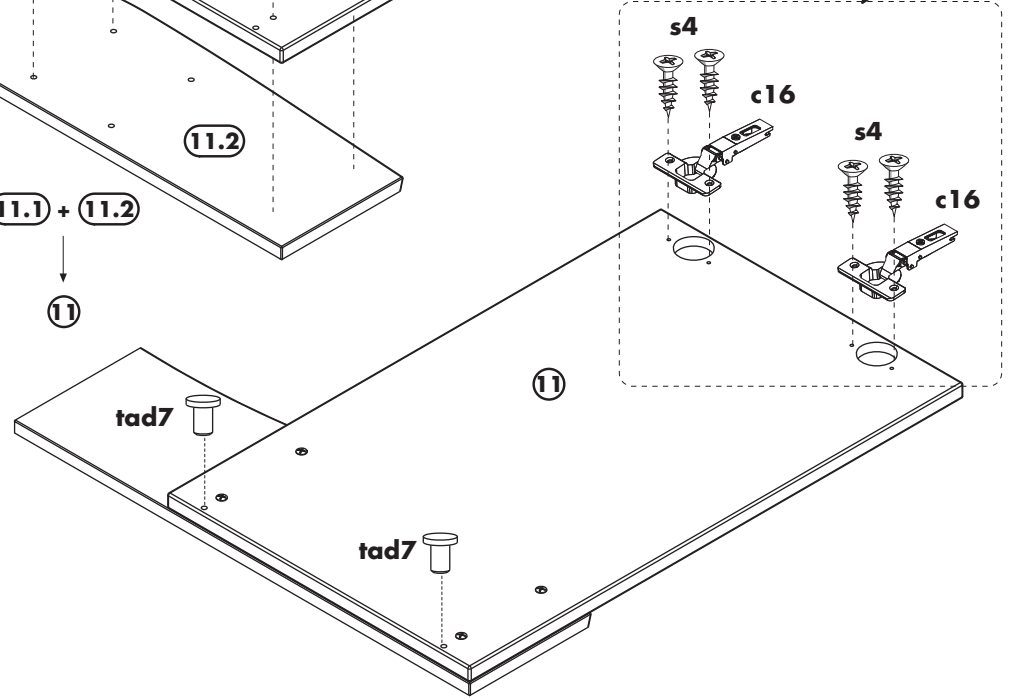



K1

Type 100-102

- **2x** **c16**
- **8x** **4 x 16** **s4**
- **2x** **c17**








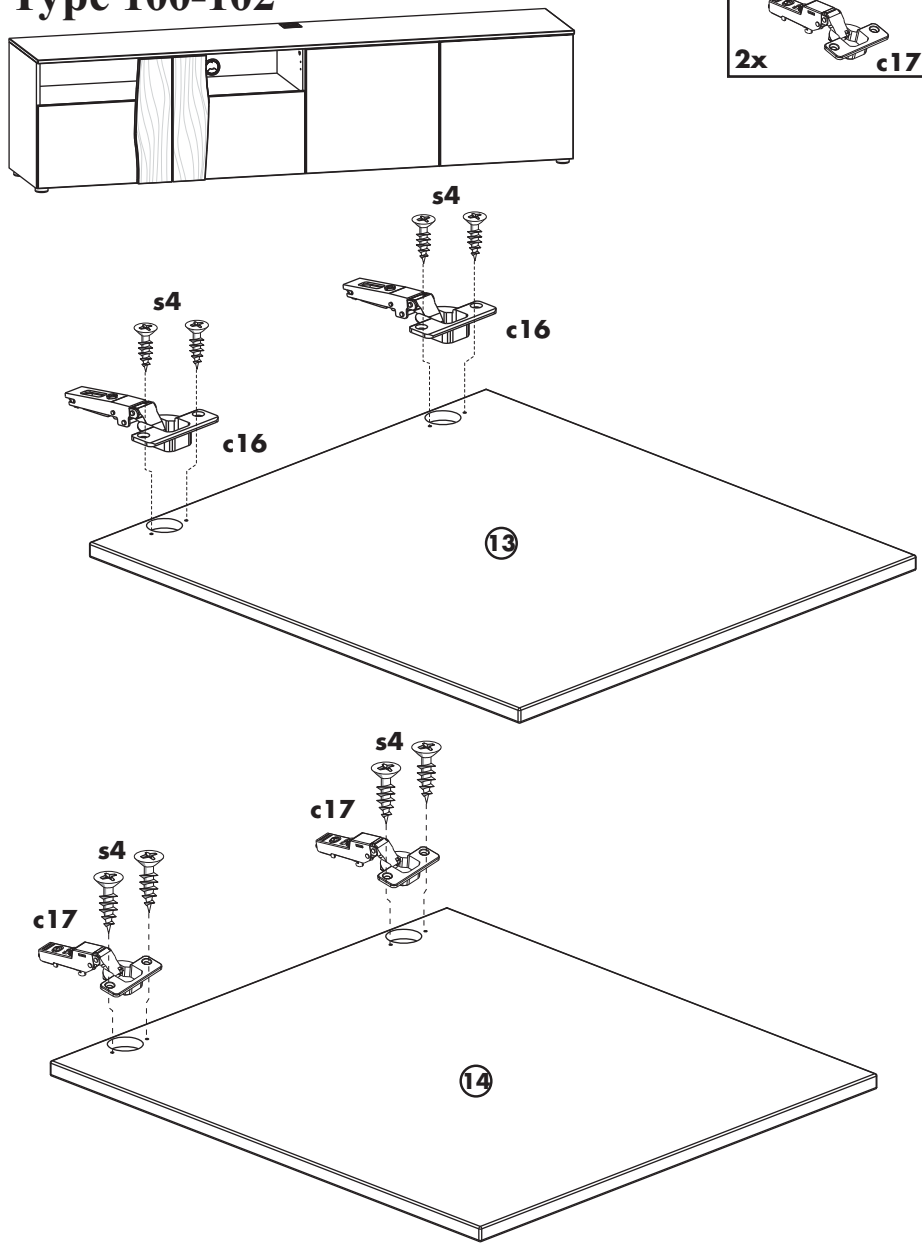


L1

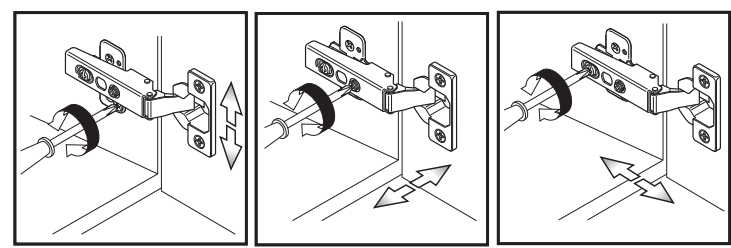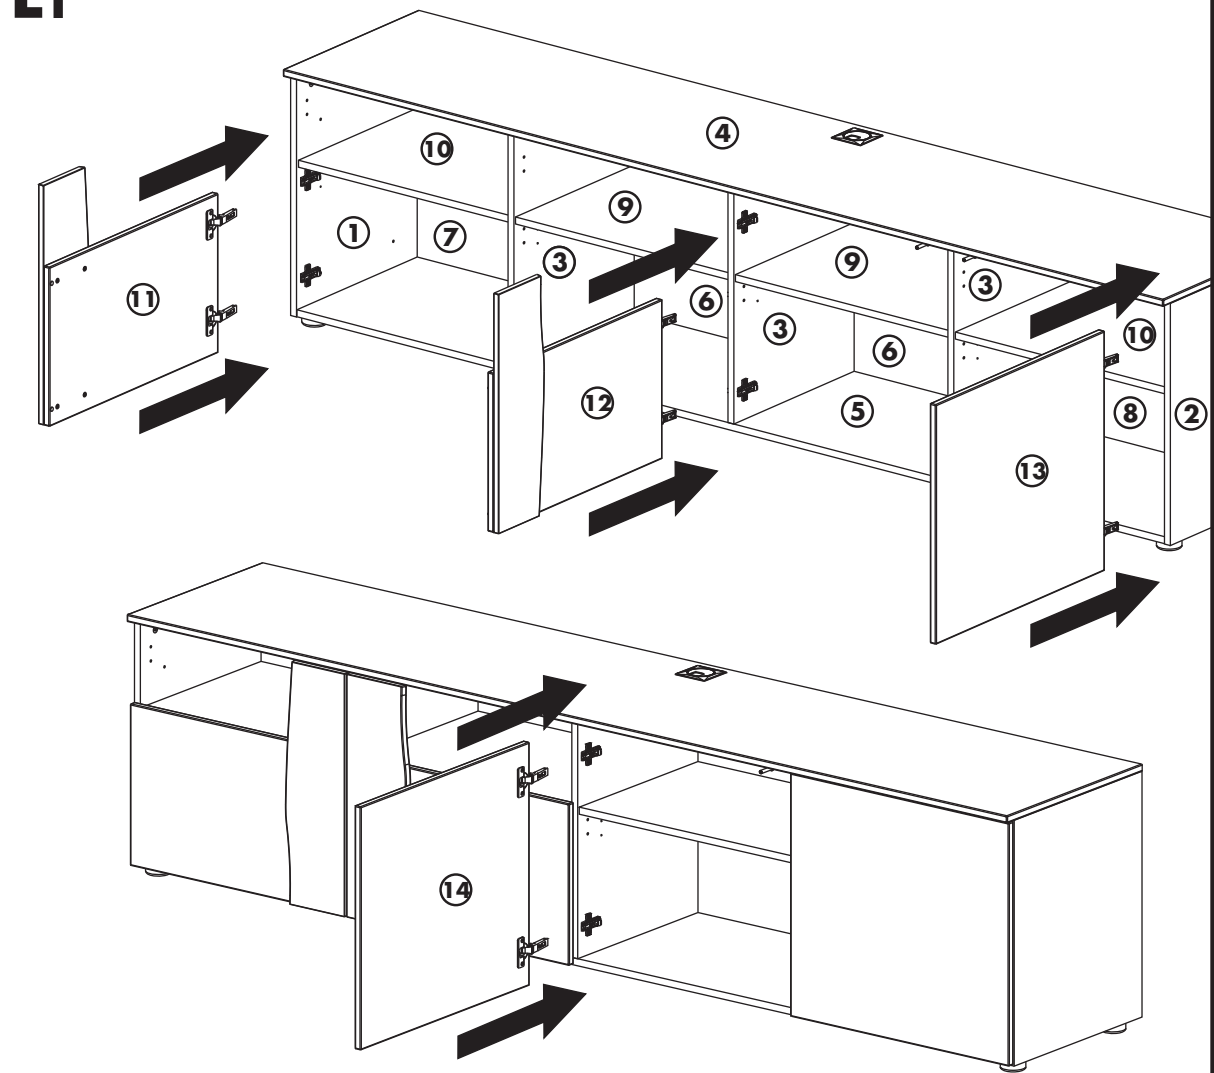









l2

Type 100-103

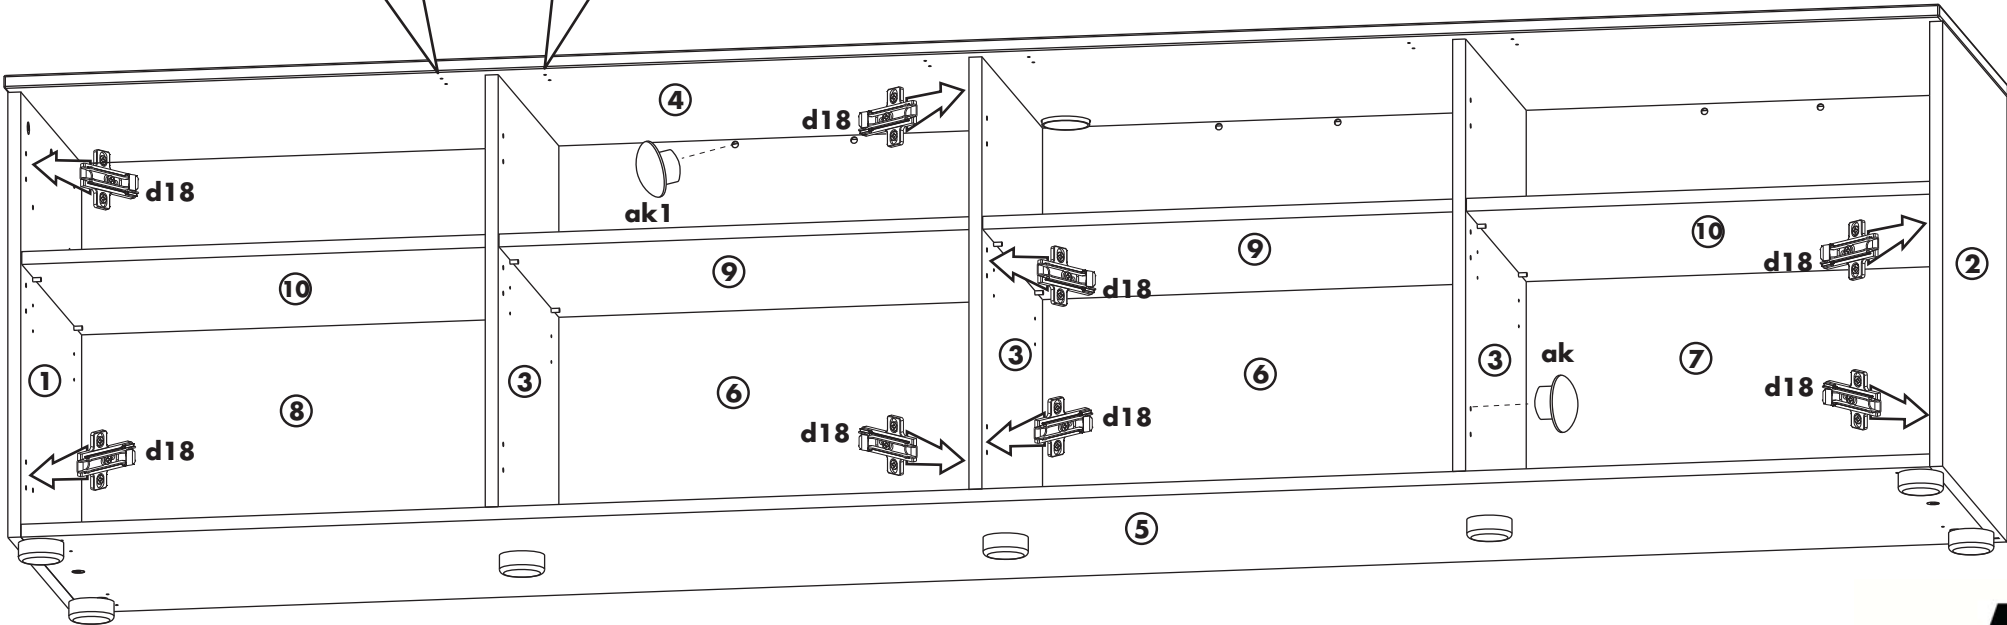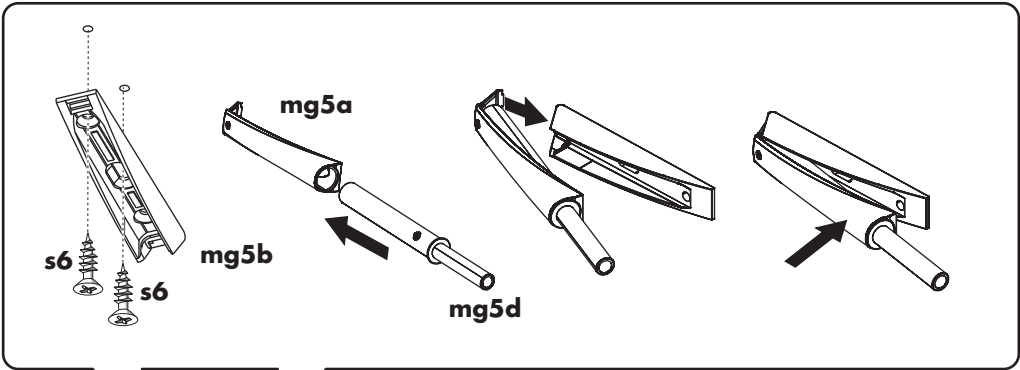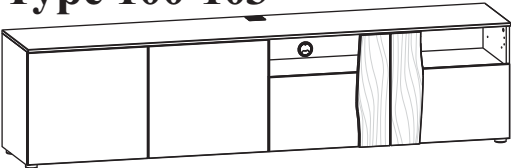


J2

Type 100-103

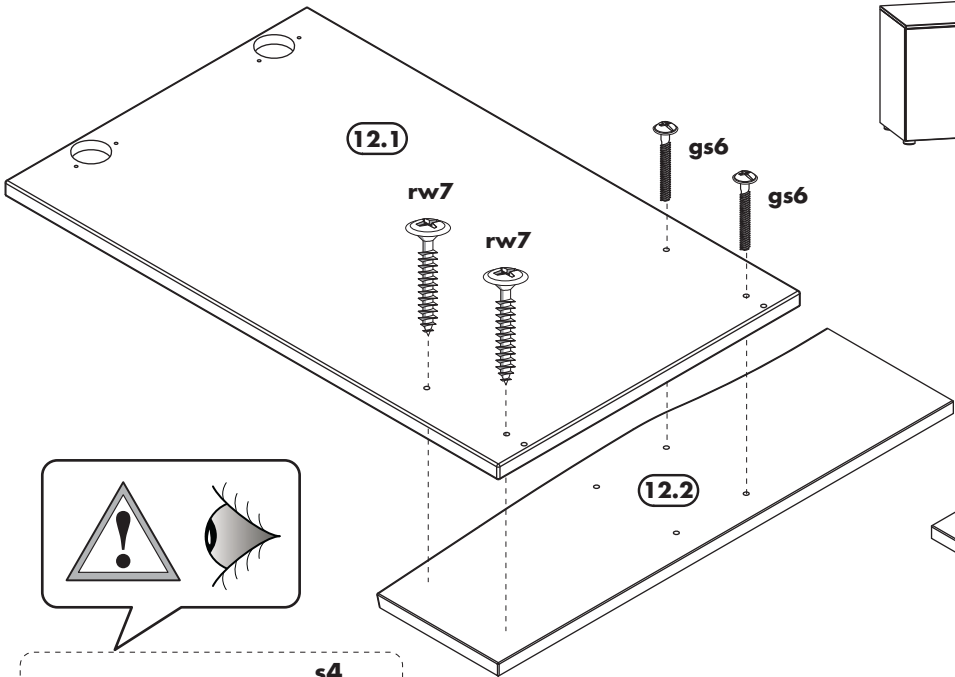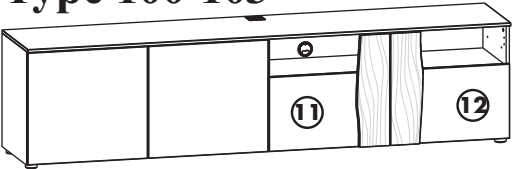





(12.1) + (12.2)

12

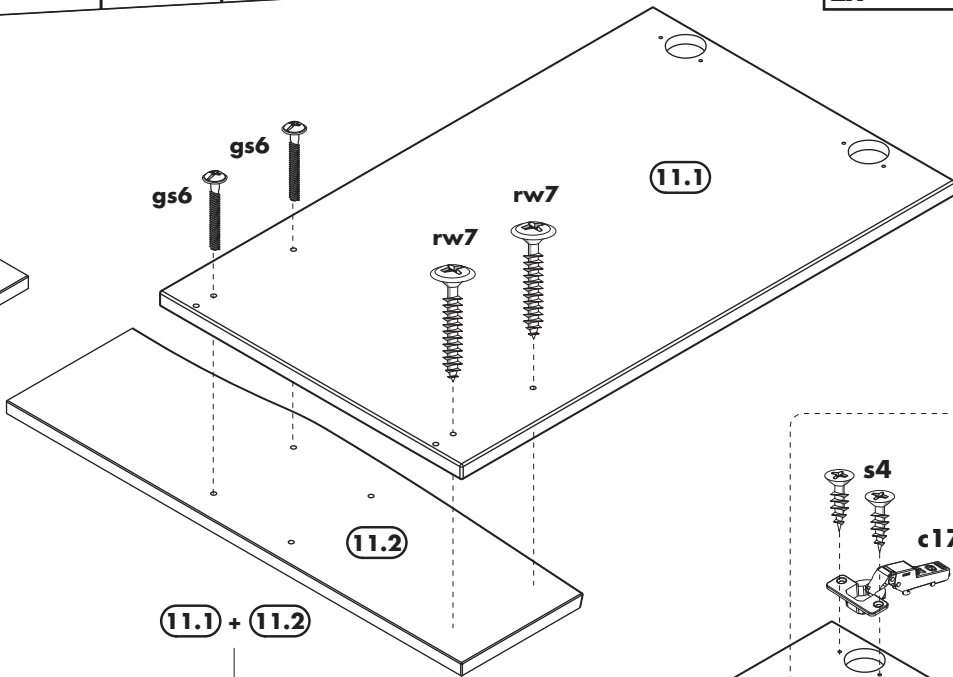


(11.1) + (11.2)


11

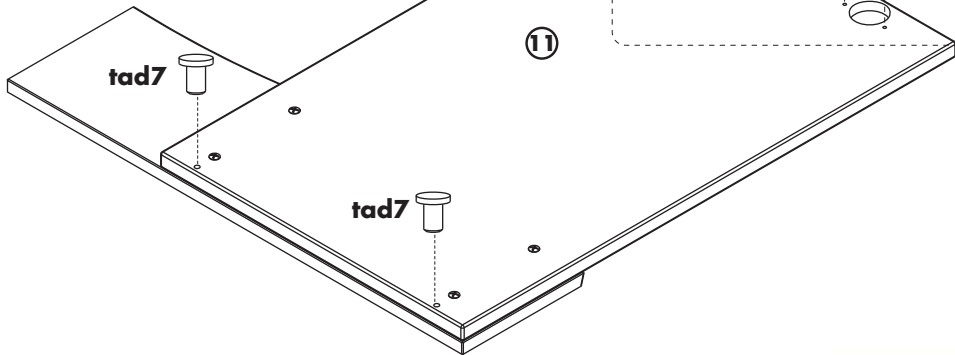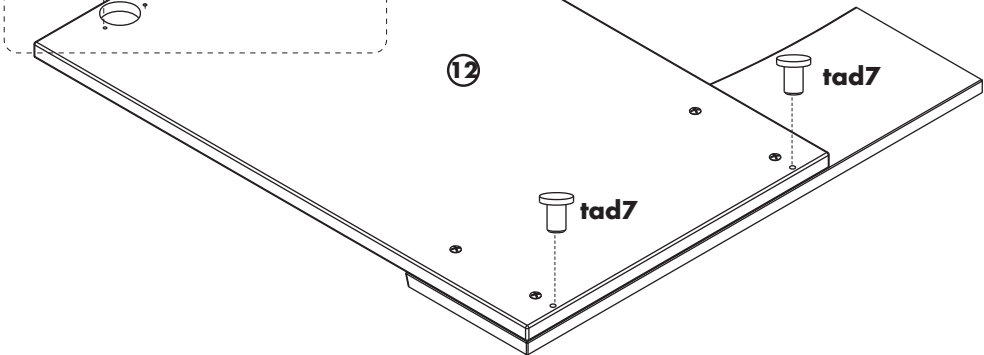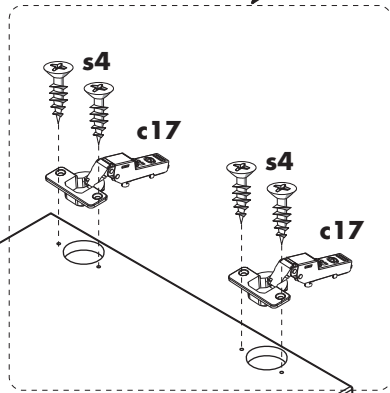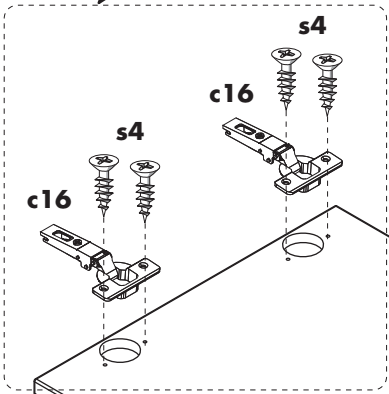

K2
Type 100-103








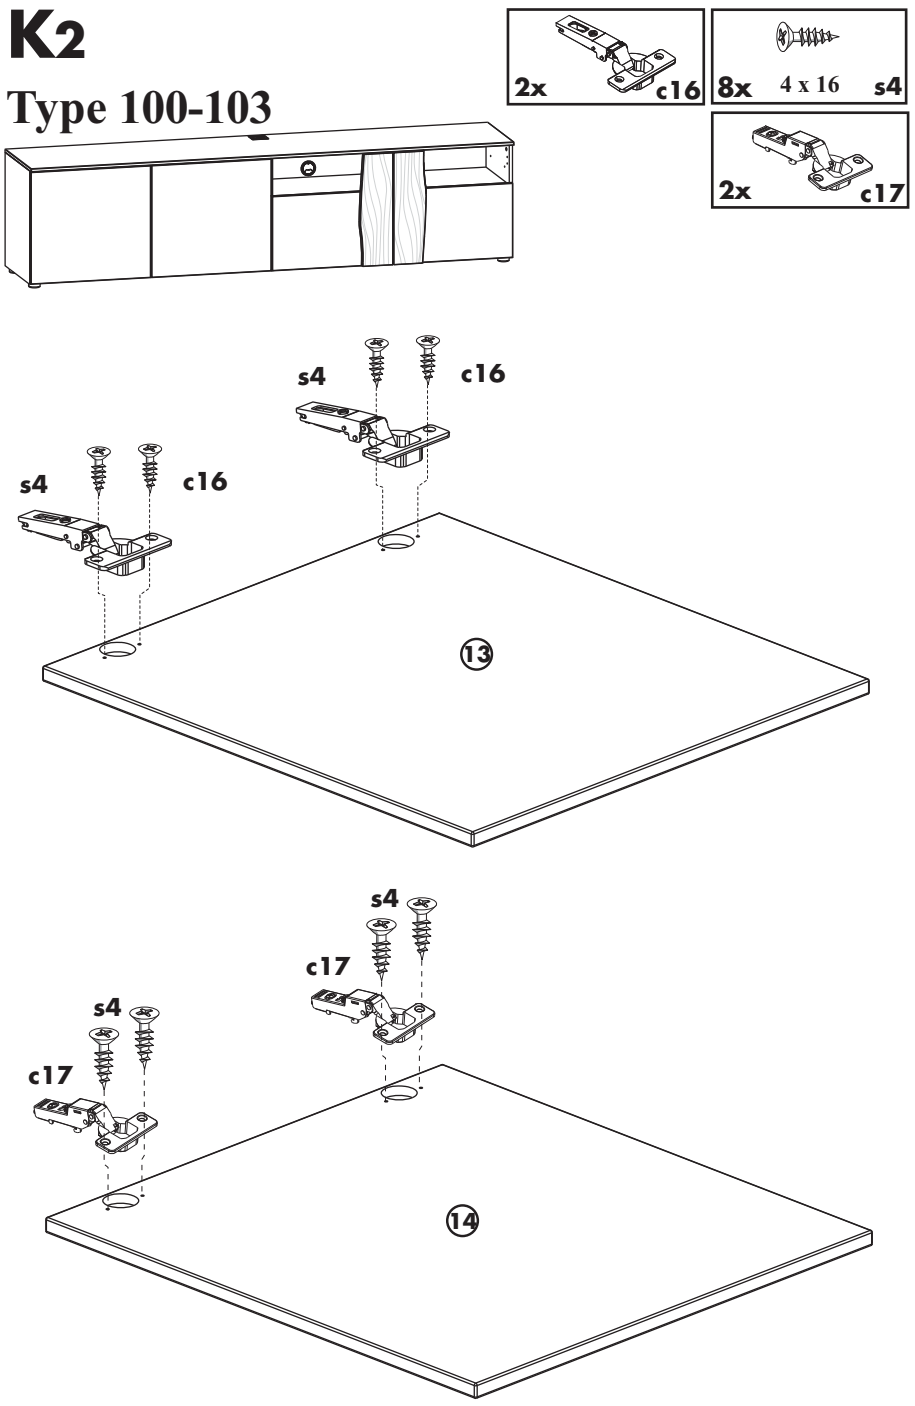


L2

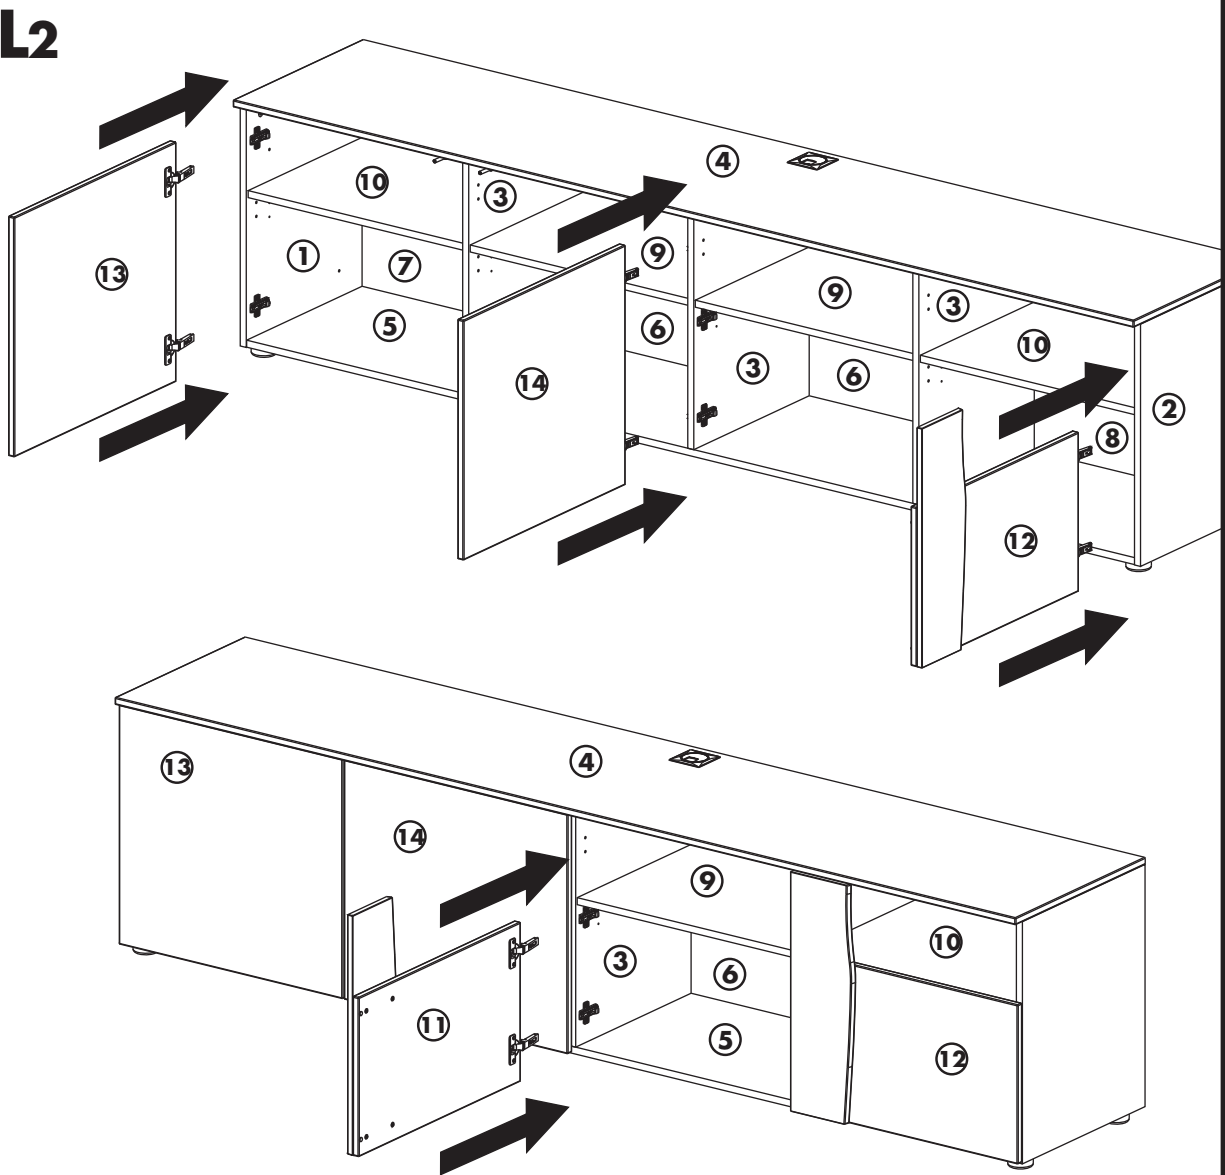


I3

Type 100-112

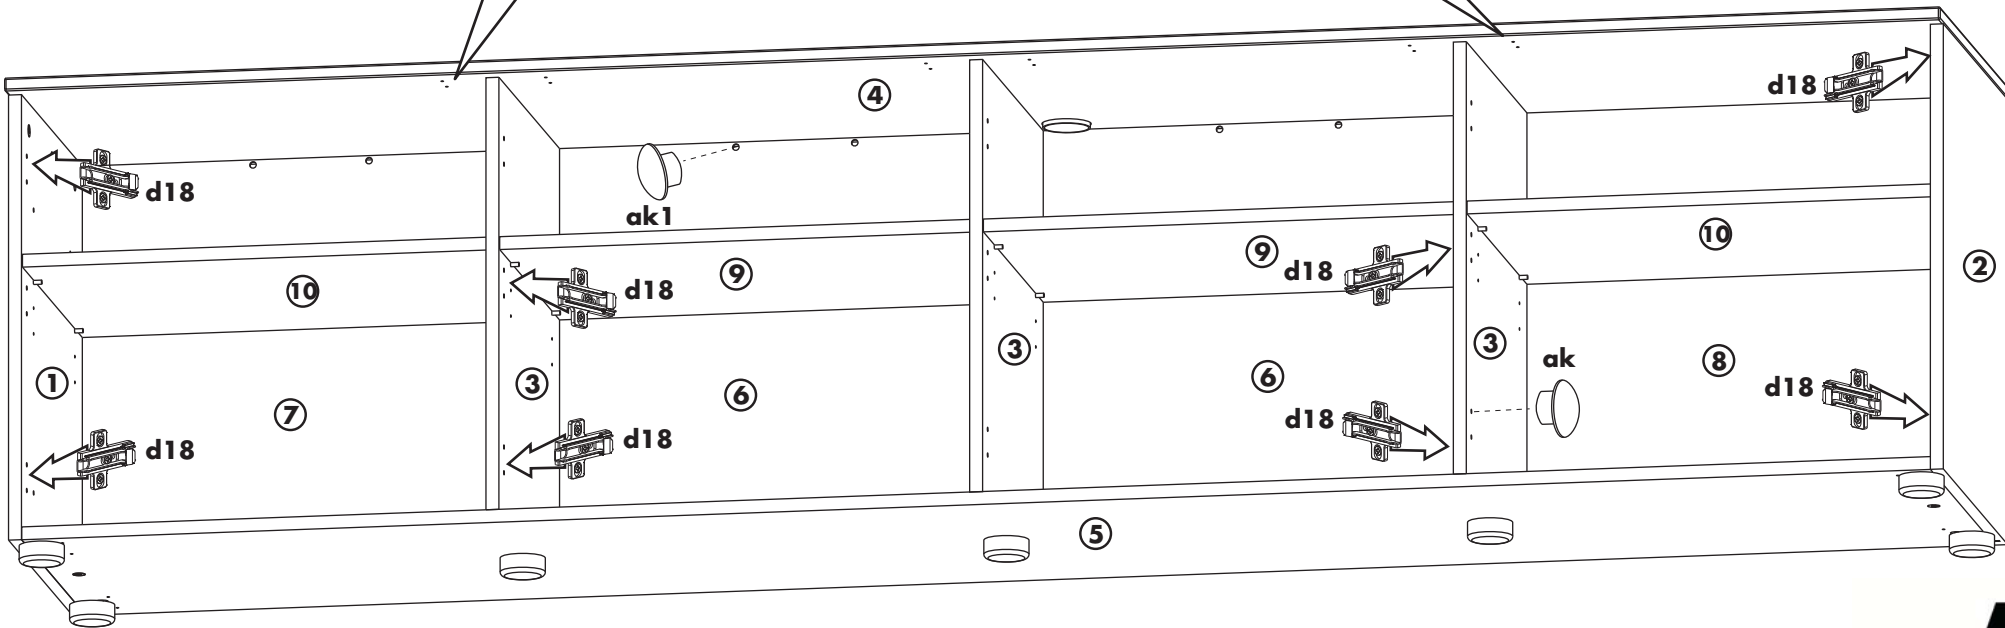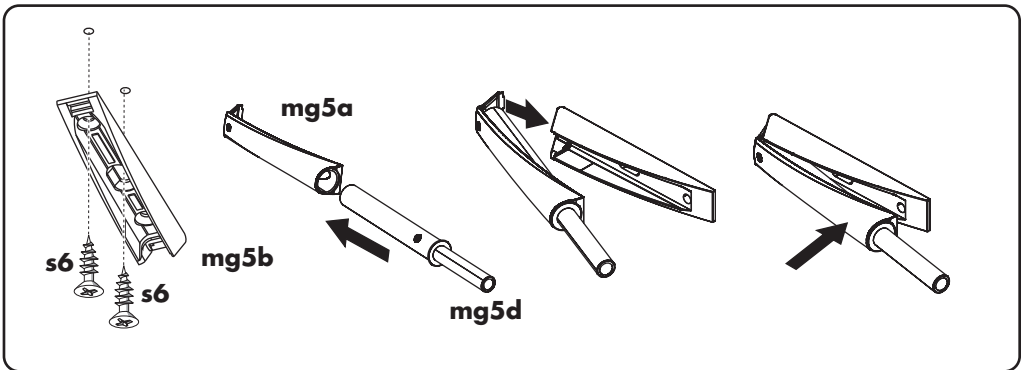
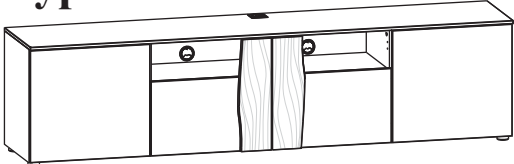


J3


Type 100-112

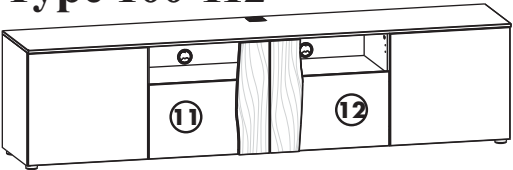





4x		c17	8x	4 x 16	s4
4x		M4 x 21	gs6	4x	2,7 mm tad7
4x		4,0 x 27	rw7		

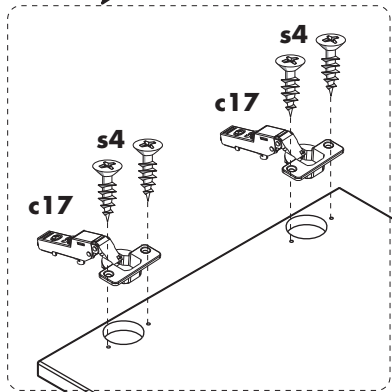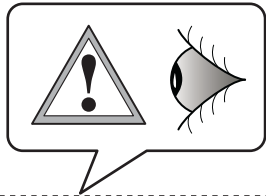


12.1 + 12.2
↓
12

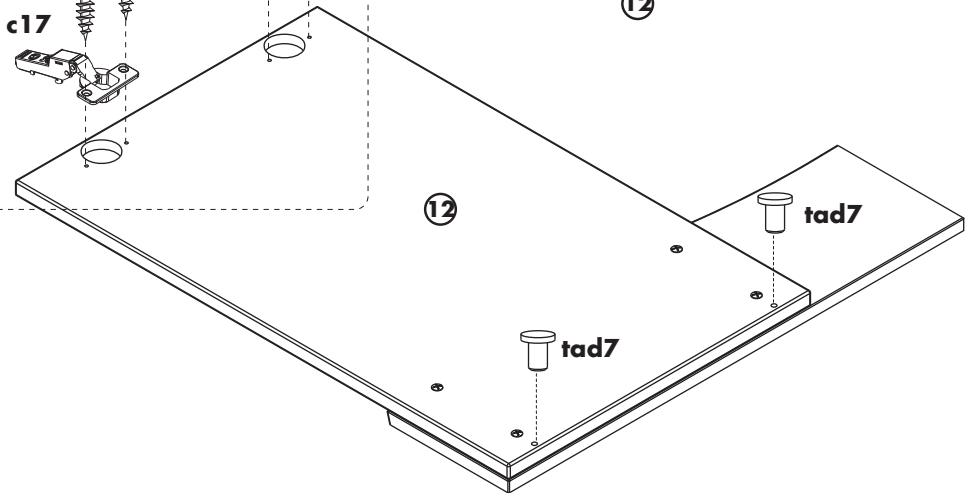

11.1 + 11.2
↓
11

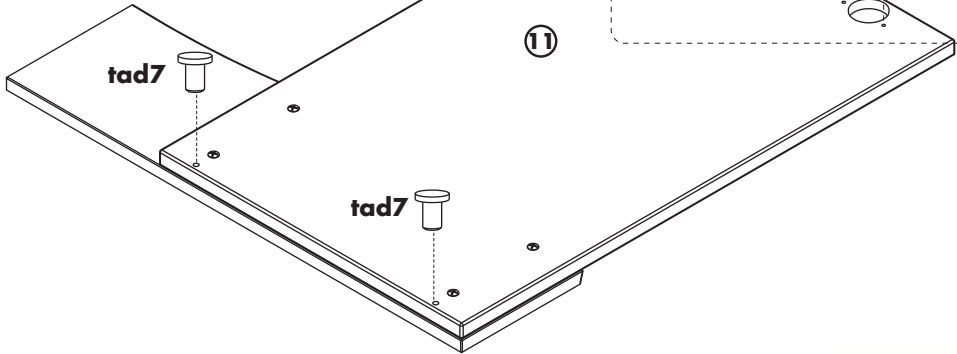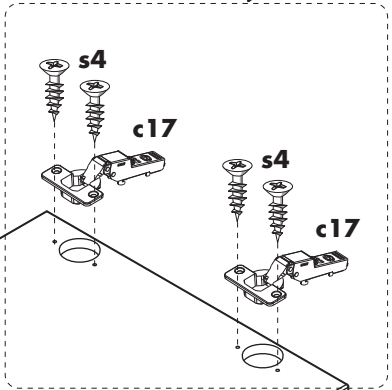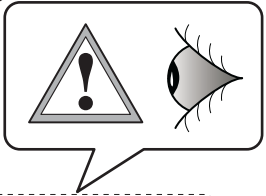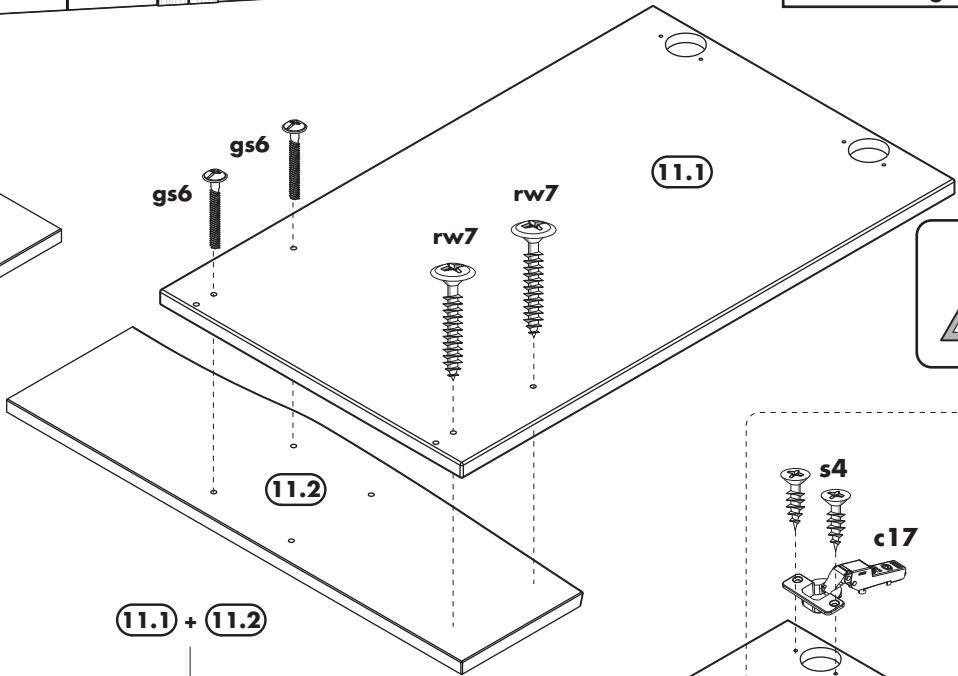

K3

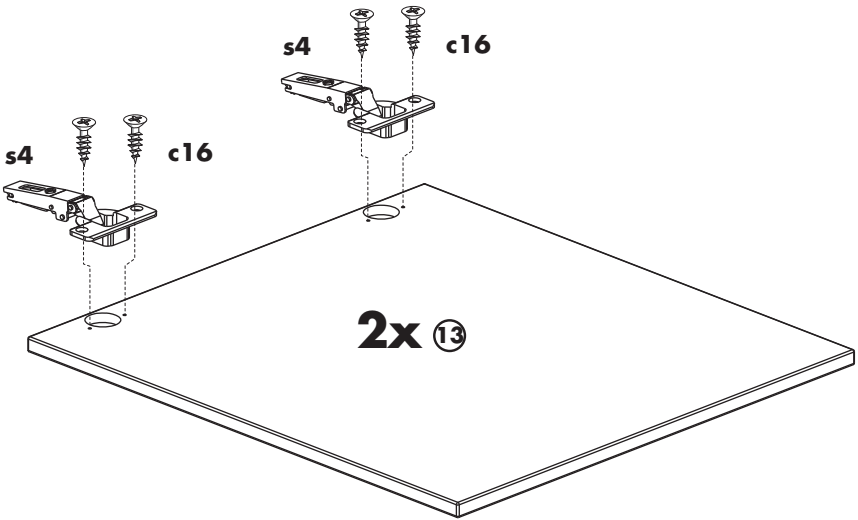

L3

