





Type 100-104

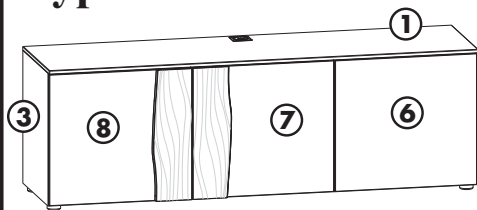

Type 100-105

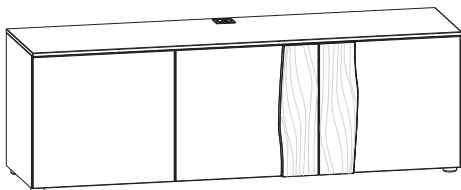

Sie brauchen:
You need:

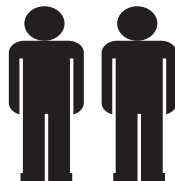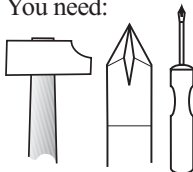

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.










Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.



Beschlagliste Fittings

CAD und Design
Light Line 15 100_104 / 01.26

 4x 4,0 x 27 rw7	 6x 3 x 15 s6	 24x 3 x 20 s7
 14x a4	 20x e2	 3x mg5b
 3x mg5d	 3x mg5a	
 6x fu	 6x fo	 8x M4 x 21 gs6
 12x t4	 32x ak	 2x ak1
 6x a1	 1x kbs1	 1x kbs4
 12x t4	 32x ak	 2x ak1
 6x a1	 1x kbs1	 1x kbs4
 12x t4	 32x ak	 2x ak1
 6x a1	 1x kbs1	 1x kbs4
 12x t4	 32x ak	 2x ak1


A1

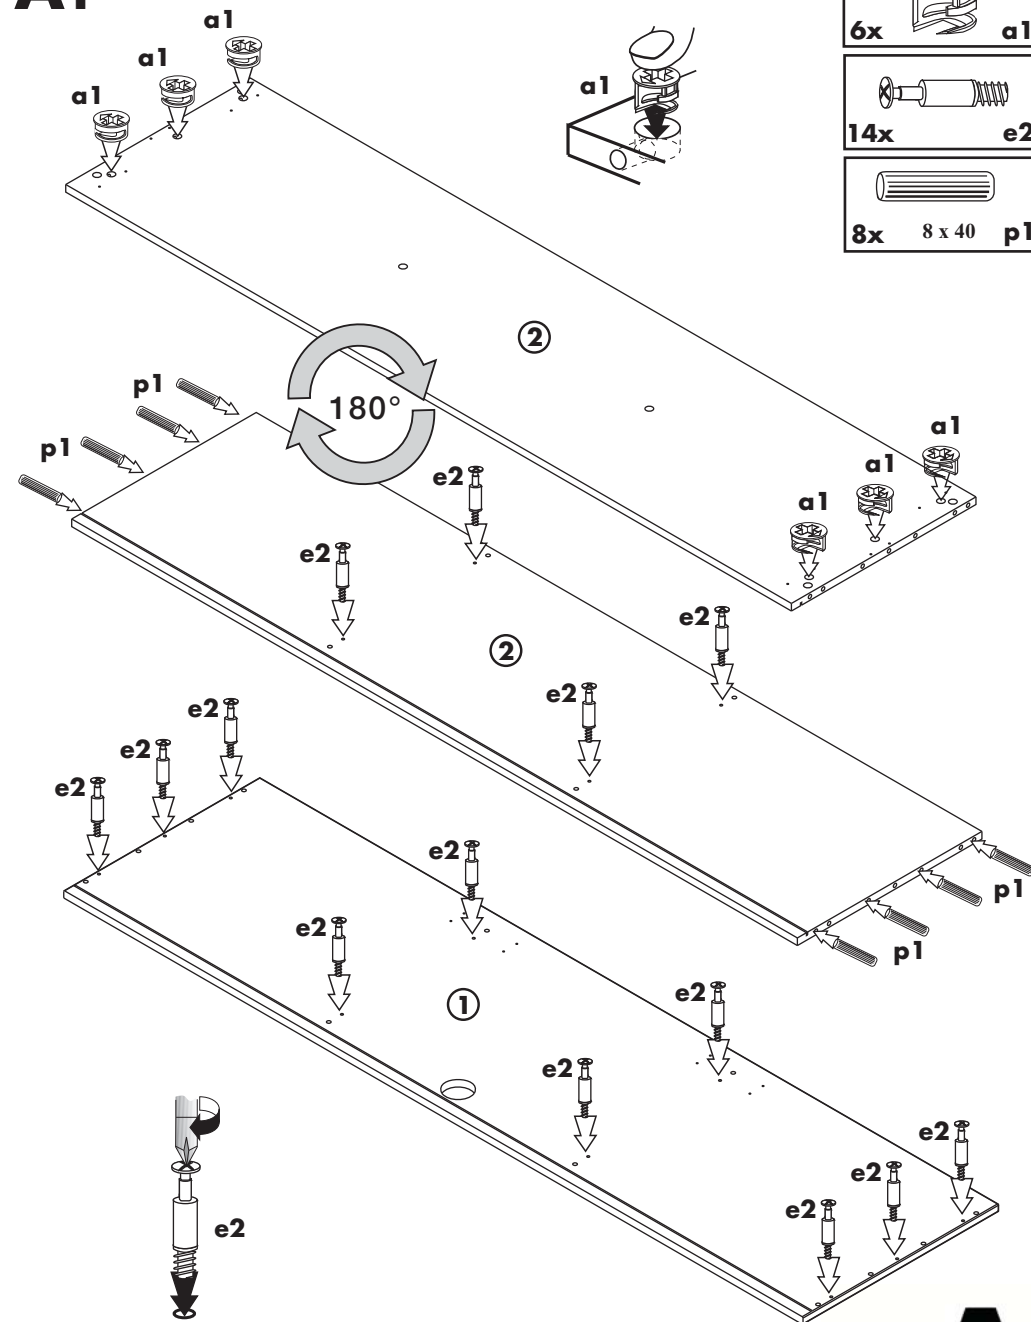


6x		a1
14x		e2
8x		8 x 40 p1

STIL
Wohnfabrik **A**


A2

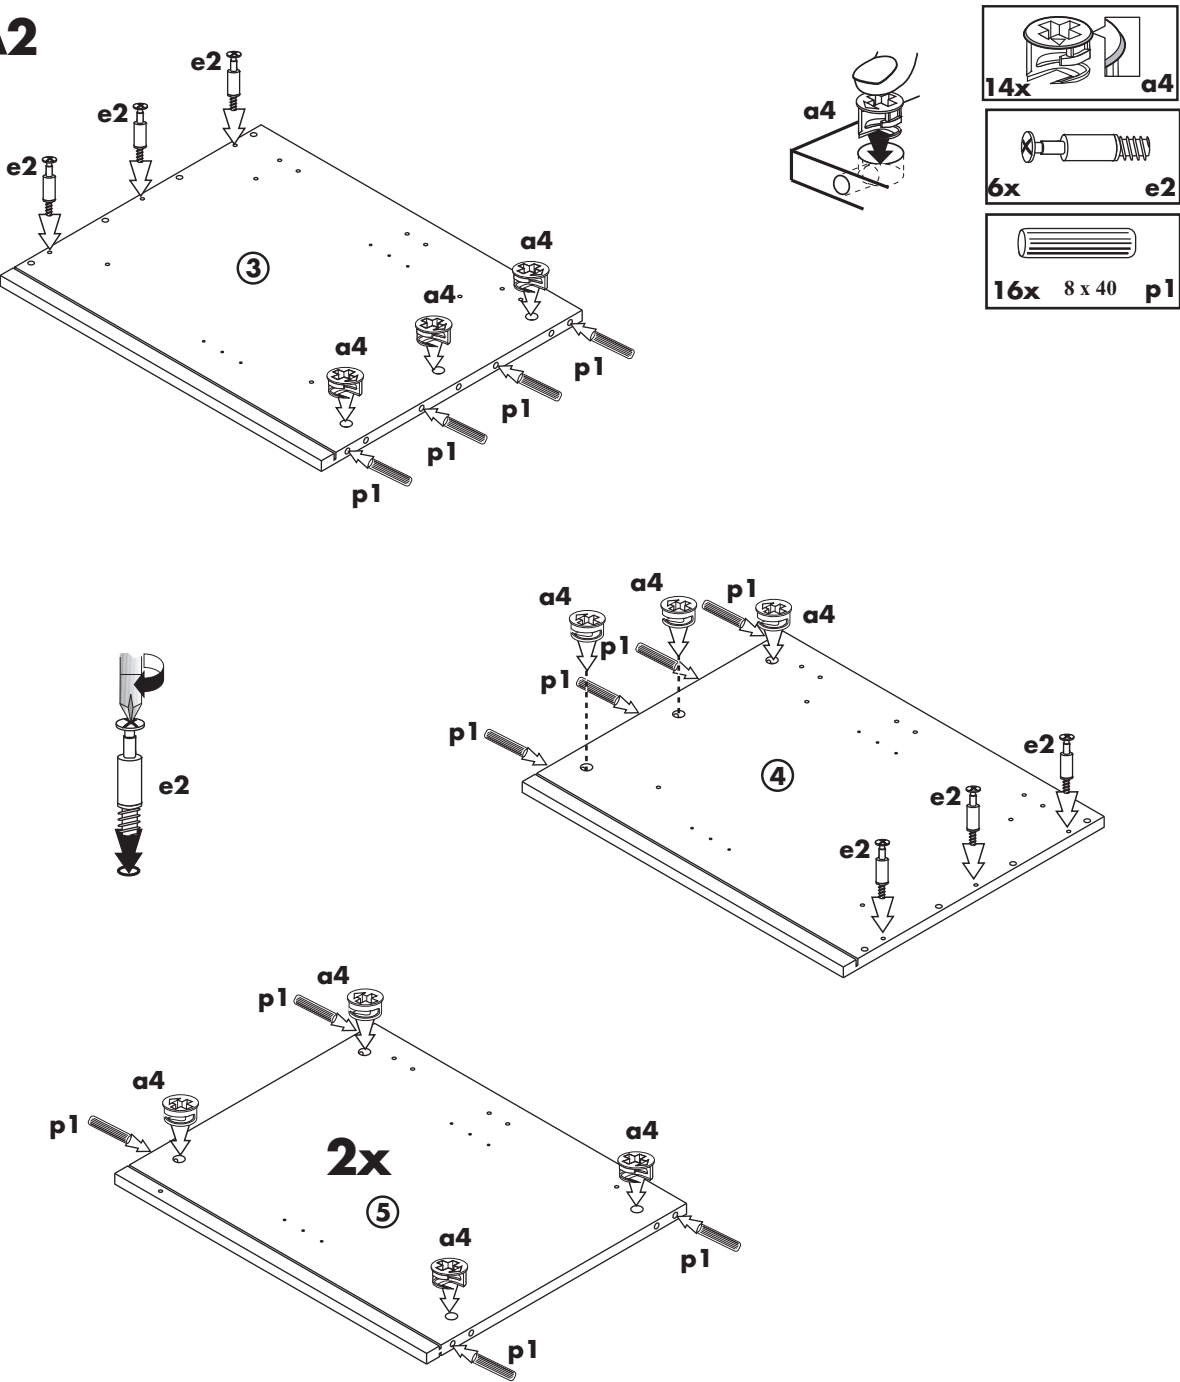


B

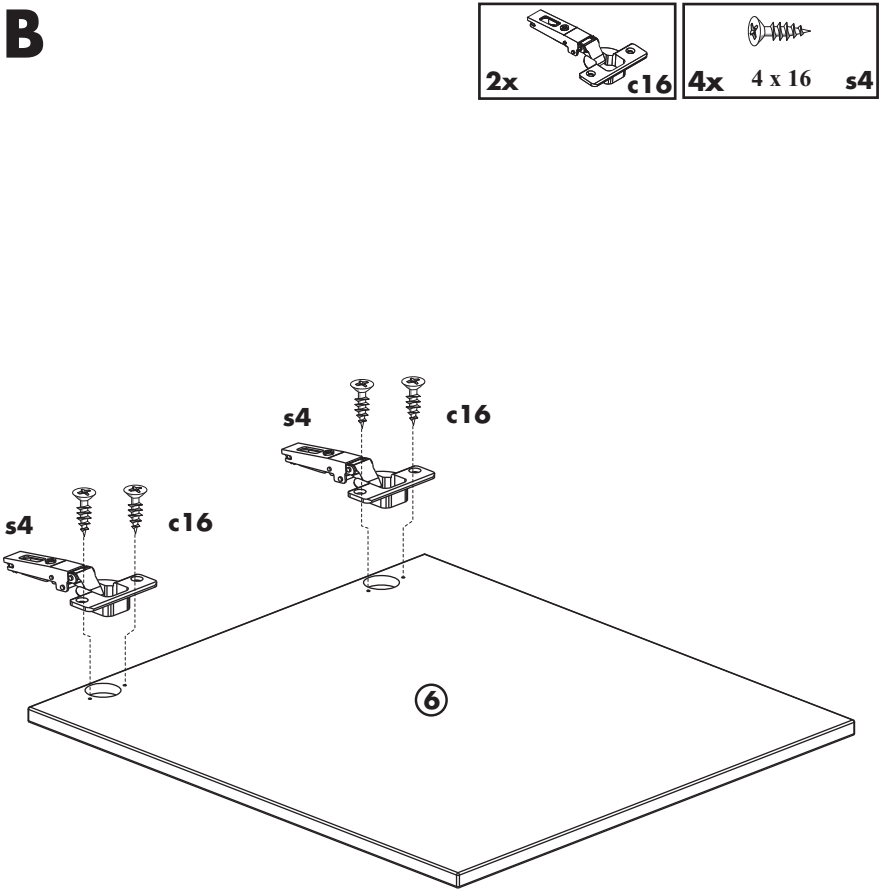


C

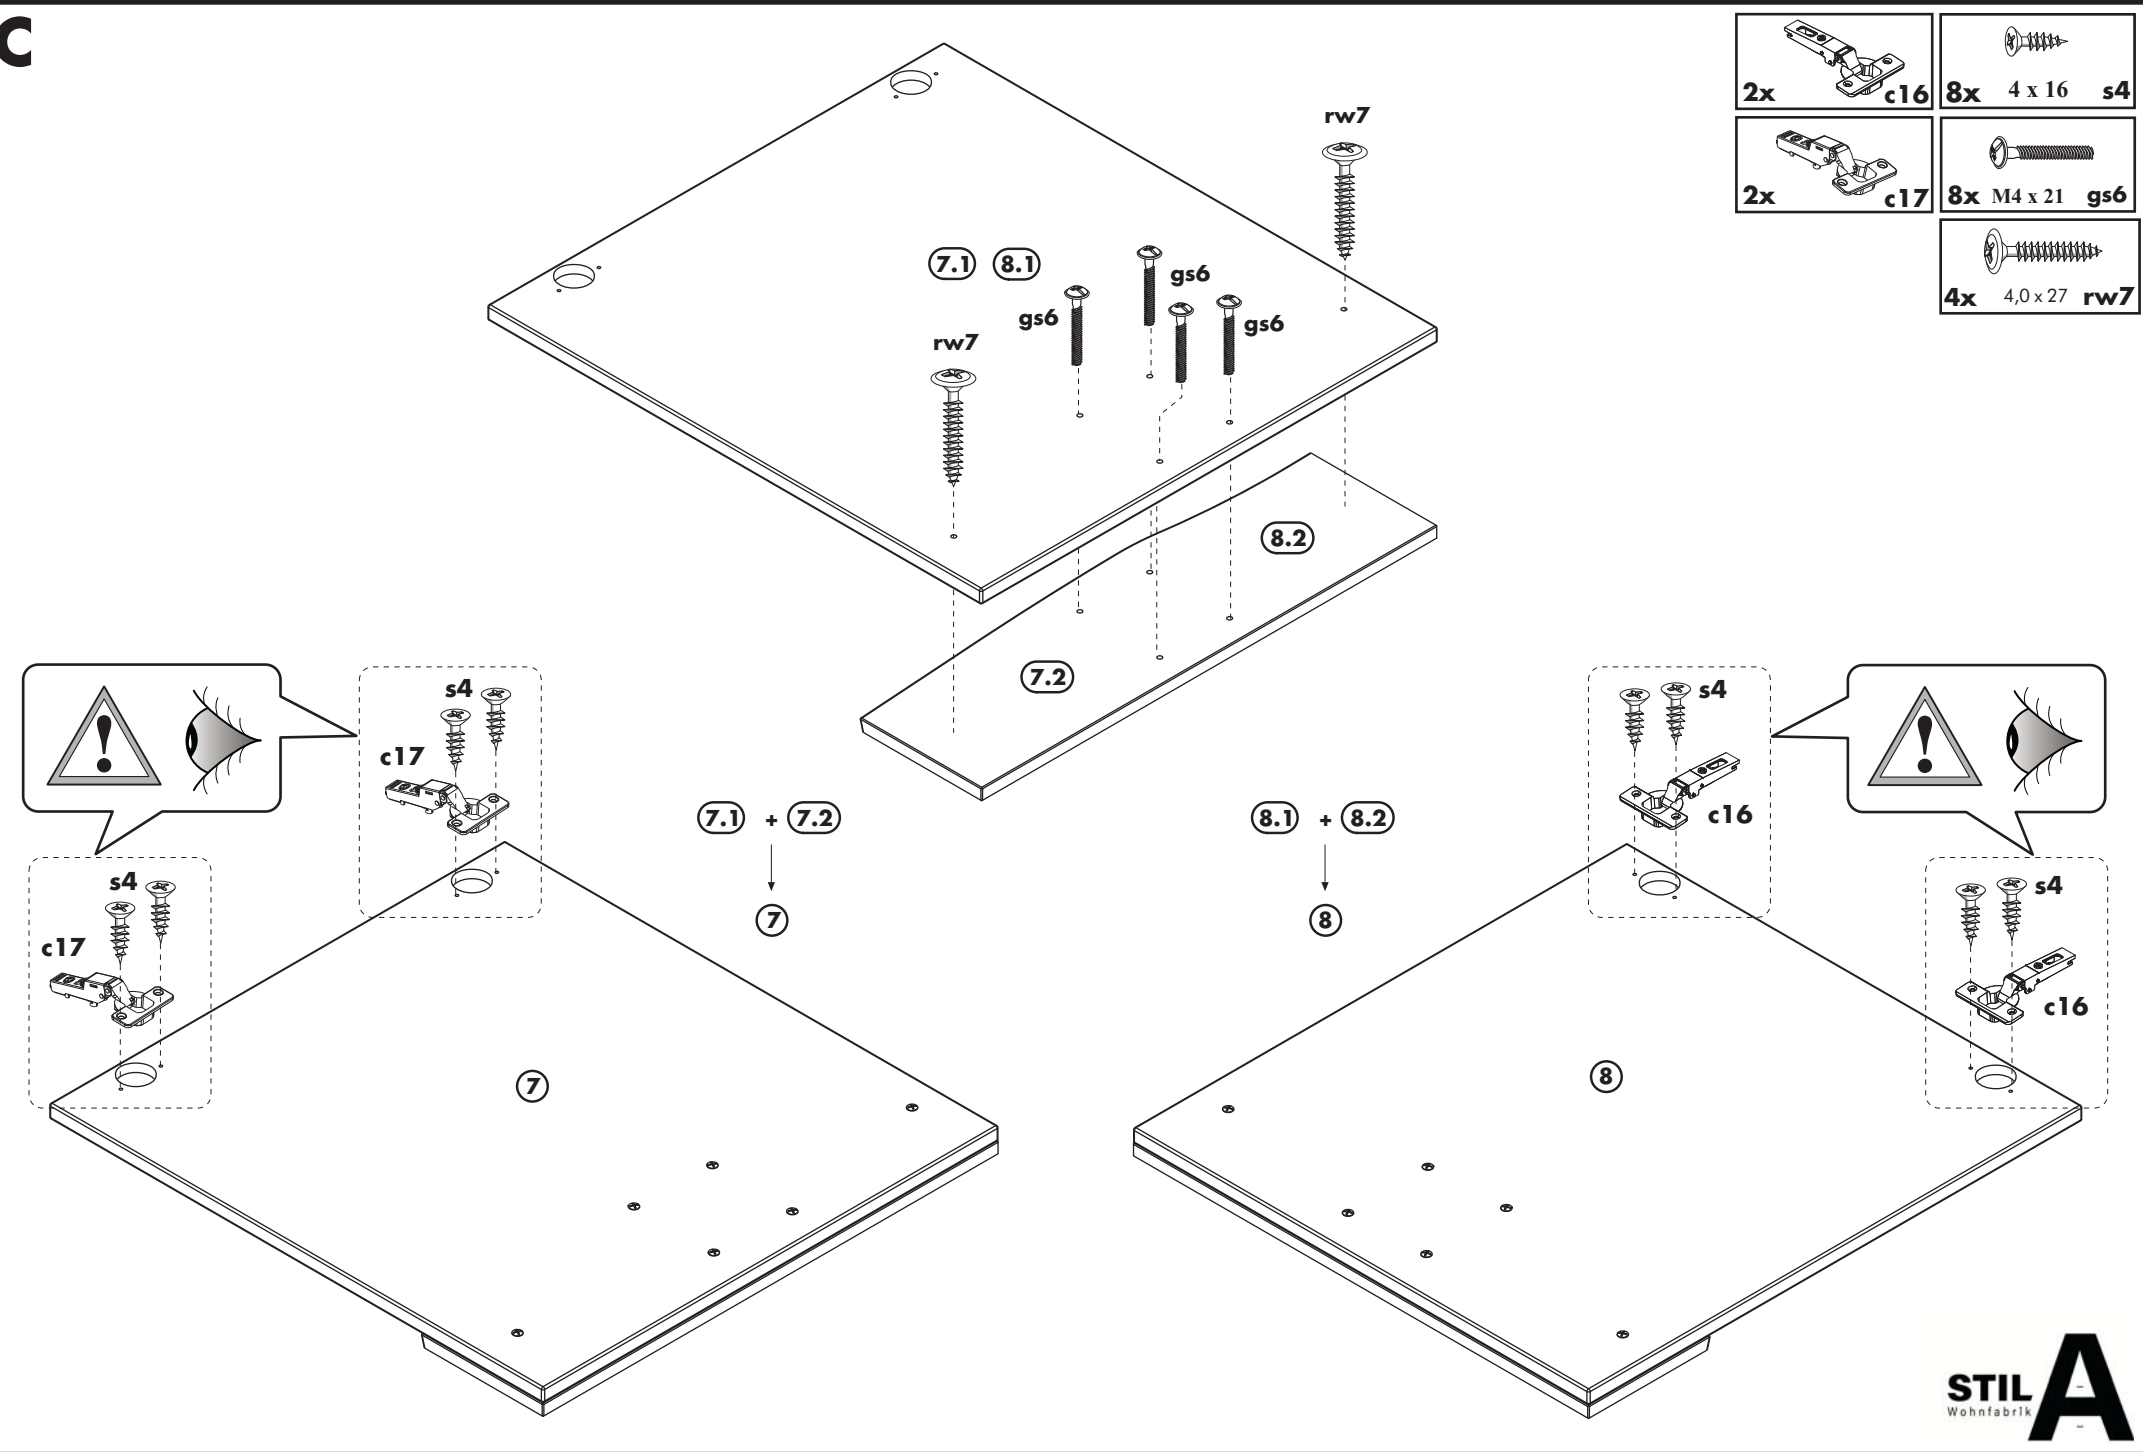




D

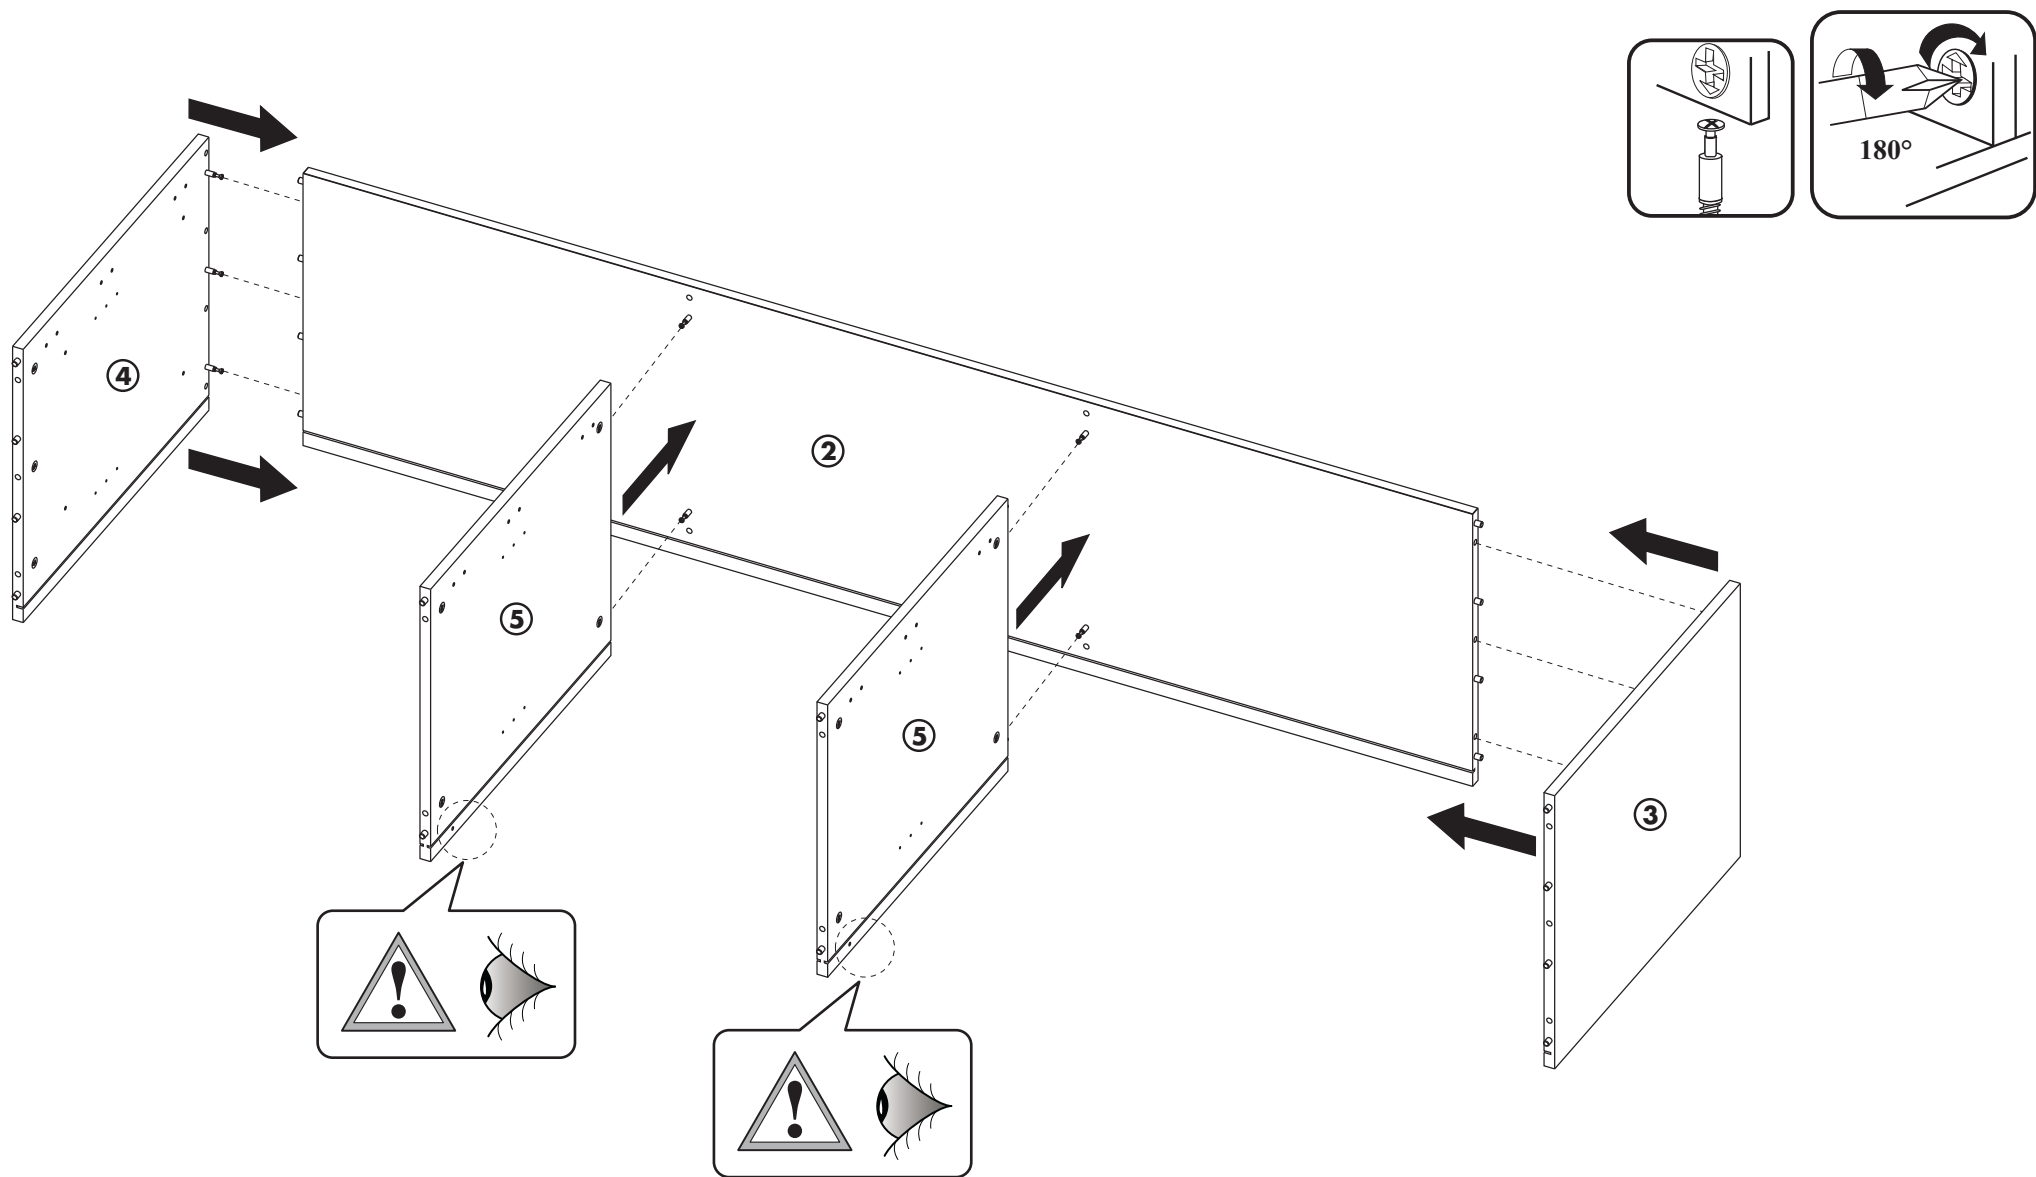


E

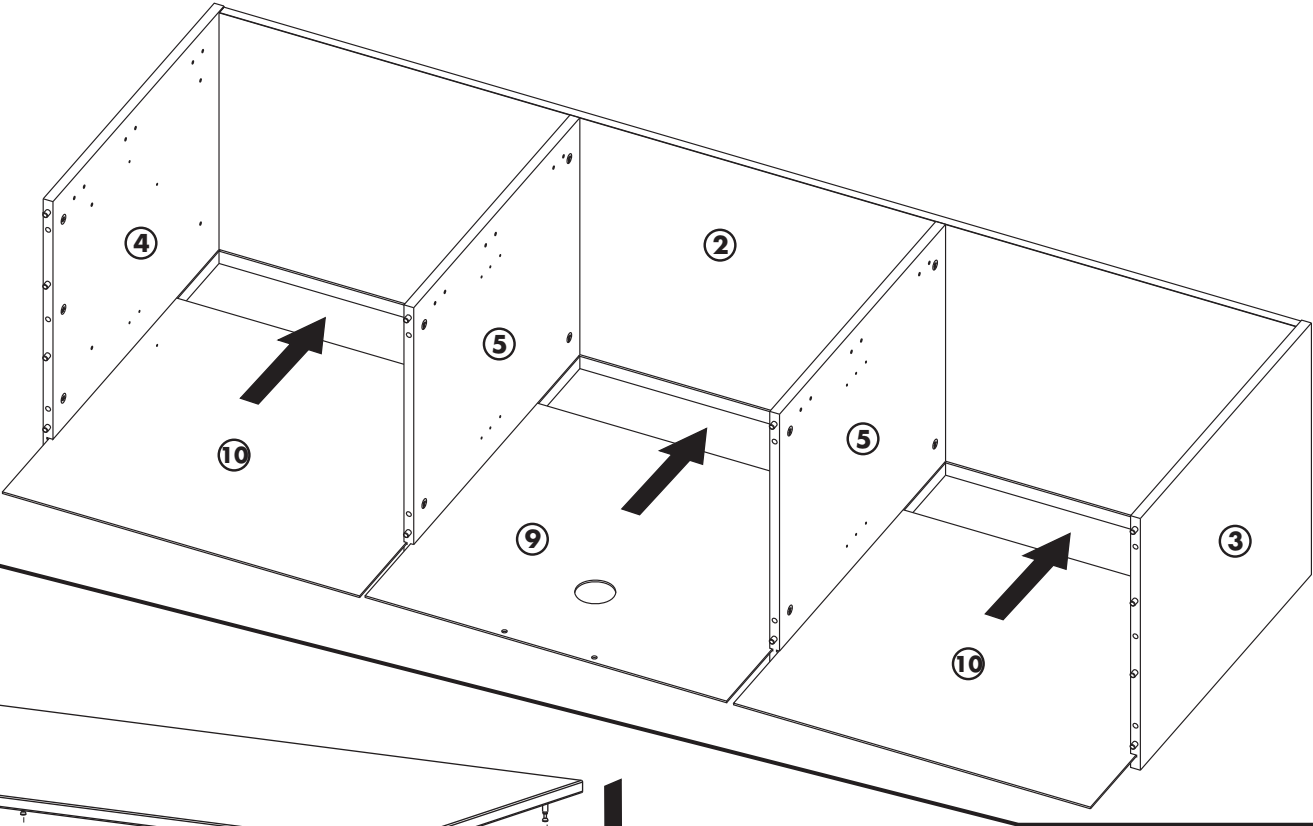



F

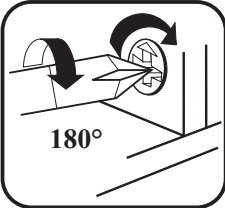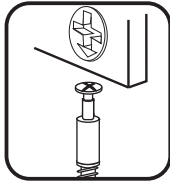
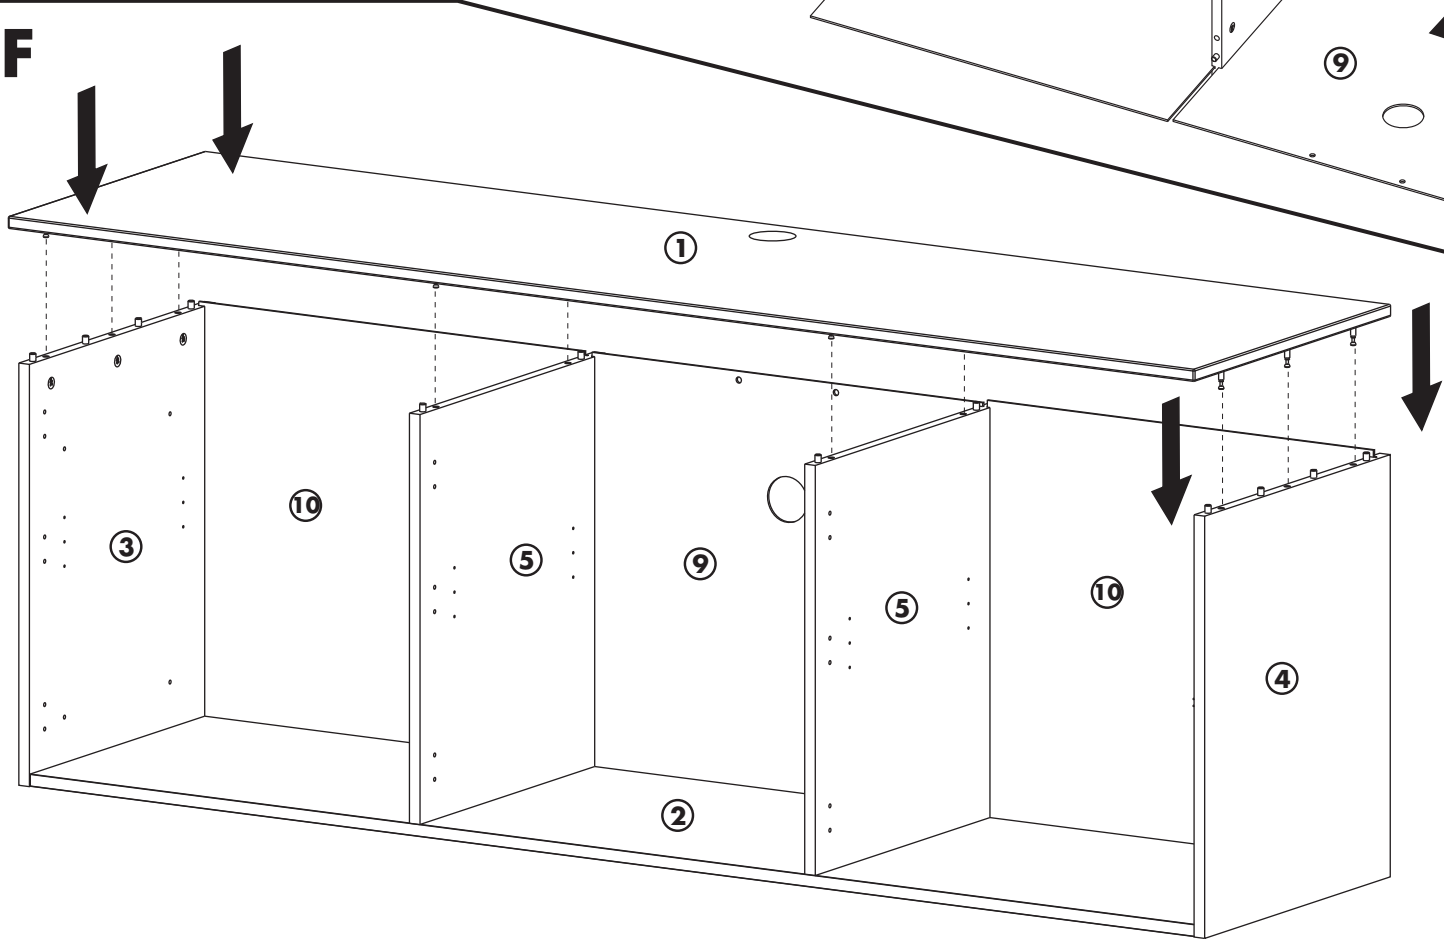


G

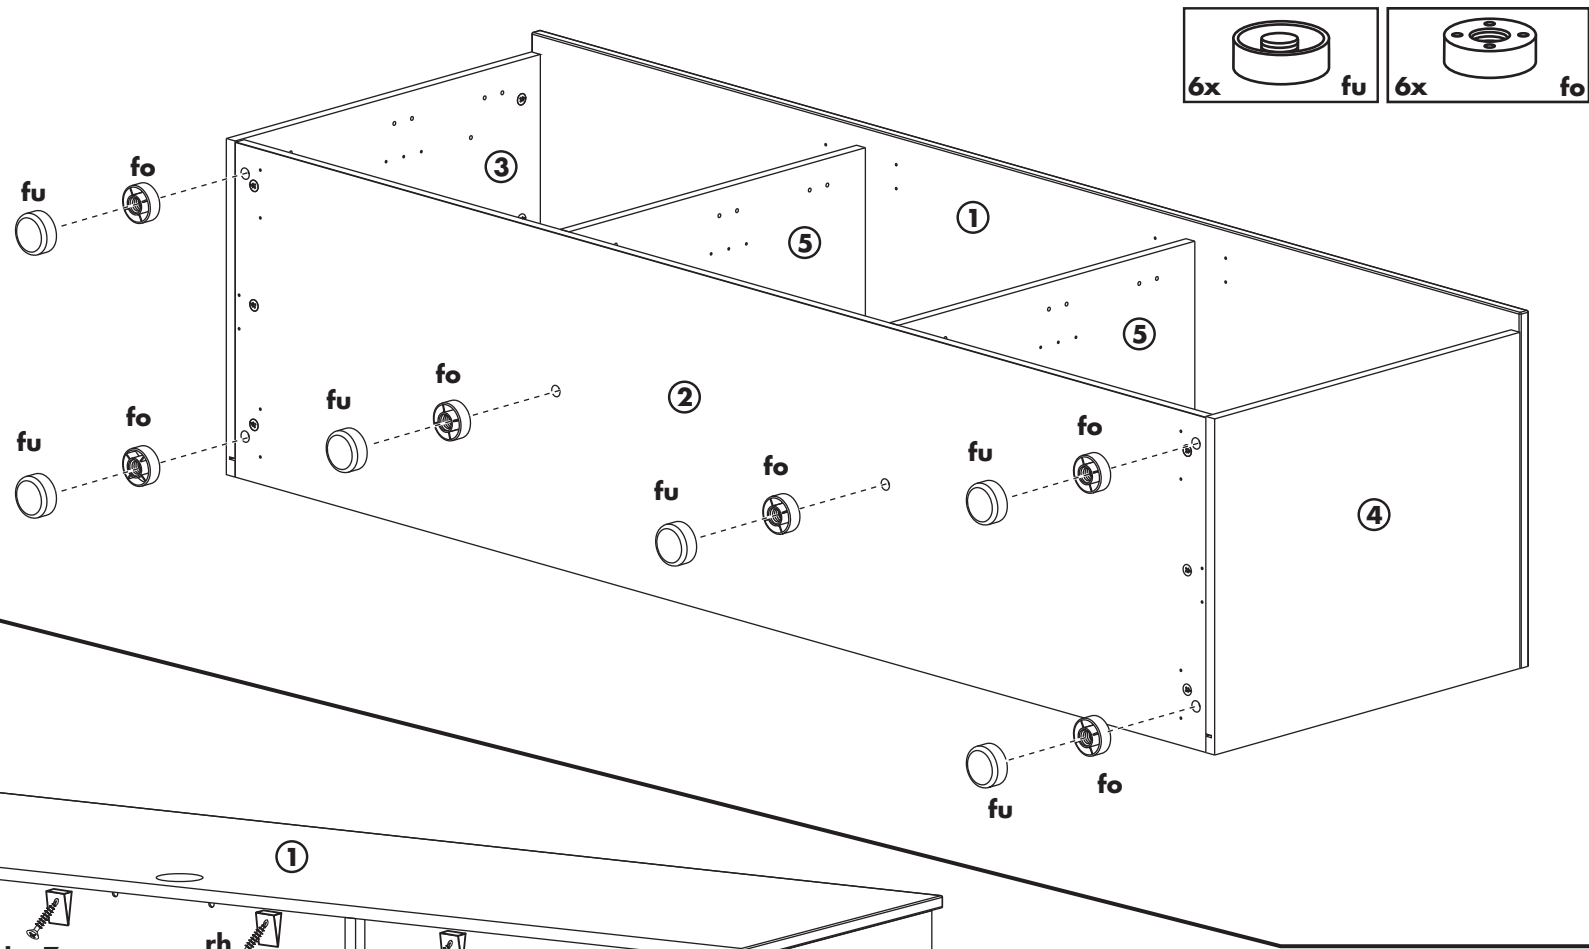


H

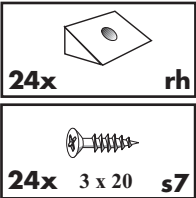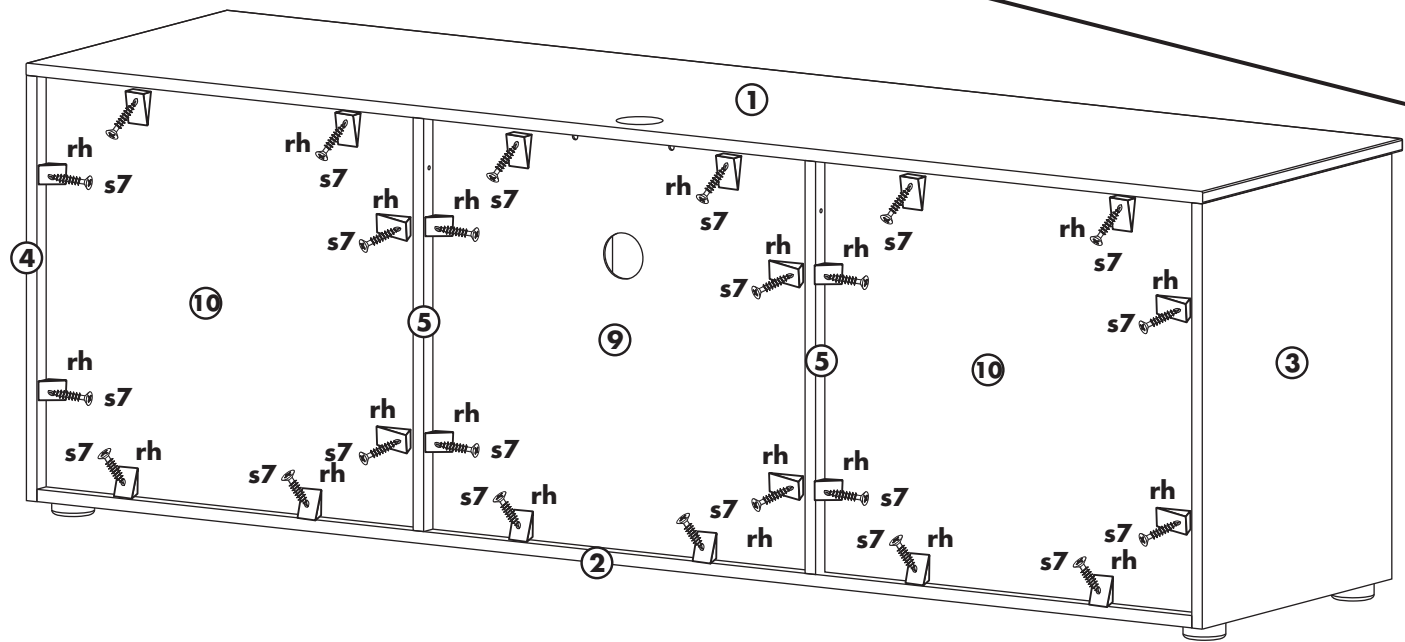

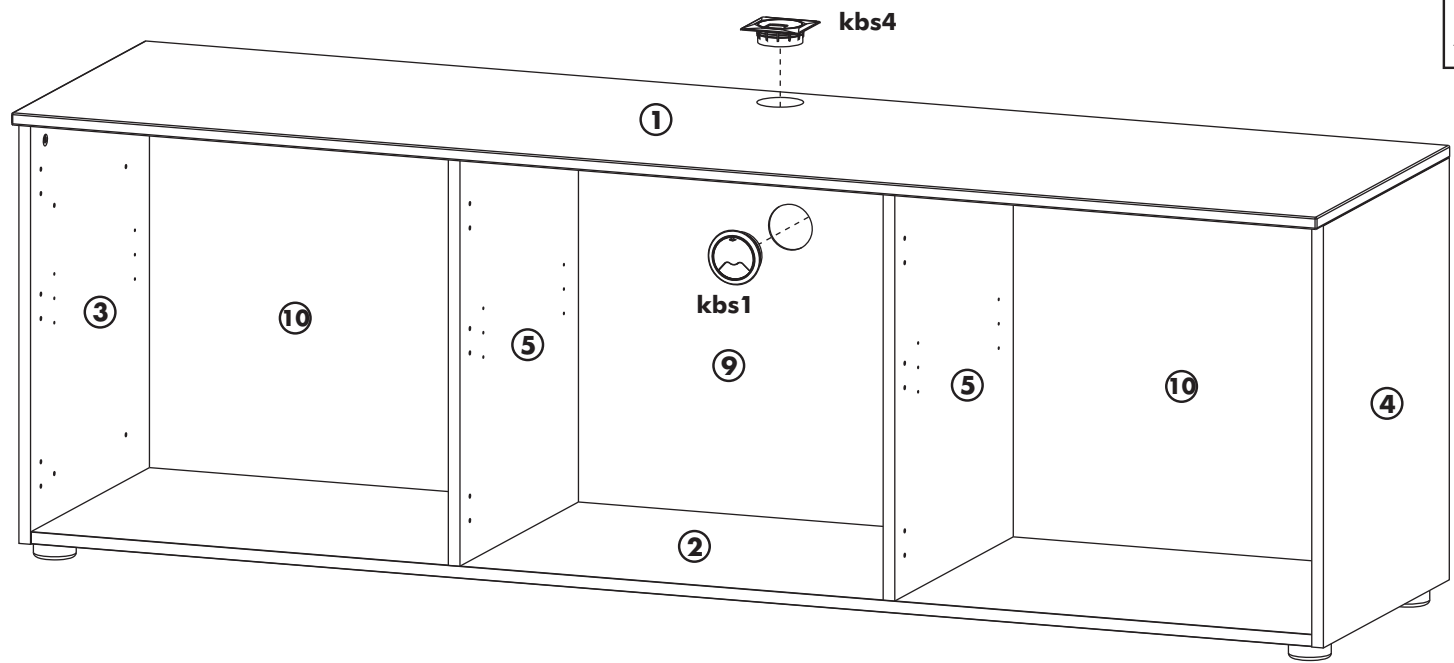


Type 100-104

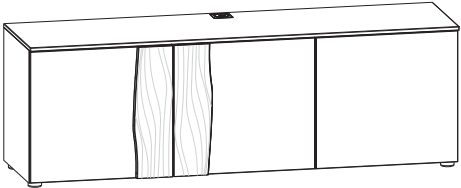

weiter mit Schritt J1
continued with step J1


Type 100-105

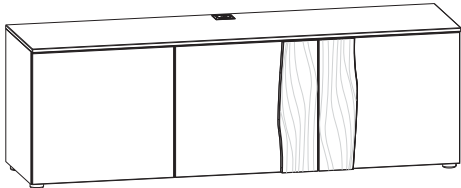




weiter mit Schritt J2
continued with step J2

J1

Type 100-104


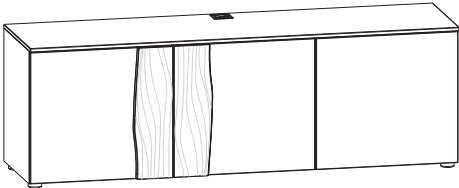


 32x ak	 2x ak1	 12x t4	 6x D 2mm d18	 3x mg5b	 3x mg5d	 3x mg5a	 6x 3 x 15 s6
--	--	---	--	---	---	---	--

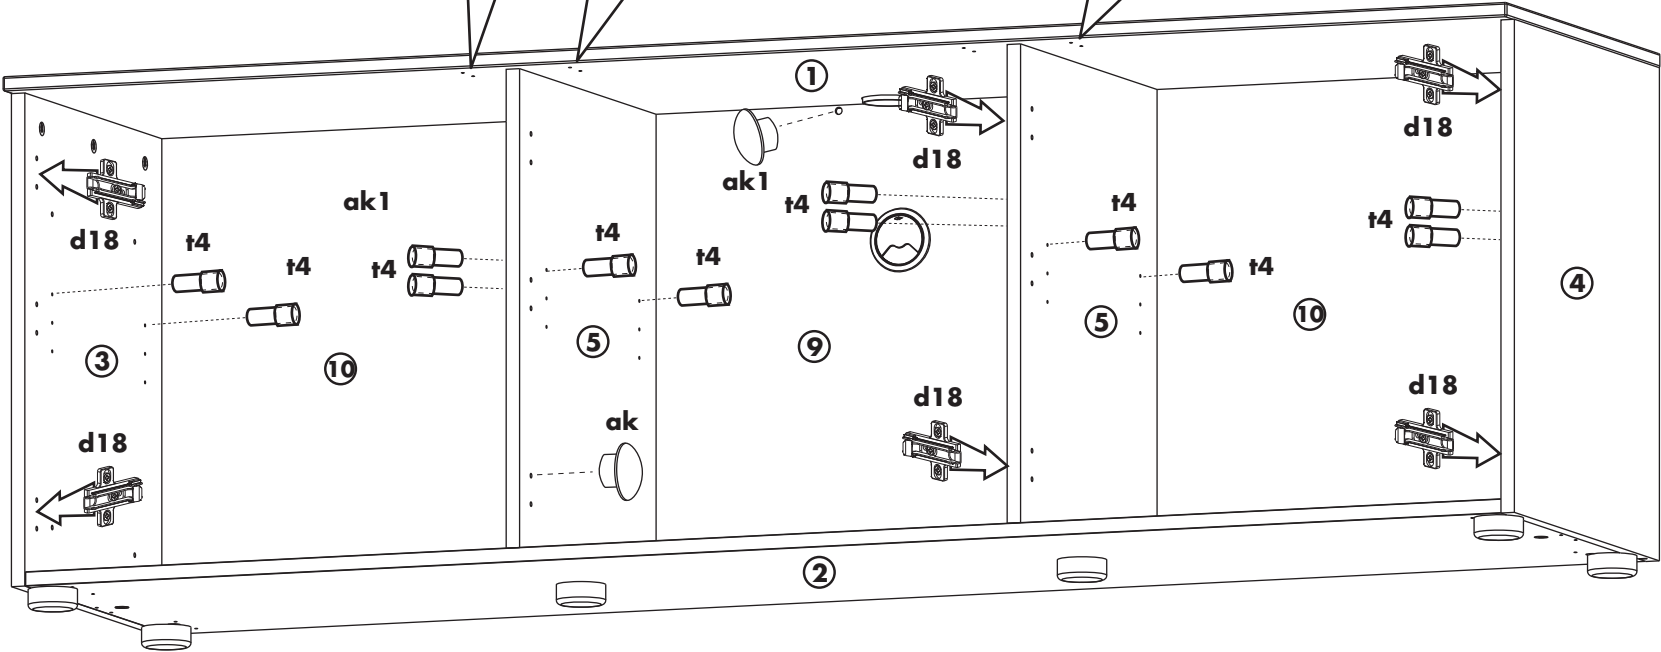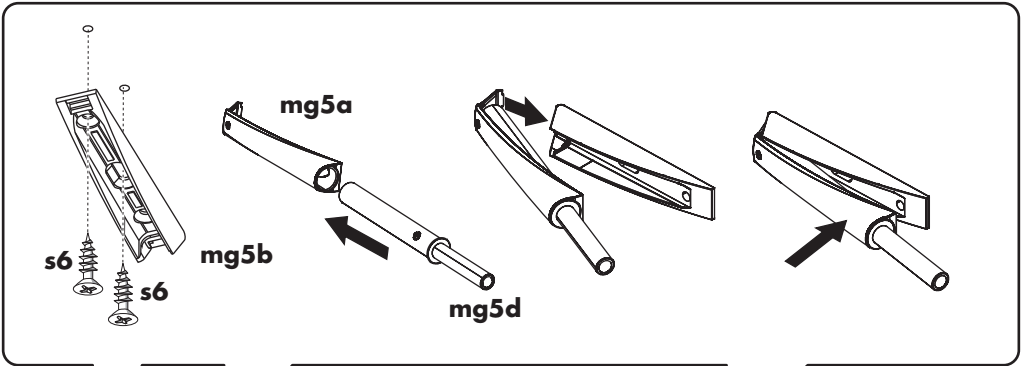




K1

Type 100-104

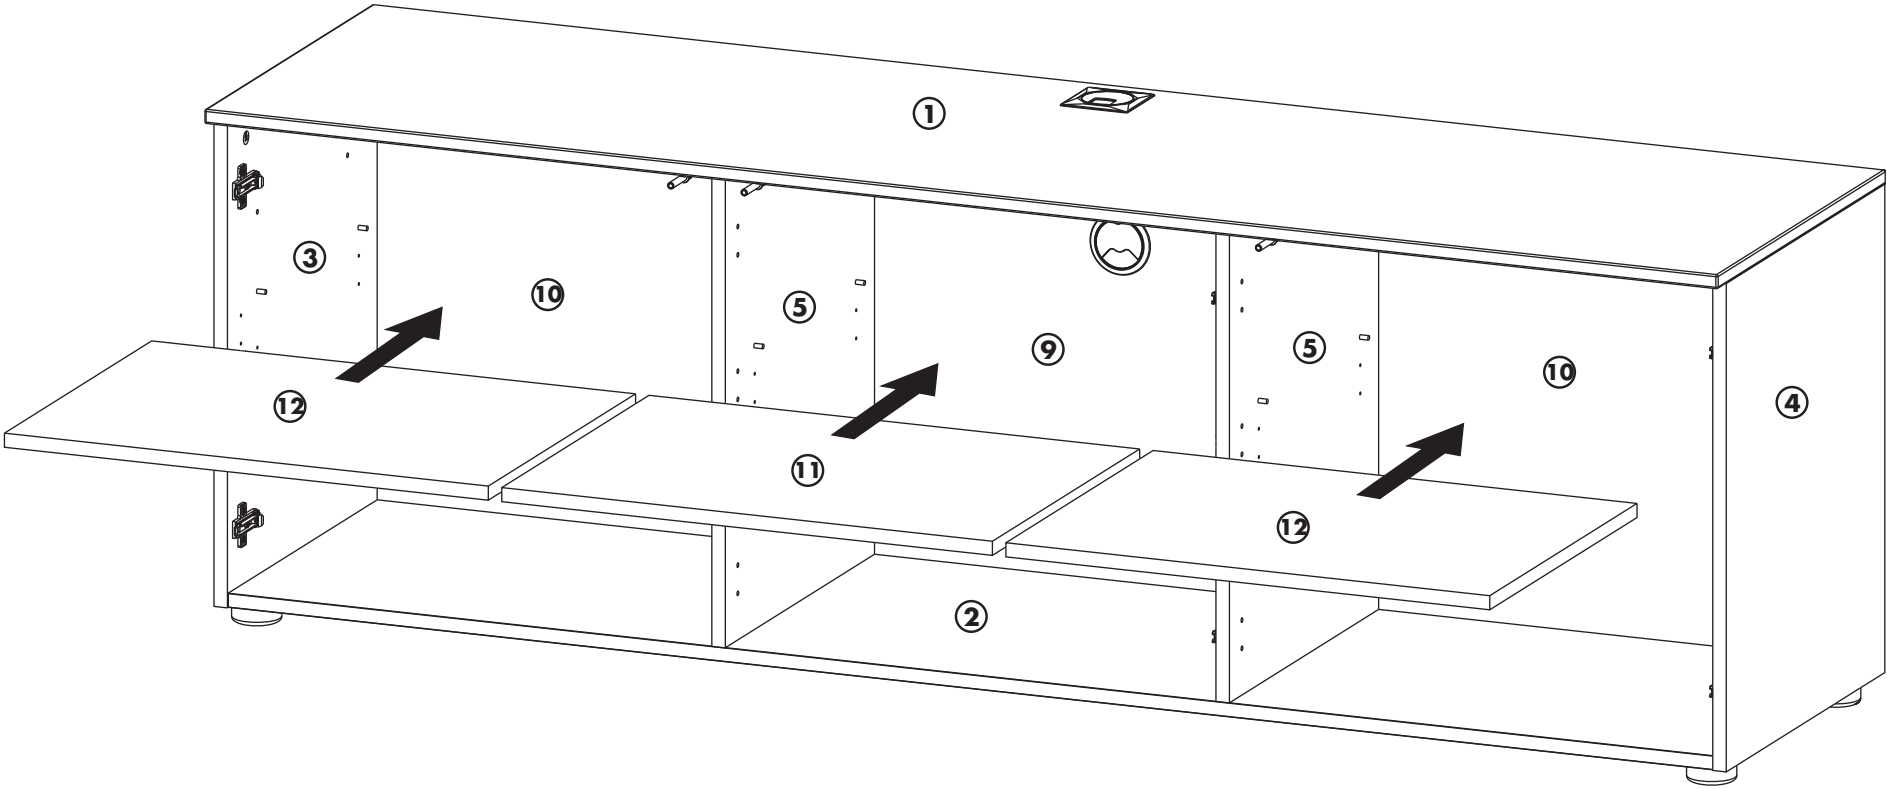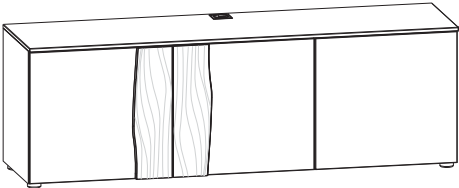











L1

Type 100-104

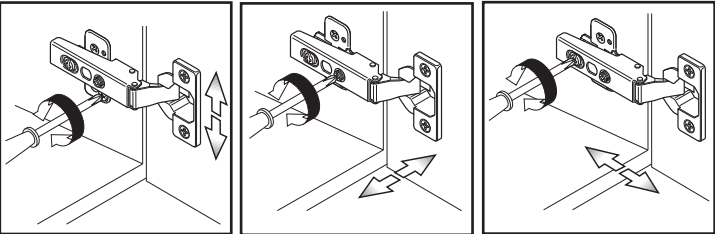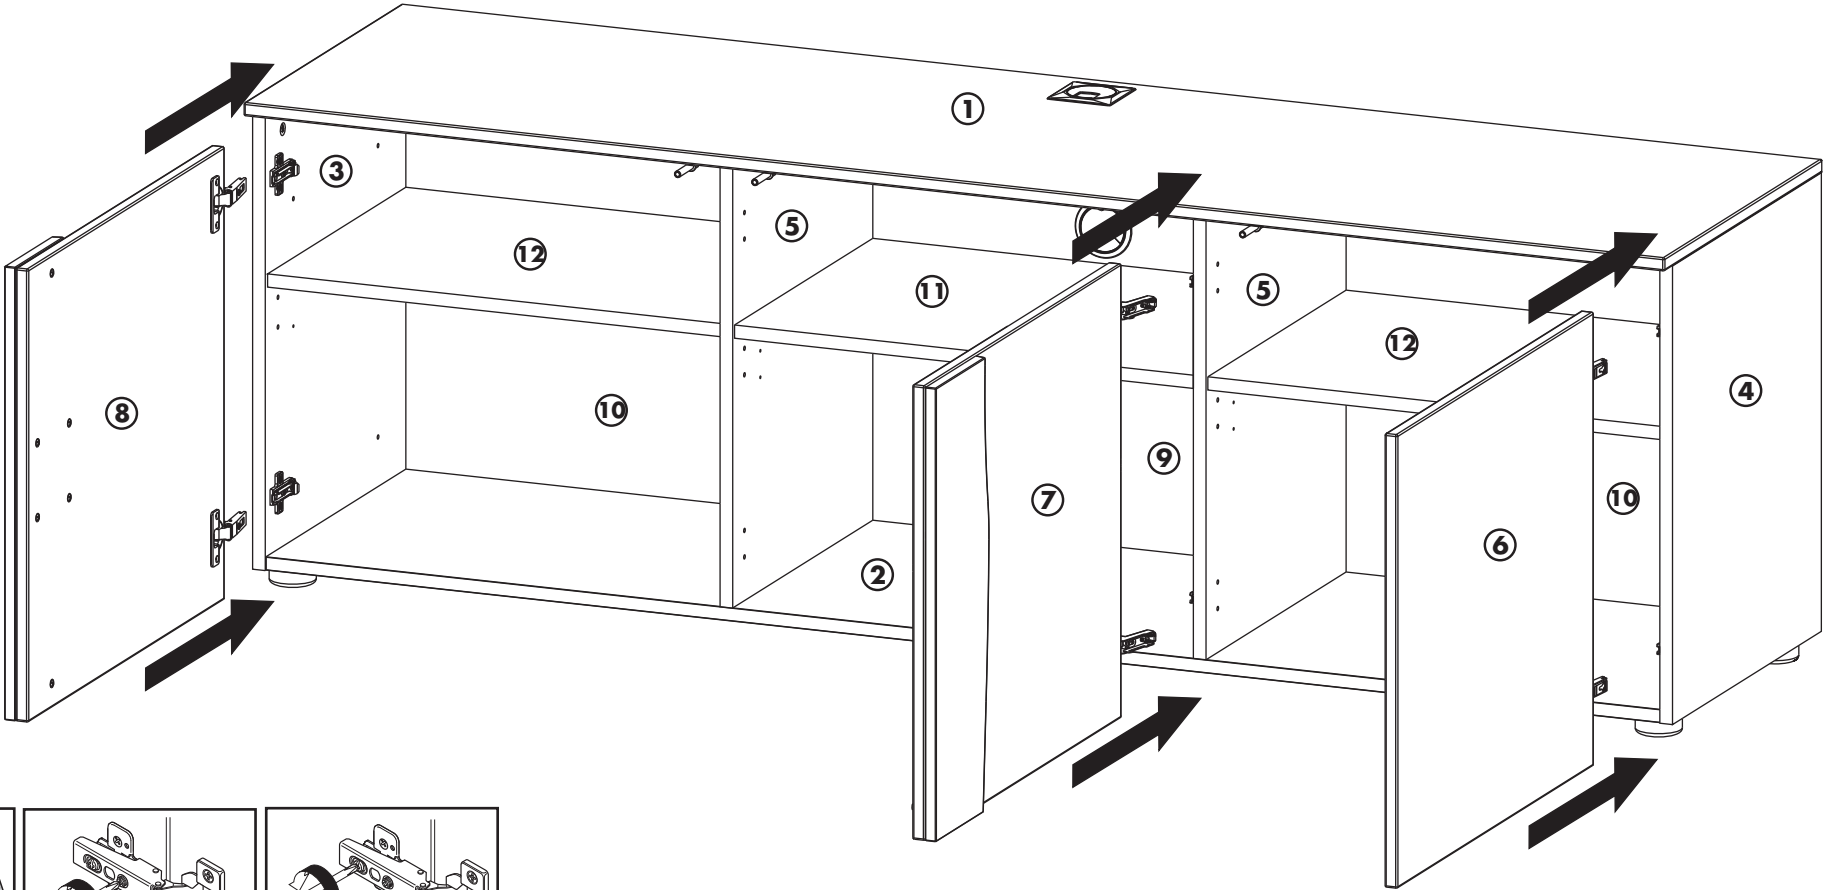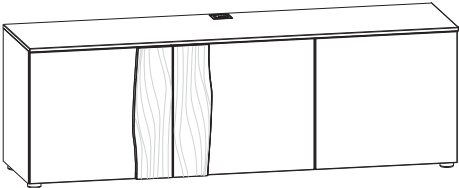



J2

Type 100-105

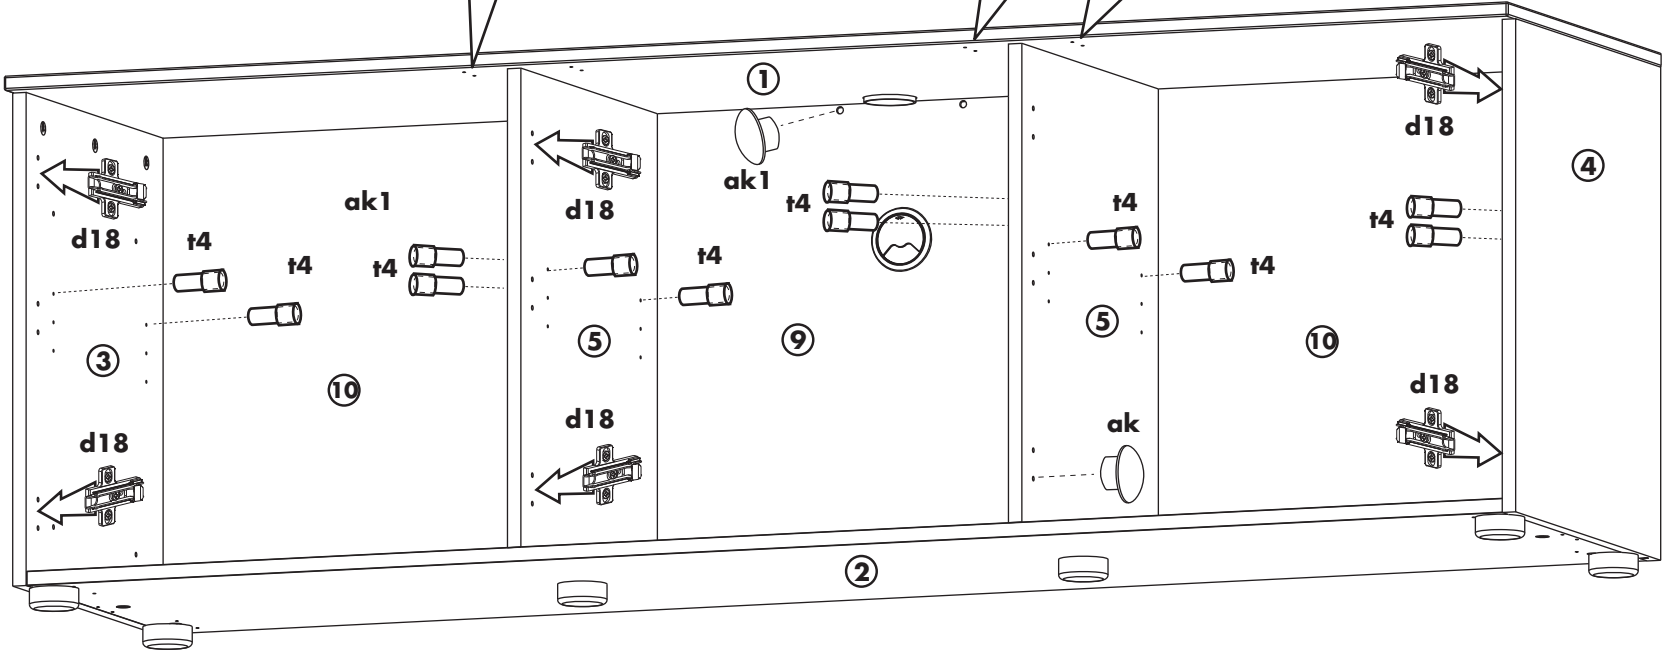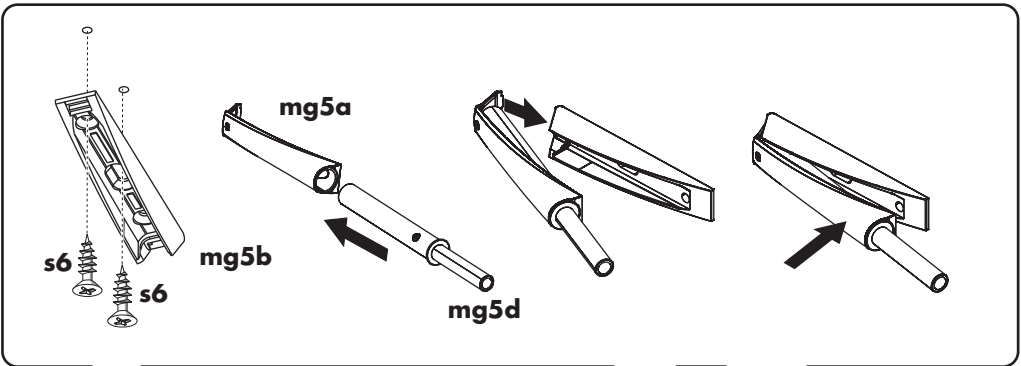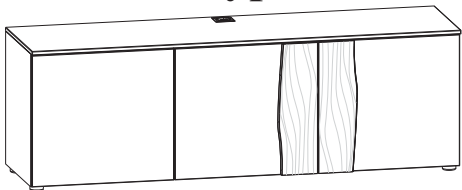

K2

Type 100-105

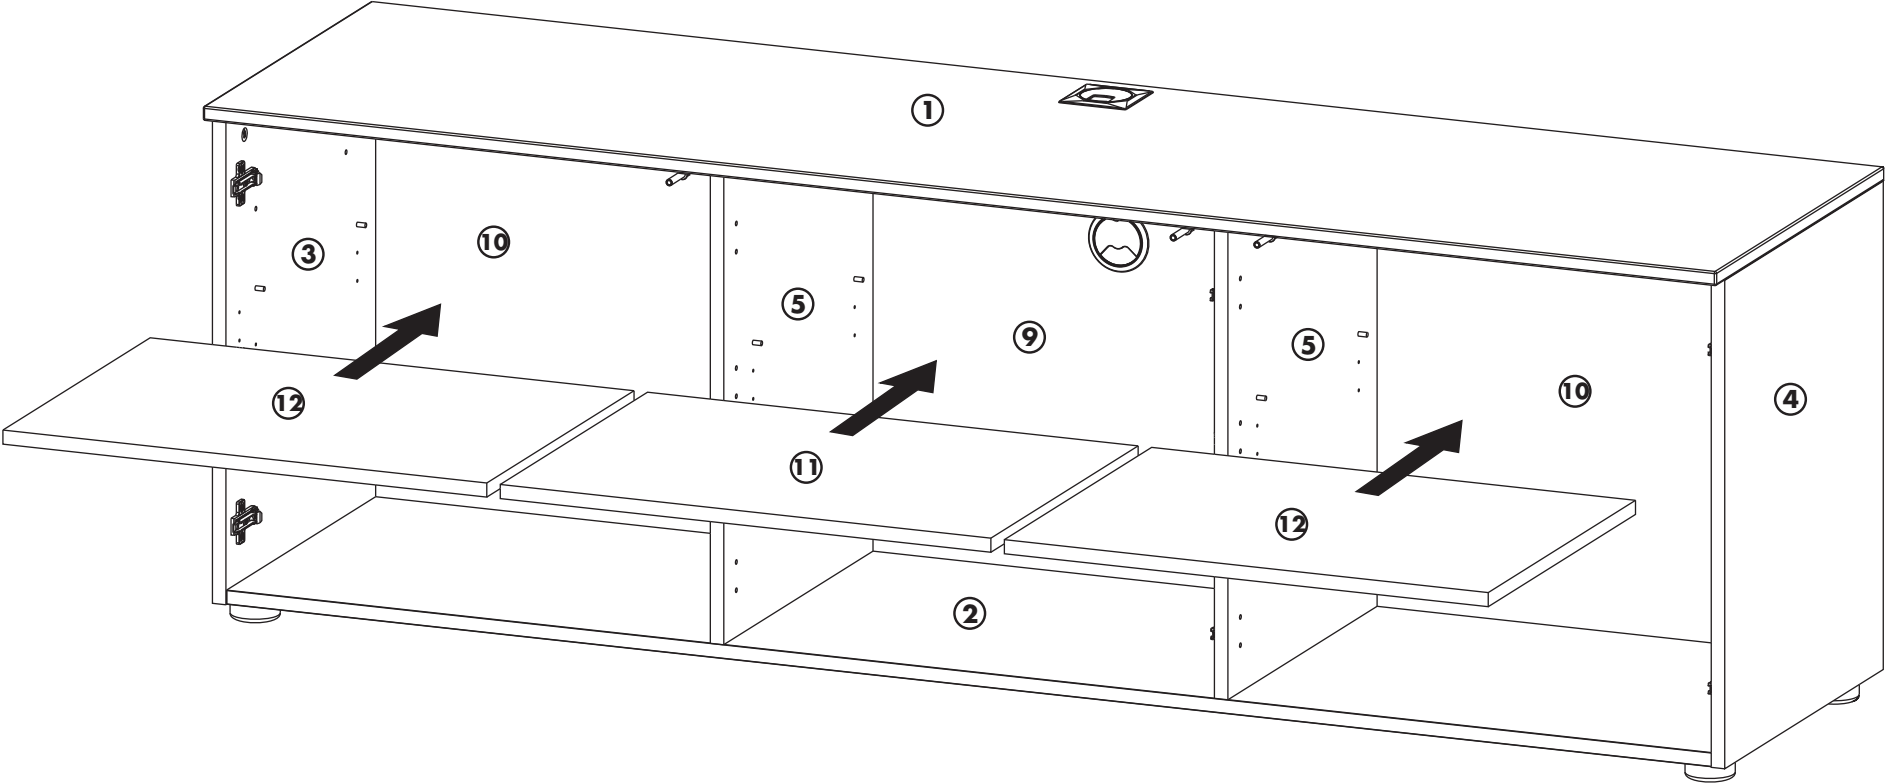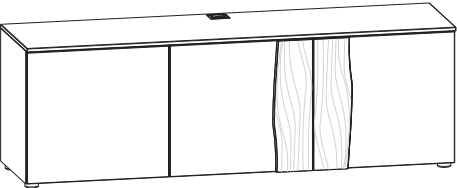

L2

Type 100-105

