




## Type 100-106

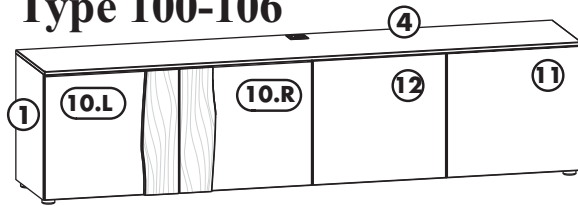


Sie brauchen:  
You need:

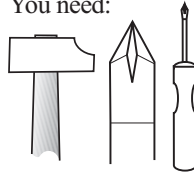

## Type 100-107

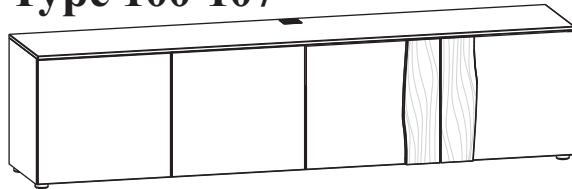

## Type 100-113

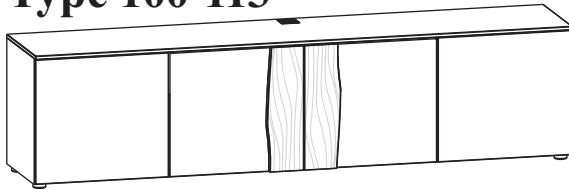

### Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

### Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

### Beschlagliste Fittings


|                     |                      |                    |                   |                   |
|---------------------|----------------------|--------------------|-------------------|-------------------|
| <br>4x 4,0 x 27 rw7 | <br>16x 5 mm 3 mm t4 | <br>4x mg5b        | <br>4x mg5d       | <br>4x mg5a       |
| <br>6x a1           | <br>18x a4           | <br>24x e2         | <br>8x 3 x 15 s6  | <br>32x 3 x 20 s7 |
| <br>7x fu           | <br>7x fo            | <br>8x M4 x 21 gs6 | <br>16x 4 x 16 s4 | <br>32x rh        |

CAD und Design  
Light Line 15 100\_106 / 01.26

### Beschlagliste Fittings


|                      |                       |                   |            |
|----------------------|-----------------------|-------------------|------------|
| <br>44x 8 mm 5 mm ak | <br>4x 13 mm 8 mm ak1 | <br>8x D 2mm d18  | <br>4x c16 |
| <br>2x kbs1          | <br>1x kbs4           | <br>28x 8 x 40 p1 | <br>4x c17 |

## A1

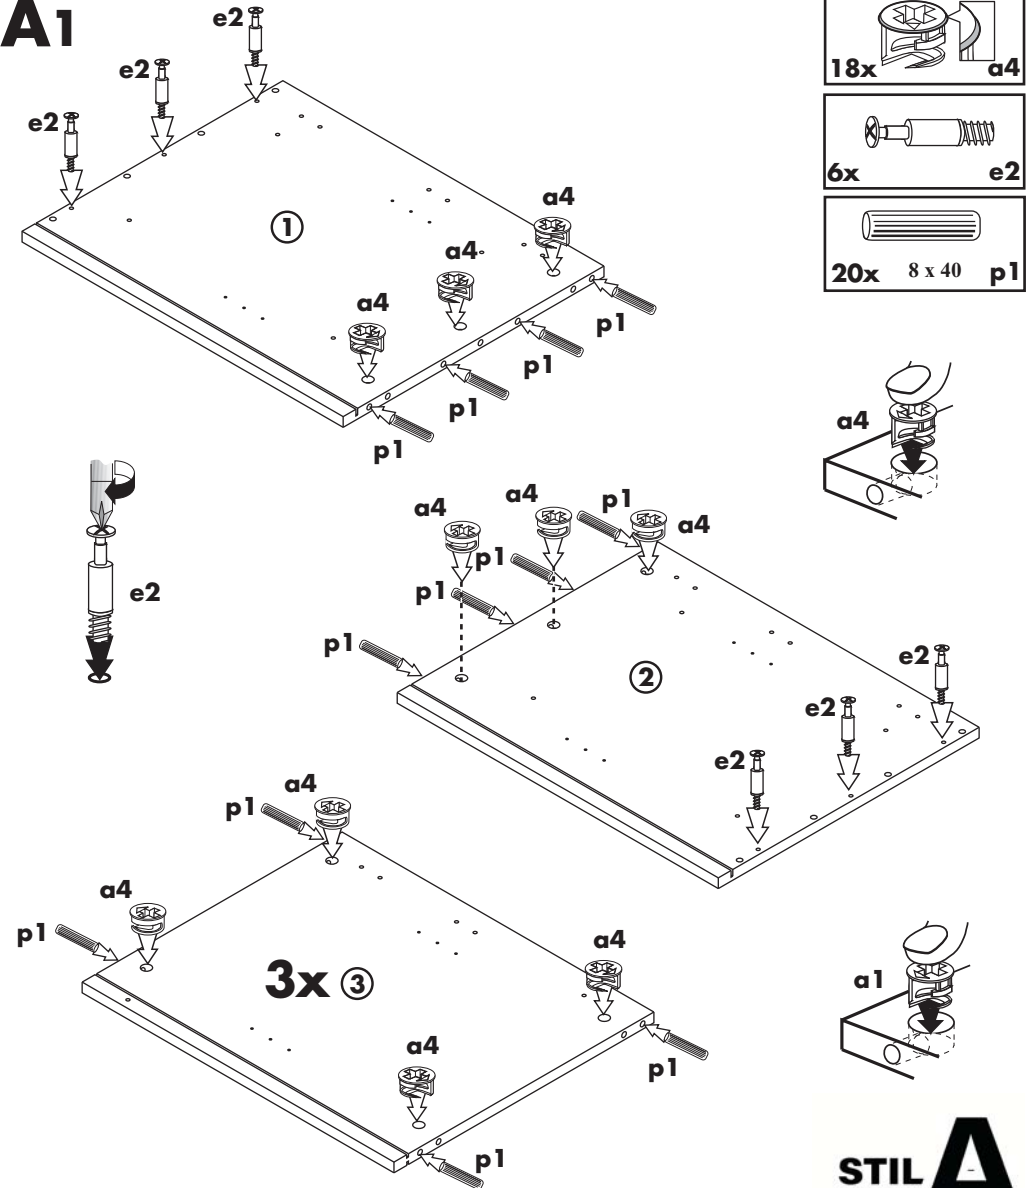


**STIL**  
Wohnfabrik **A**


A2

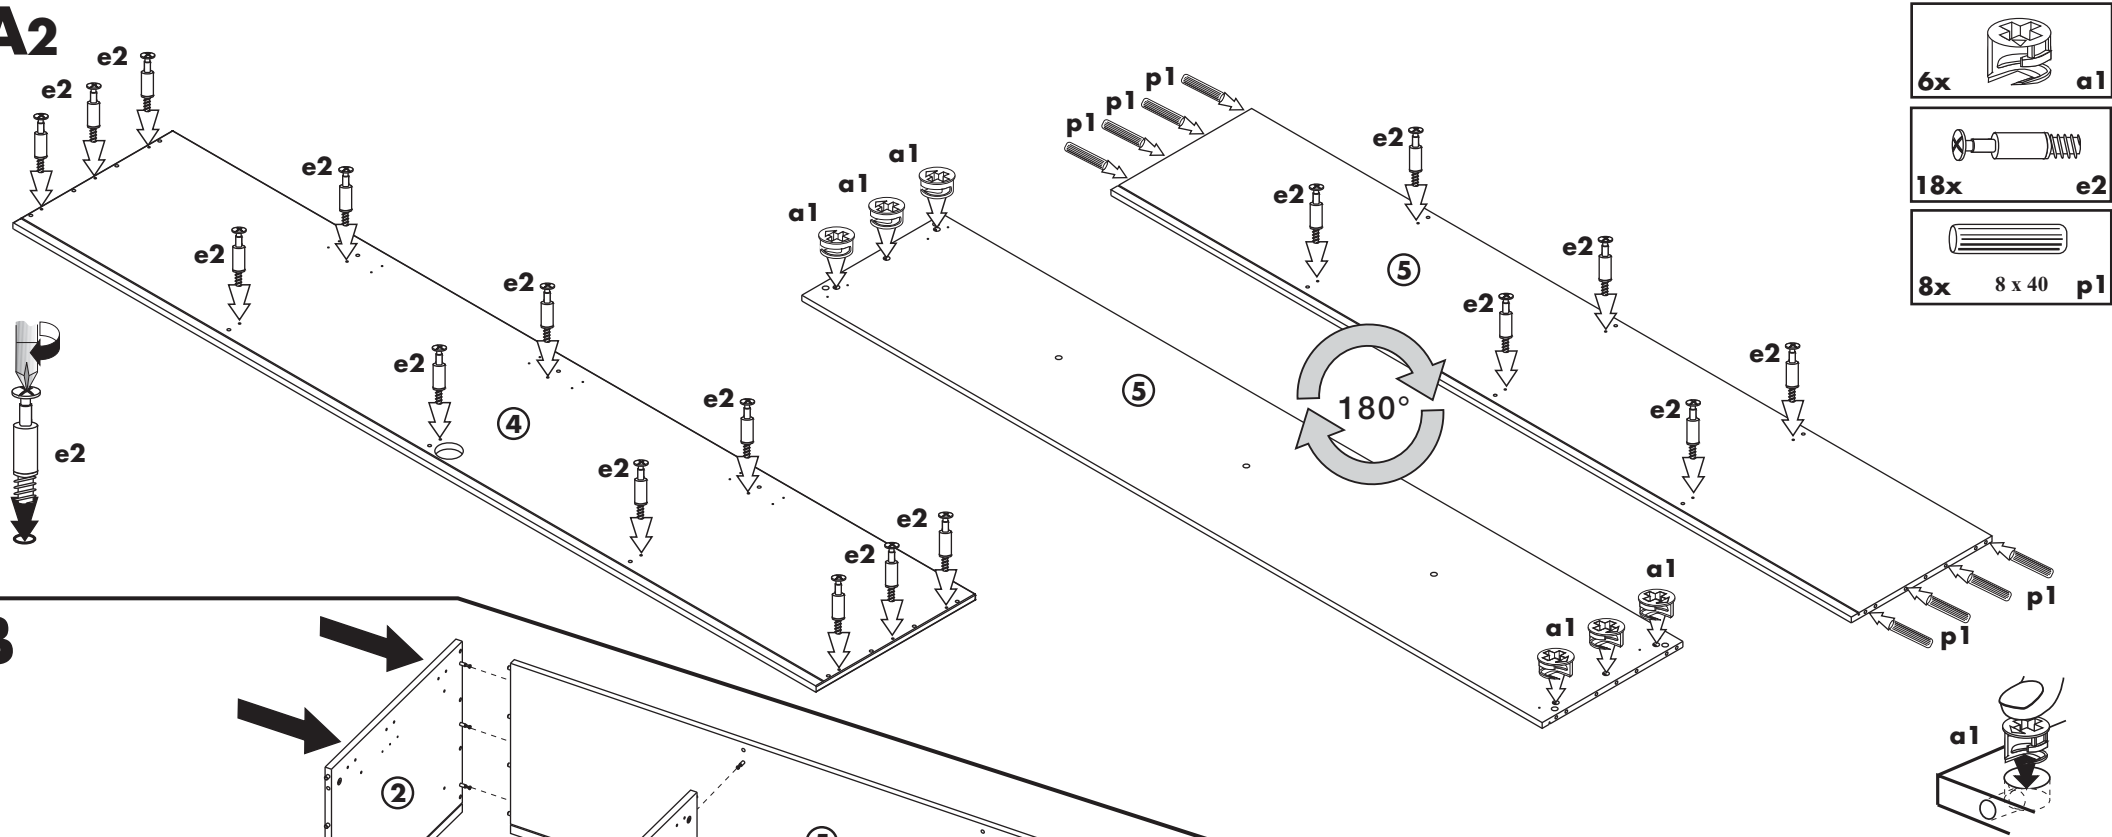




B

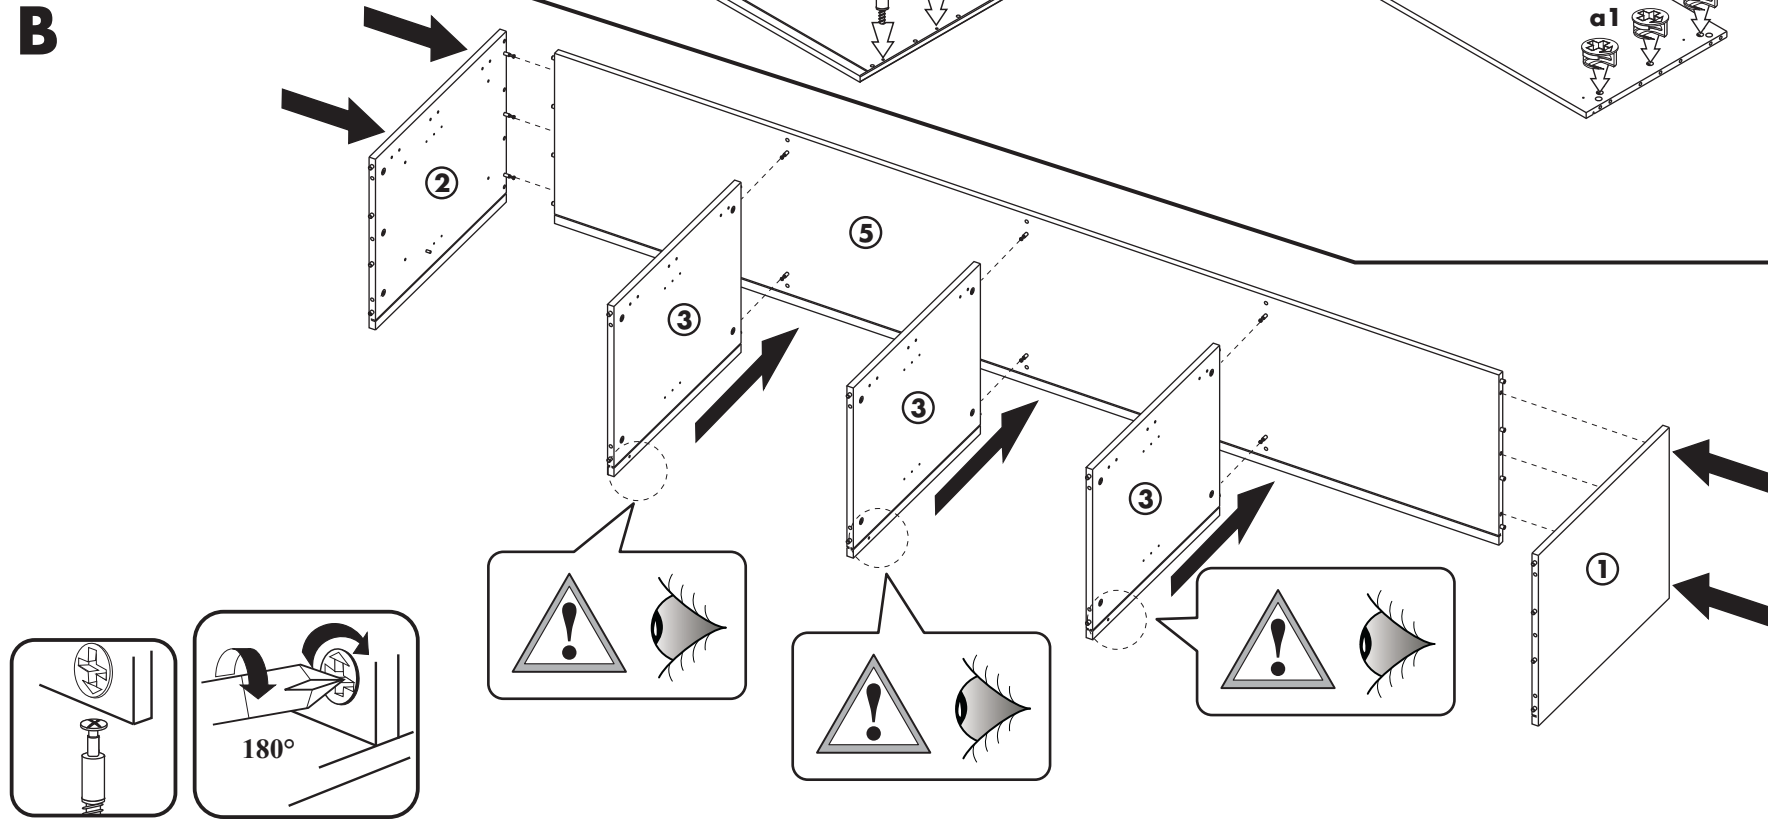



C

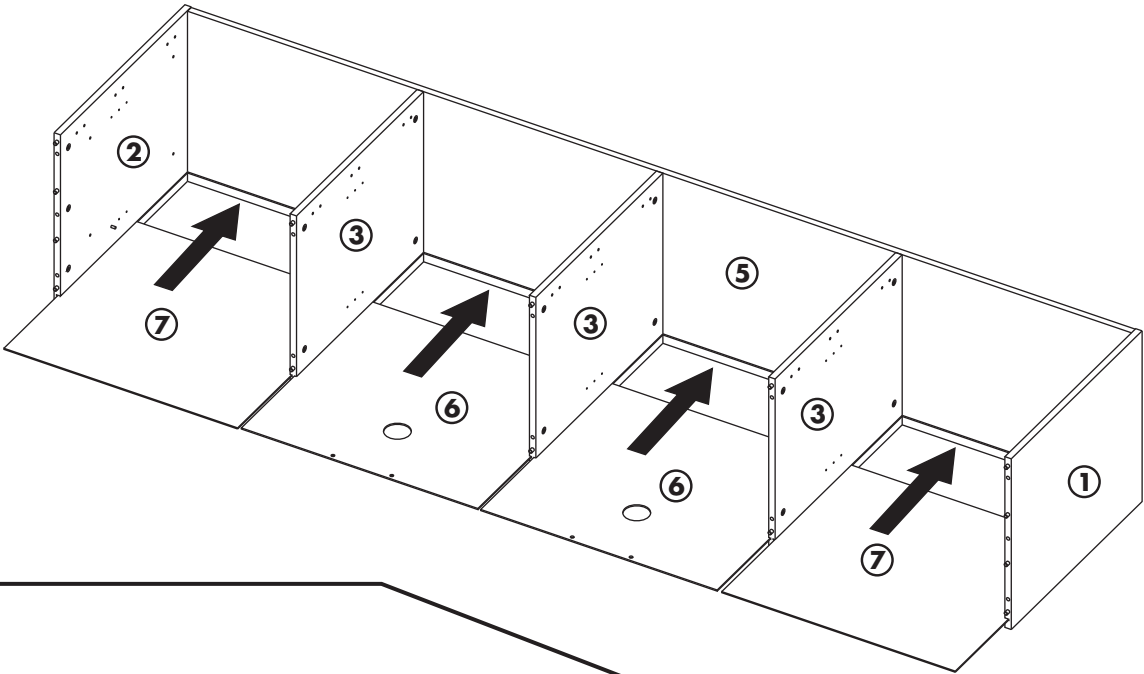


D

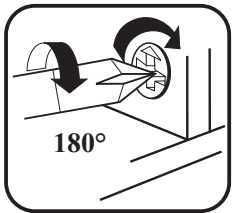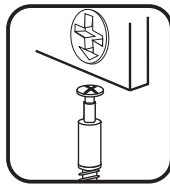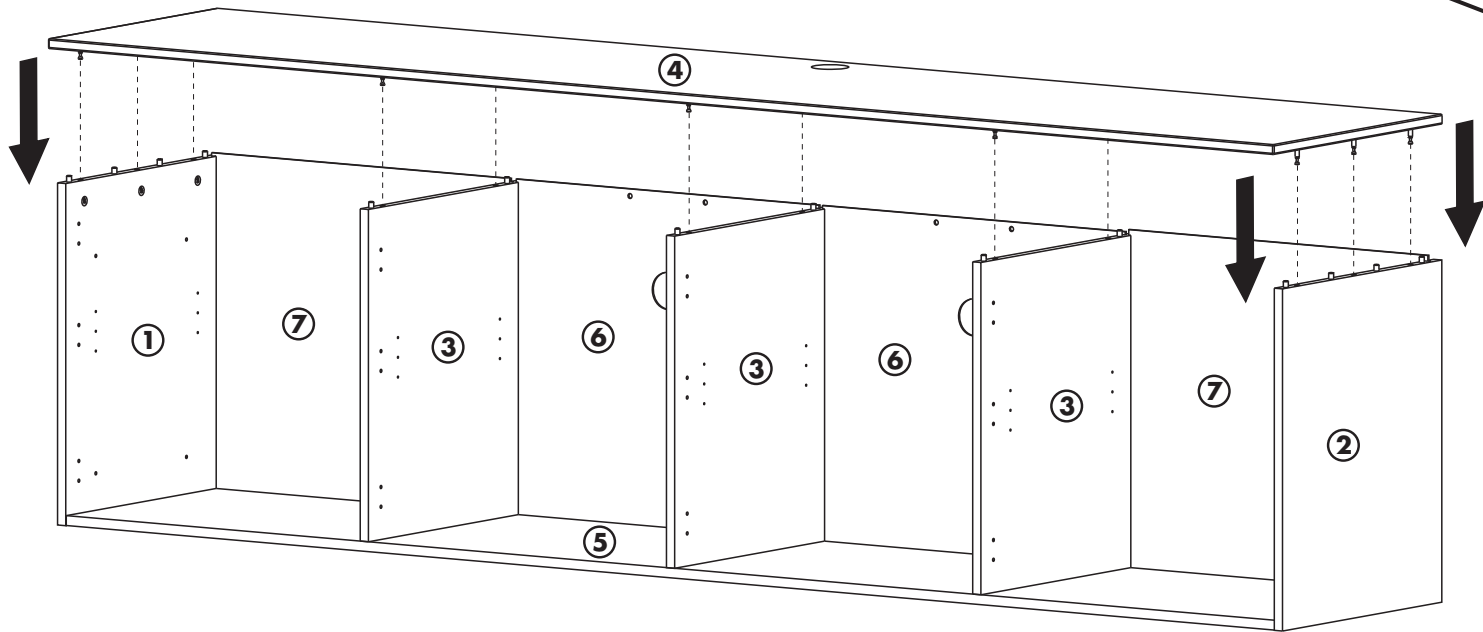


E

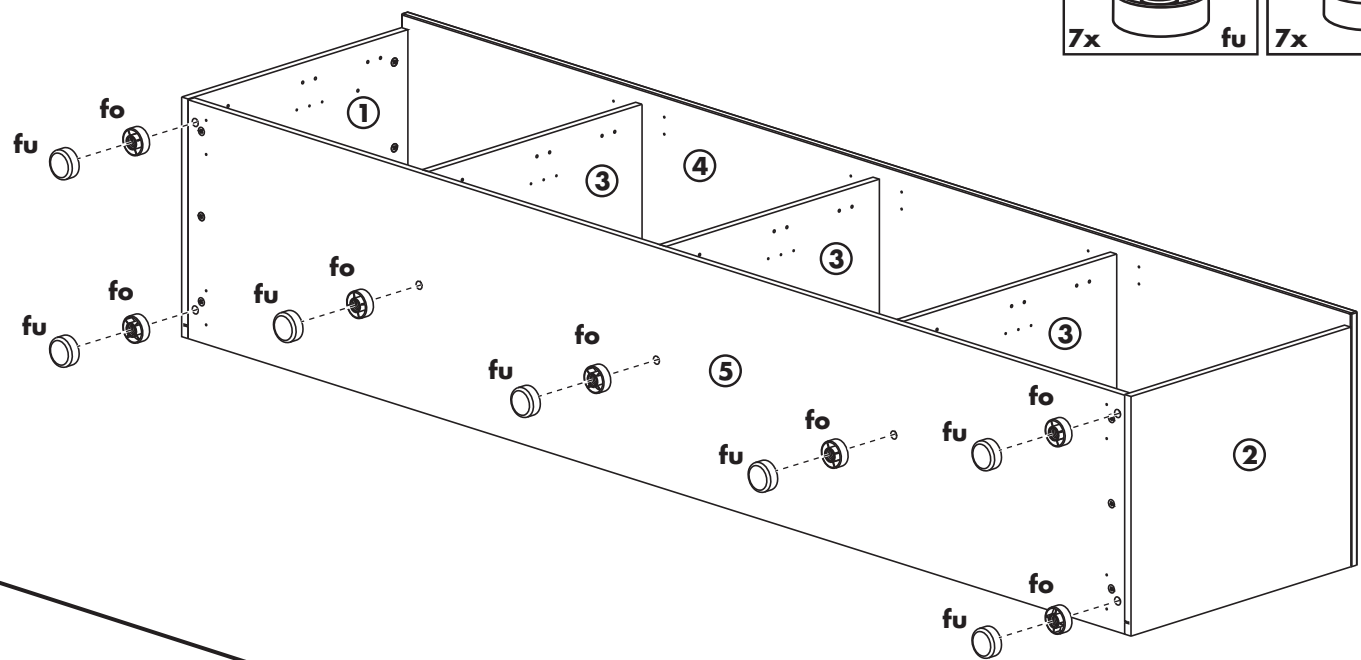

F

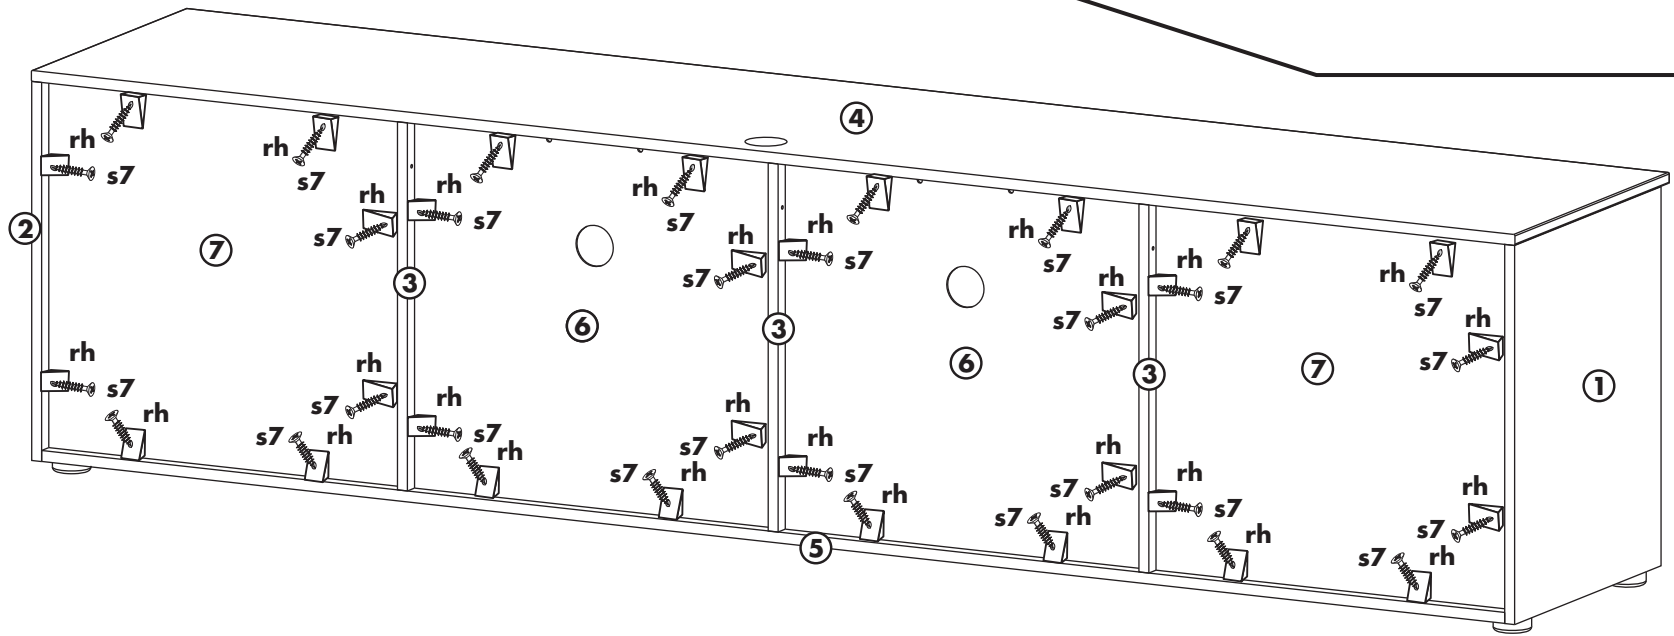

G

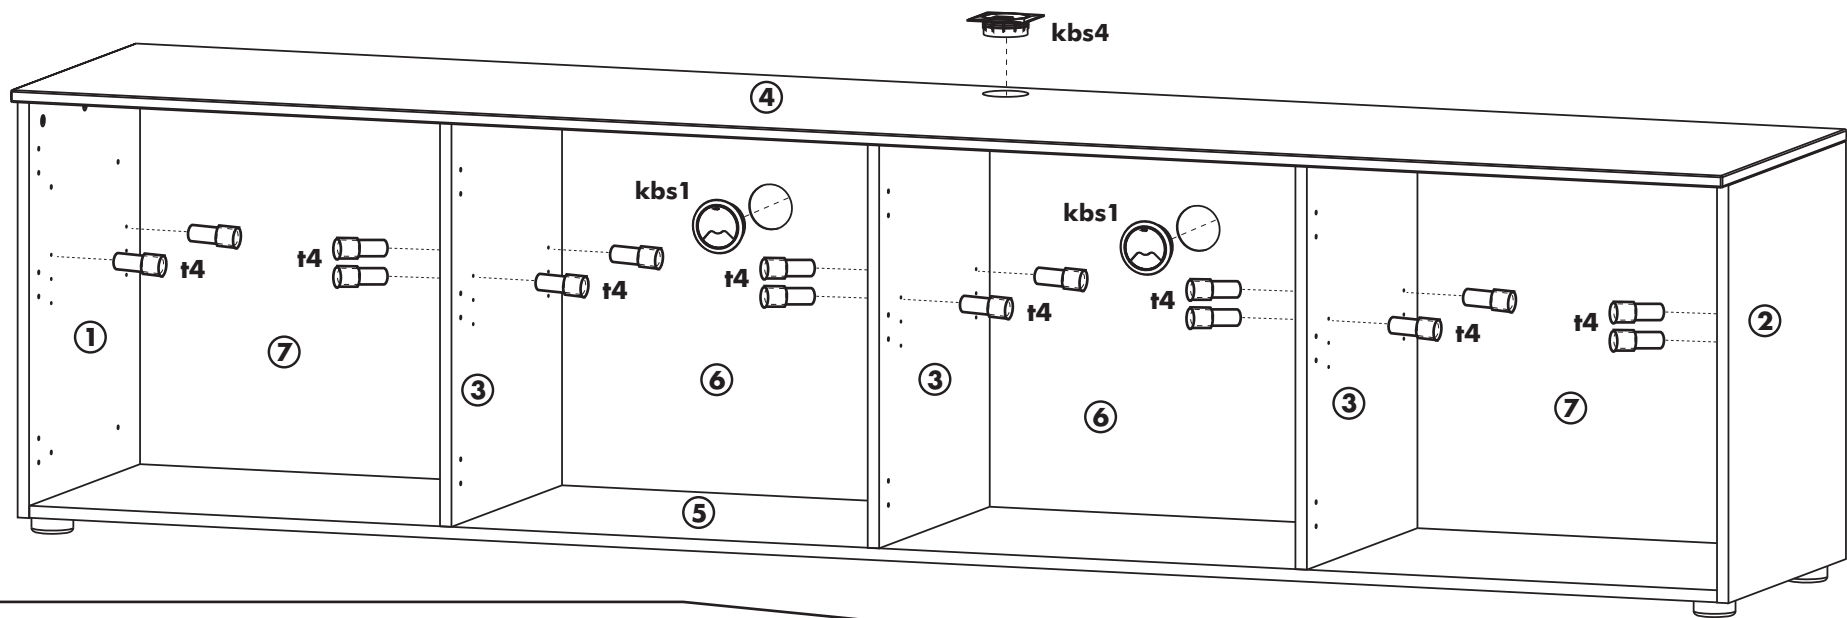


Ø5 mm Ø3 mm  
16x t4


2x kbs1

1x kbs4

H

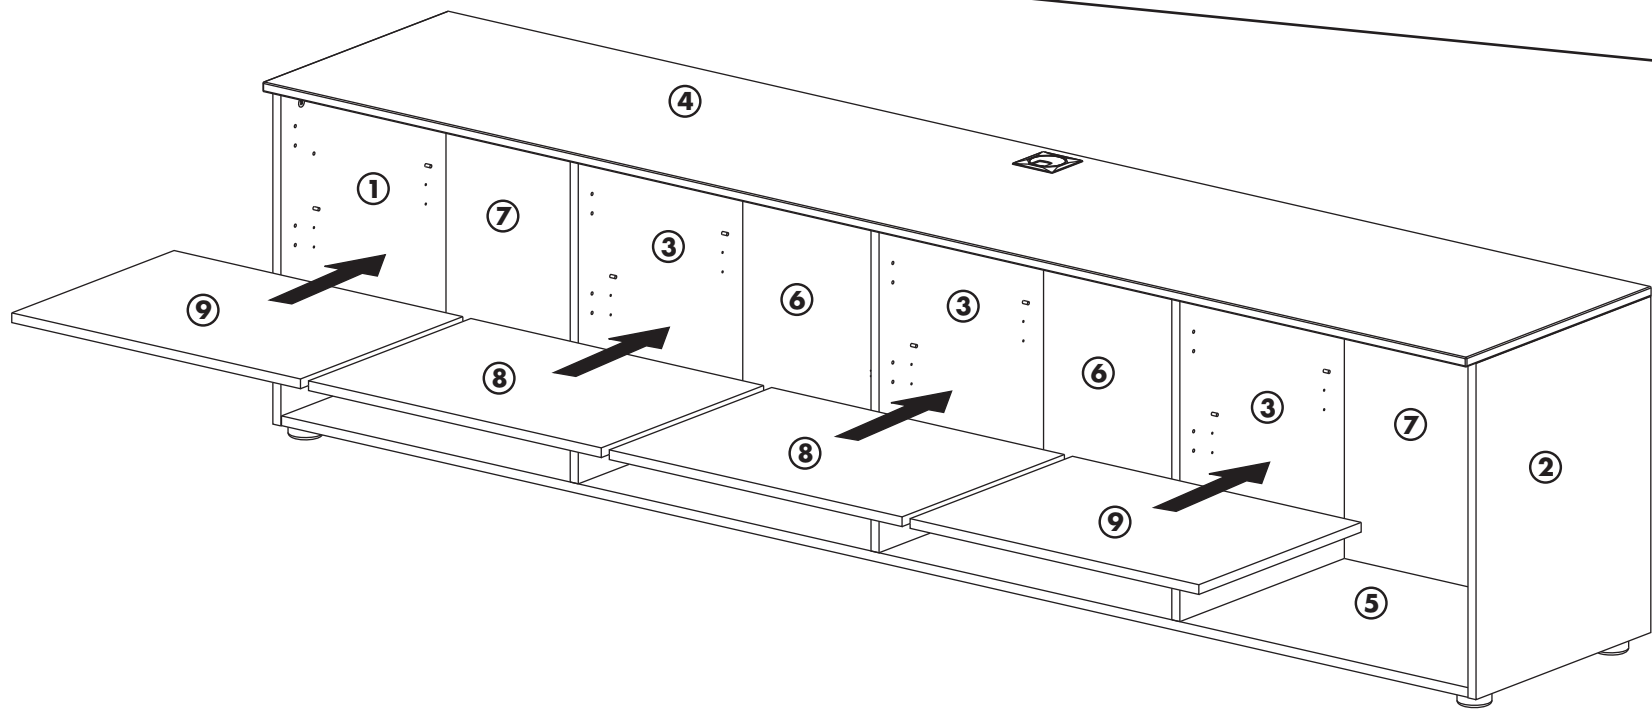


**Type 100-106**

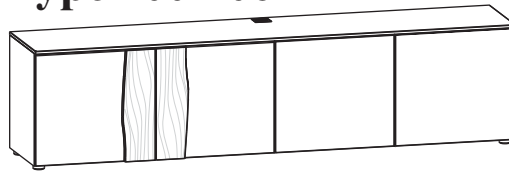

**weiter mit Schritt I1  
continued with step I1**

**Type 100-107**

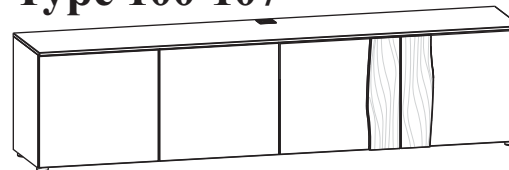

**weiter mit Schritt I2  
continued with step I2**









**Type 100-113**



**weiter mit Schritt I3  
continued with step I3**


11

Type 100-106

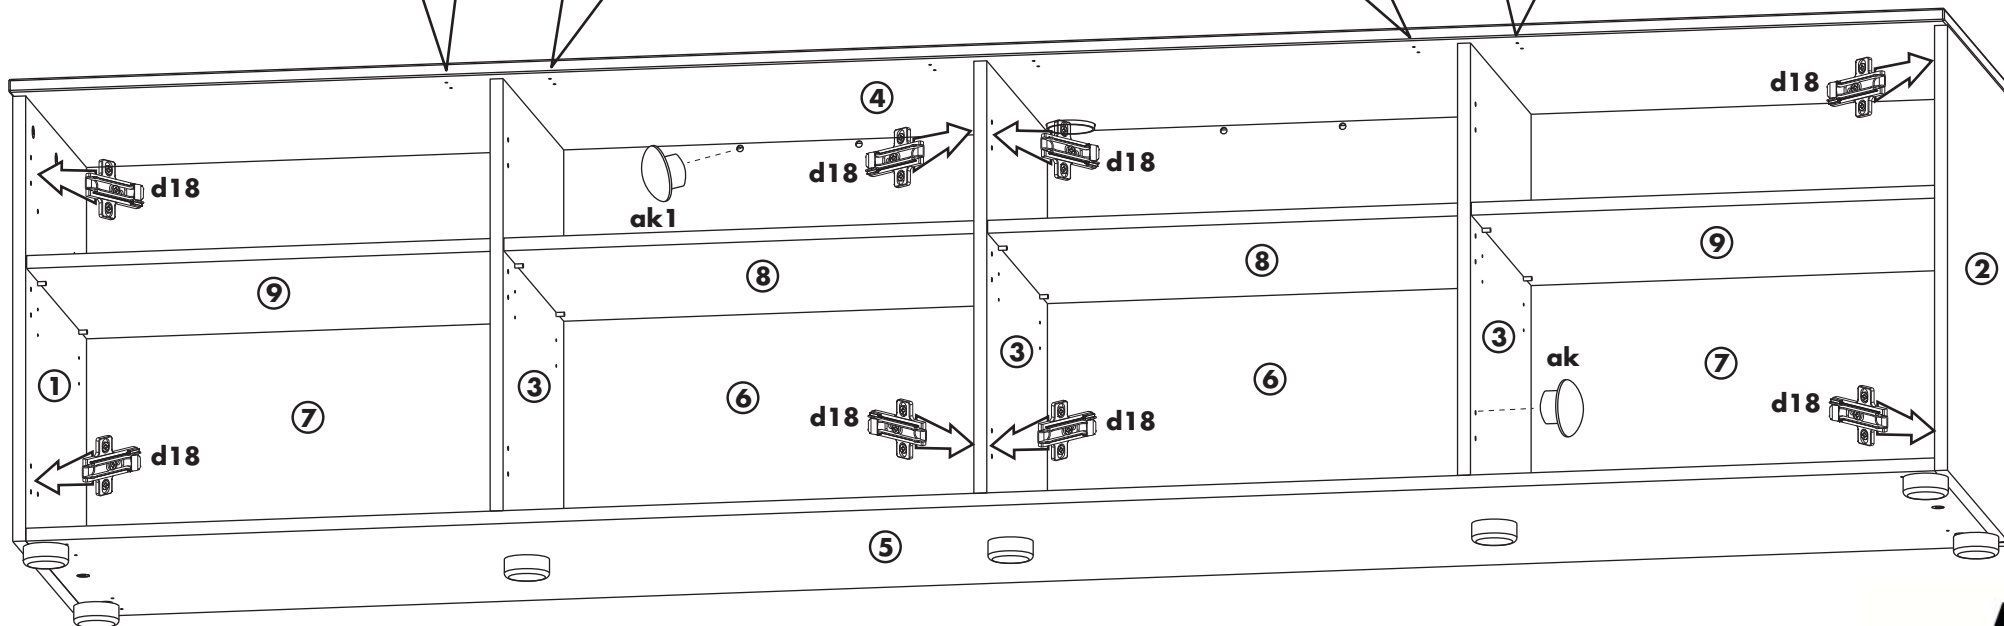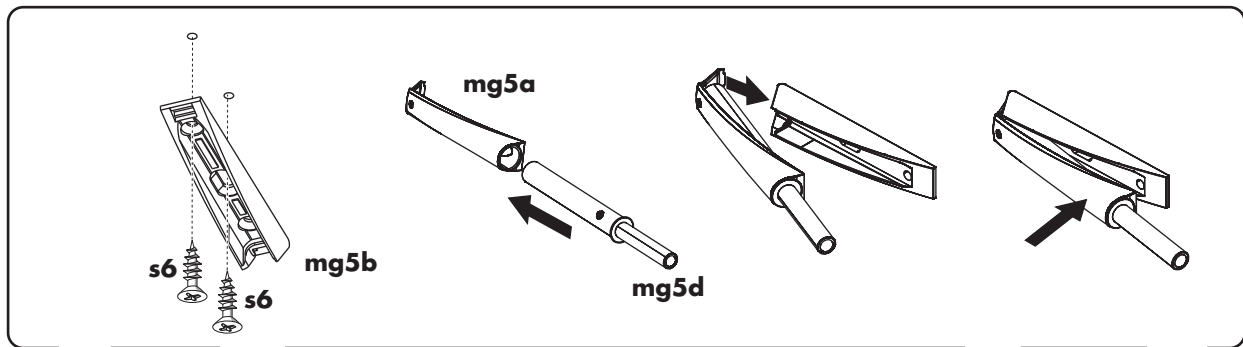



# J1

## Type 100-106





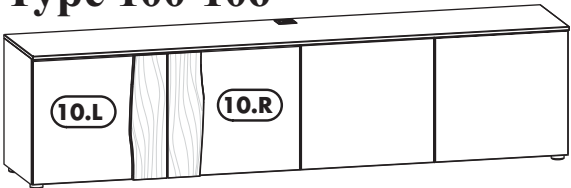


|    |  |     |    |          |     |
|----|--|-----|----|----------|-----|
| 2x |  | c16 | 8x | 4 x 16   | s4  |
| 2x |  | c17 | 8x | M4 x 21  | gs6 |
| 4x |  | rw7 | 4x | 4,0 x 27 | rw7 |


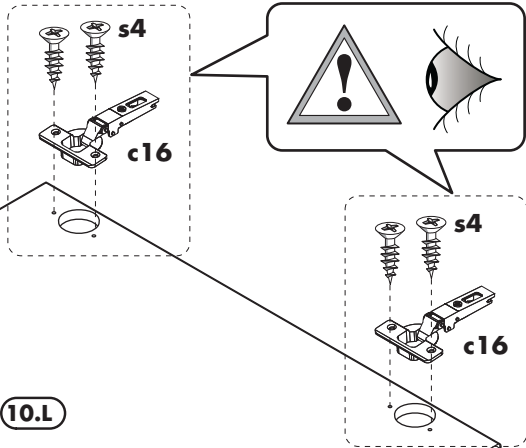
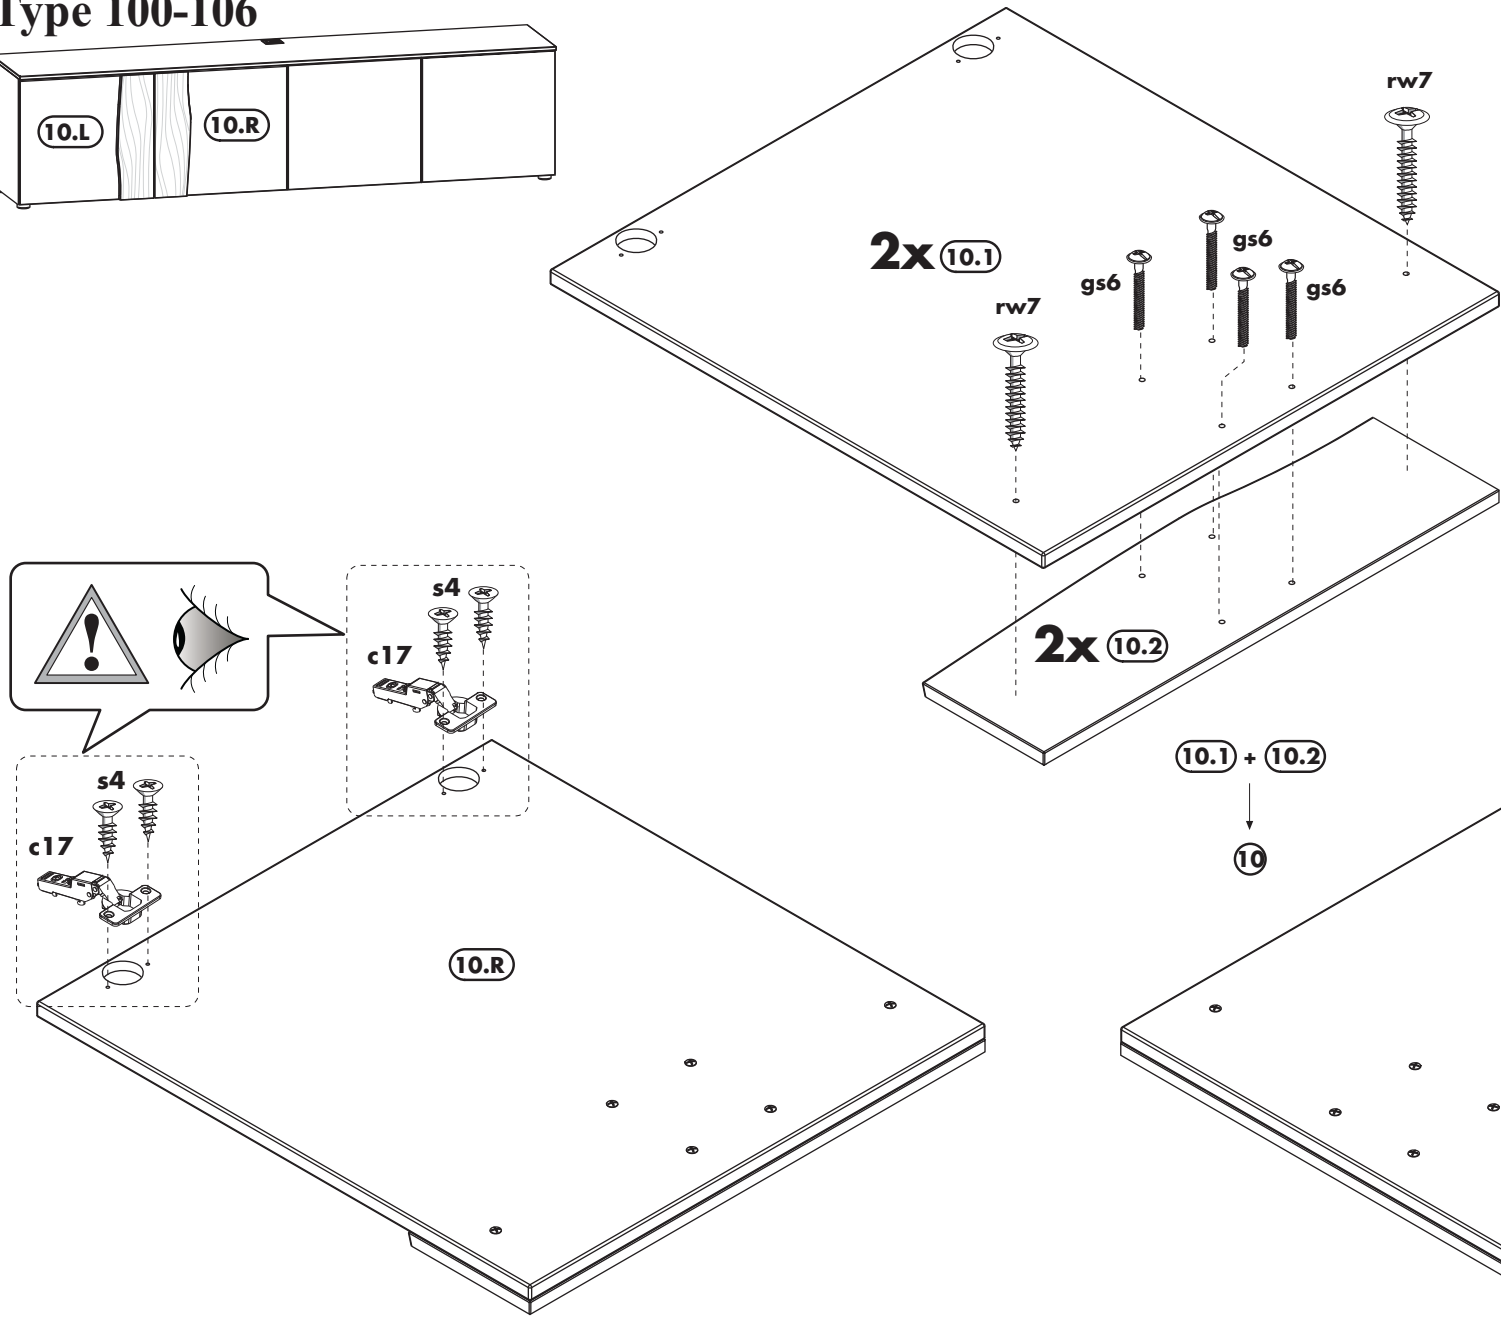


**K1**

**Type 100-106**






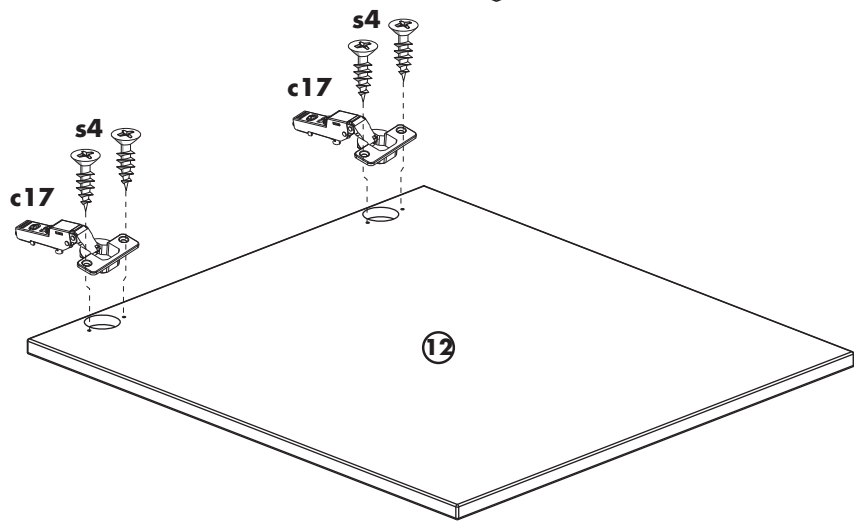
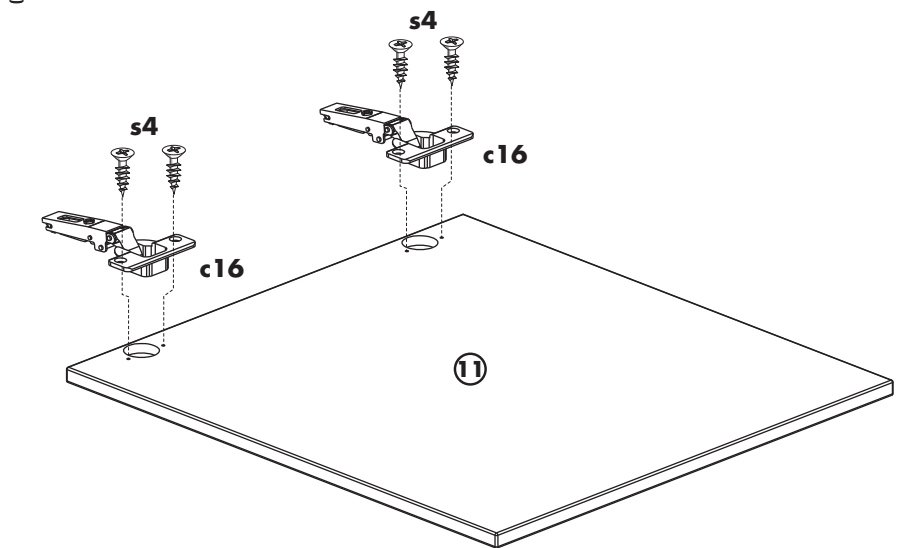


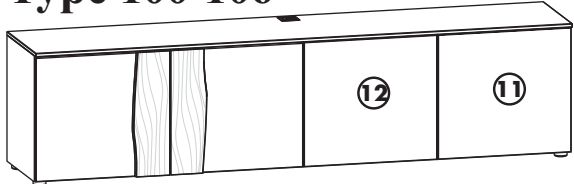


**L1**

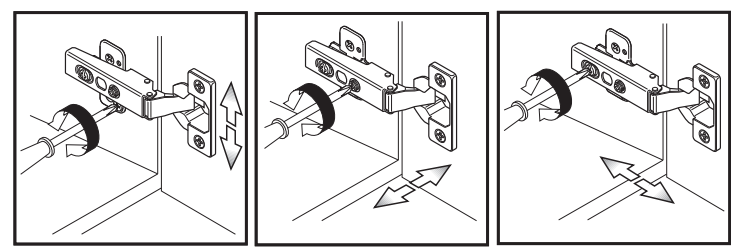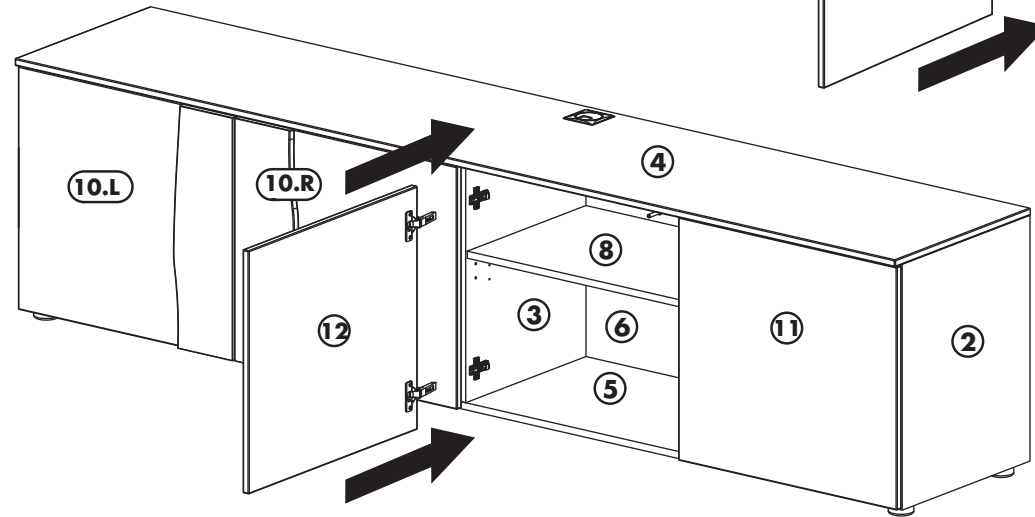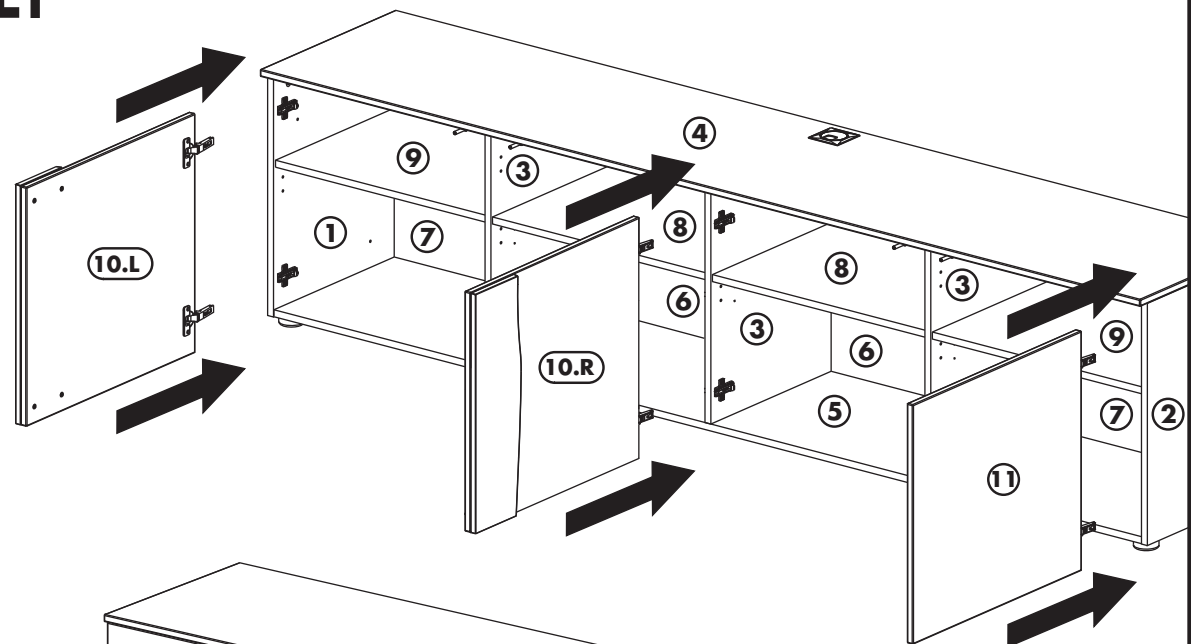


**l2**

**Type 100-107**

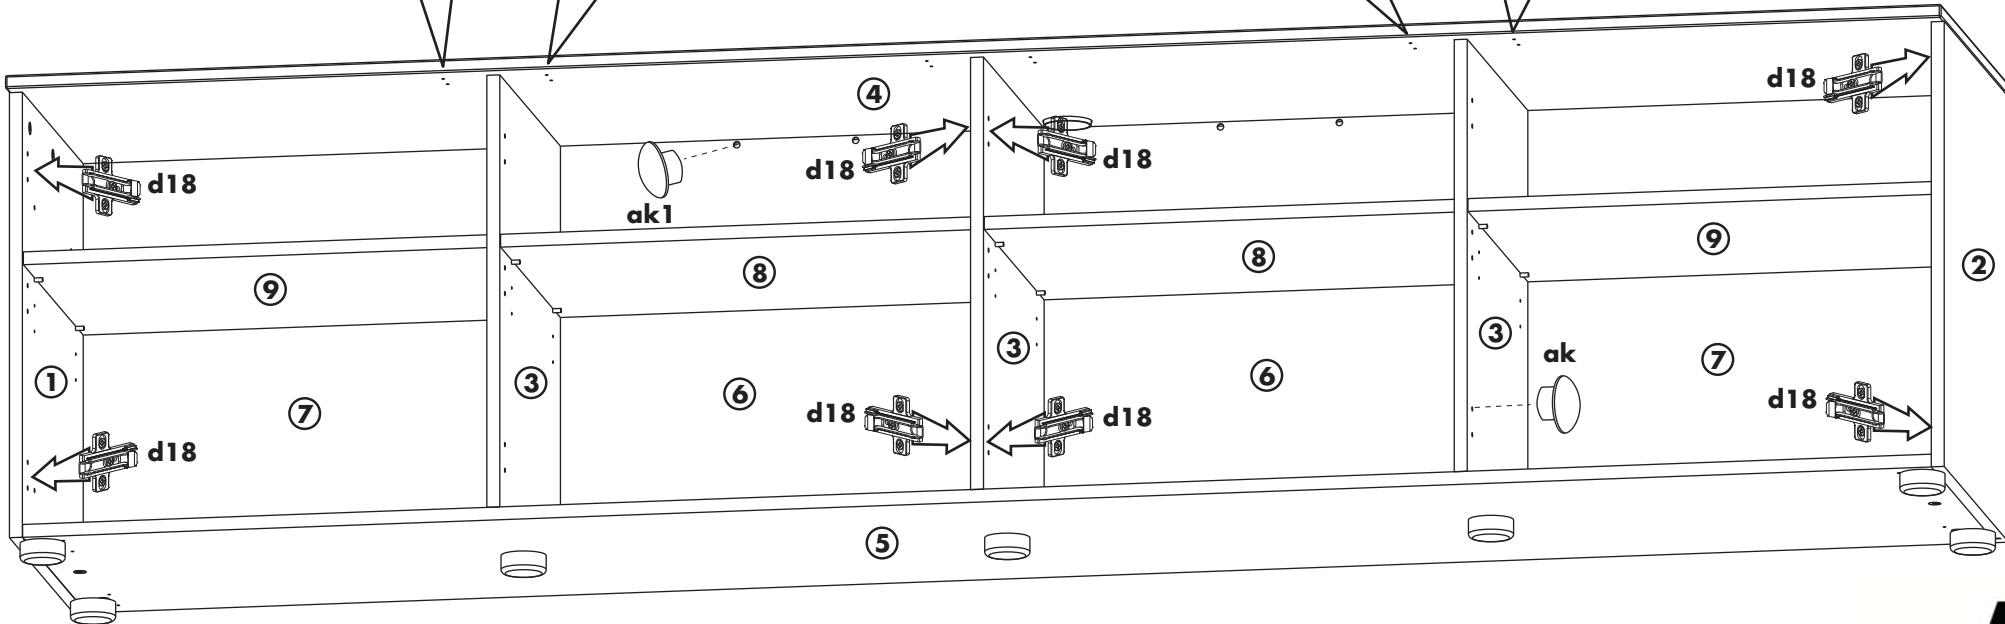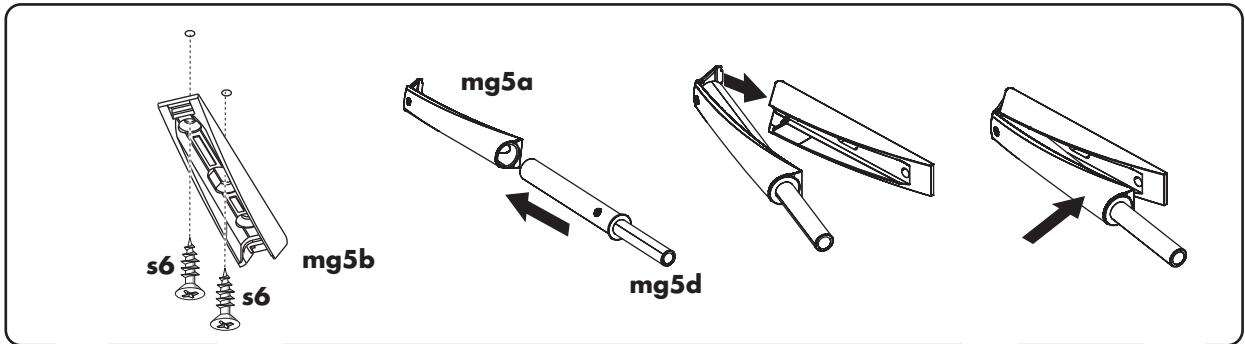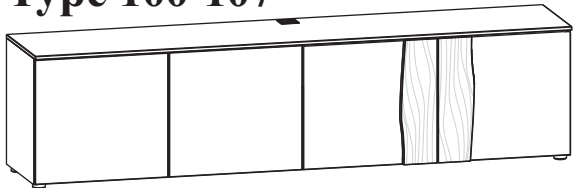


J2







Type 100-107

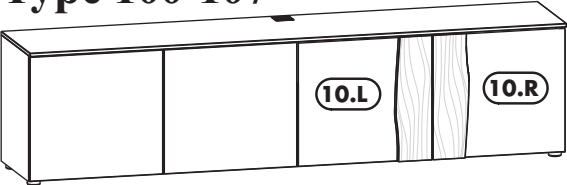






|    |  |     |    |          |     |
|----|--|-----|----|----------|-----|
| 2x |  | c16 | 8x | 4 x 16   | s4  |
| 2x |  | c17 | 8x | M4 x 21  | gs6 |
| 4x |  |     |    | 4,0 x 27 | rw7 |

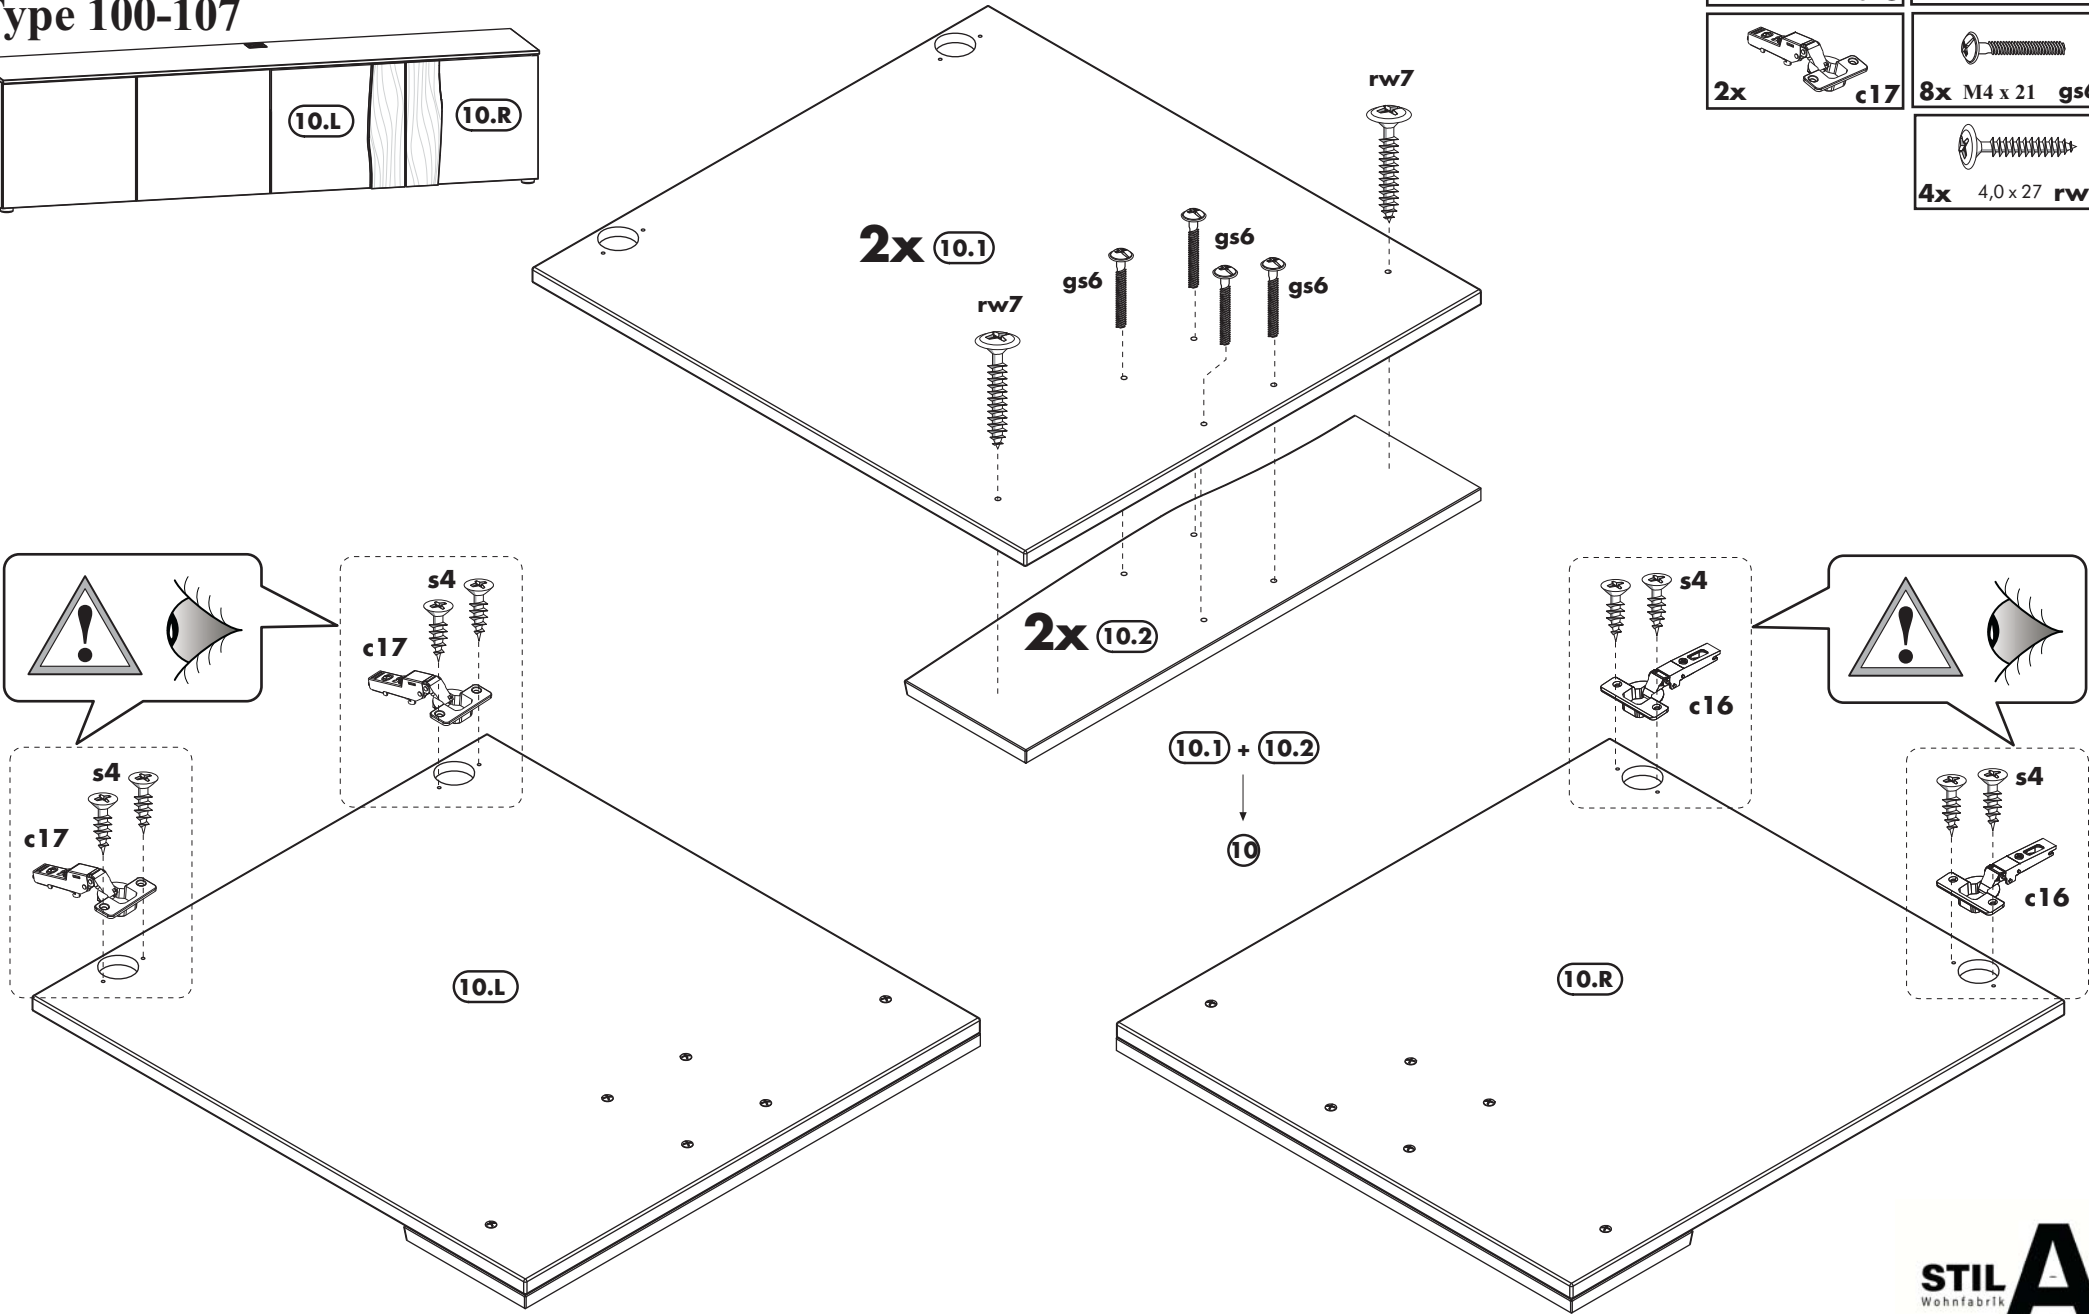

**K2**  
Type 100-107



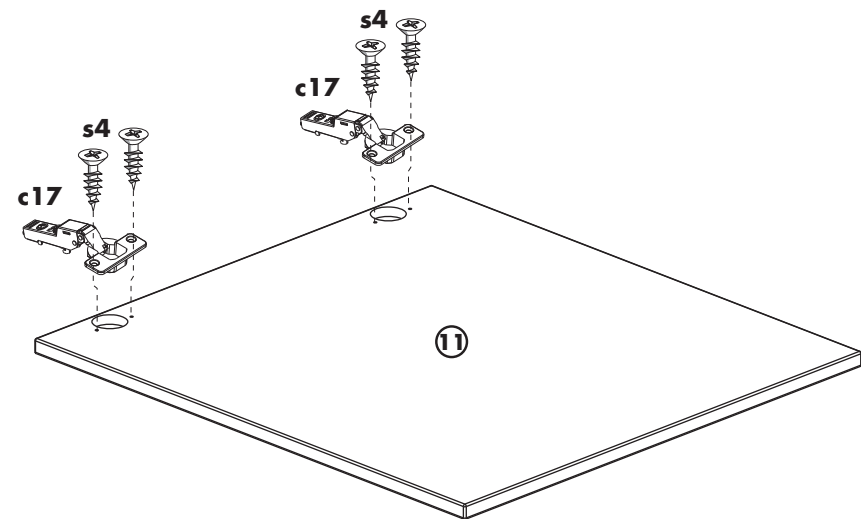
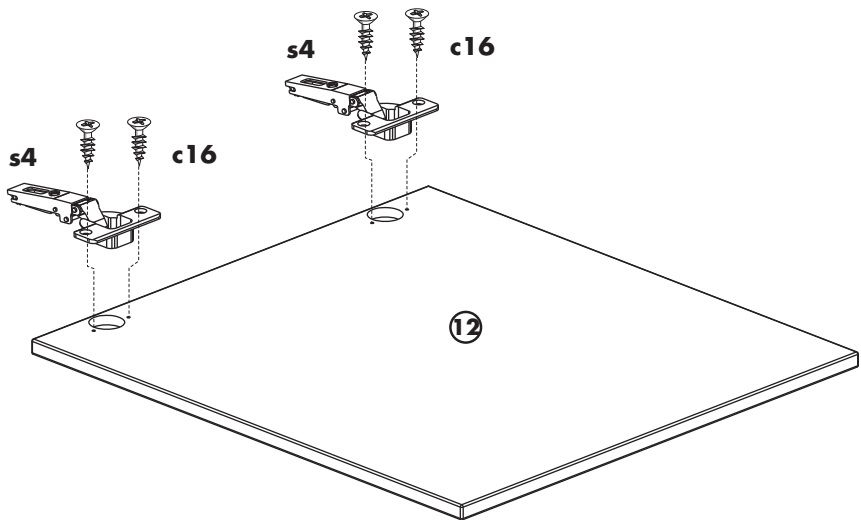
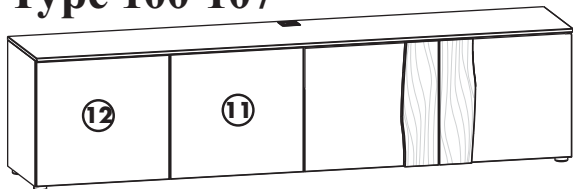





**L2**

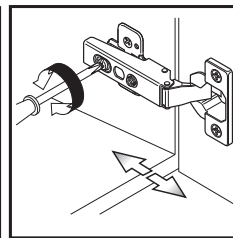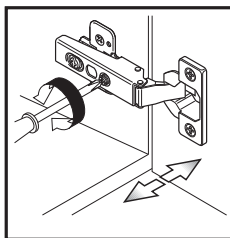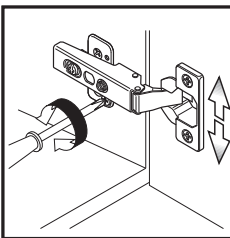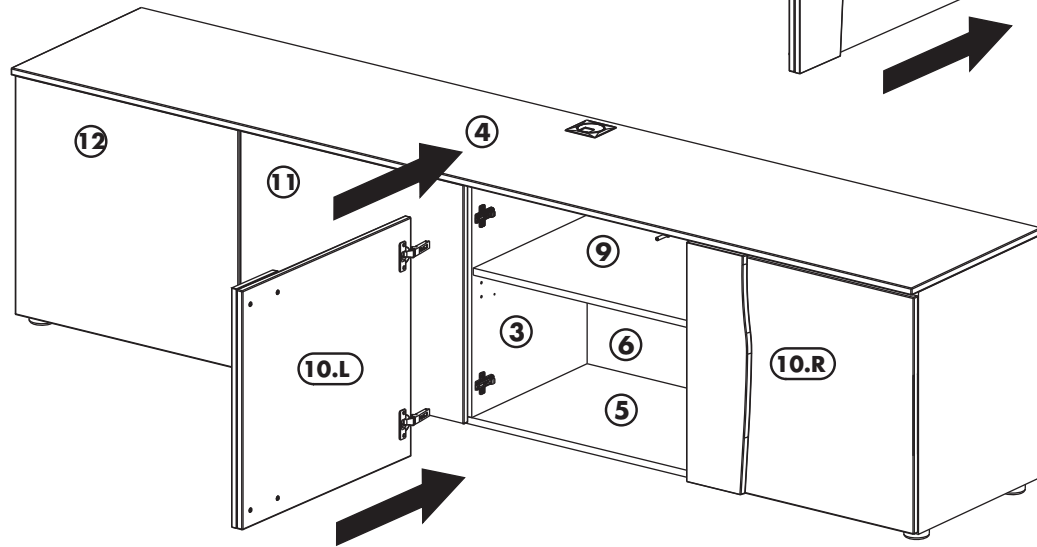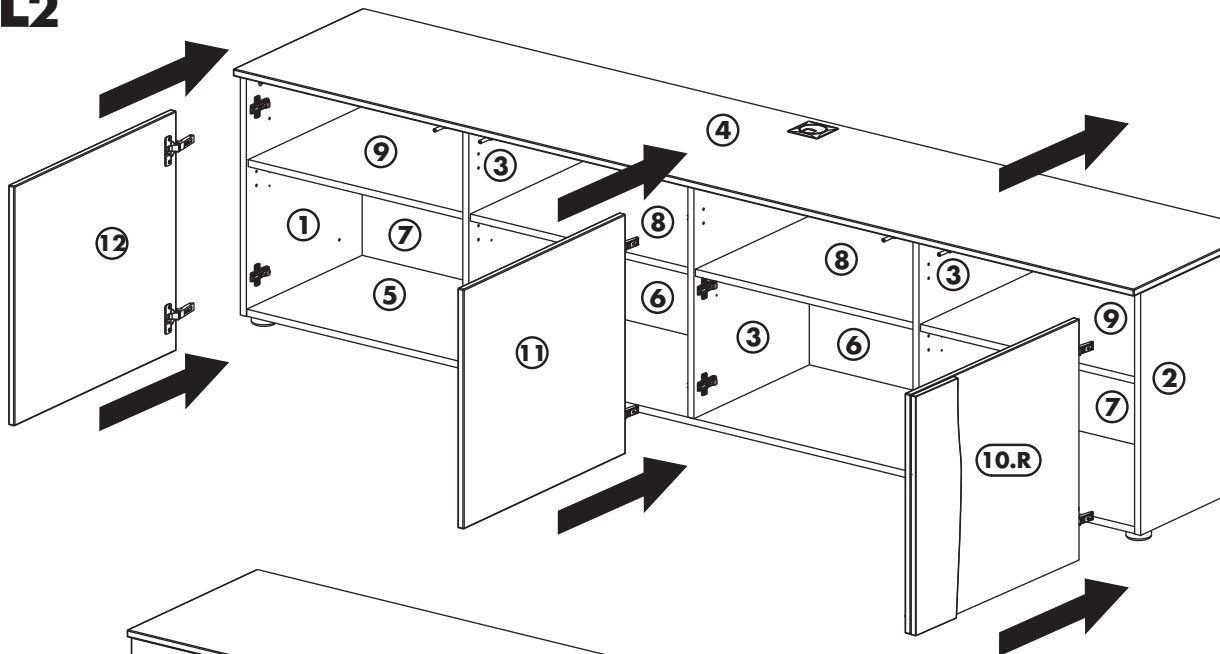







**I3**

Type 100-113

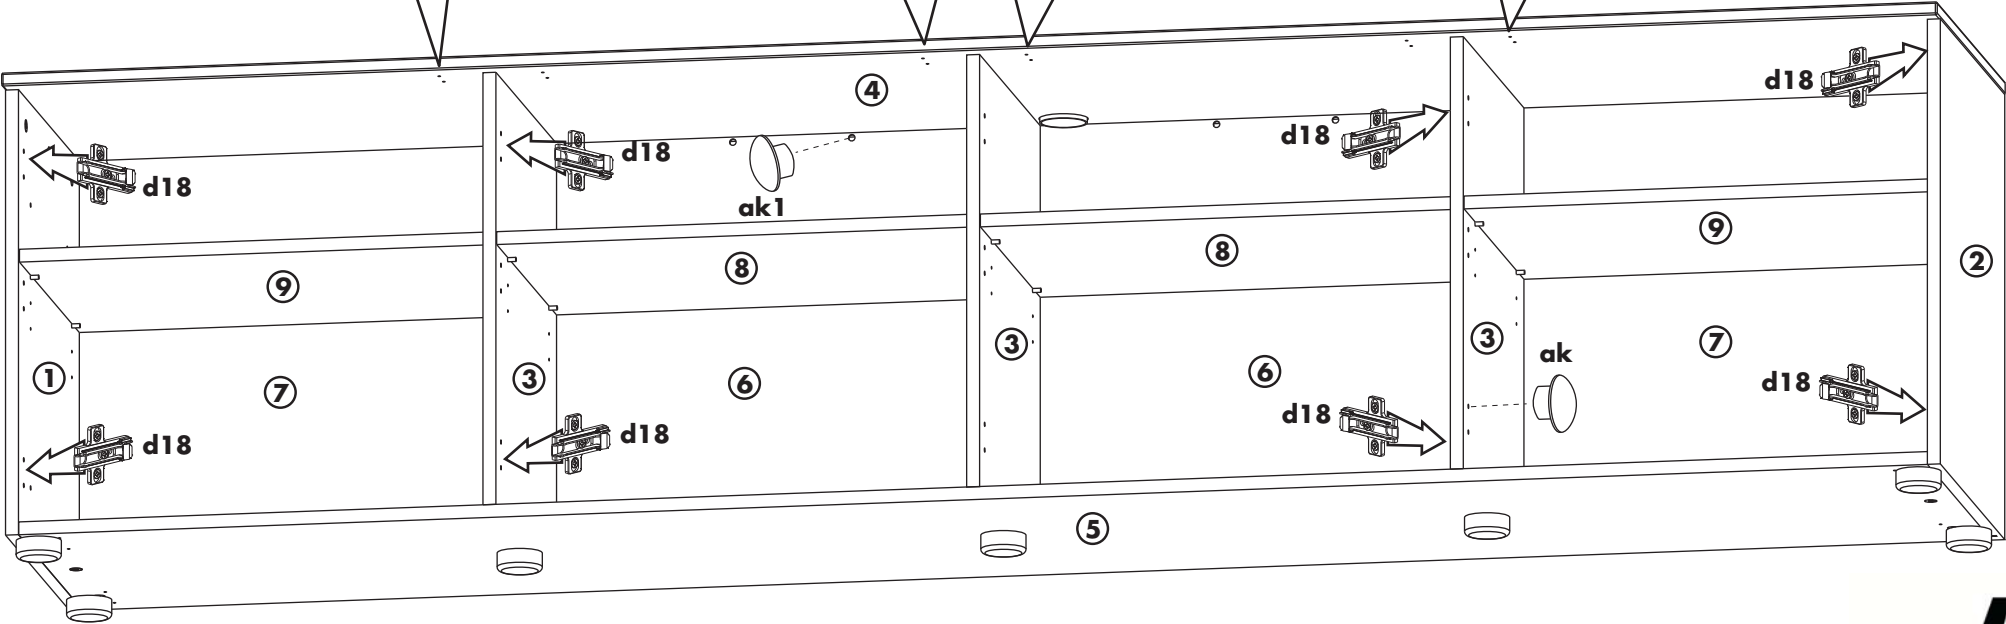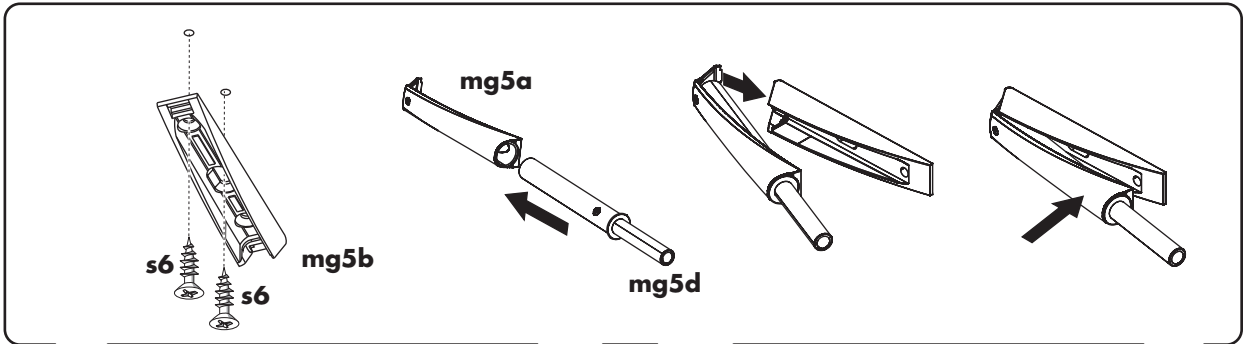


J3

Type 100-113

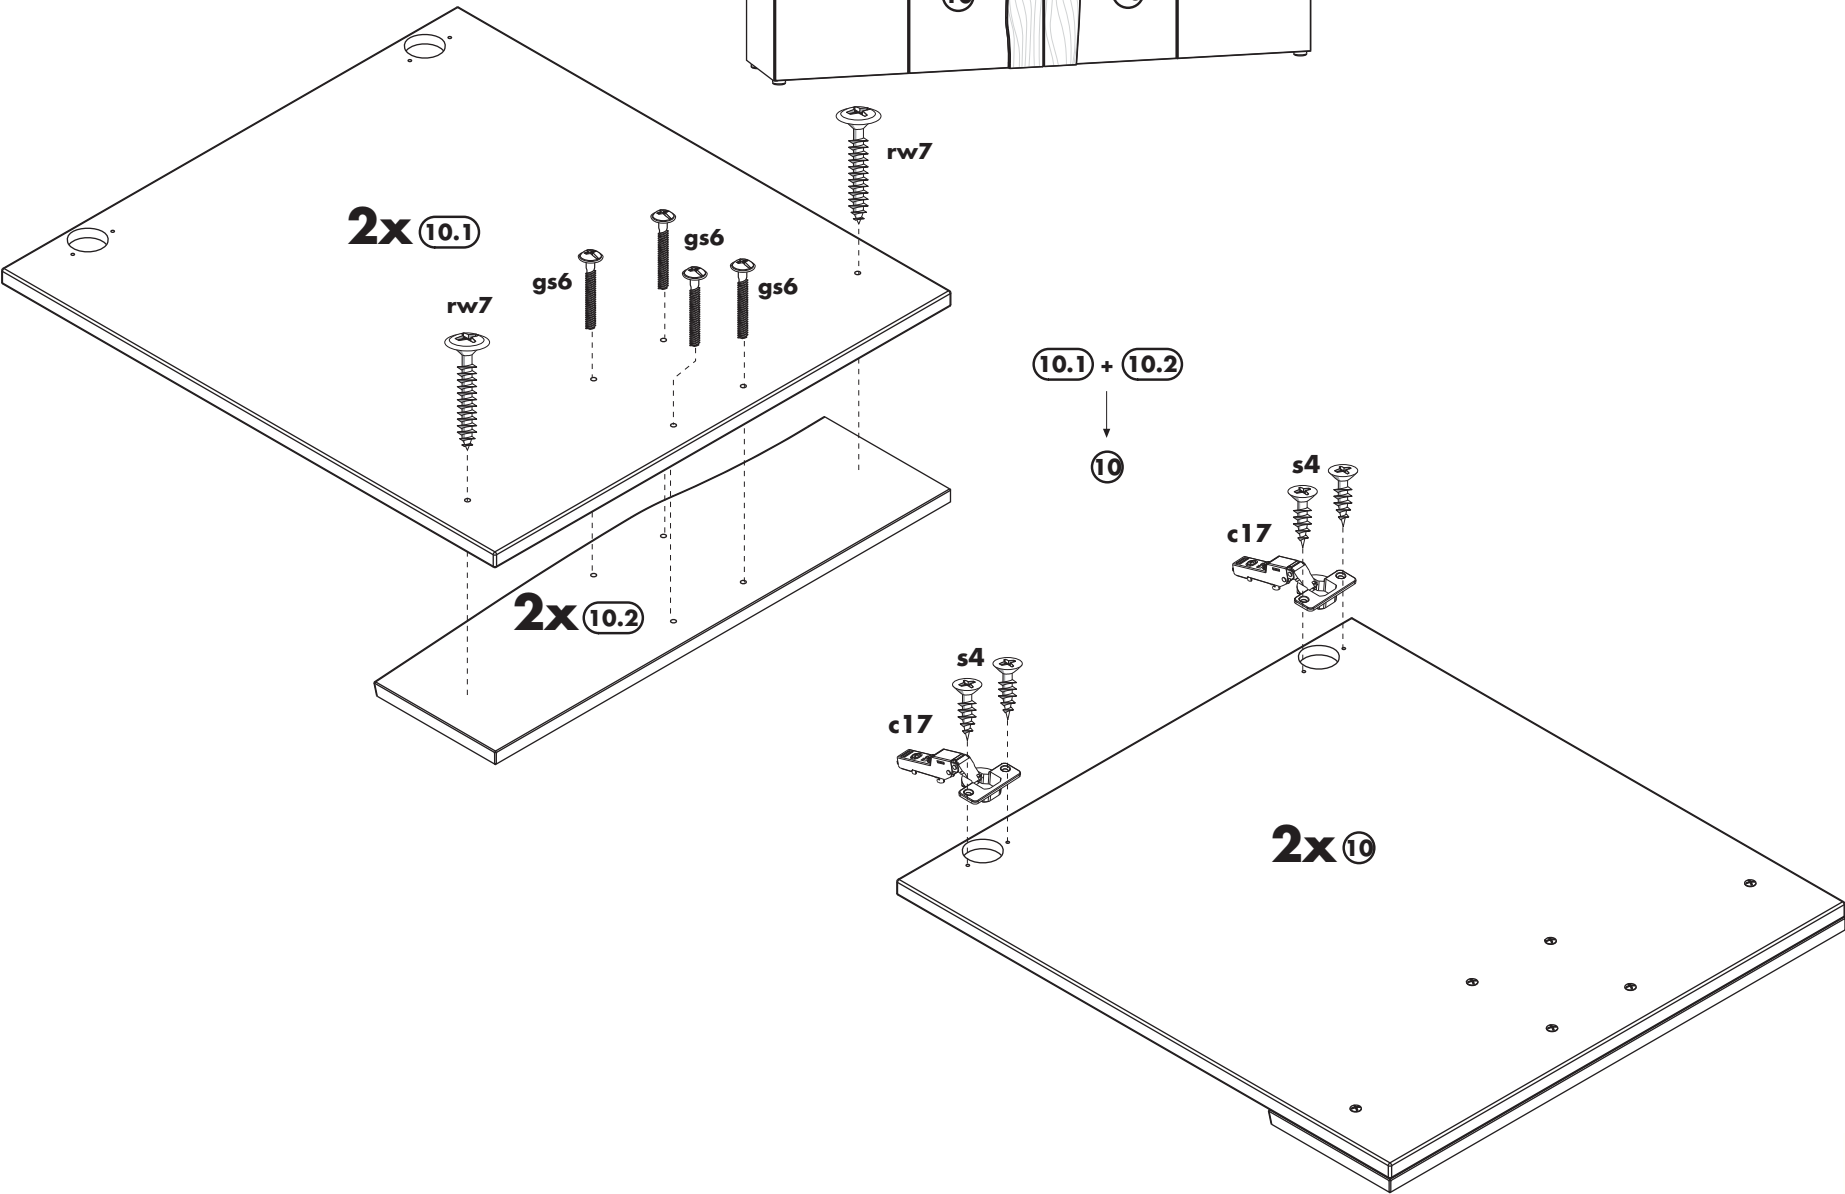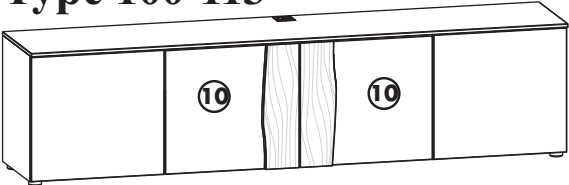

K3

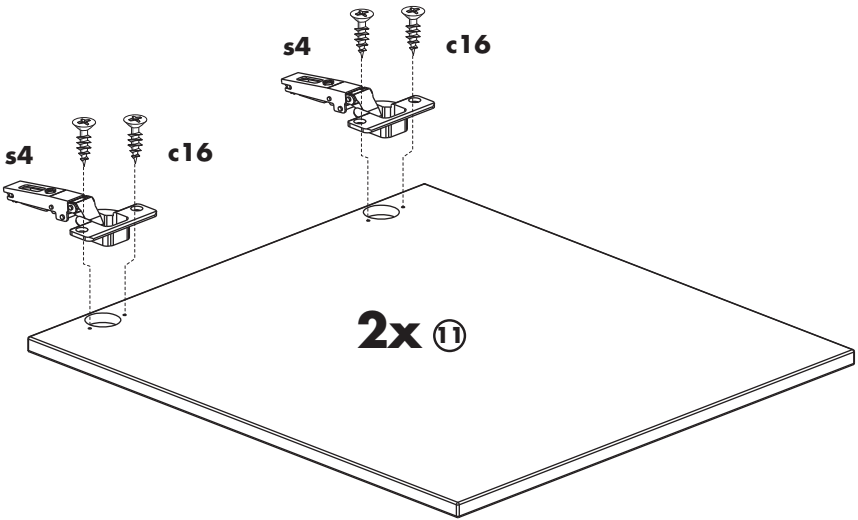

L3

