

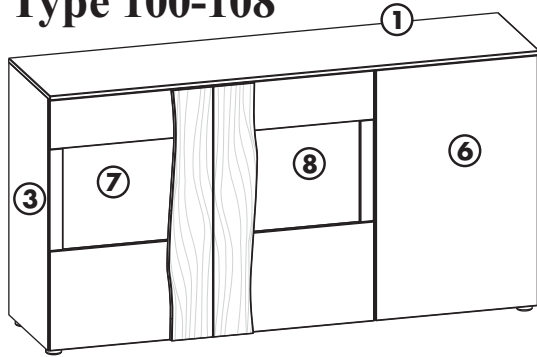


Type 100-108

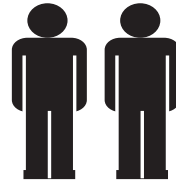

Sie brauchen:
You need:

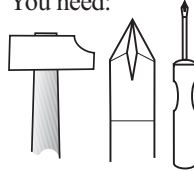

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

















After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth. Don't use strong detergents or solvents.


Beschlagliste



Fittings

CAD und Design
Light Line 15 100_108 / 02.26



 16x M4 x 12 gs5	 16x gtb	 4x 4,0 x 27 rw7	 1x 5 x 100 s28	 1x 3,5 x 15 s5
 14x a4	 20x e2	 6x 2,7 mm tad7	 1x wd	 1x rv
 6x fu	 6x fo	 1x mg5b	 1x mg5d	 1x mg5a
 6x fu	 6x fo	 8x M4 x 21 gs6	 16x 4 x 16 s4	 30x rh
 24x t4	 6x ak	 3x ak1	 8x D 2mm d18	 5x c16
 6x a1	 2x 3 x 15 s6	 30x 3 x 20 s7	 24x 8 x 40 p1	 3x c17

A1

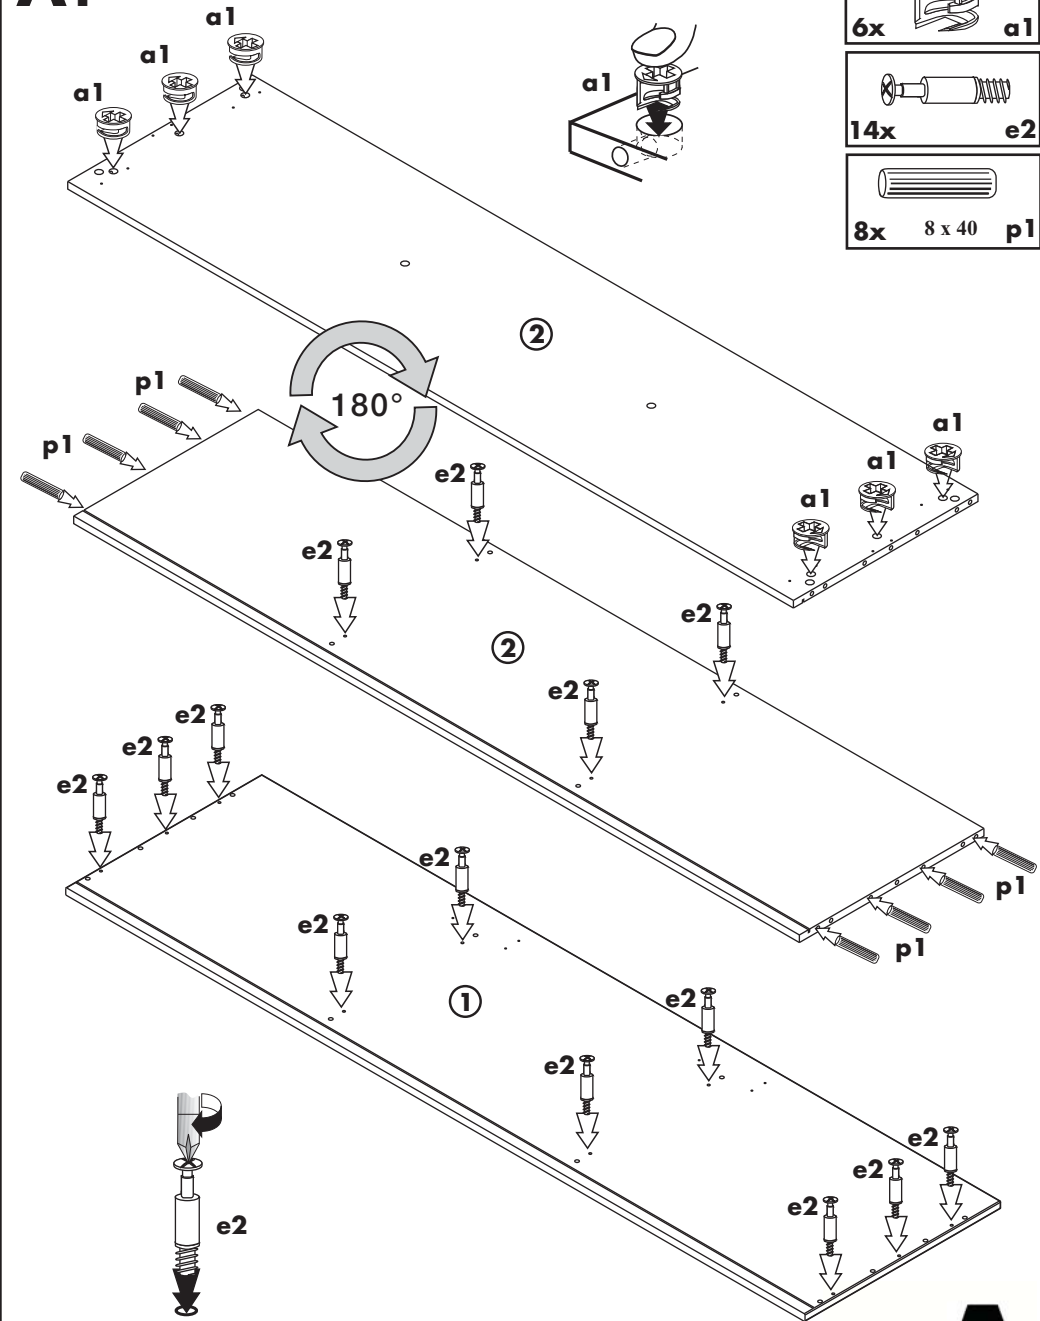


6x		a1
14x		e2
8x		8 x 40 p1



STIL
Wohnfabrik **A**

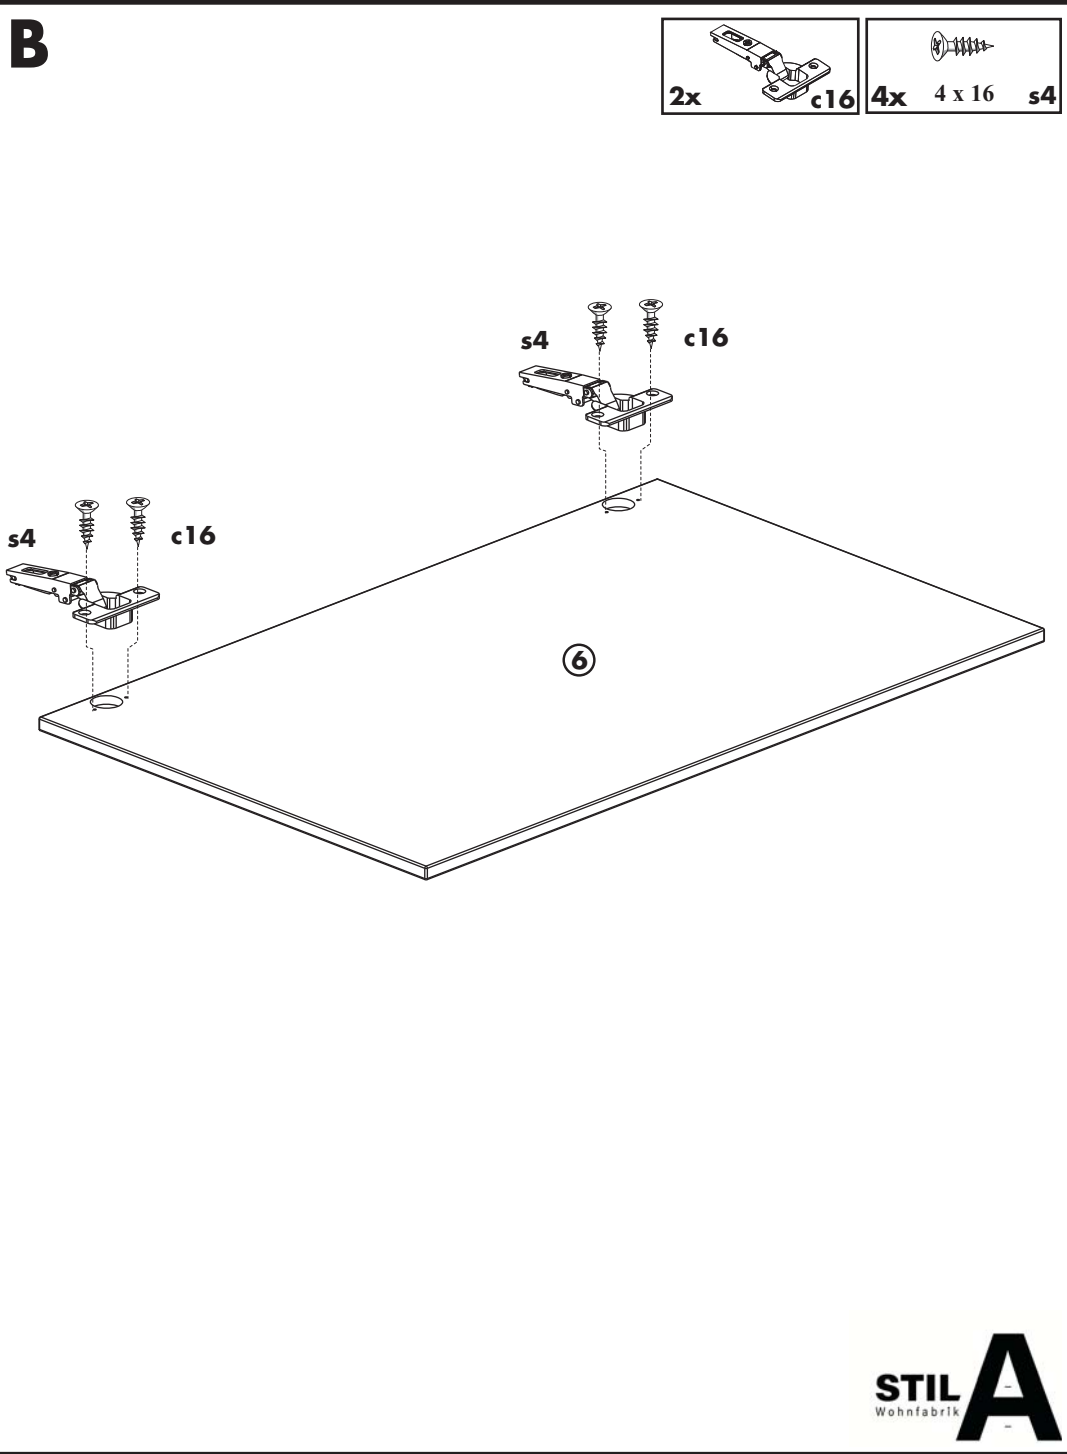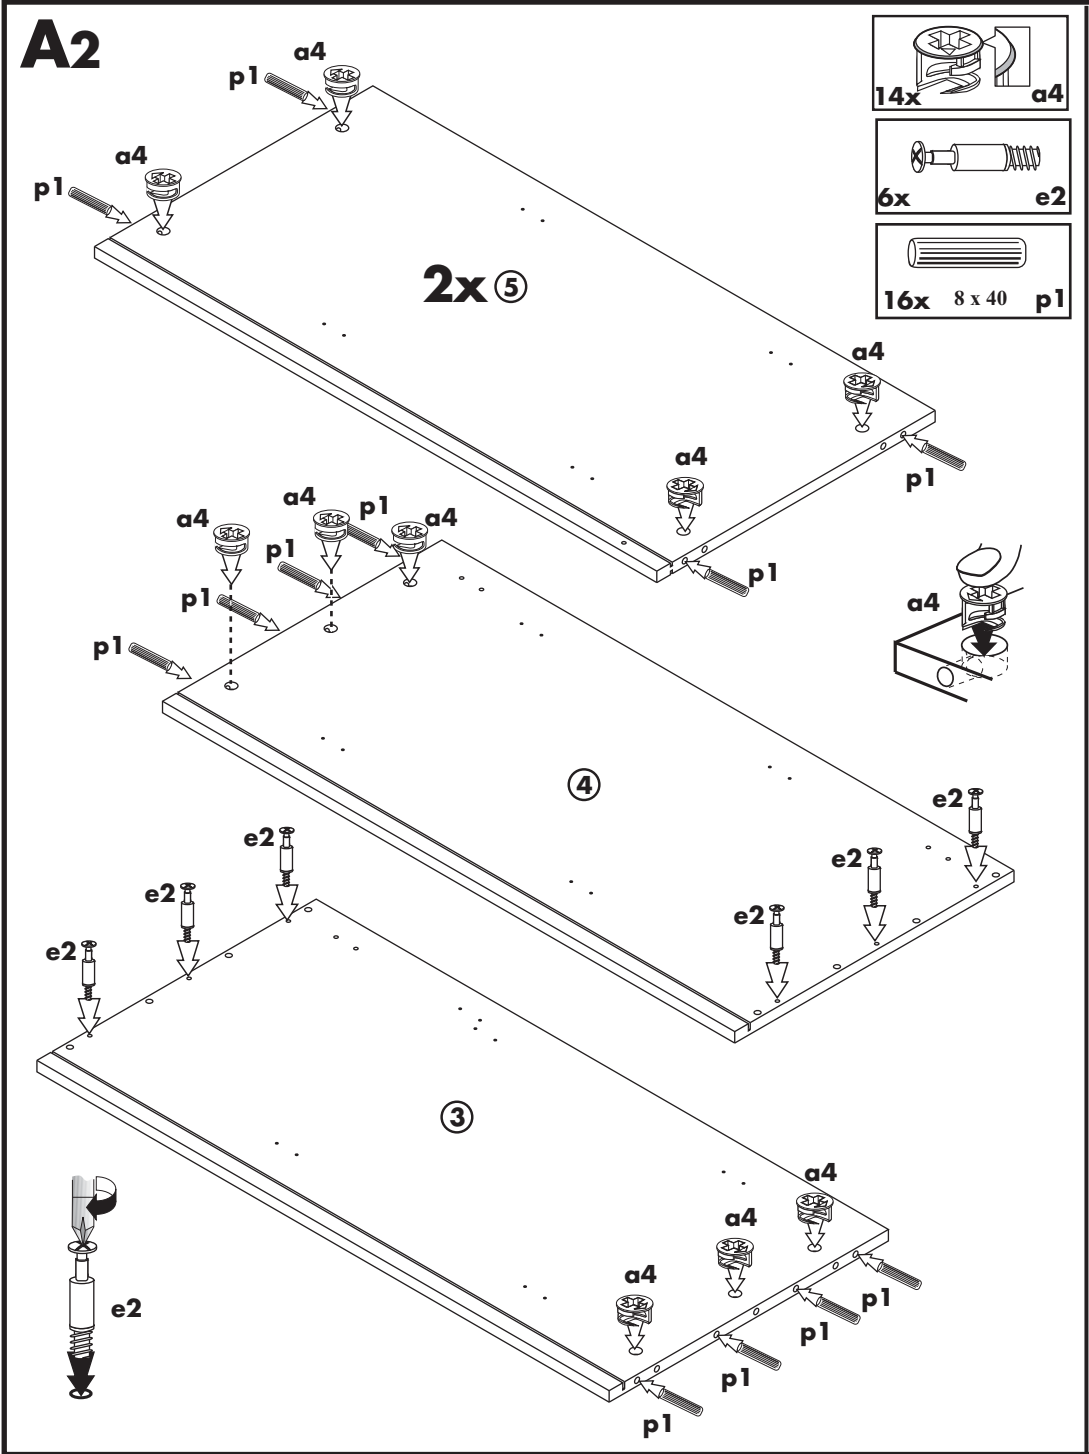



C

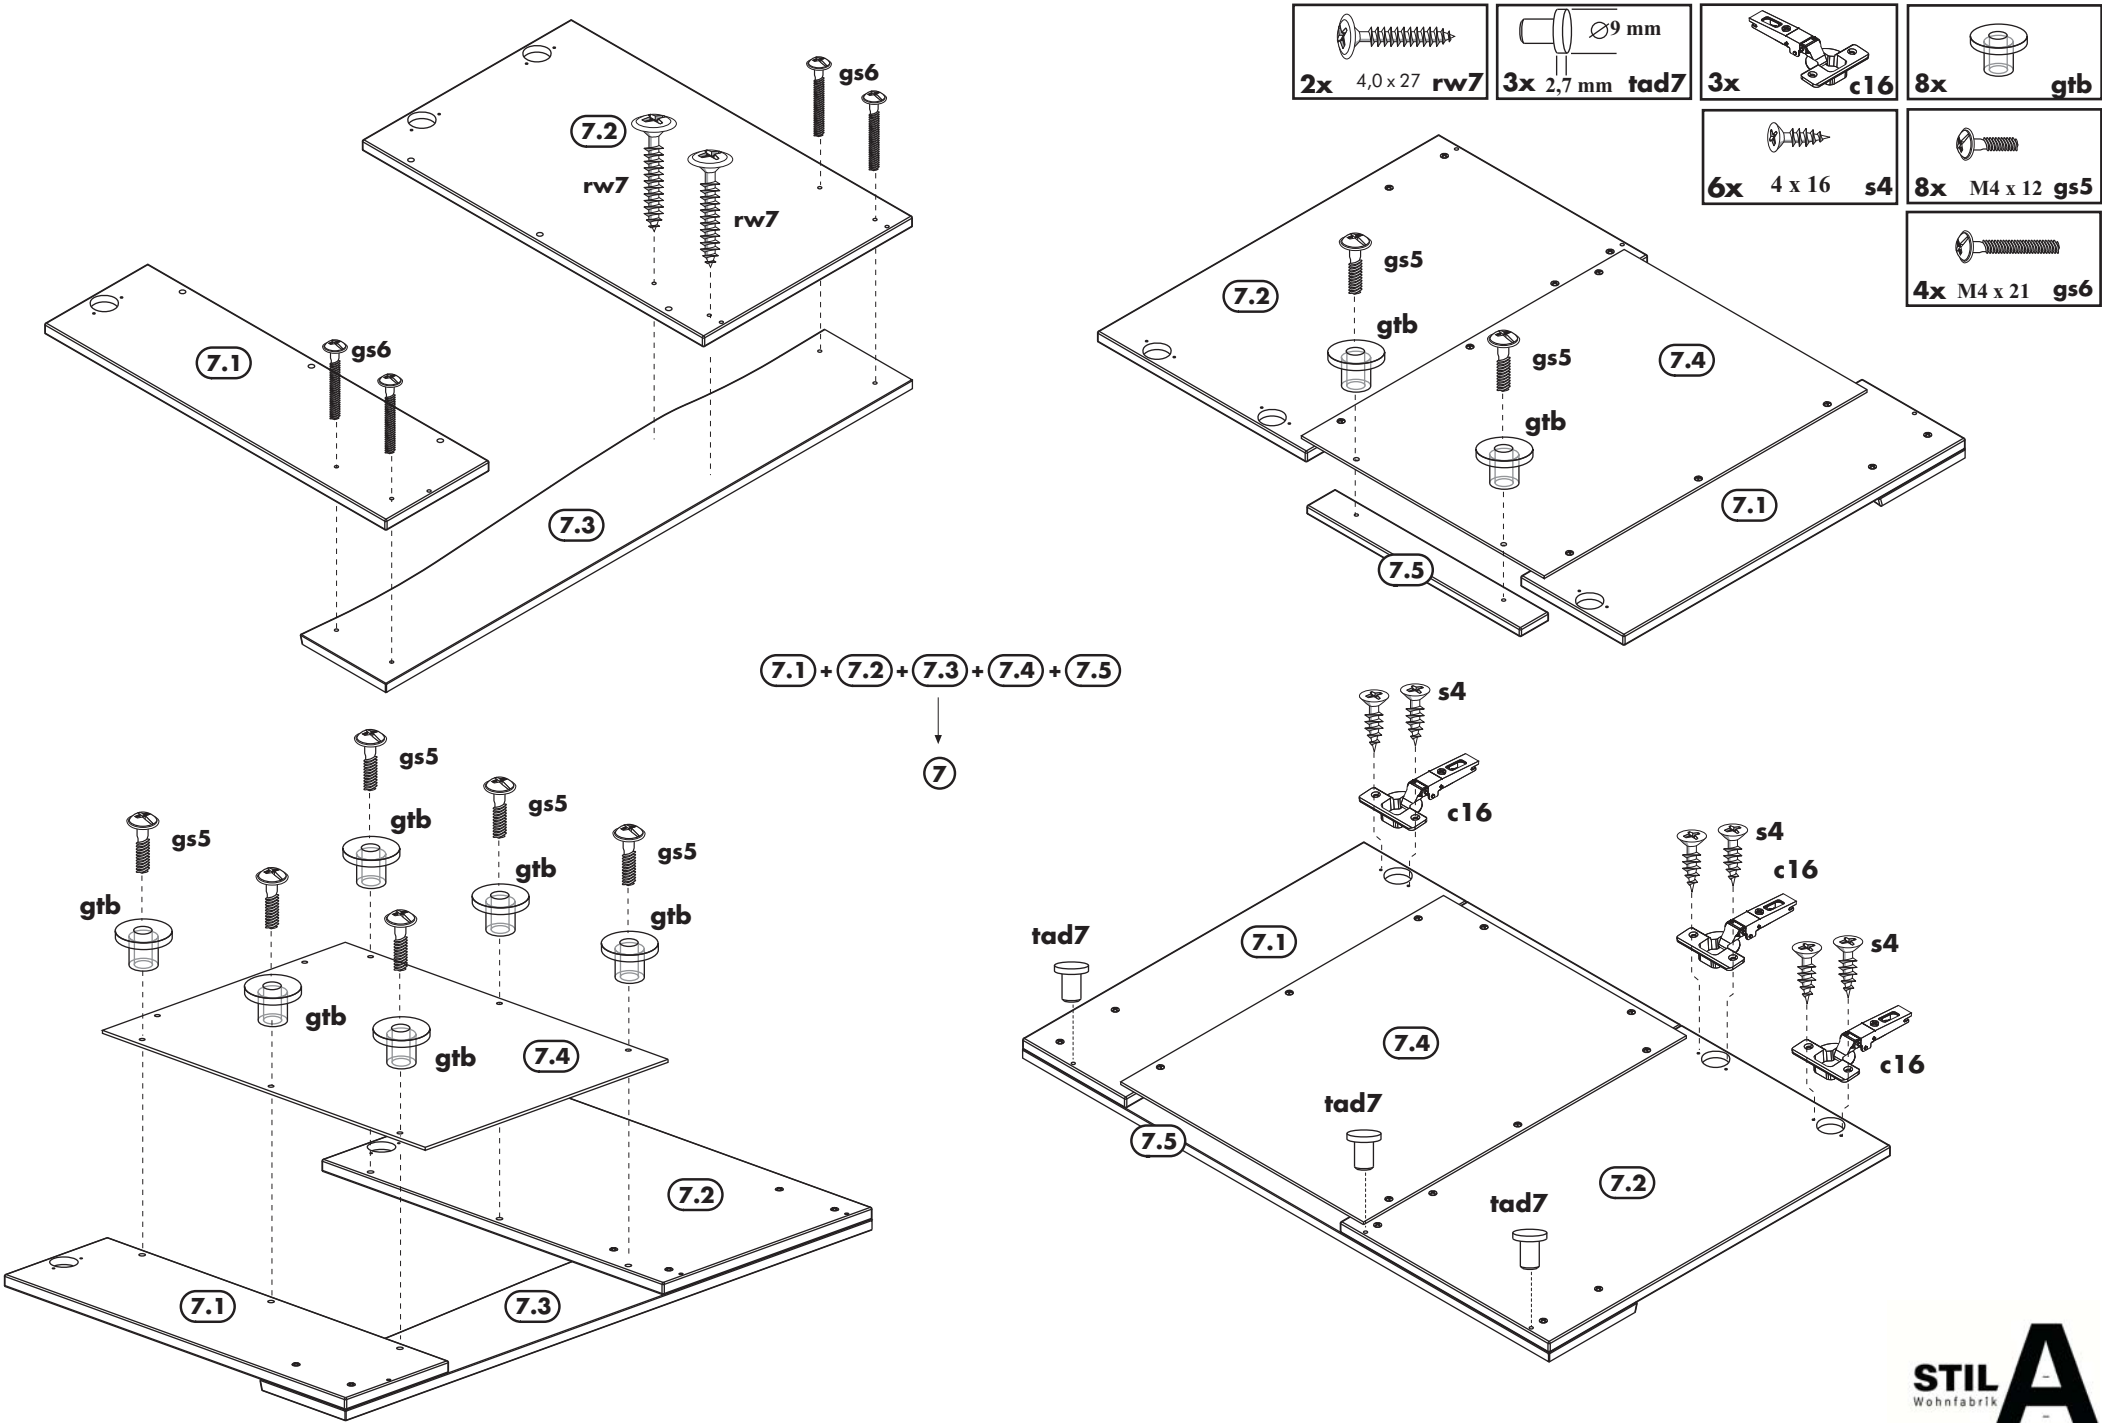

D

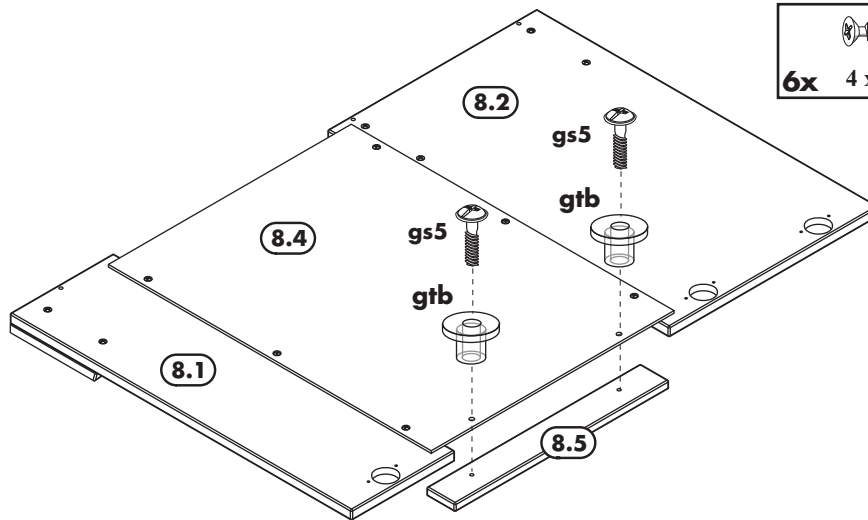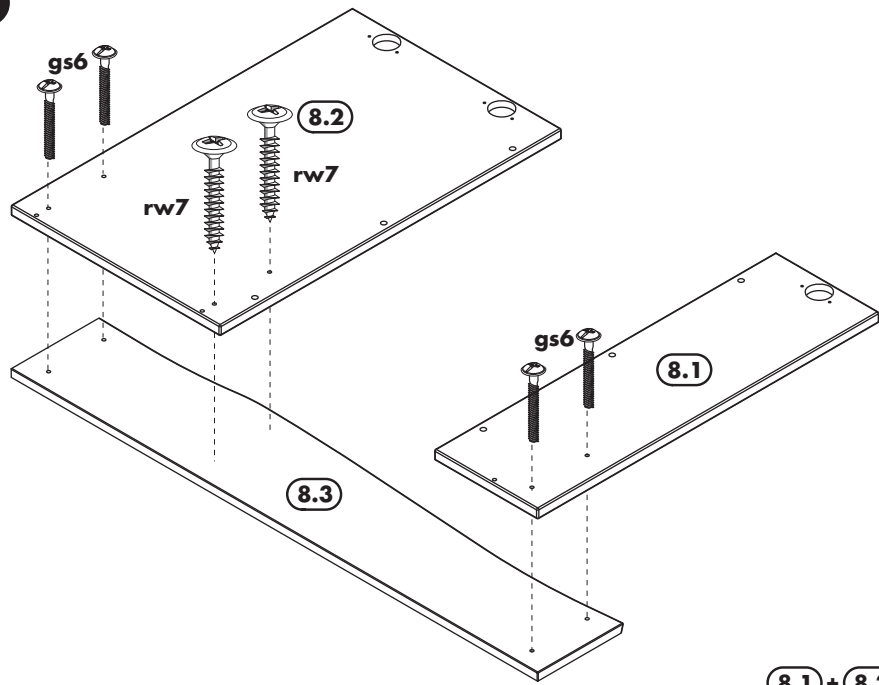

(8.1) + (8.2) + (8.3) + (8.4) + (8.5)
↓
8

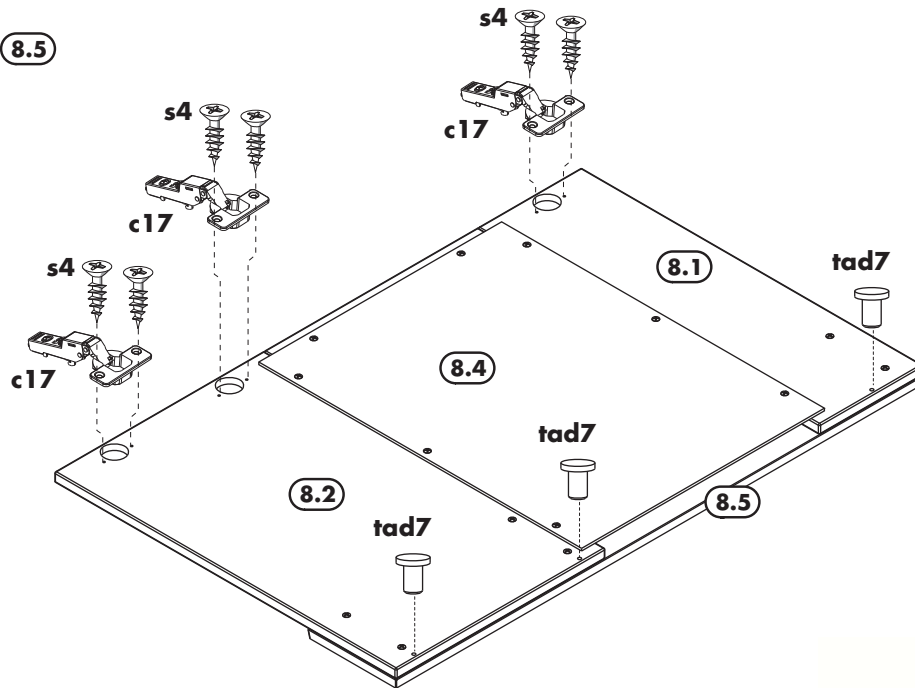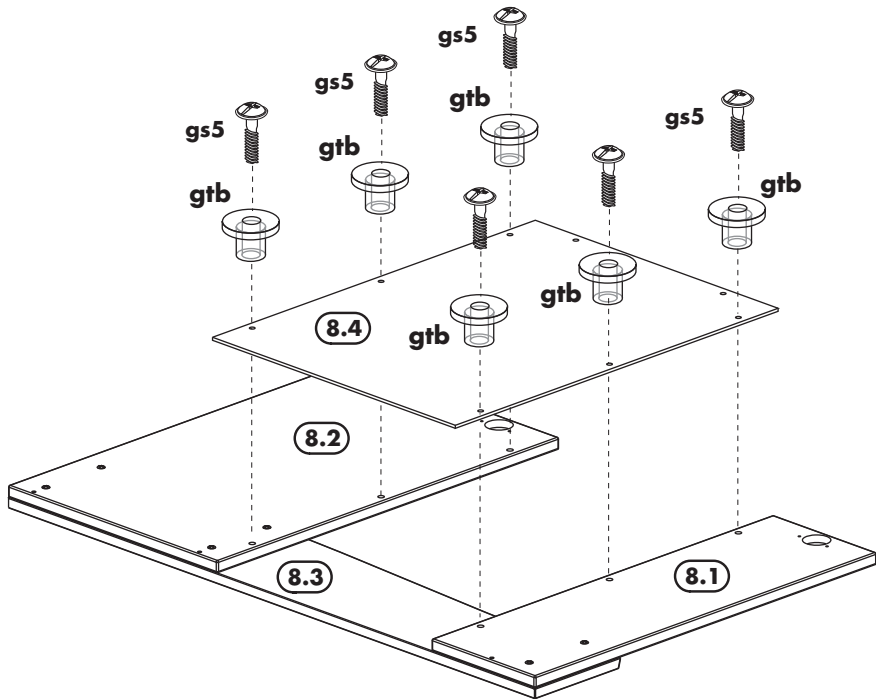

2x 4,0 x 27 **rw7**

3x **c17**

8x **gtb**


6x 4 x 16 **s4**

8x M4 x 12 **gs5**


4x M4 x 21 **gs6**

3x 2,7 mm **tad7**




E

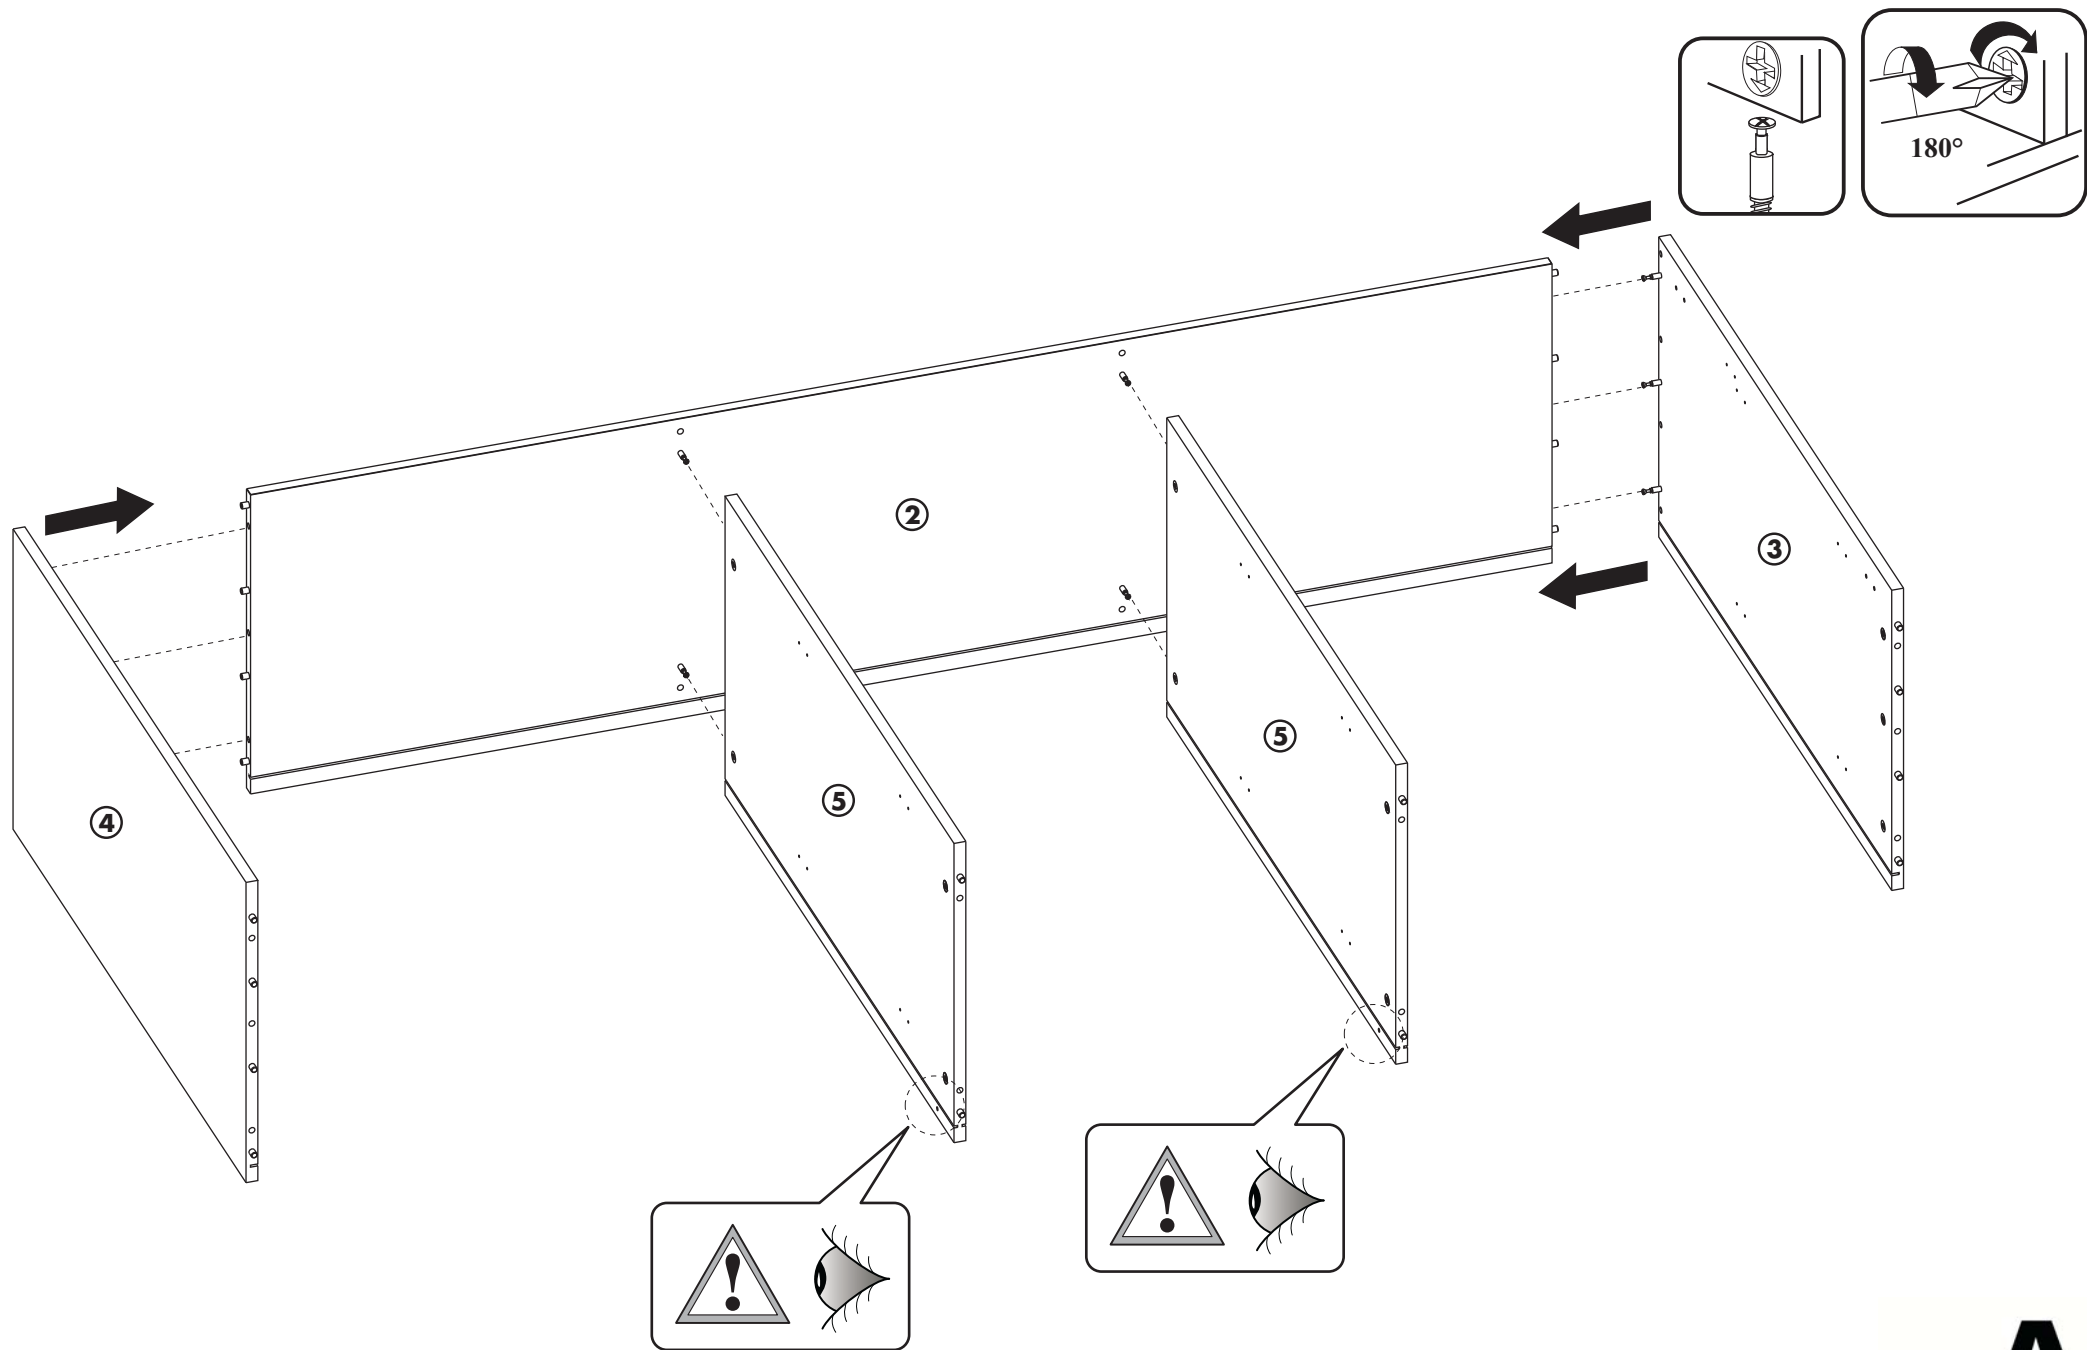


F







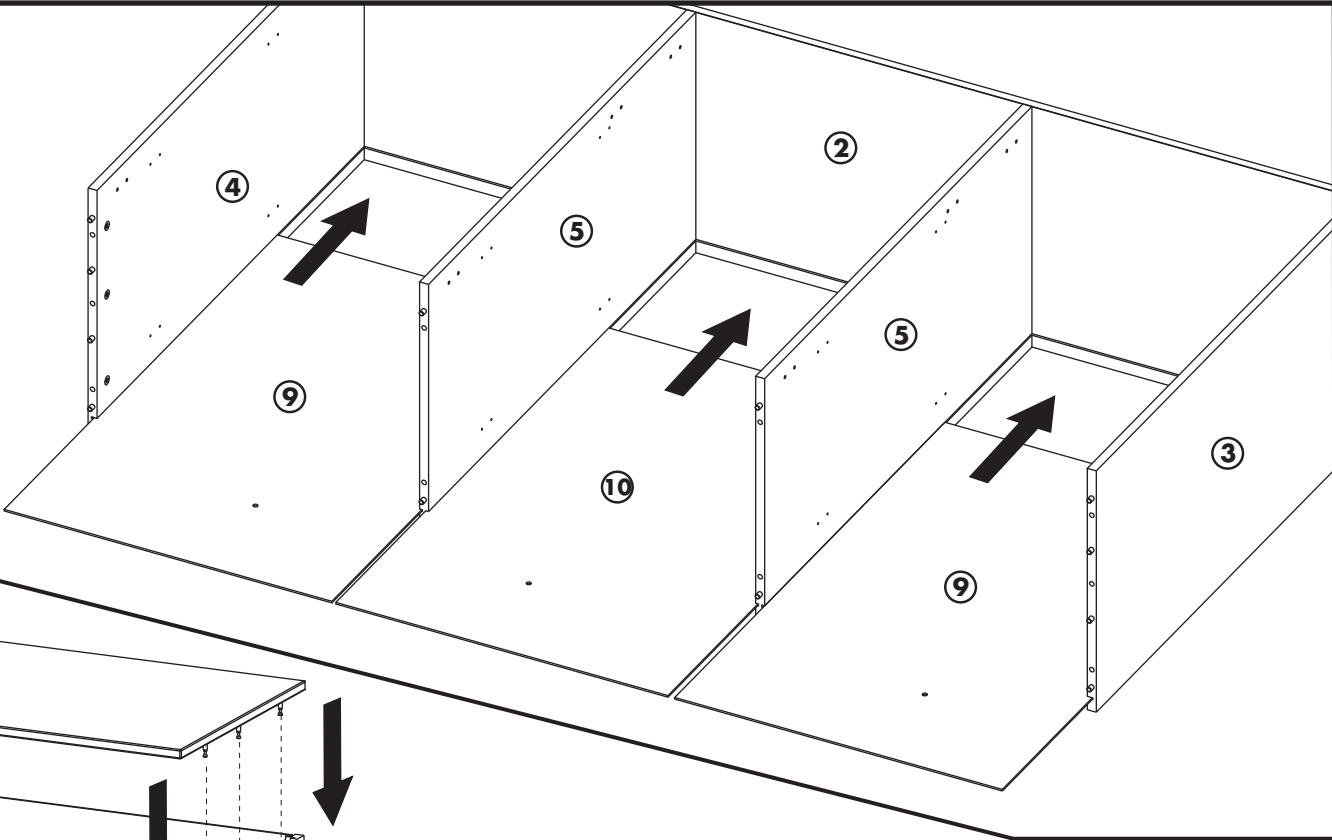


G

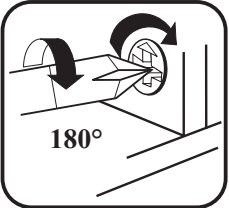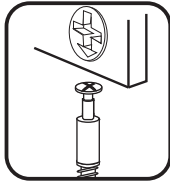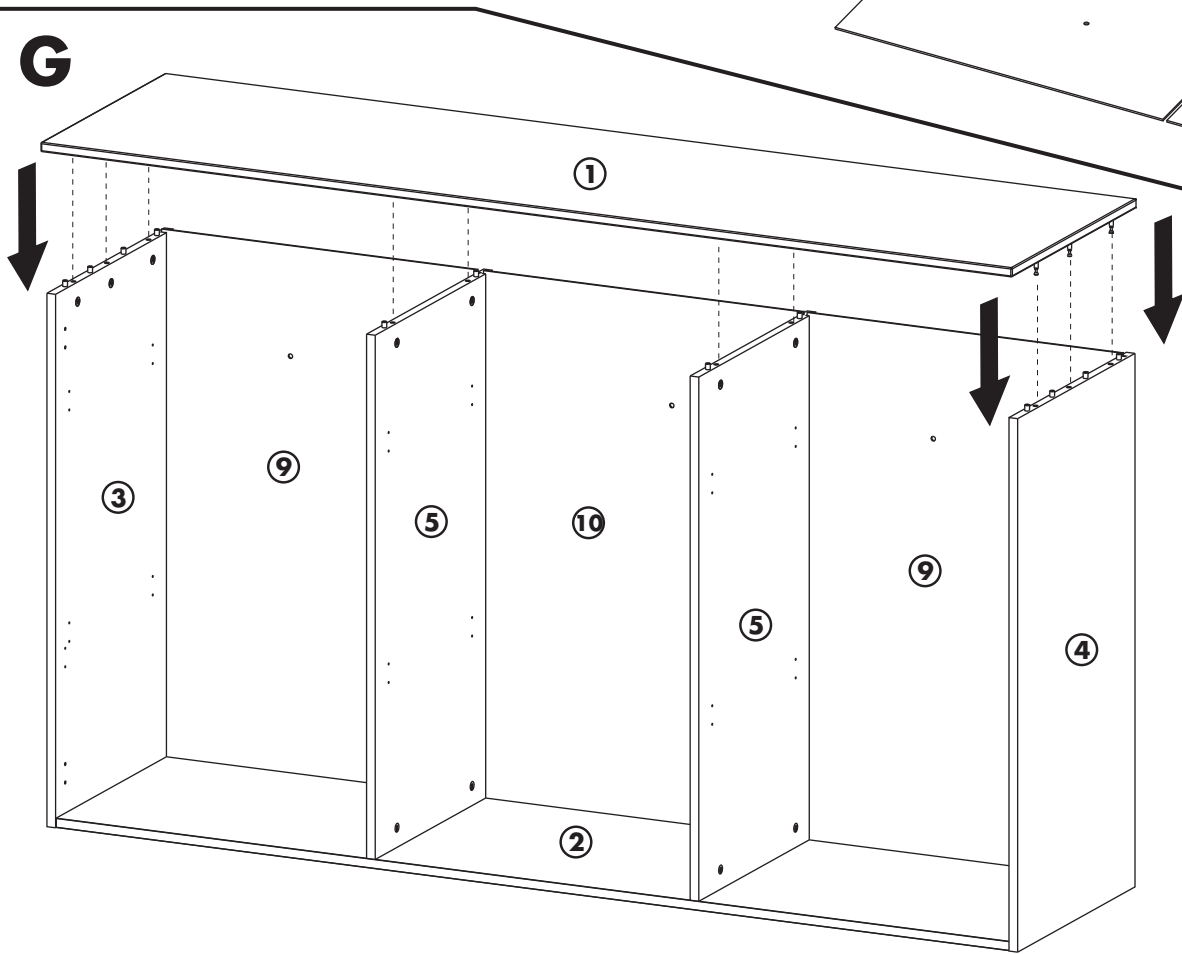


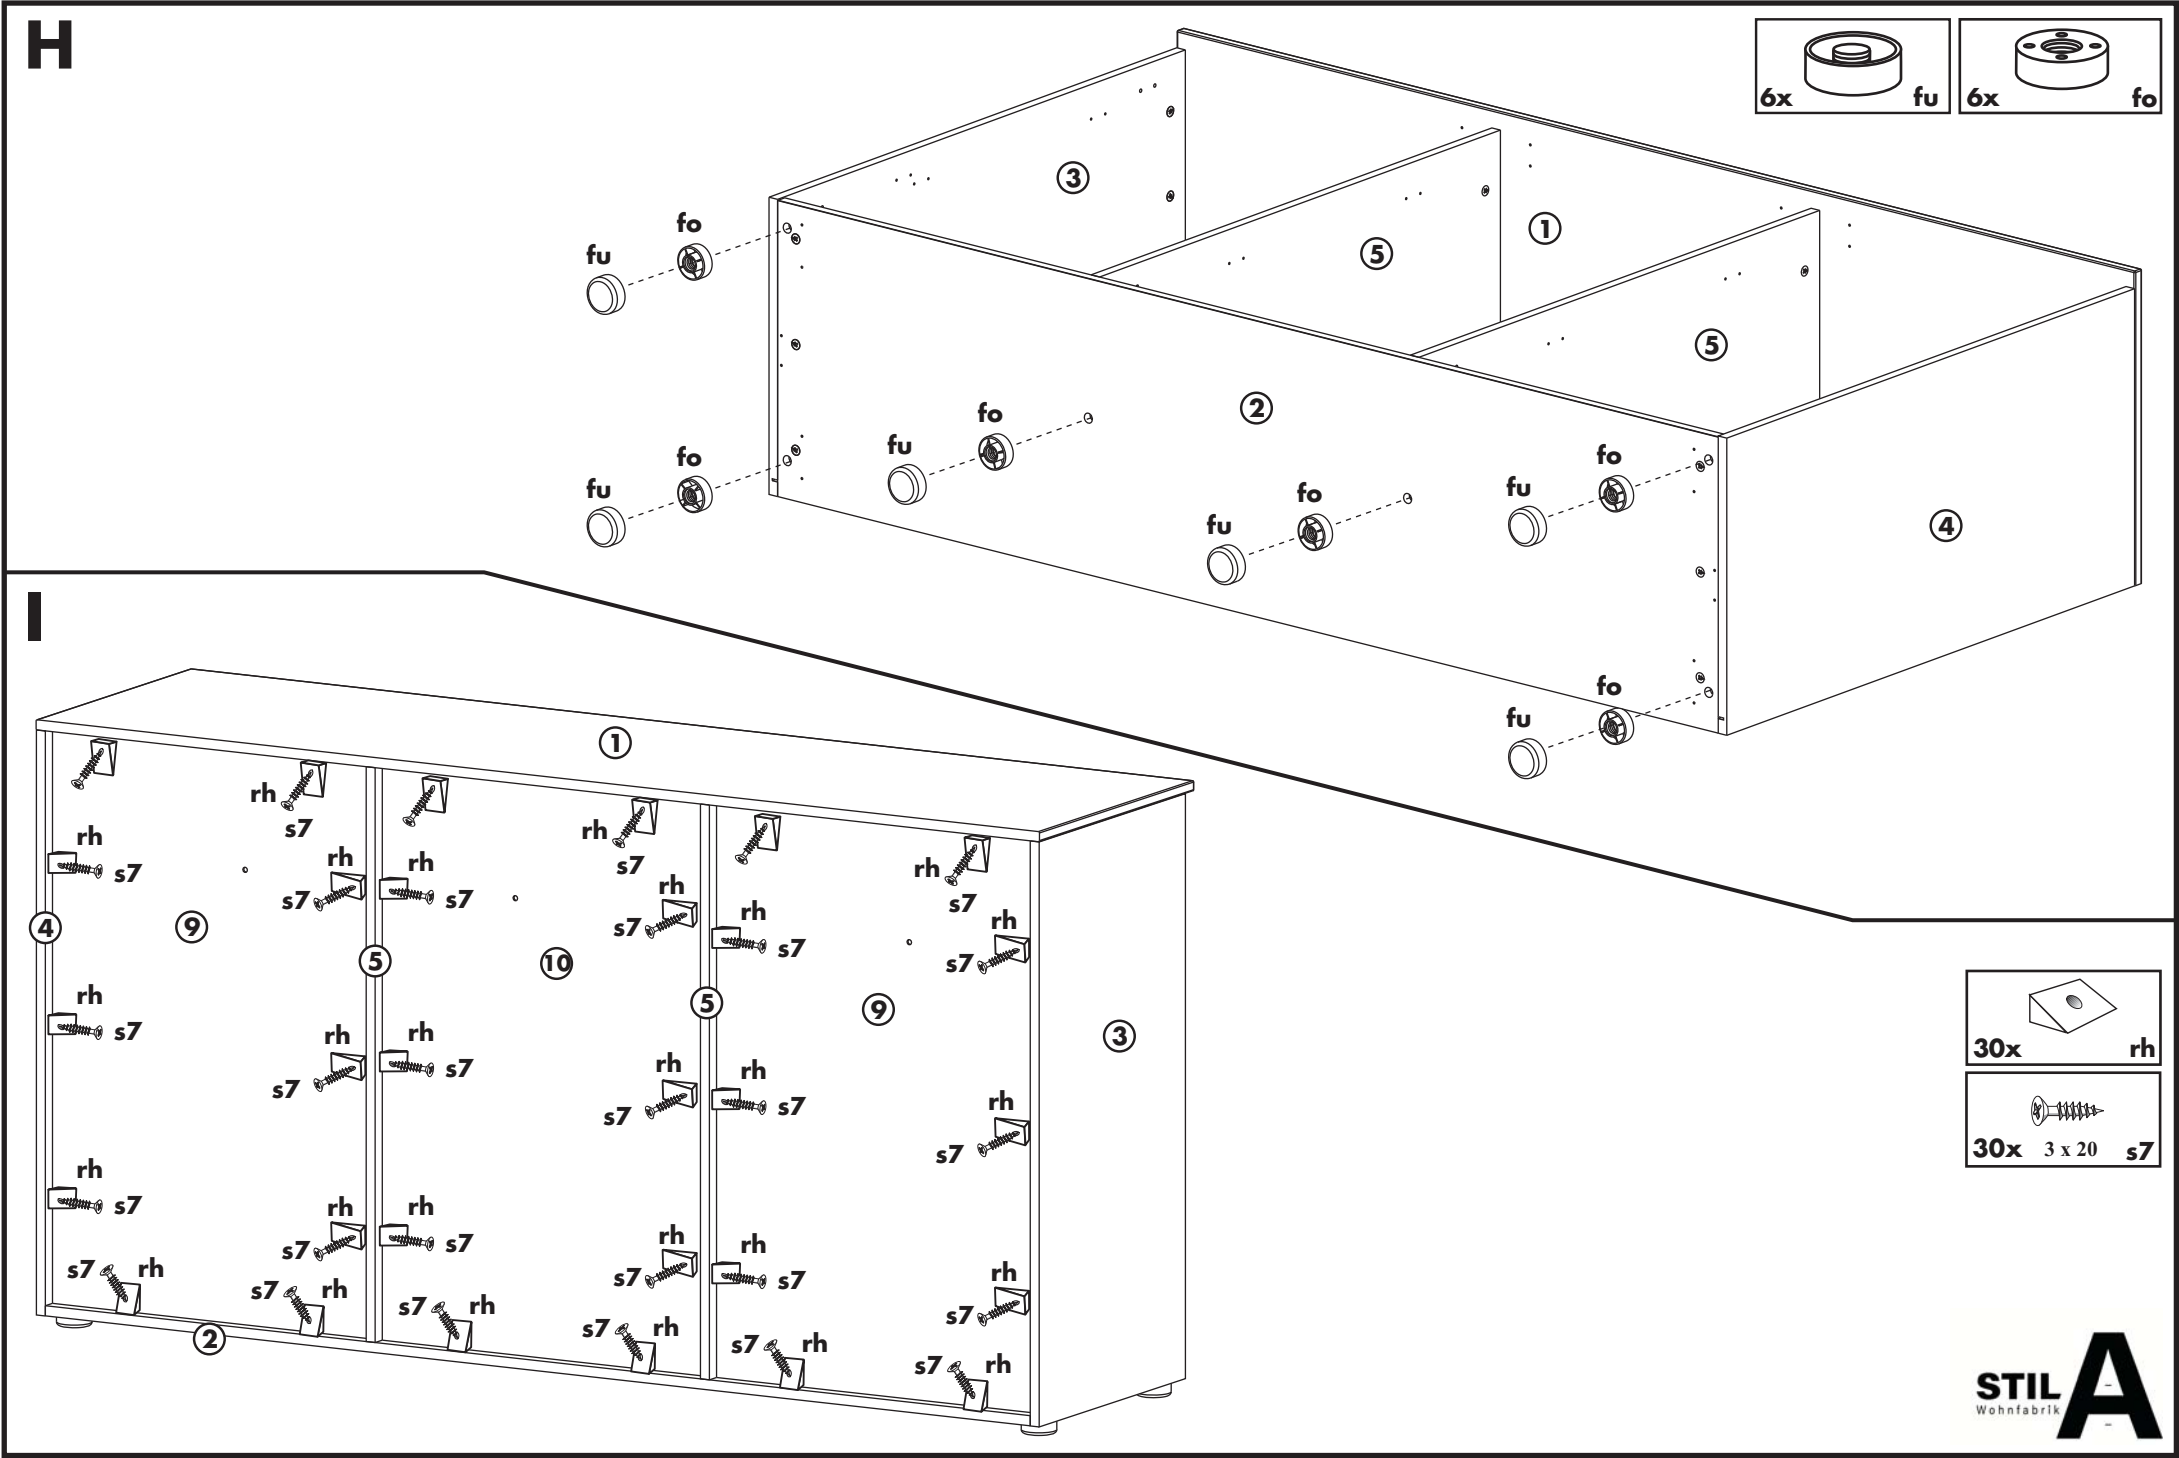



J

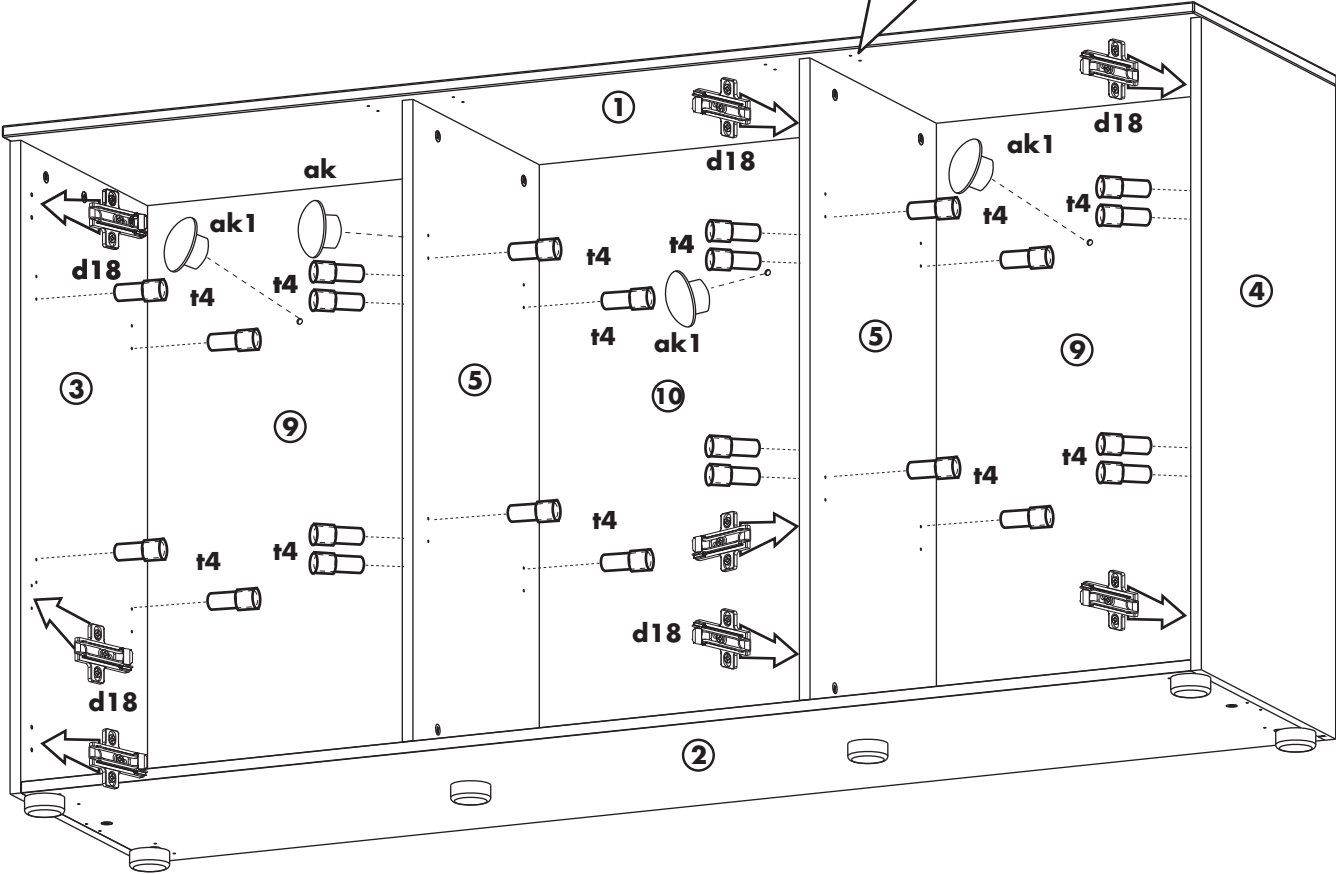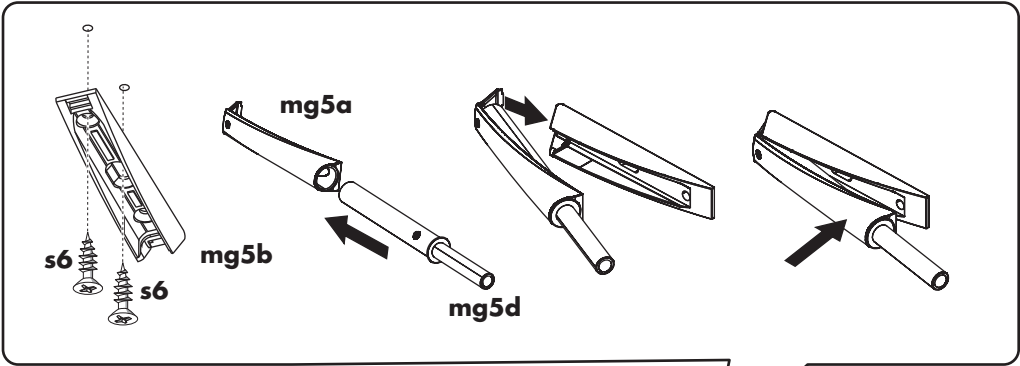


K

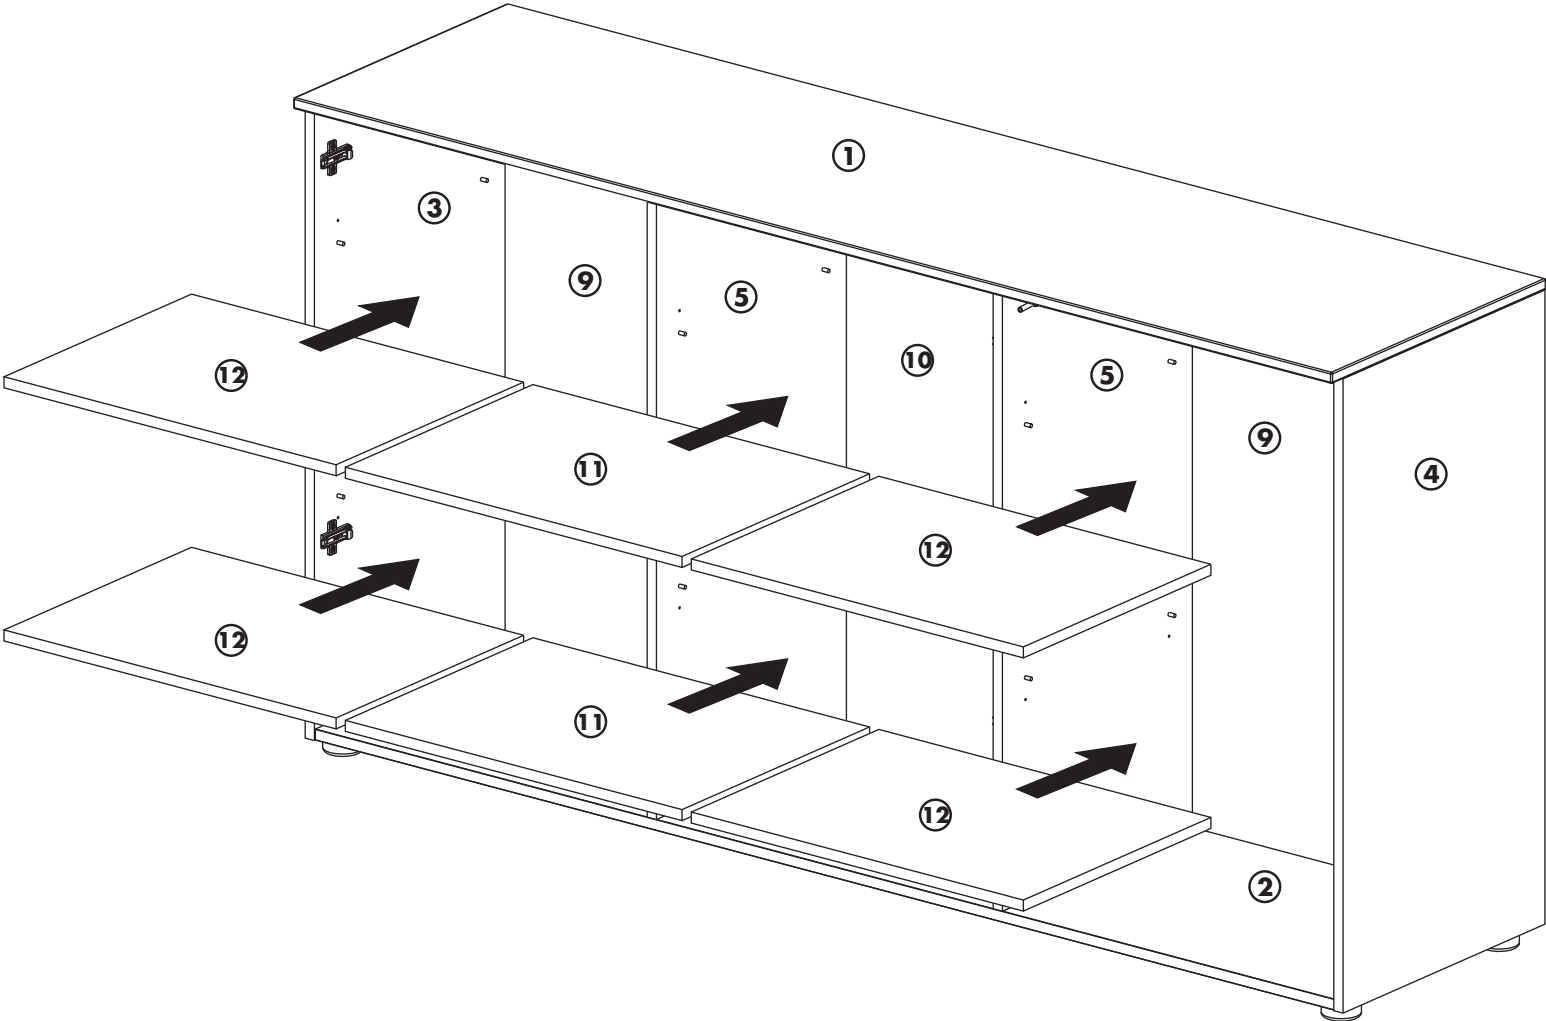


L

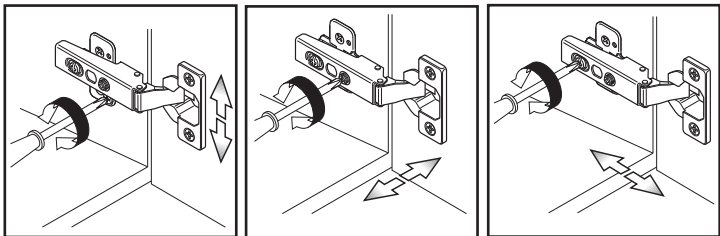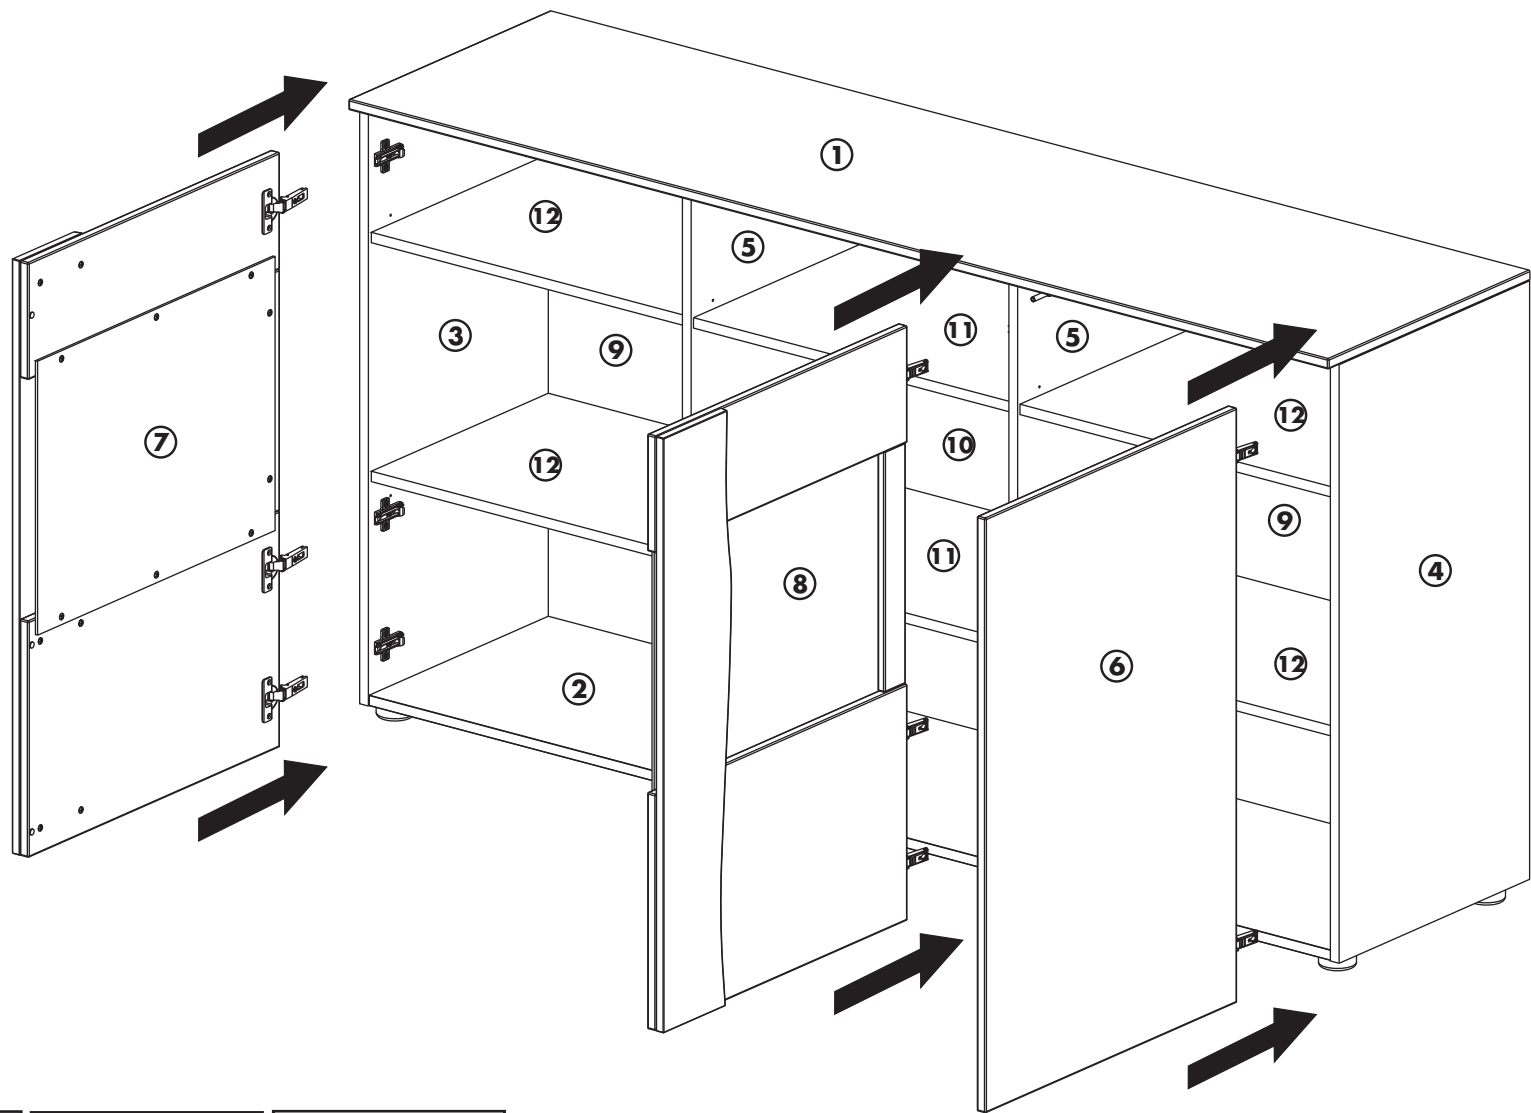


M

			
1x 5 x 100 s28	1x 3,5 x 15 s5	1x wd	1x rv


Kippsicherung
anbringen
Install anti-tip device

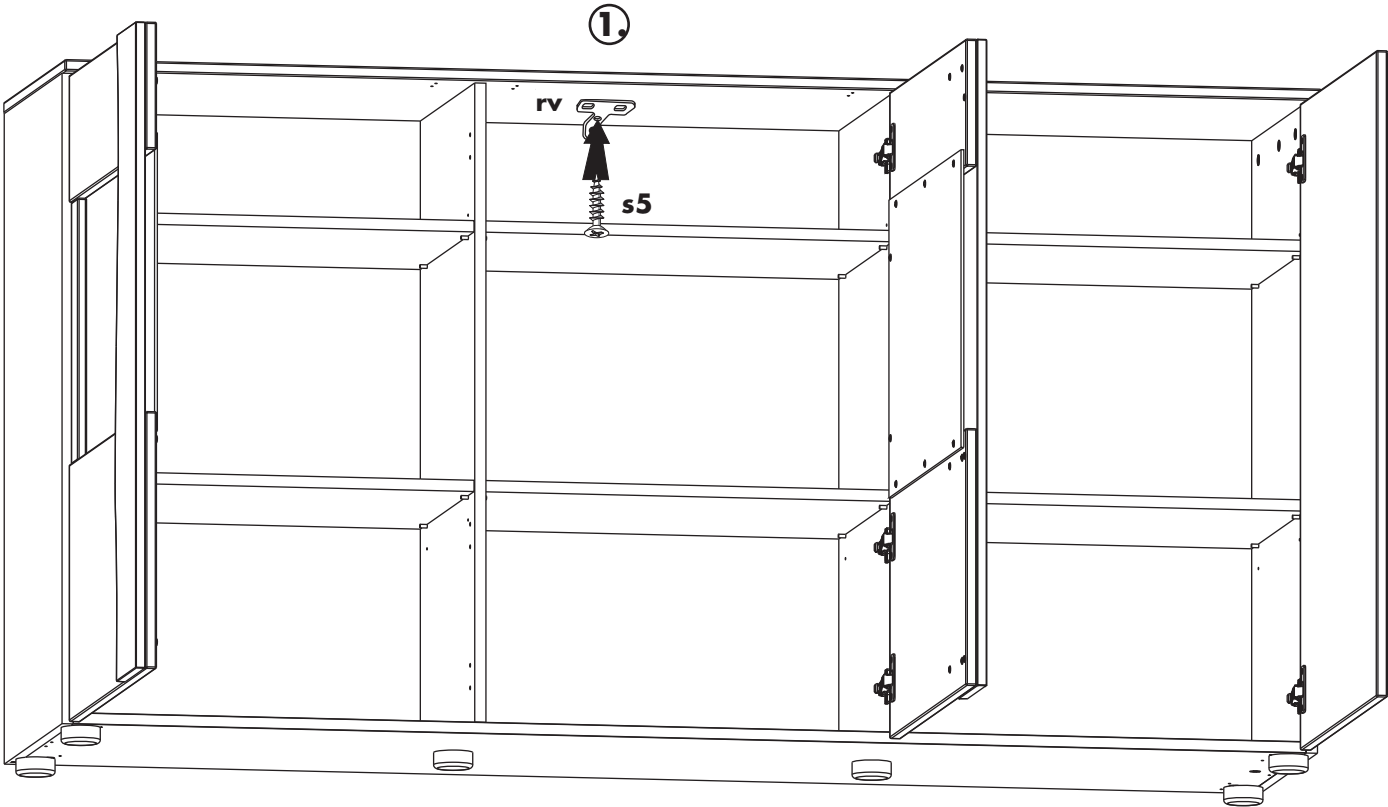

2. Wand markieren
mark wall

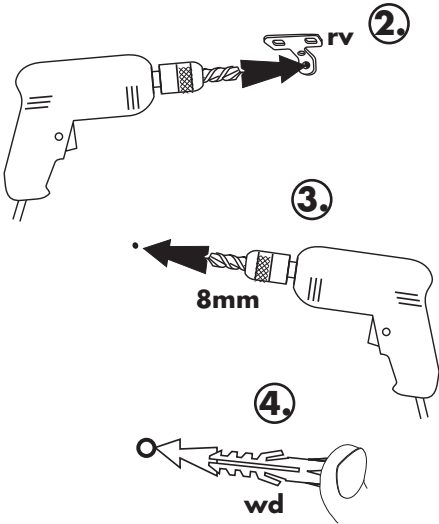

3.

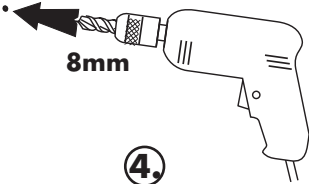

4.



5. Schraube eindrehen
Mount screw

