

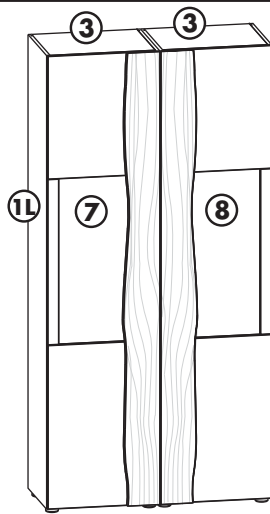


Type 100-122

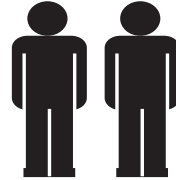

Sie brauchen:
You need:

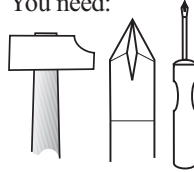

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.











Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!




Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Light Line 15 100-122 / 02.26

				
24x a4	16x e2	18x M4 x 12 gs5	8x 1,5 mm tad4	8x 3 x 20 rw1
				
8x fu	8x fo	16x M4 x 21 gs6	16x 4 x 16 s4	32x rh
				
16x t4	8x ak	4x ak1	8x D 2mm d18	8x c16
				
8x a1	8x tg	32x 3 x 20 s7	24x 8 x 40 p1	16x e5 3mm





Beschlagliste Fittings


			
2x wd	2x rv	2x 5 x 100 s28	2x 3,5 x 15 s5
			
8x e5 3 mm		8x e2	


A1

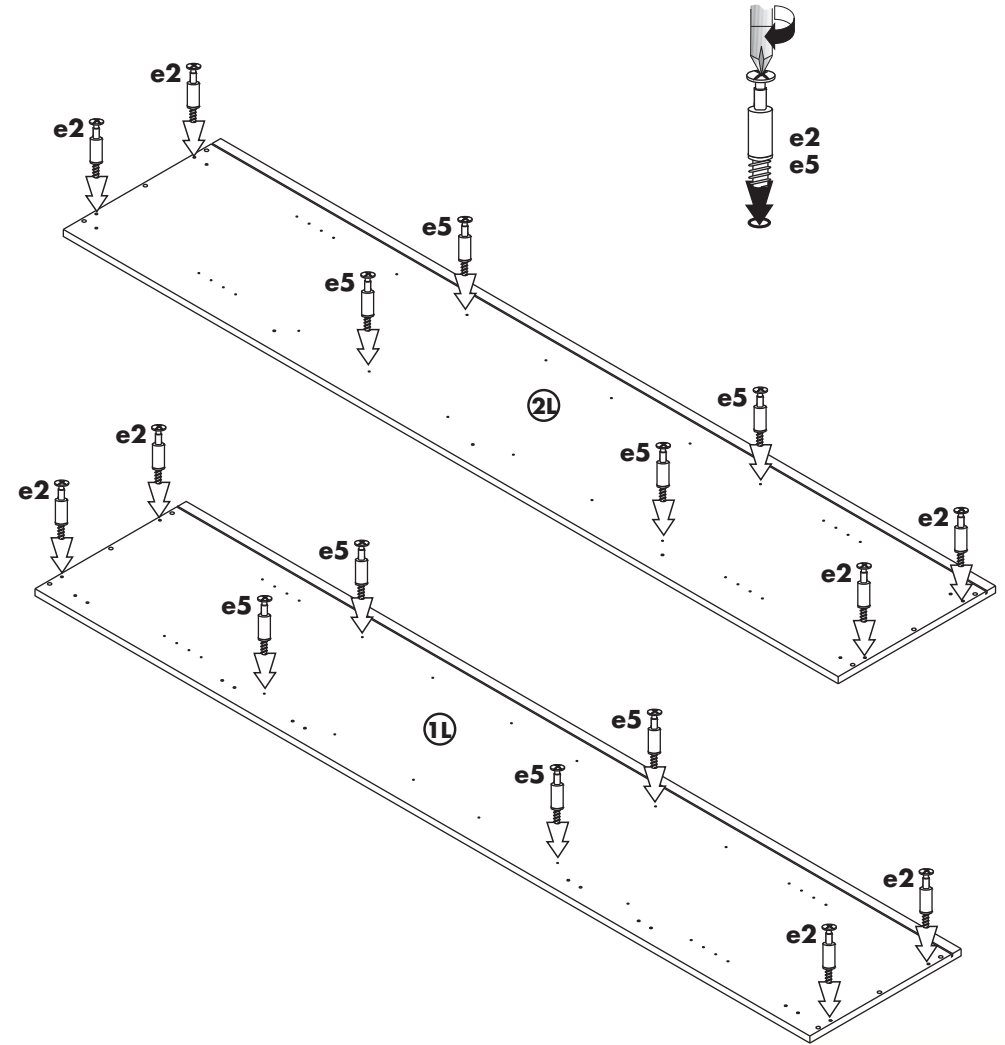


A2

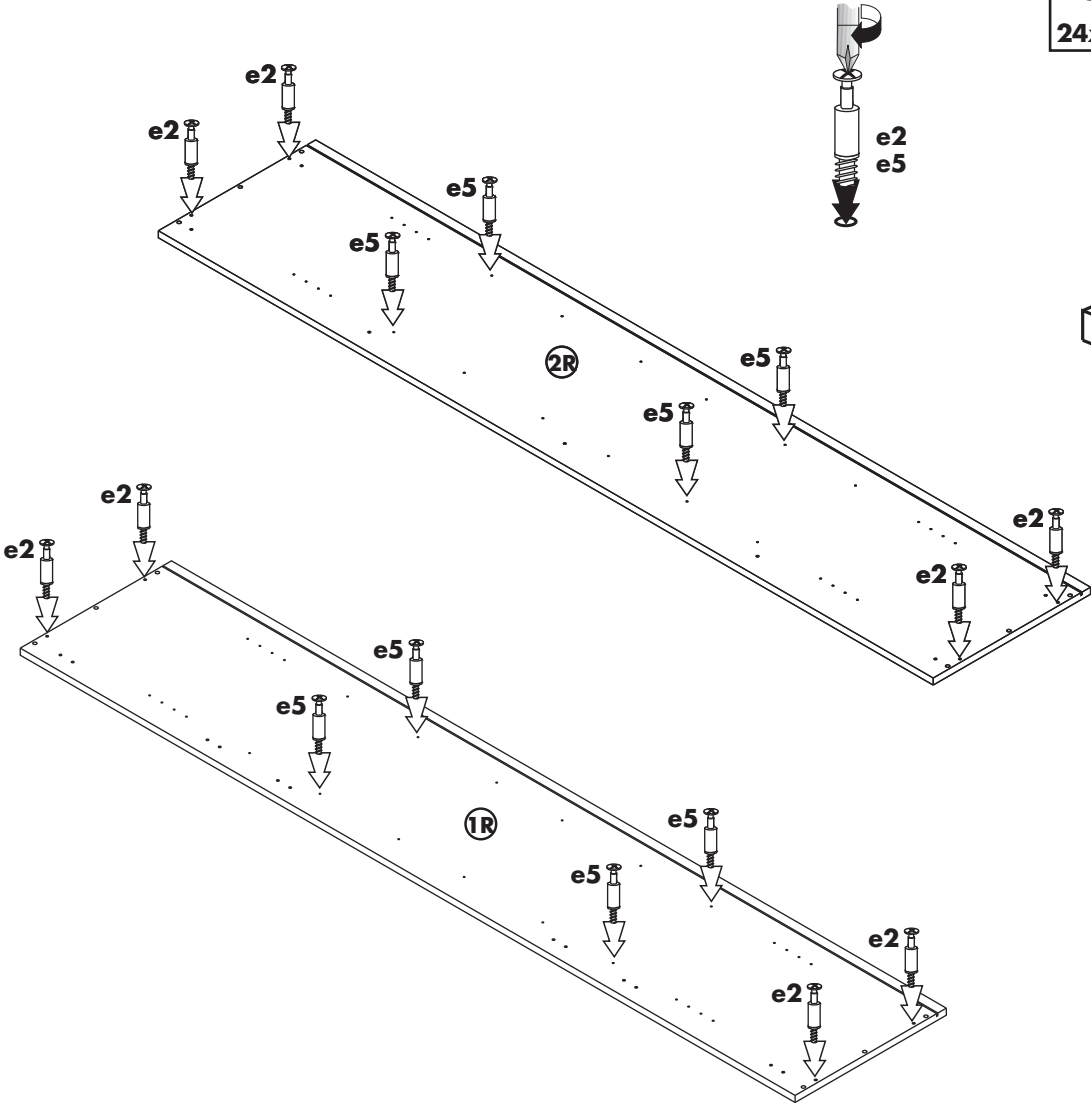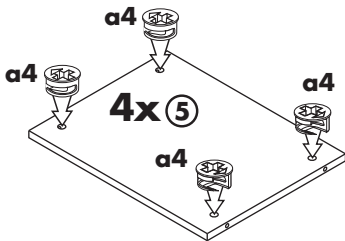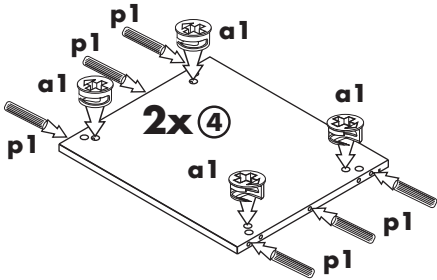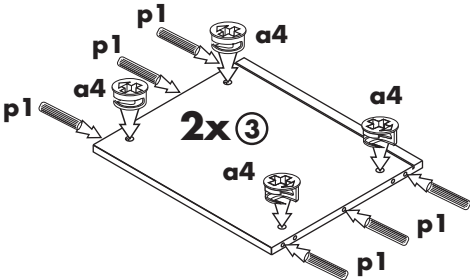




8x		a1	24x		a4
24x		p1	8x		e2
12 mm					
8x		e5	3 mm		

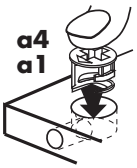


B

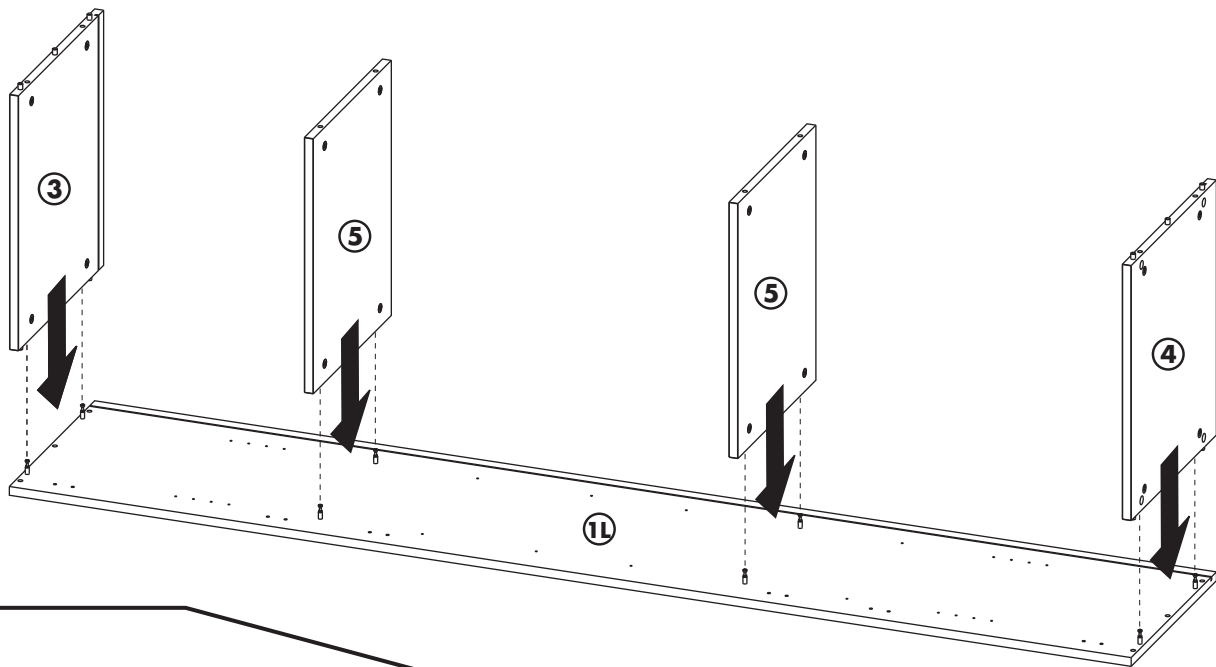



C

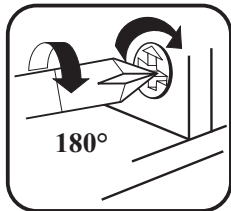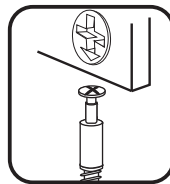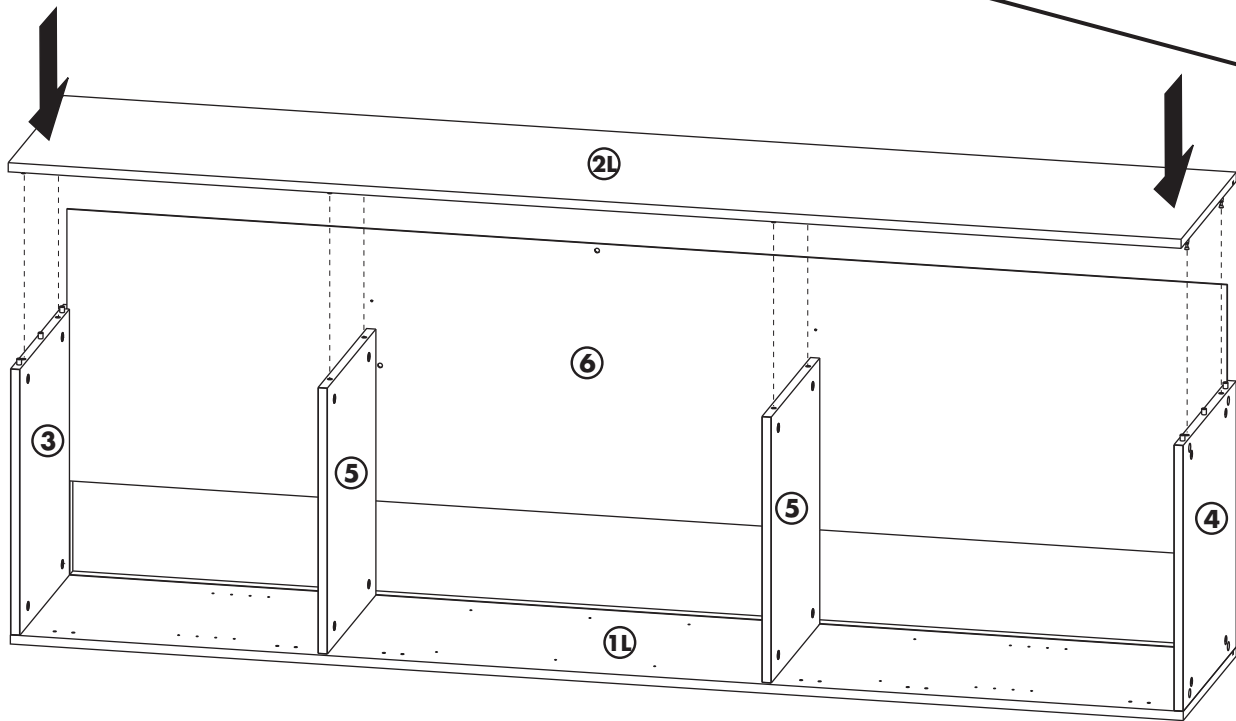


D

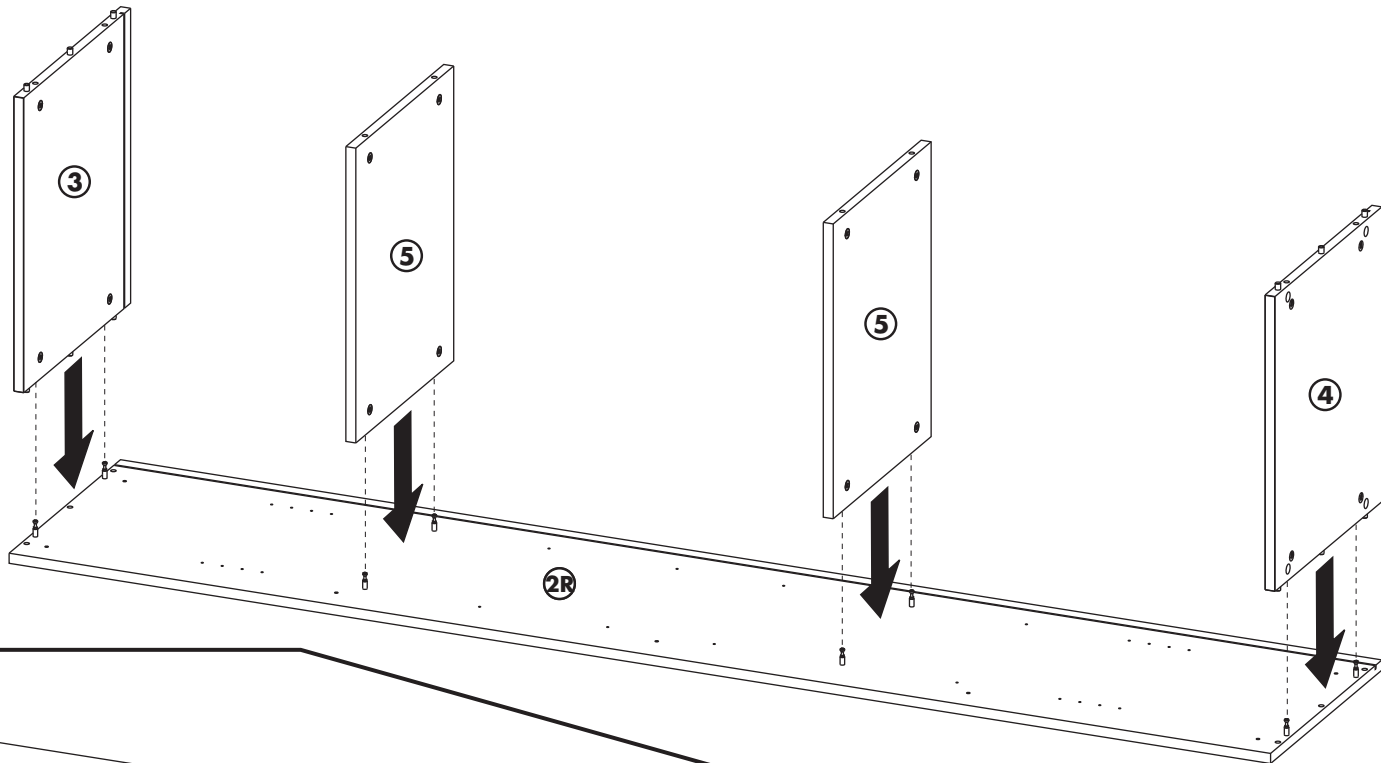


E

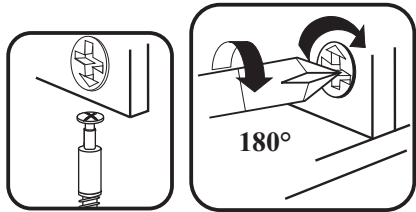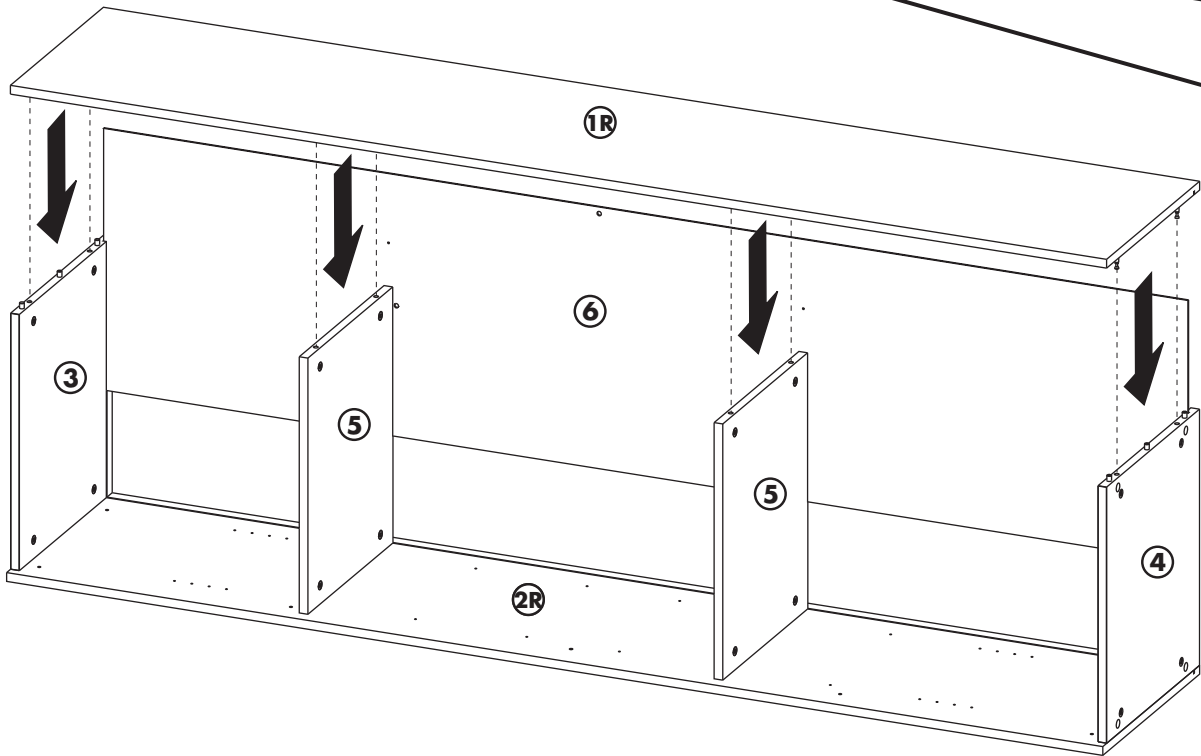





F






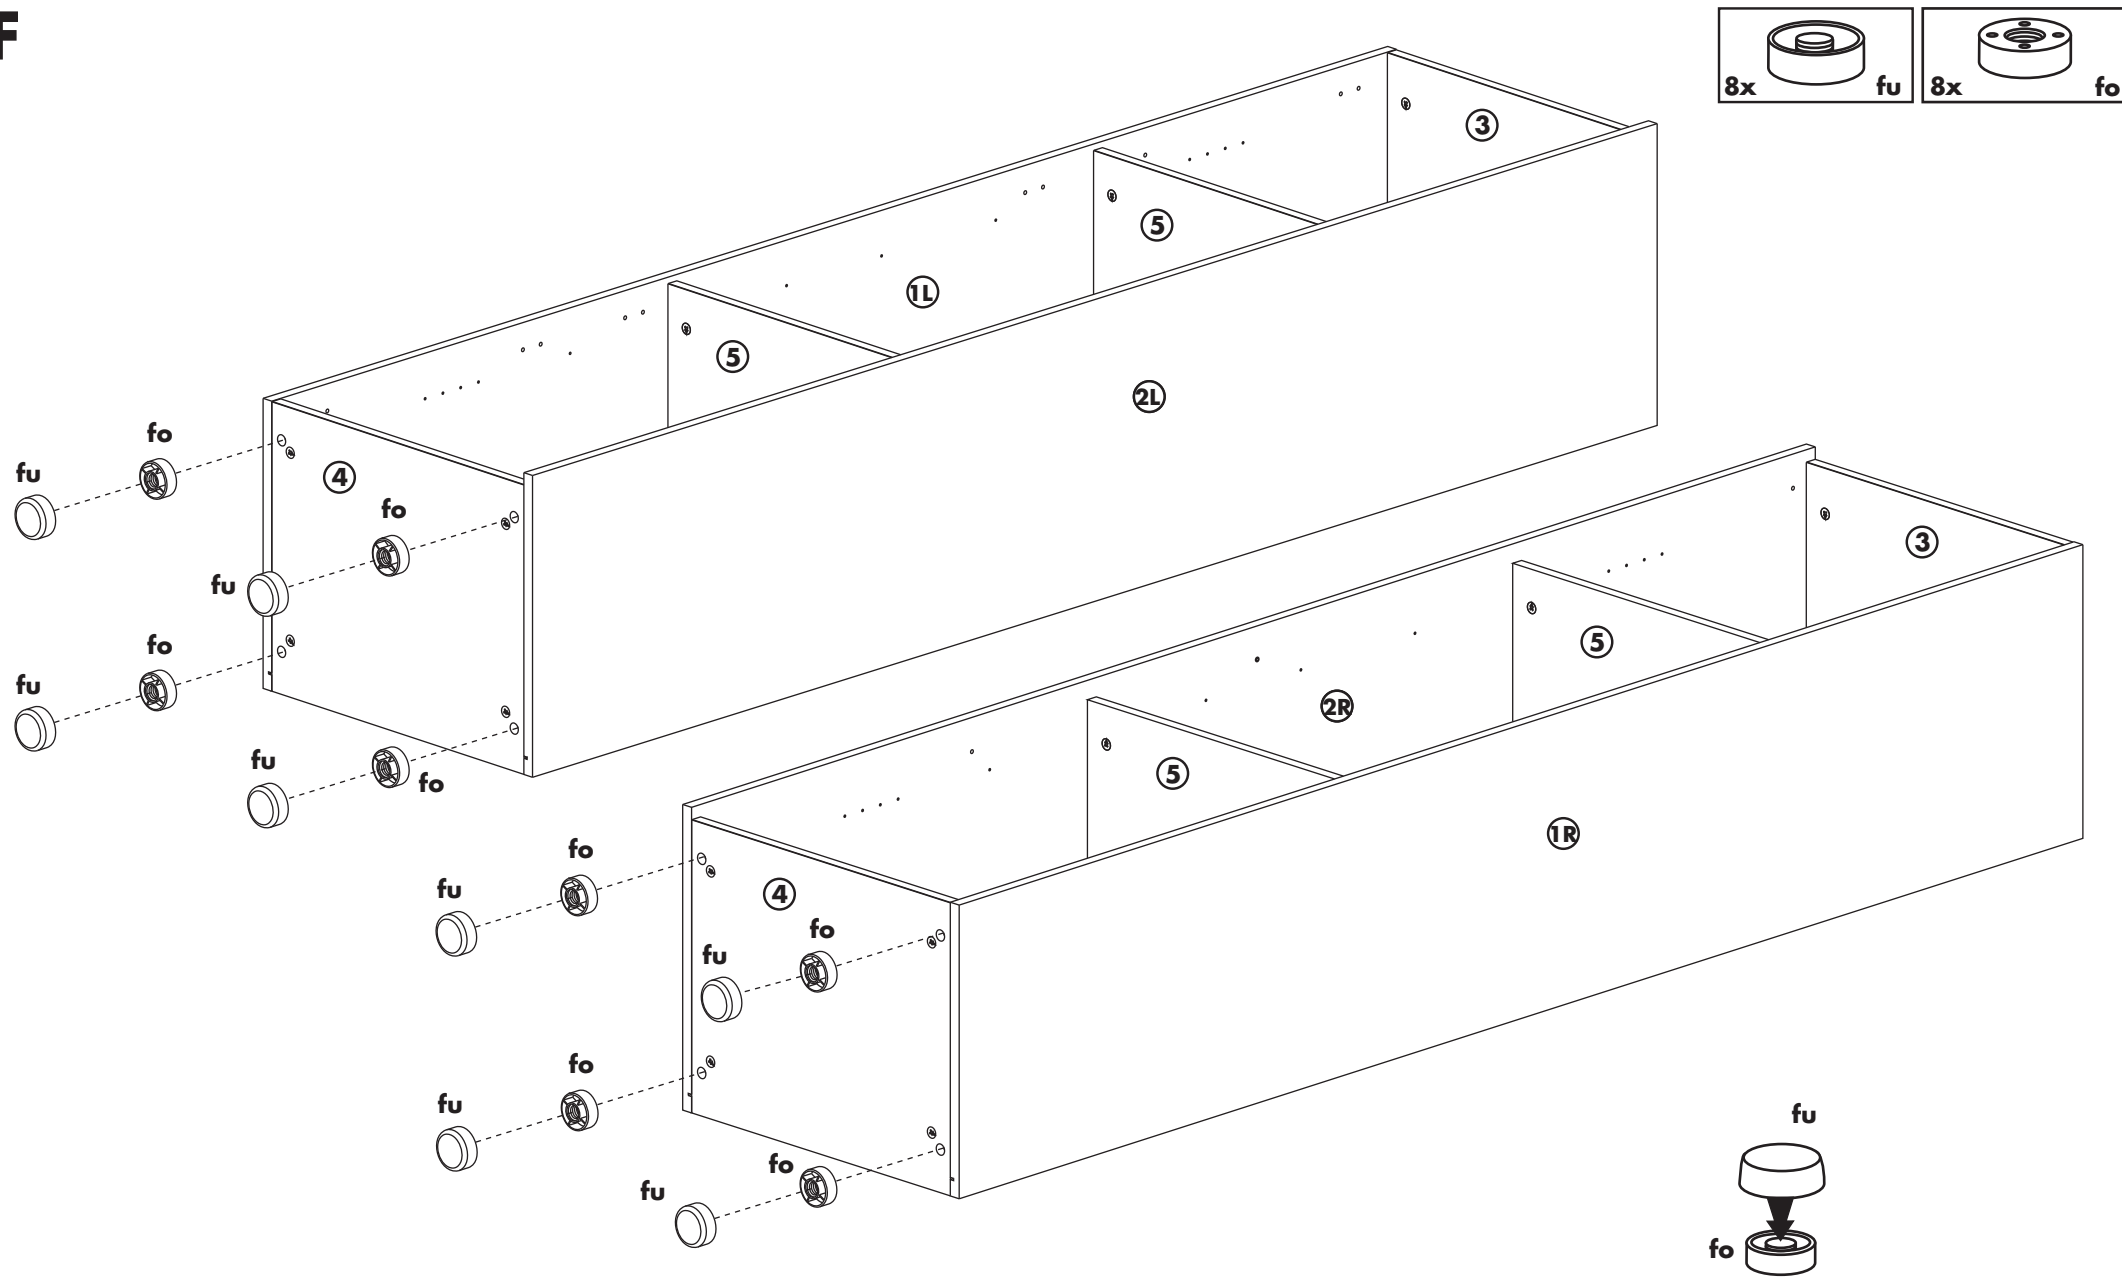


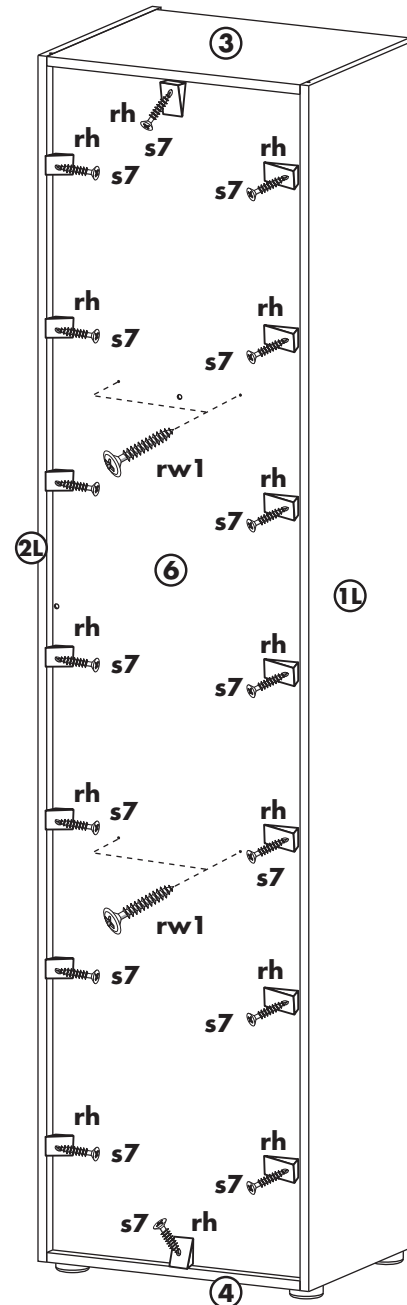


H

	
7x gwh1	14x M4 x 15 gs7

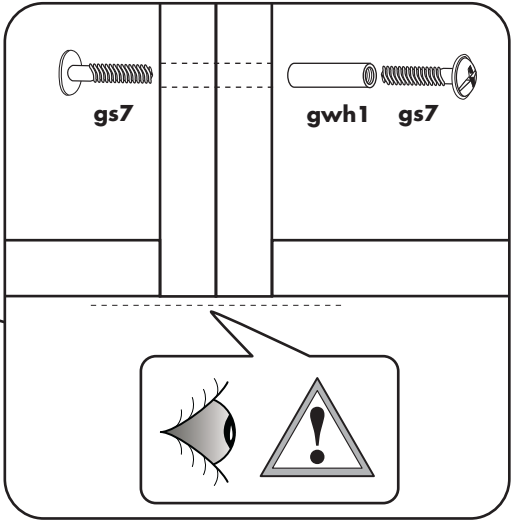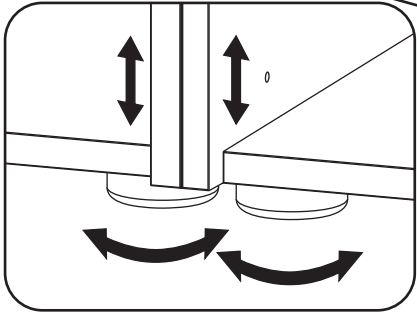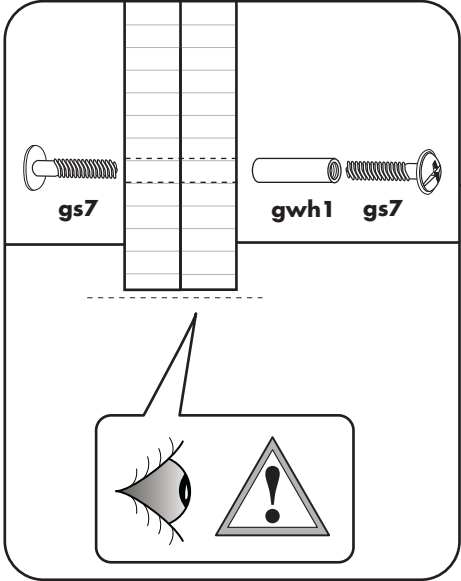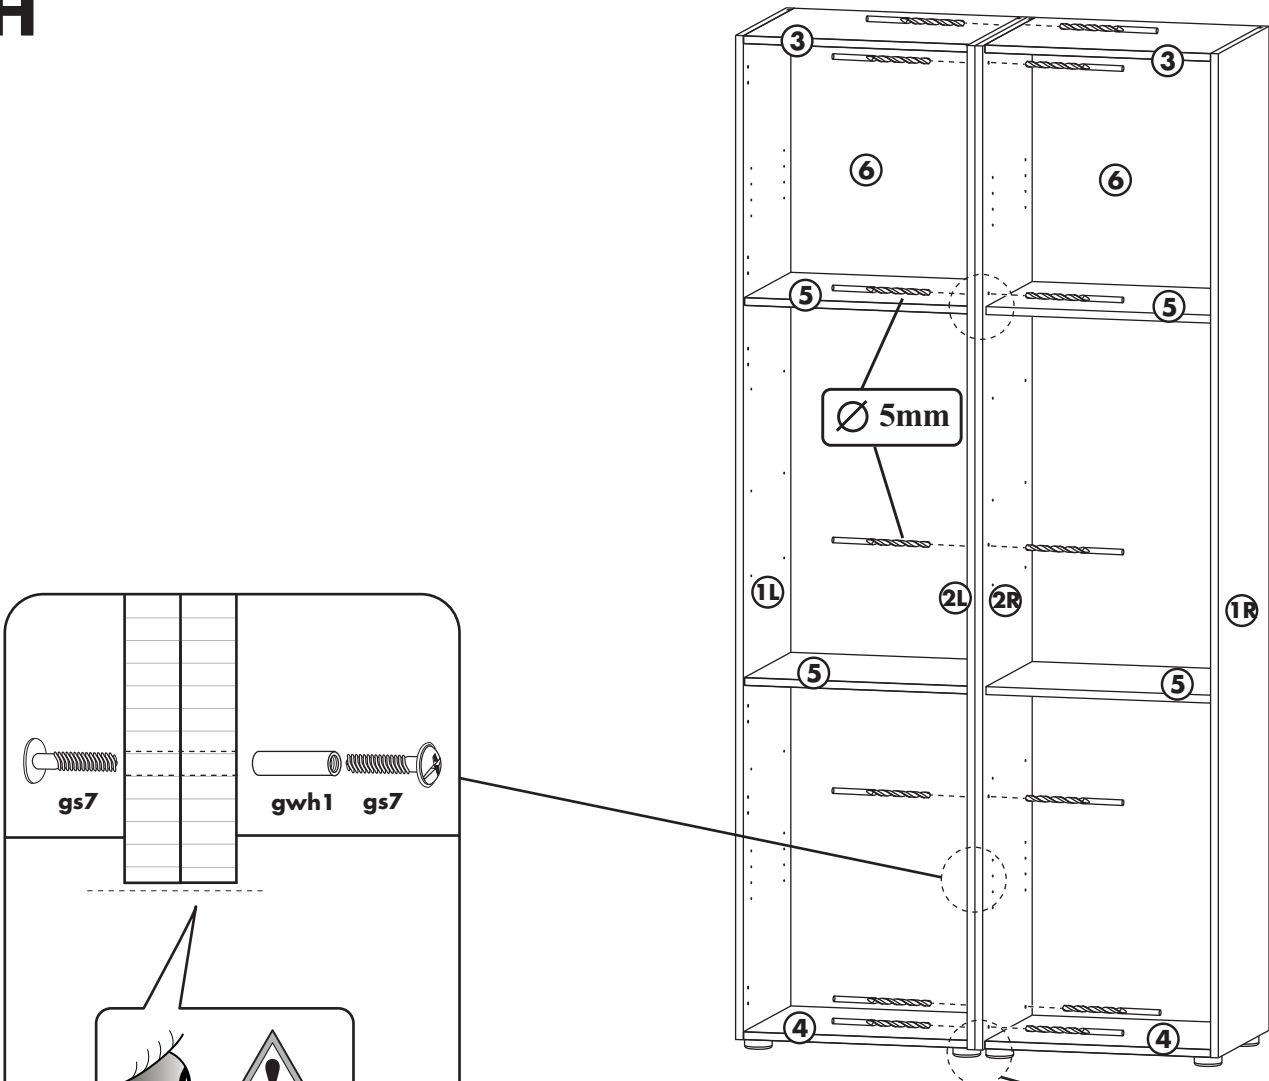


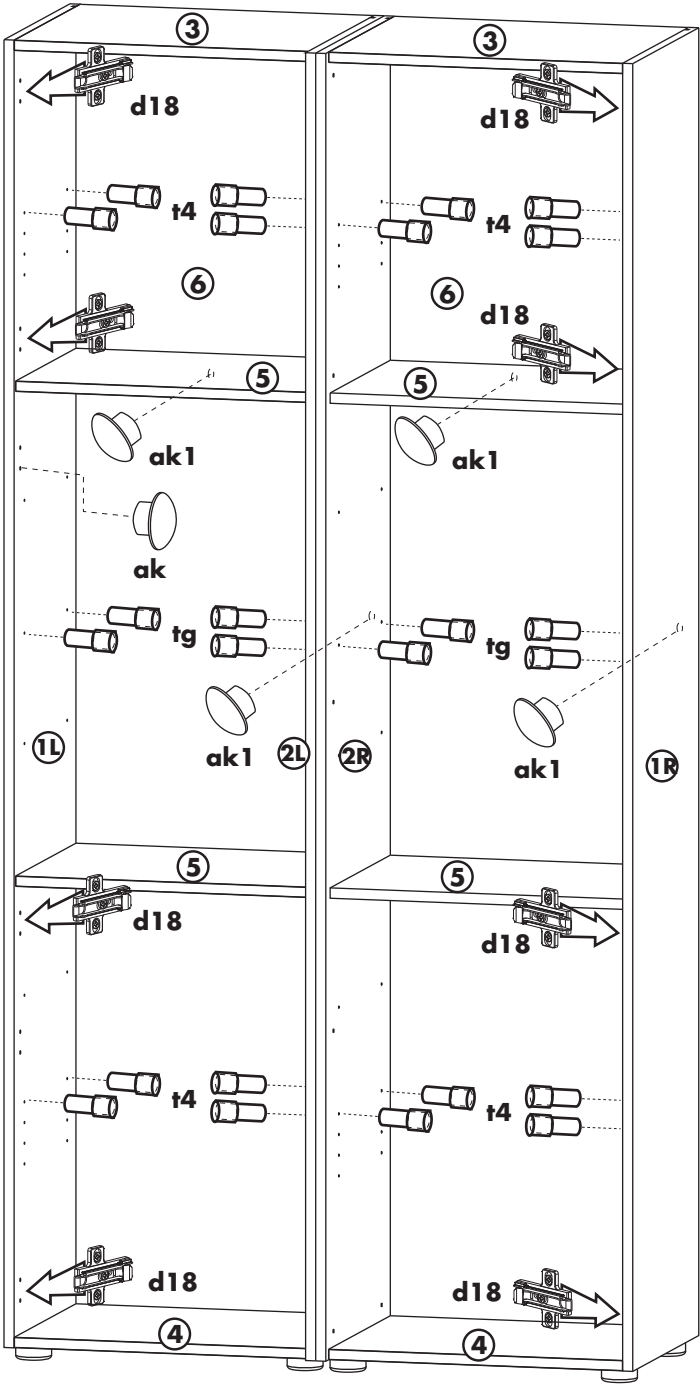


J

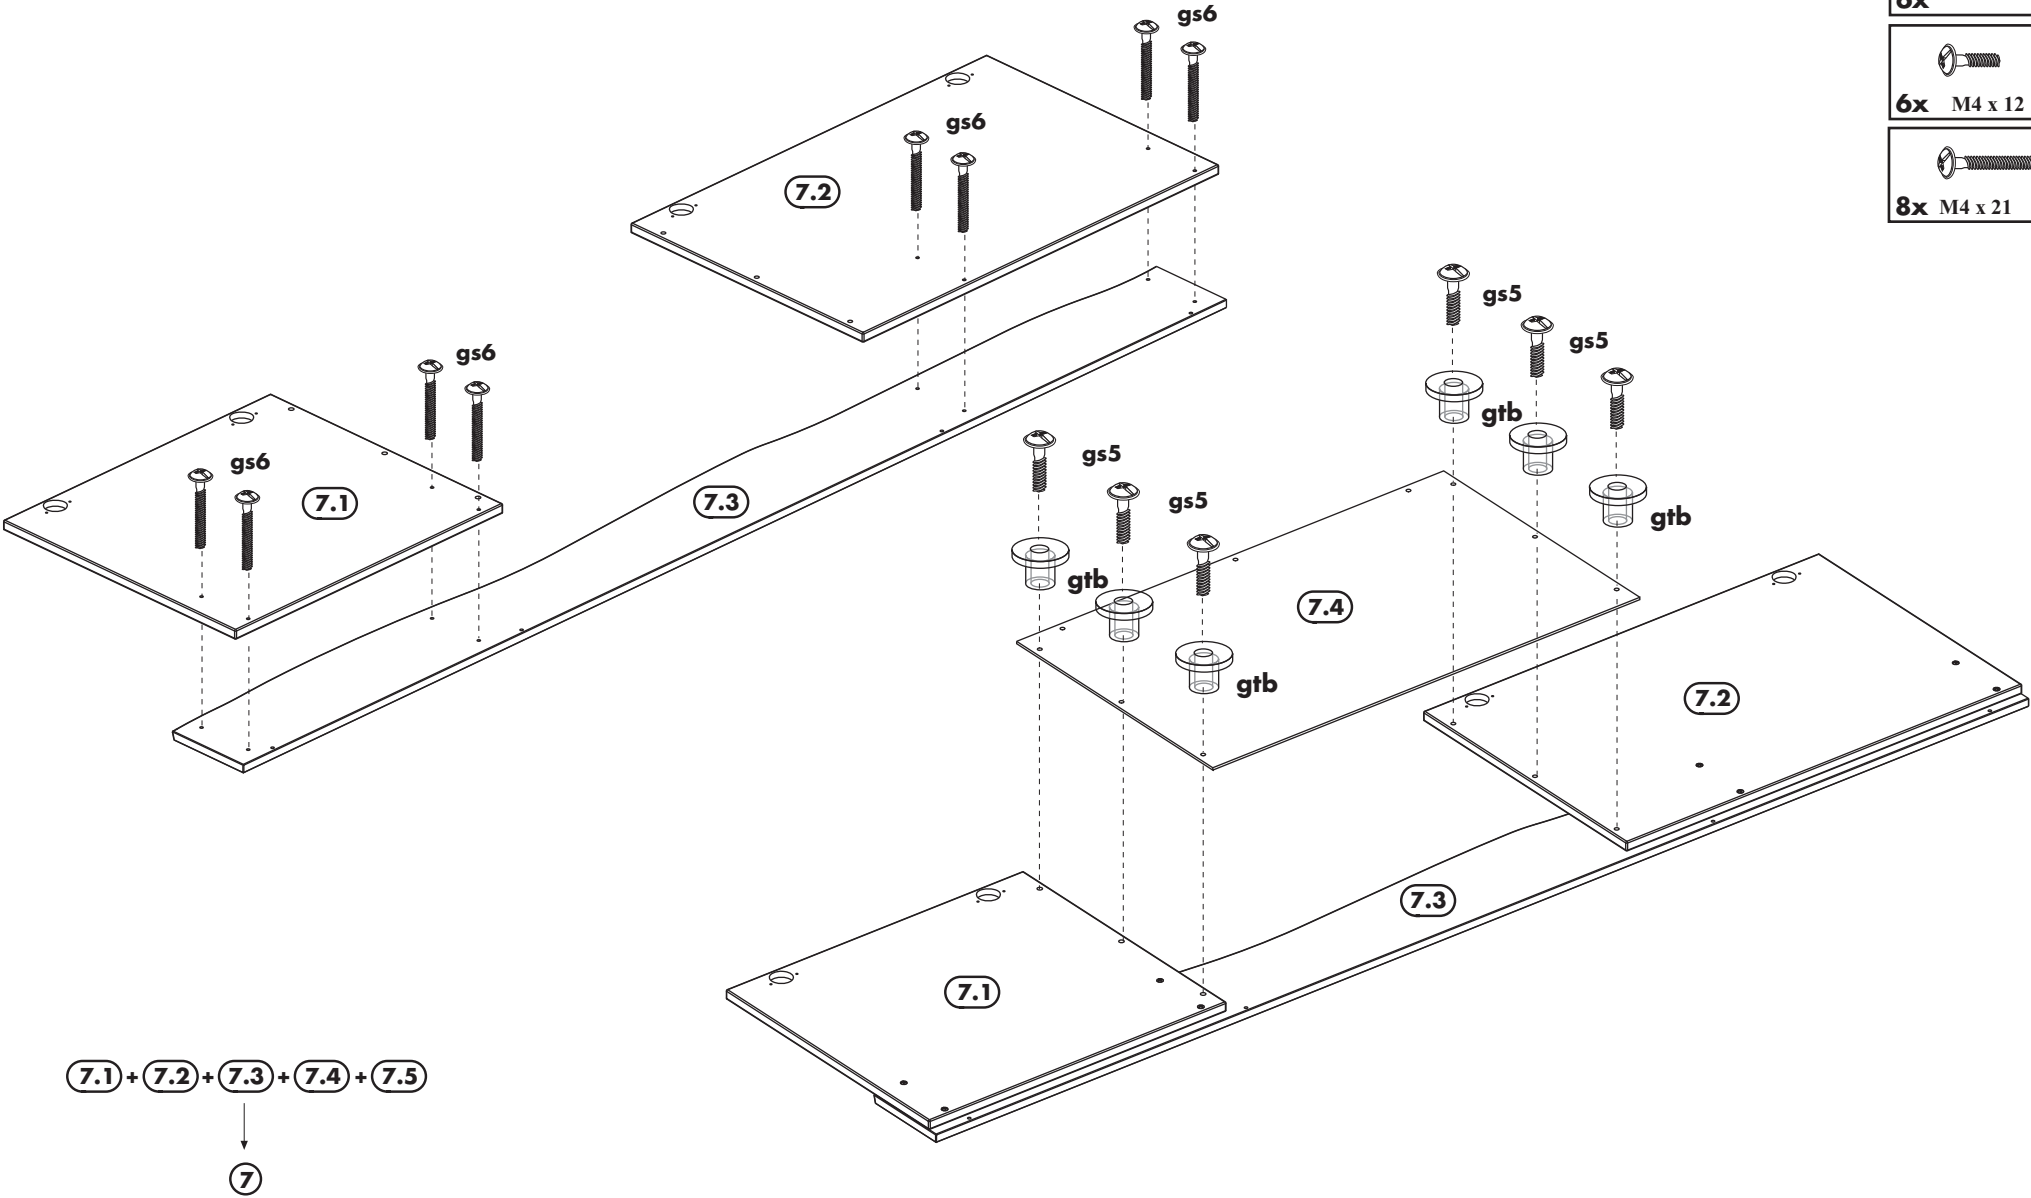


K


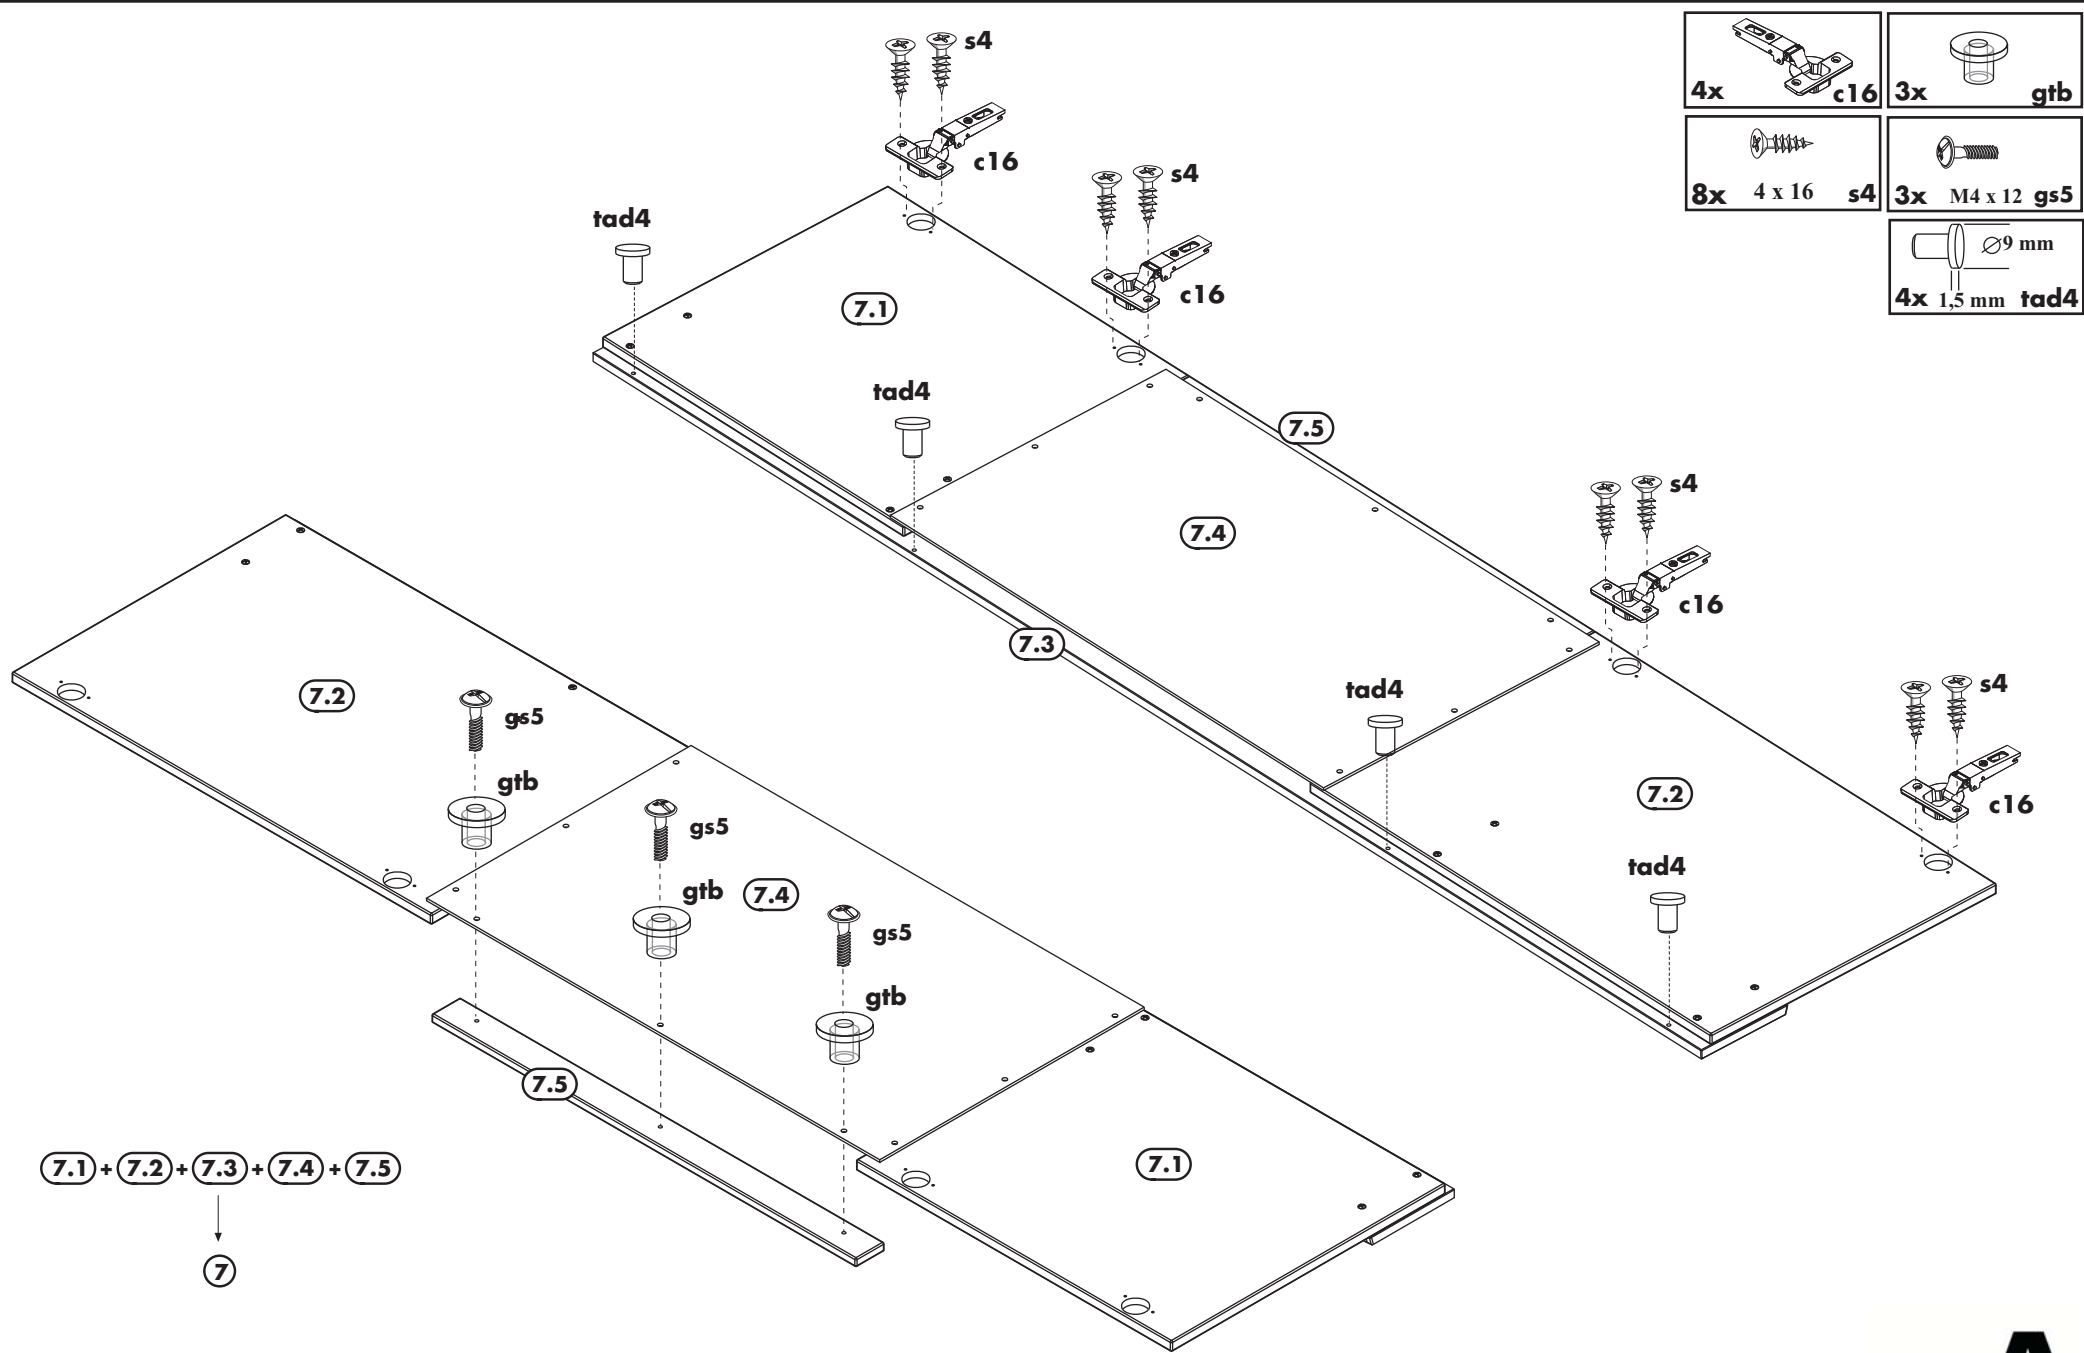


L

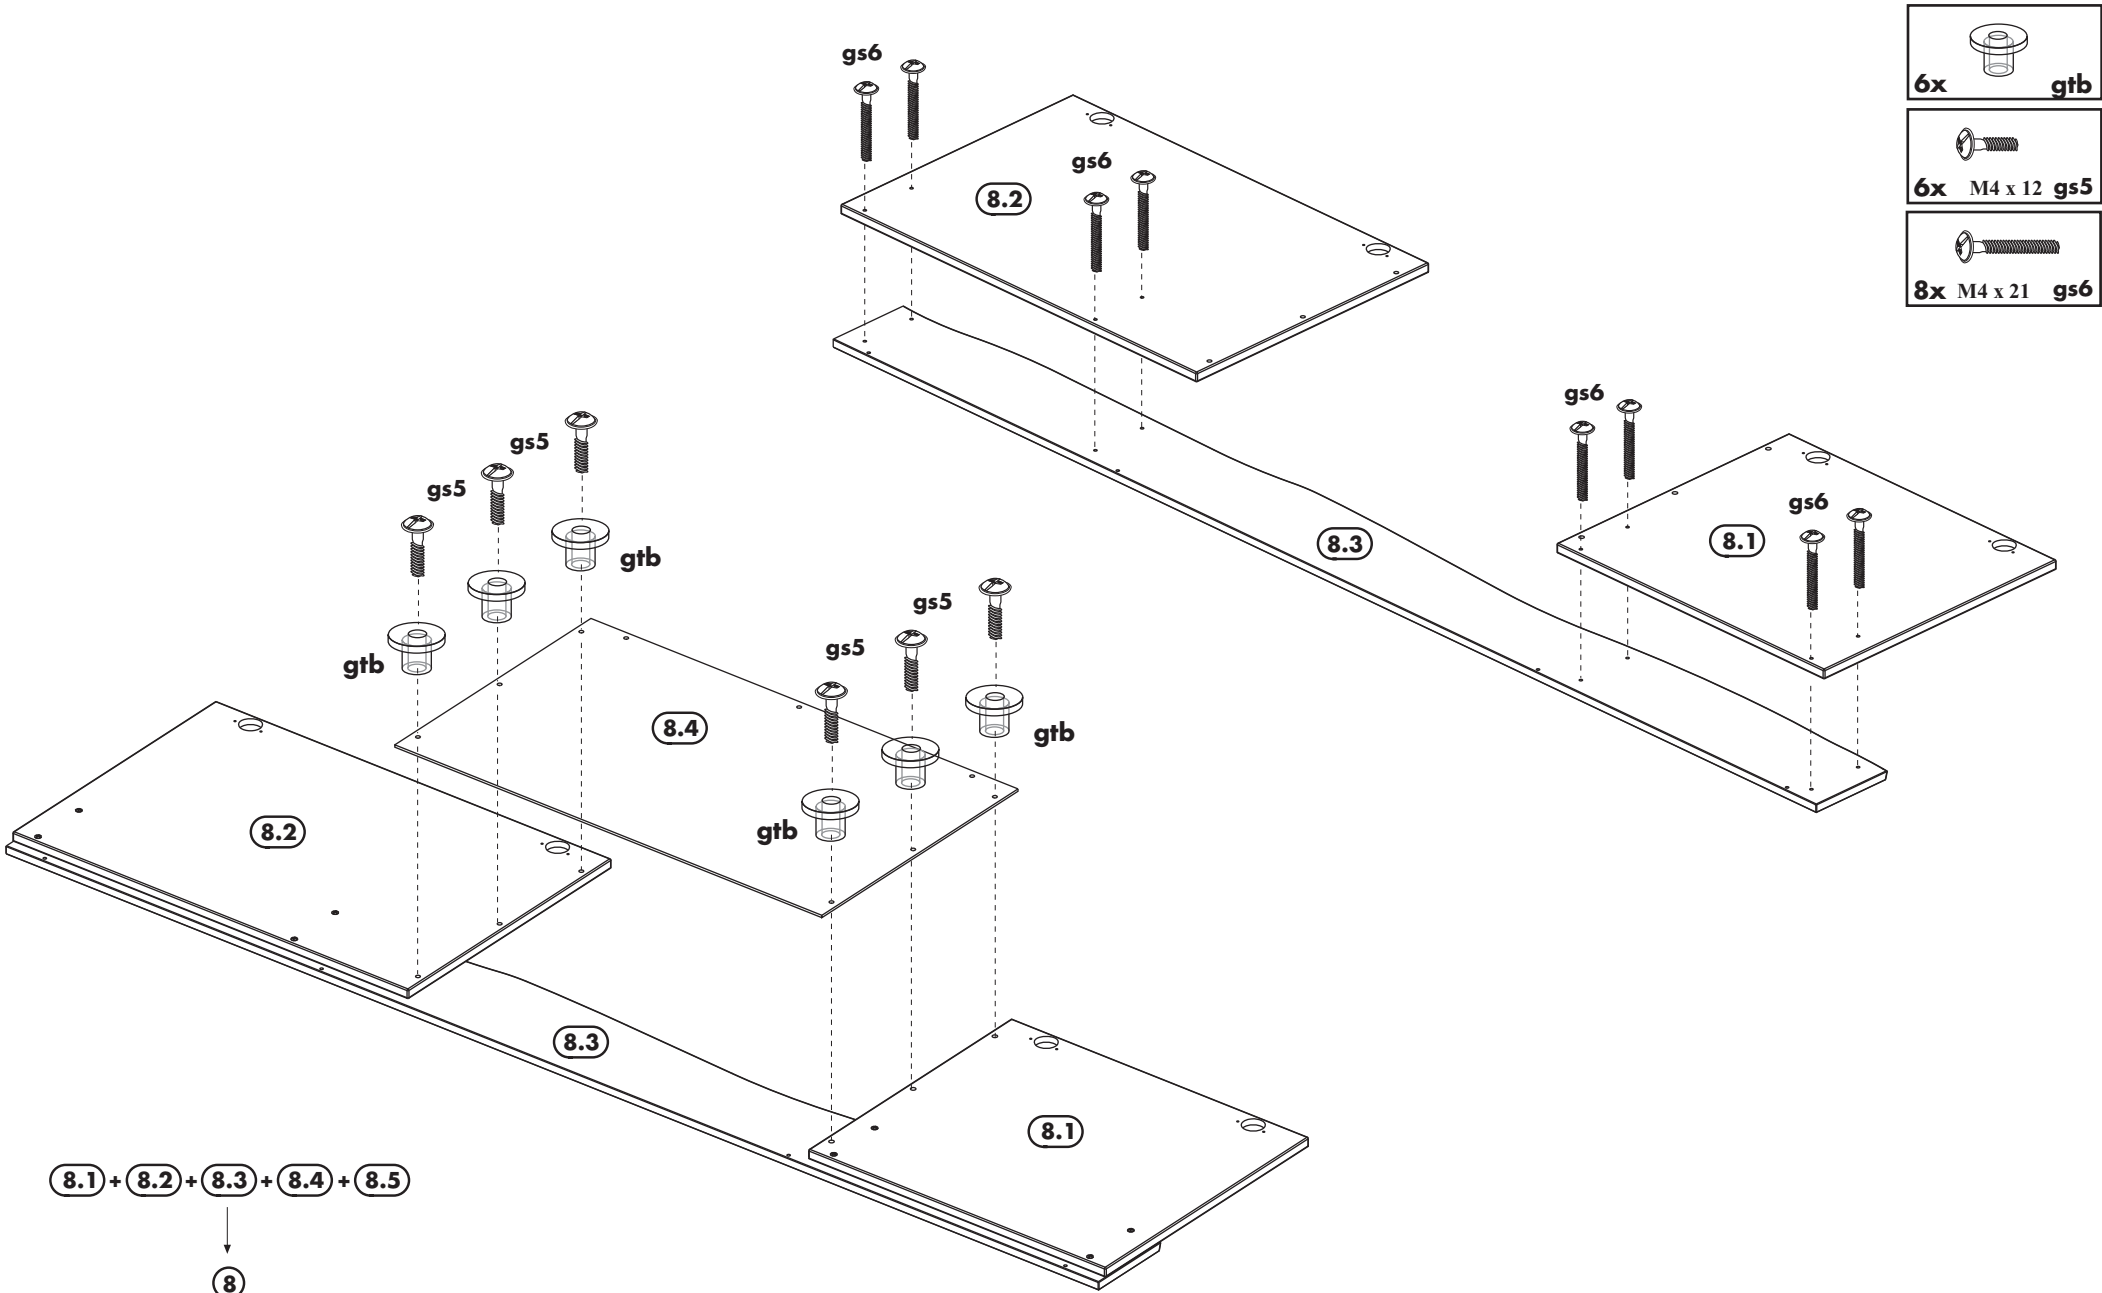


M

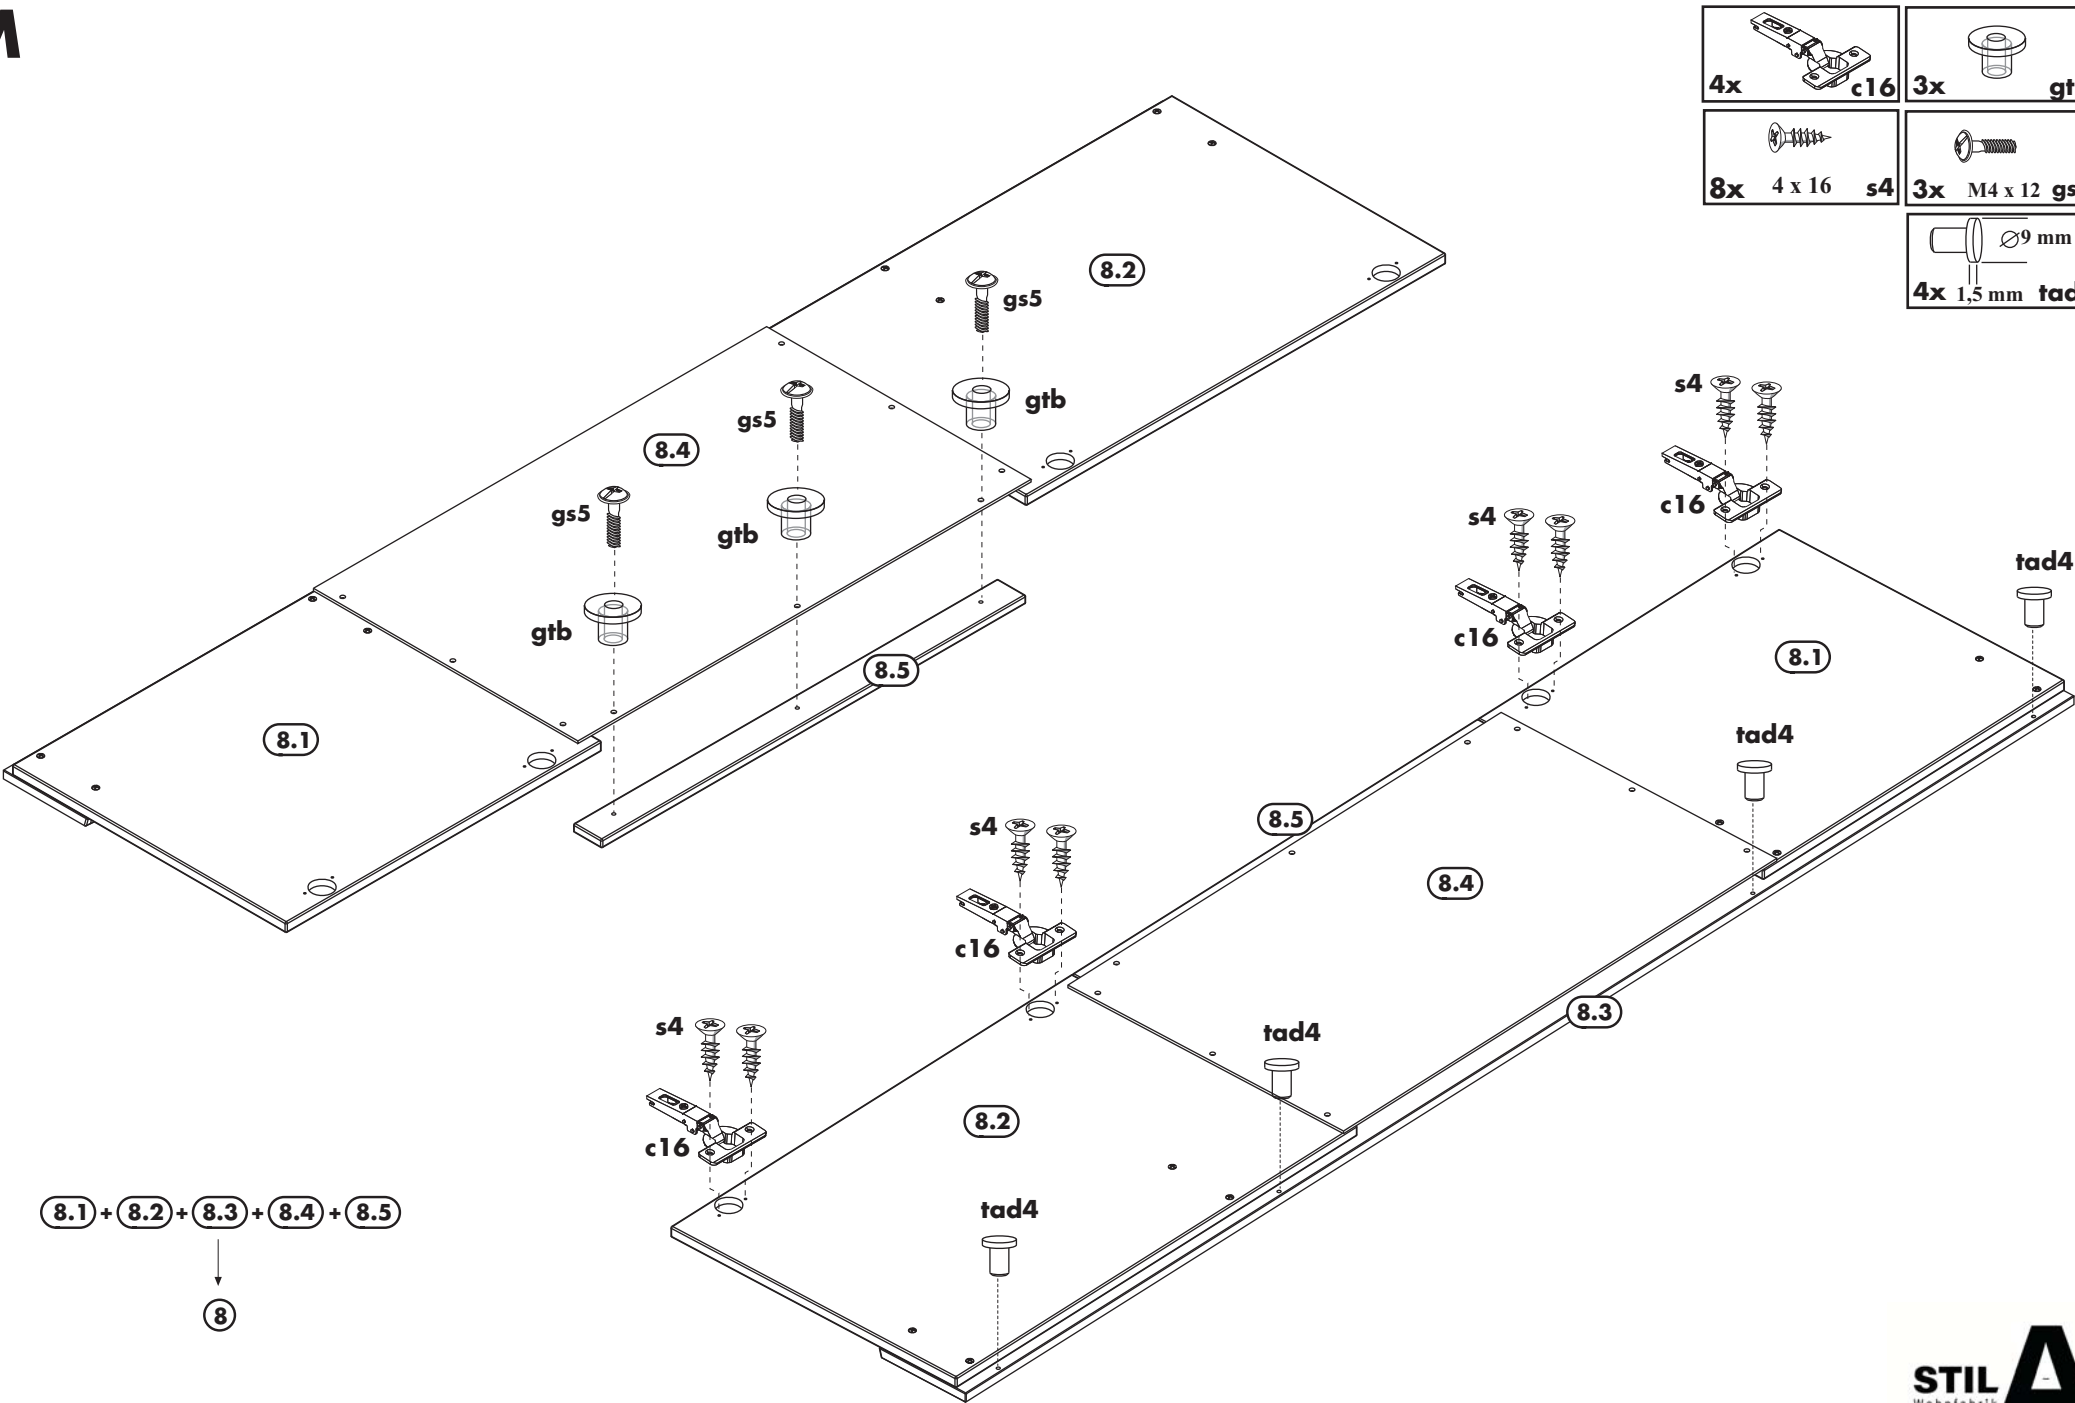

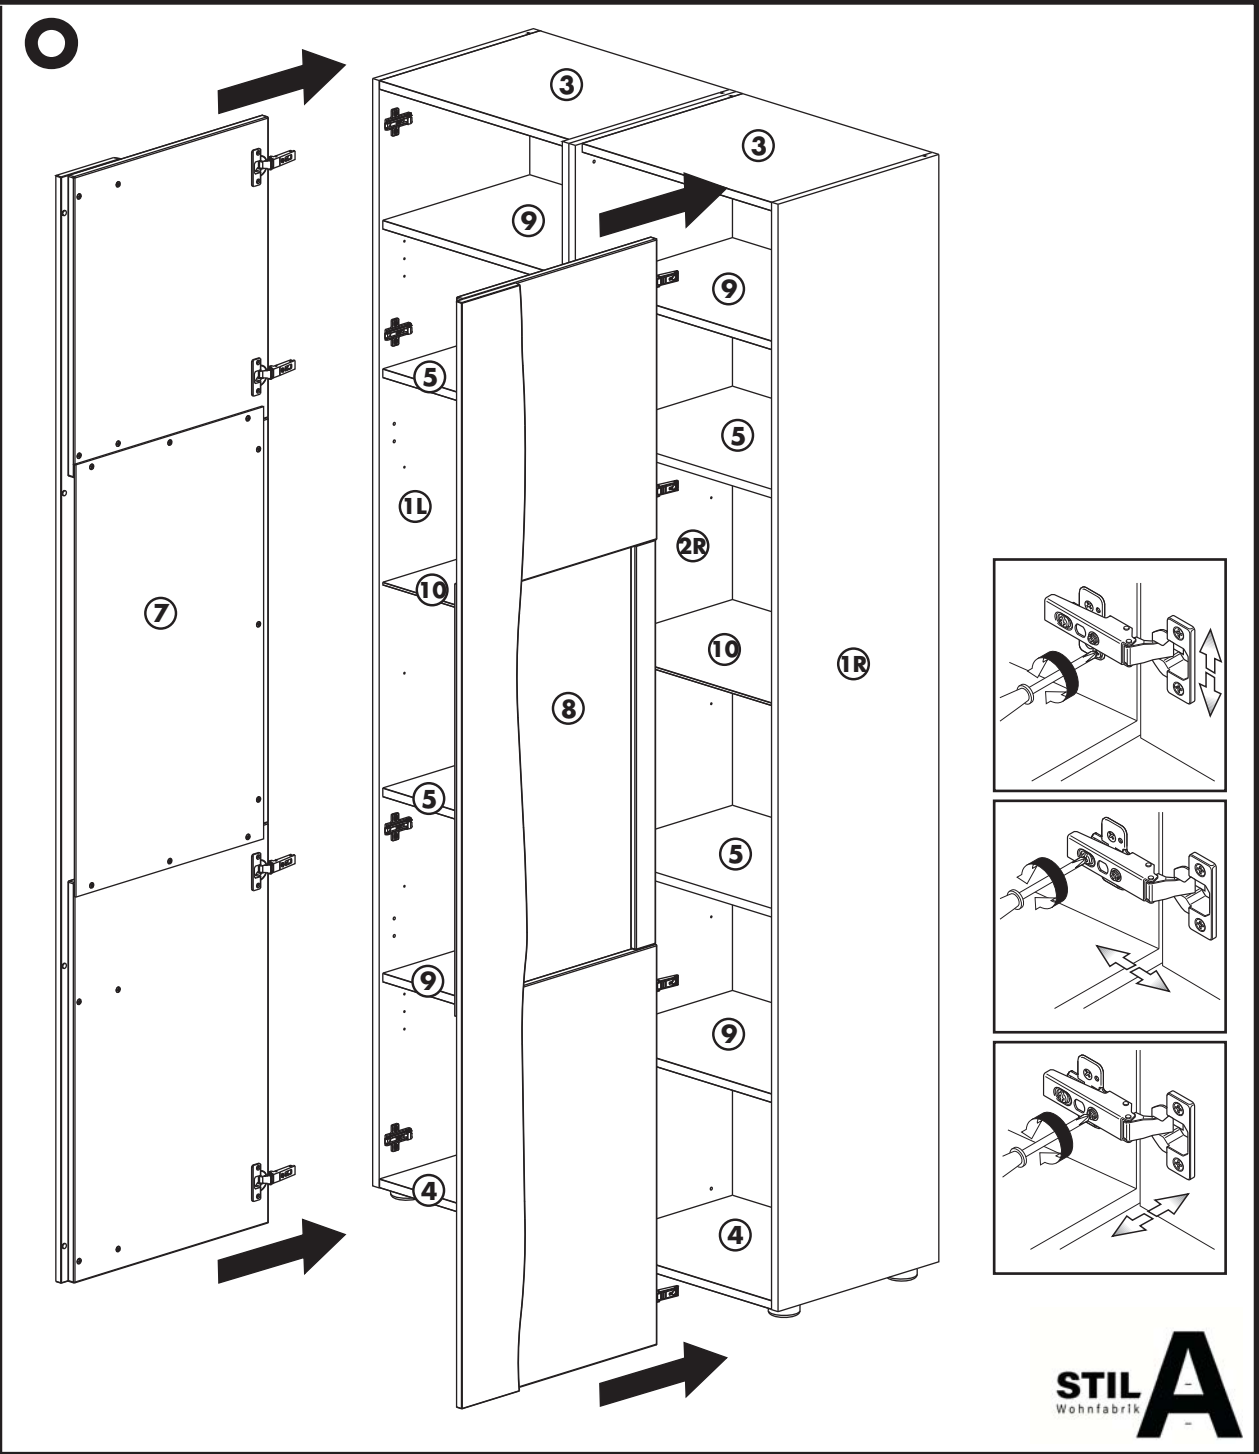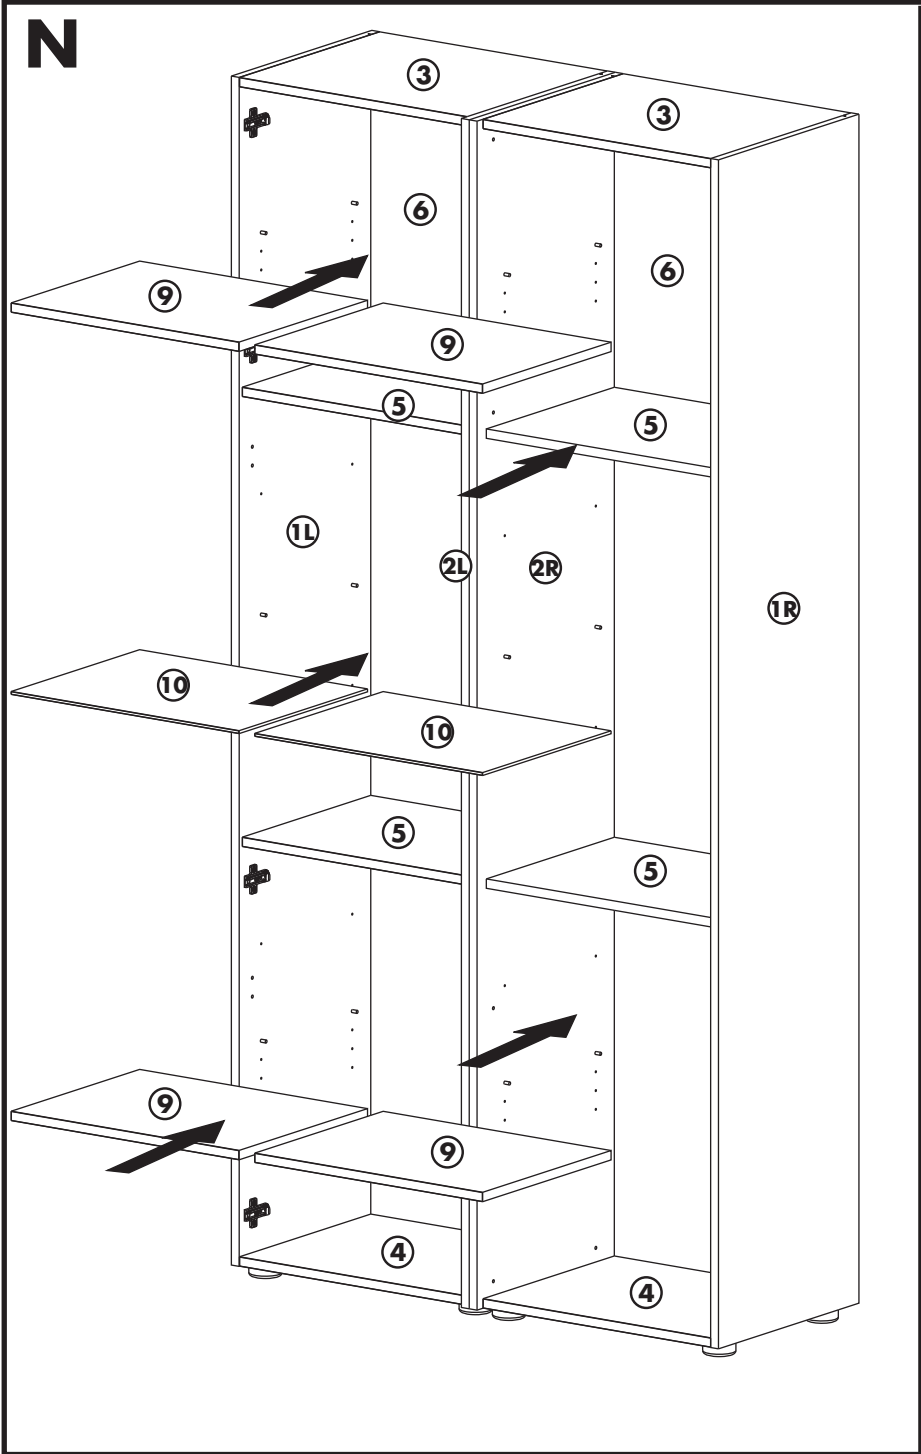


P

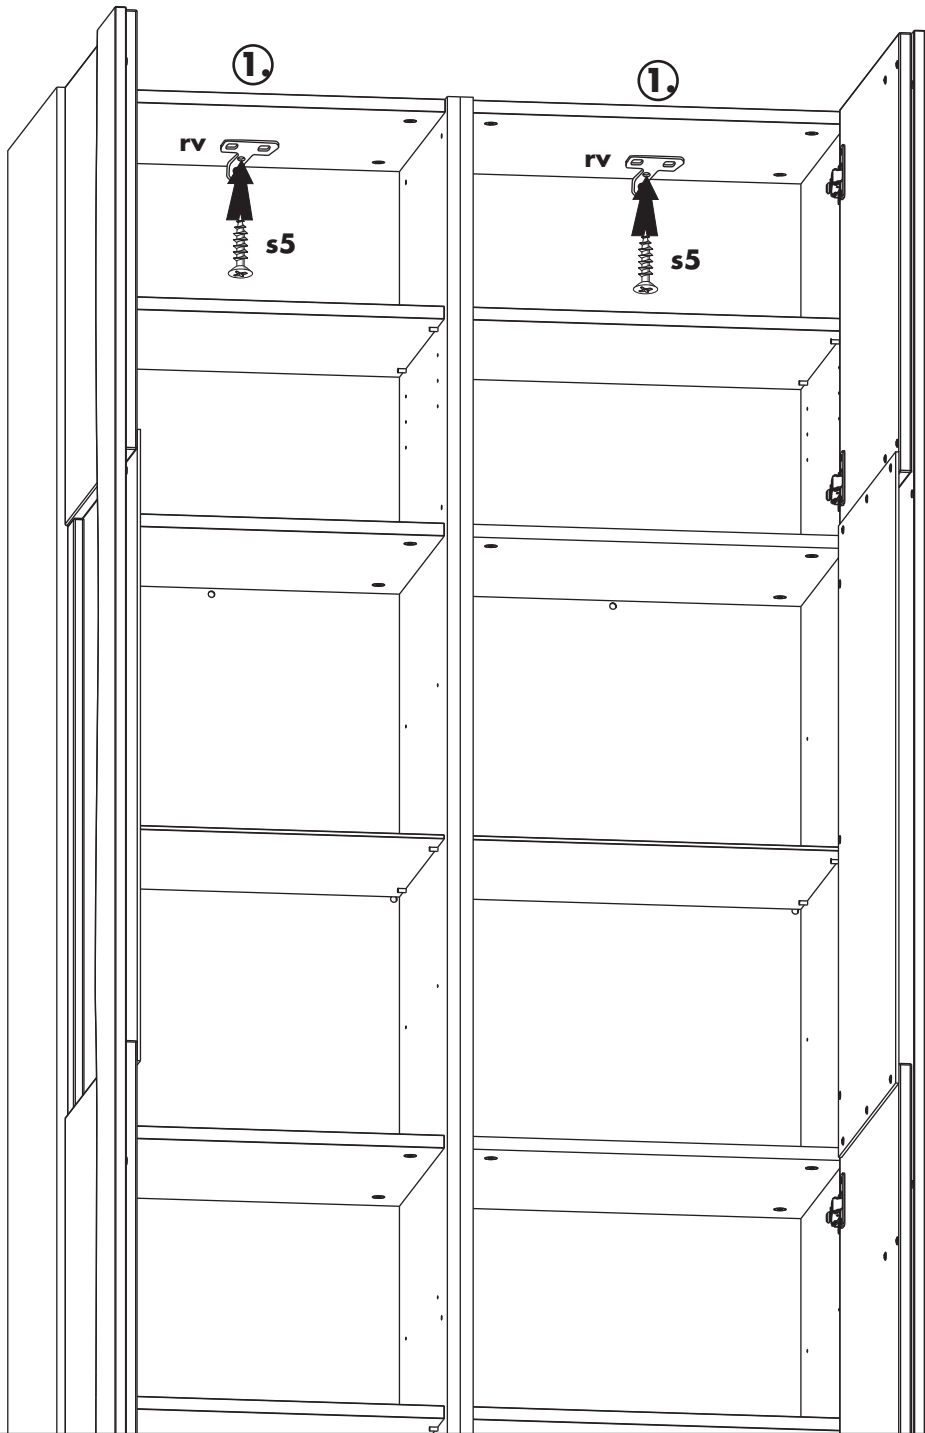

			
2x 5 x 100 s28	2x 3,5 x 15 s5	2x wd	2x rv

Kippsicherung
anbringen
Install anti-tip device

2. Wand markieren
mark wall

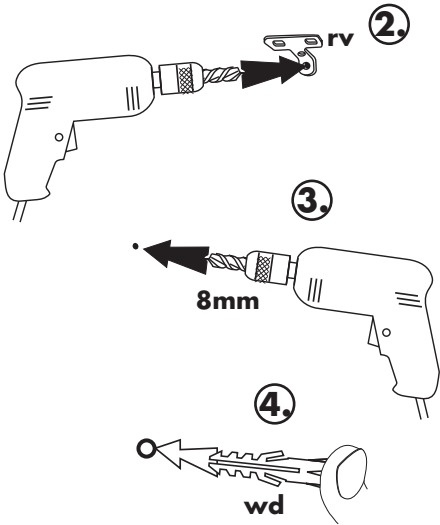

5. Schraube eindrehen
Mount screw

