

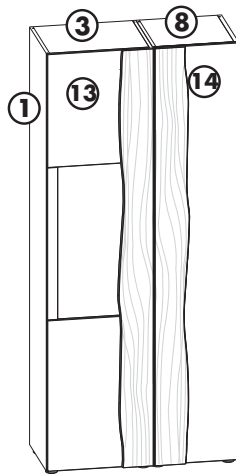


Type 100-123

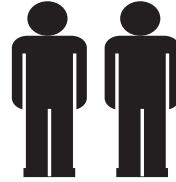

Sie brauchen:
You need:

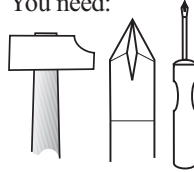

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.









If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


 9x gtb	 2x wd	 2x rv	 2x 5 x 100 s28	 2x 3,5 x 15 s5
 20x a4	 20x e2	 9x M4 x 12 gs5	 4x 1,5 mm tad4	 6x 3 x 20 rw1
 8x fu	 8x fo	 16x M4 x 21 gs6	 16x 4 x 16 s4	 32x rh
 16x t4	 5x ak	 2x ak1	 8x D 2mm d18	 8x c16
 8x a1	 4x tg	 32x 3 x 20 s7	 24x 8 x 40 p1	 8x e5 3mm

CAD und Design
Light Line 15 100-123 / 02.26

Beschlagliste Fittings


 2x 3 x 15 s6	 1x mg5b	 1x mg5a	 1x mg5d
 1x 3,5 x 25 s16	 12x M4 x 15 gs7	 6x gwh1	


A

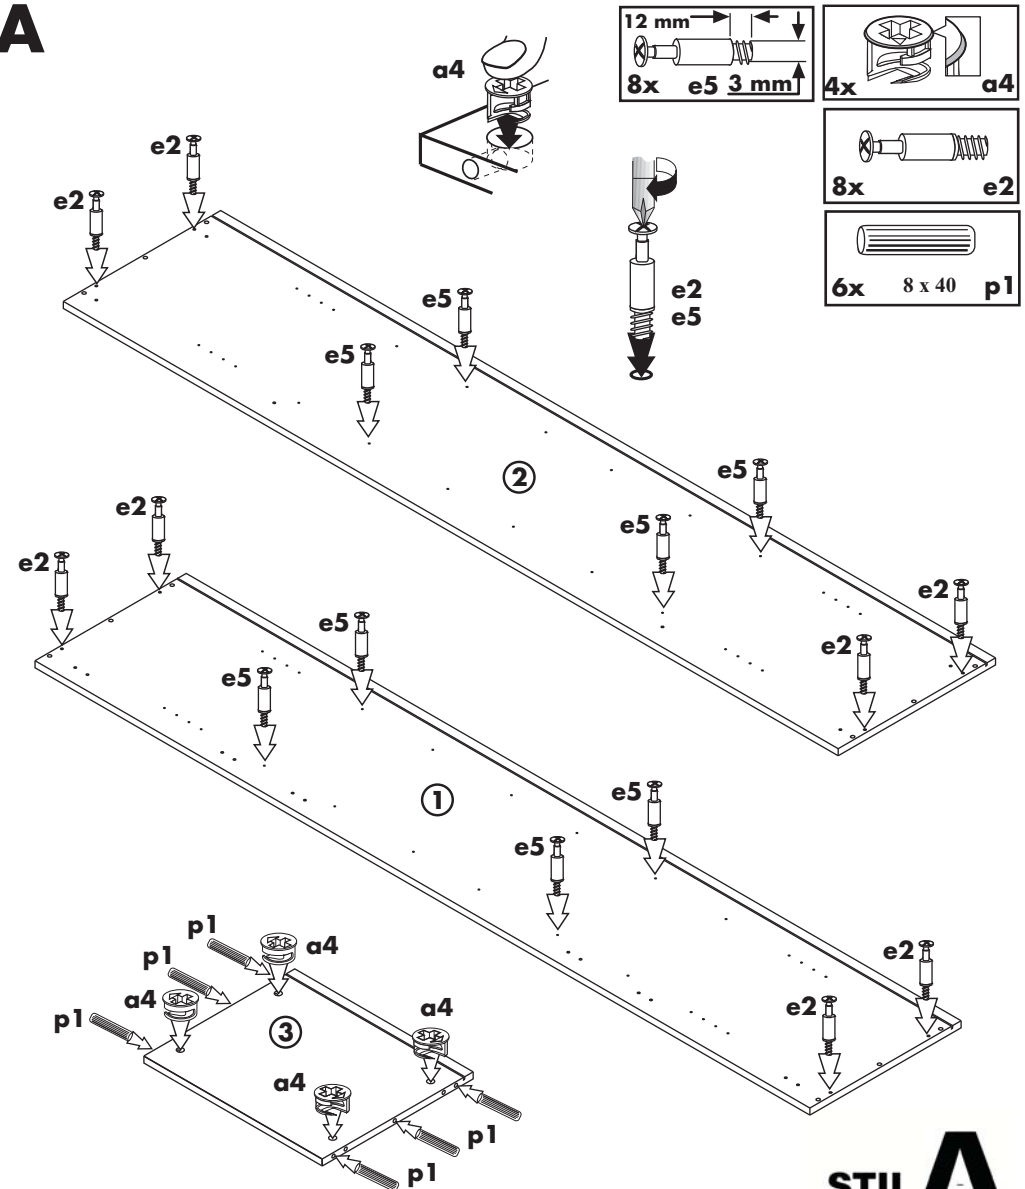


STIL
Wohnfabrik

B




 8x a1	 16x a4
 18x 8 x 40 p1	 12x e2

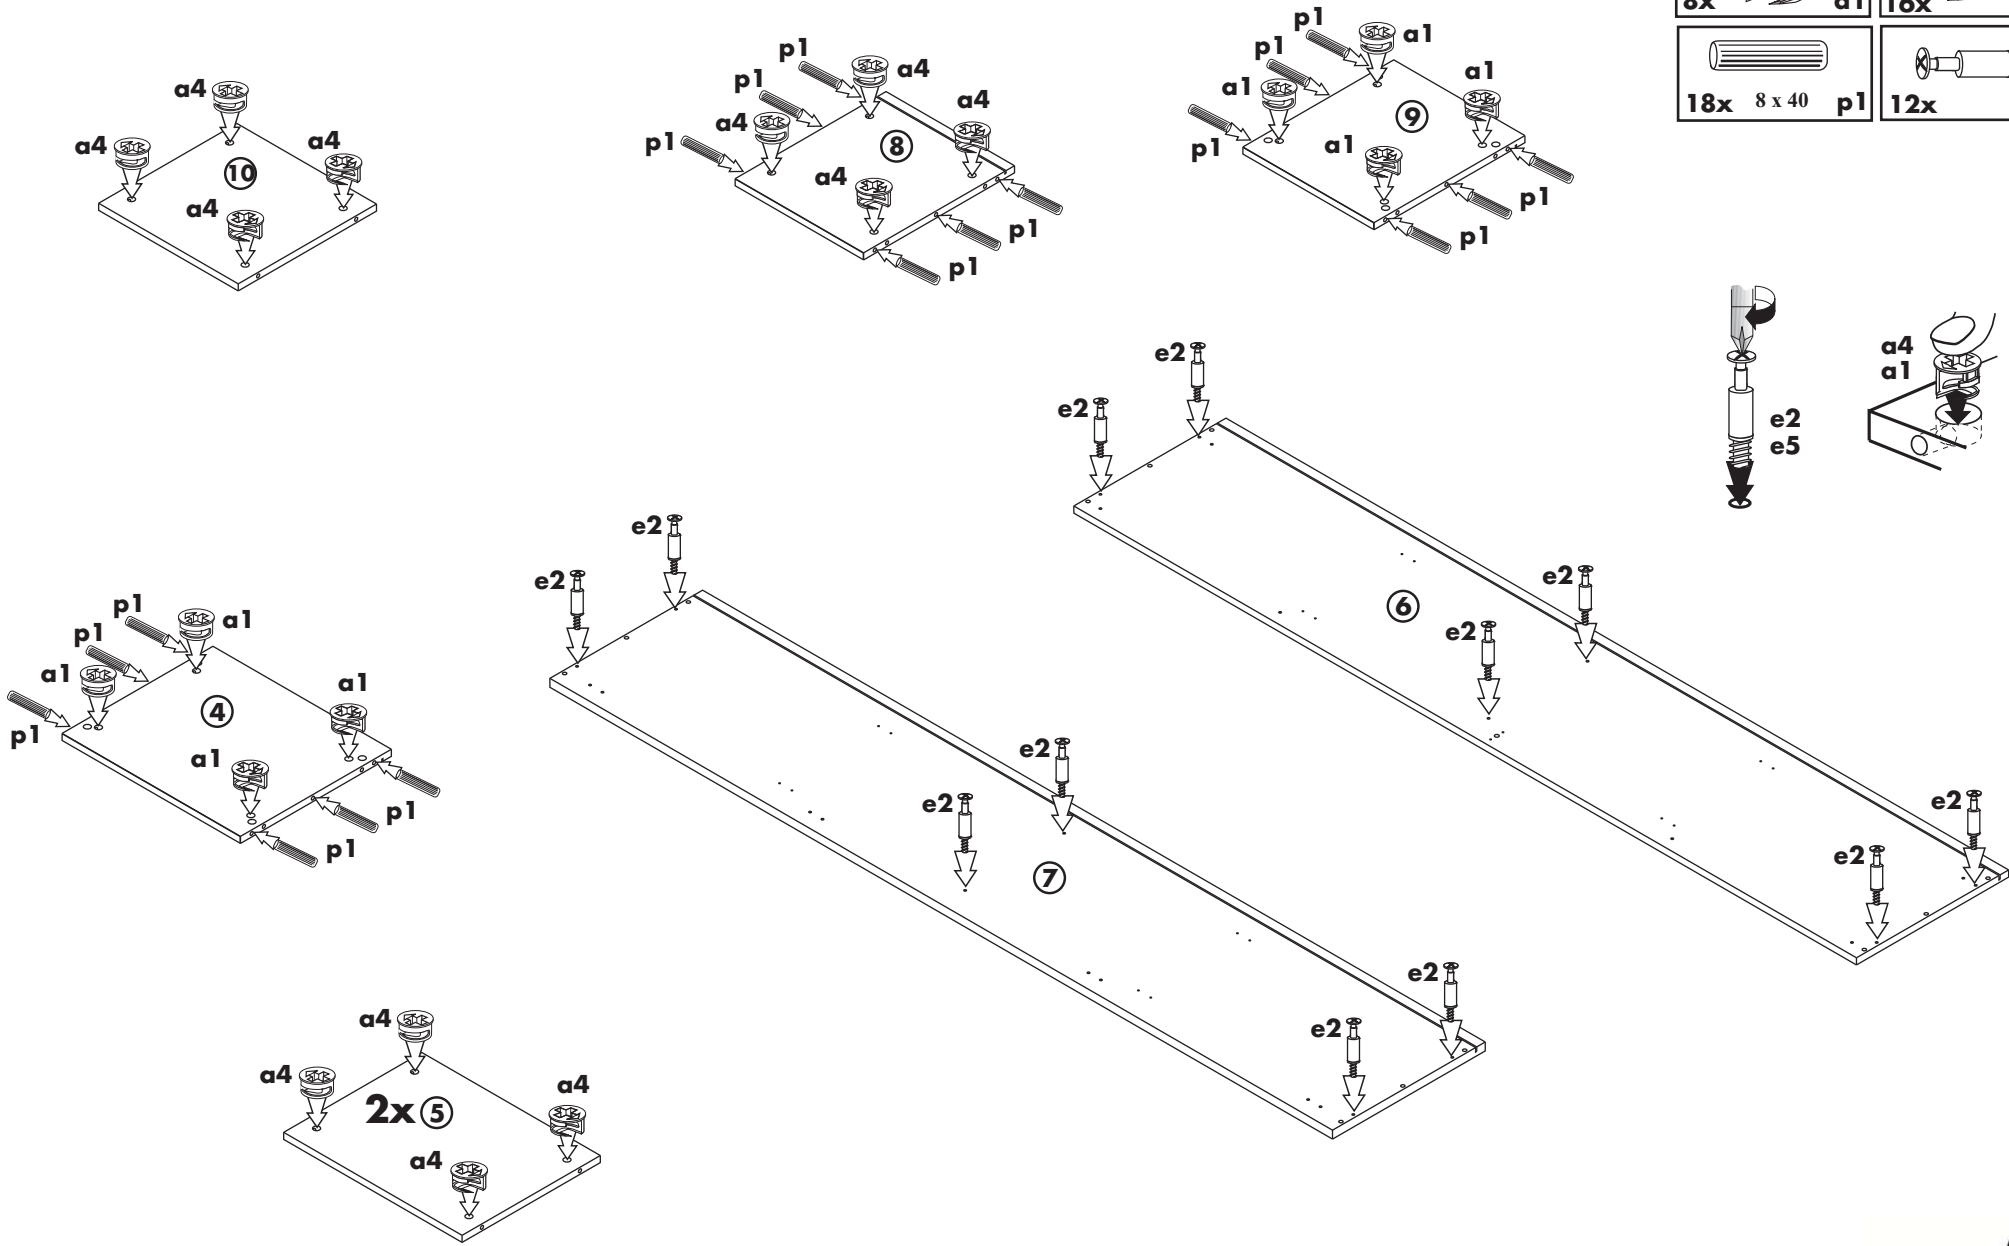


C

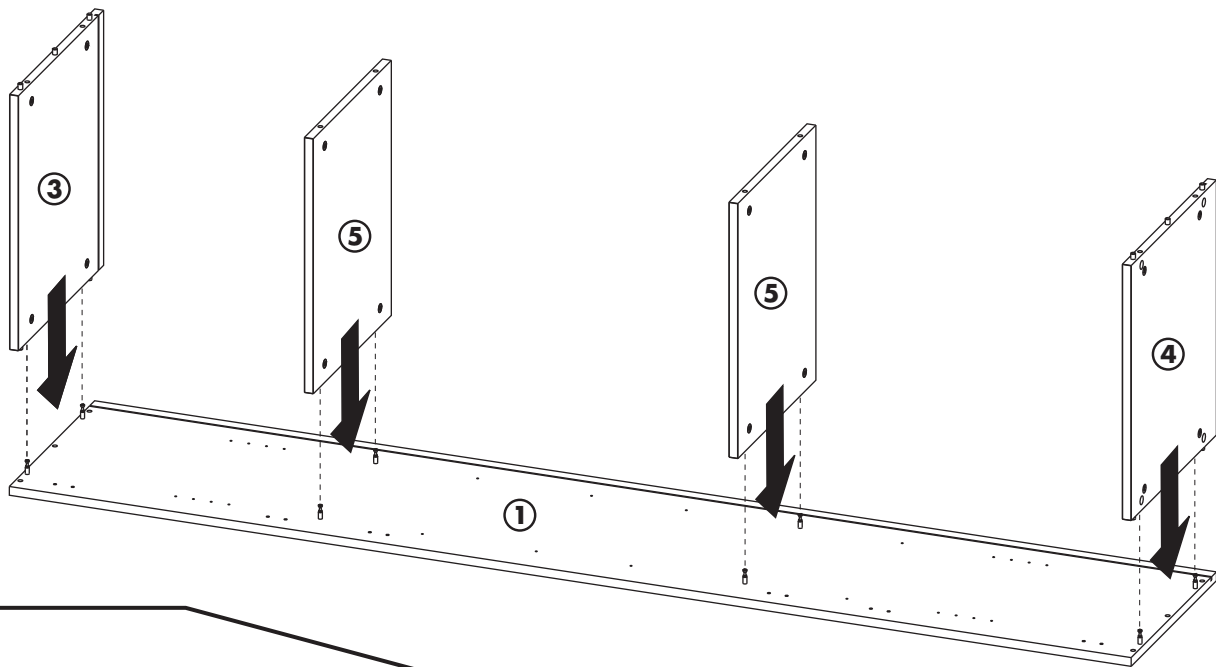



D

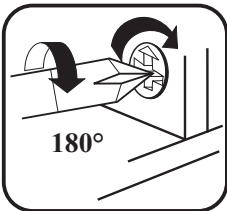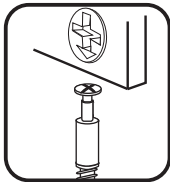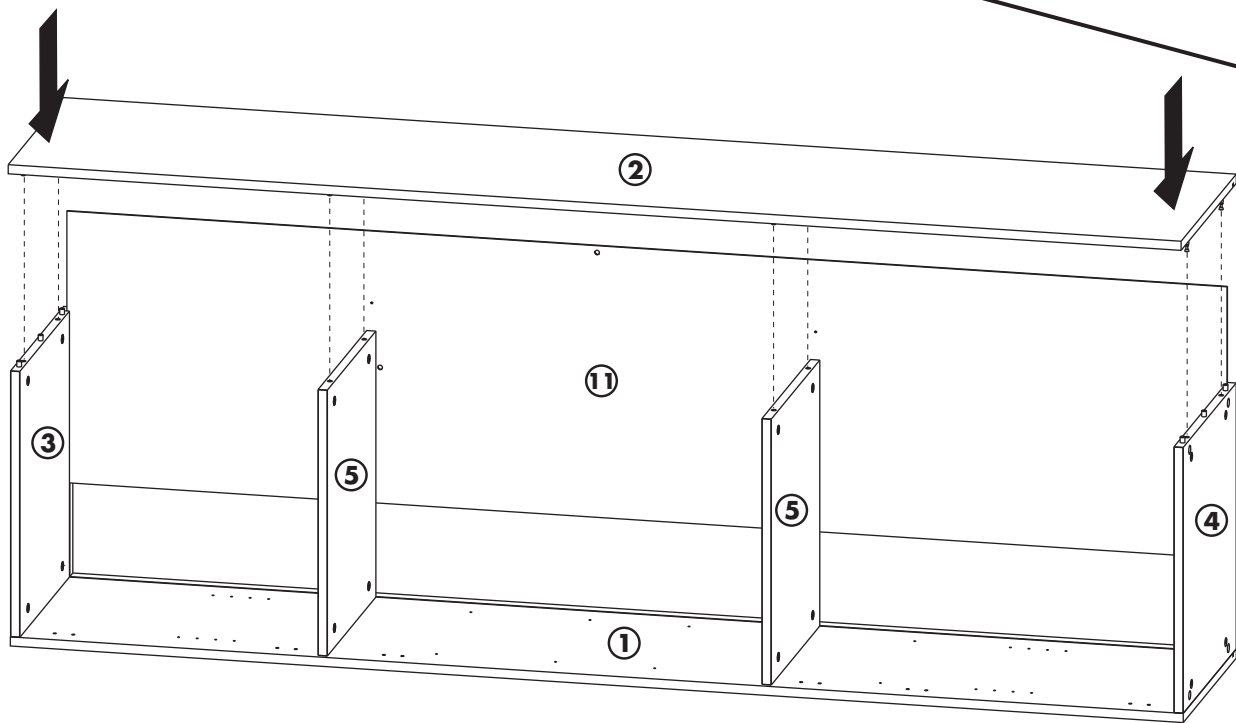



E

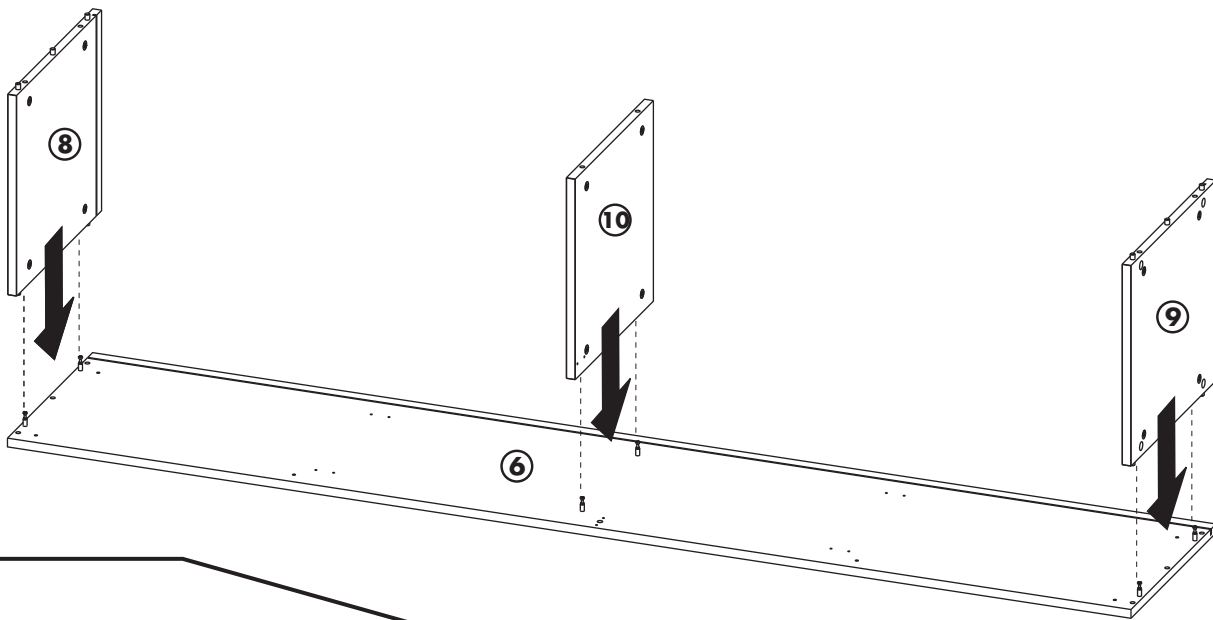



F

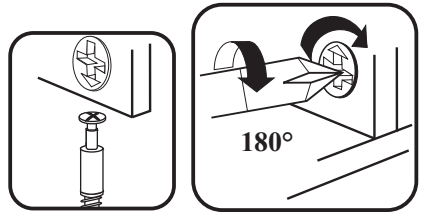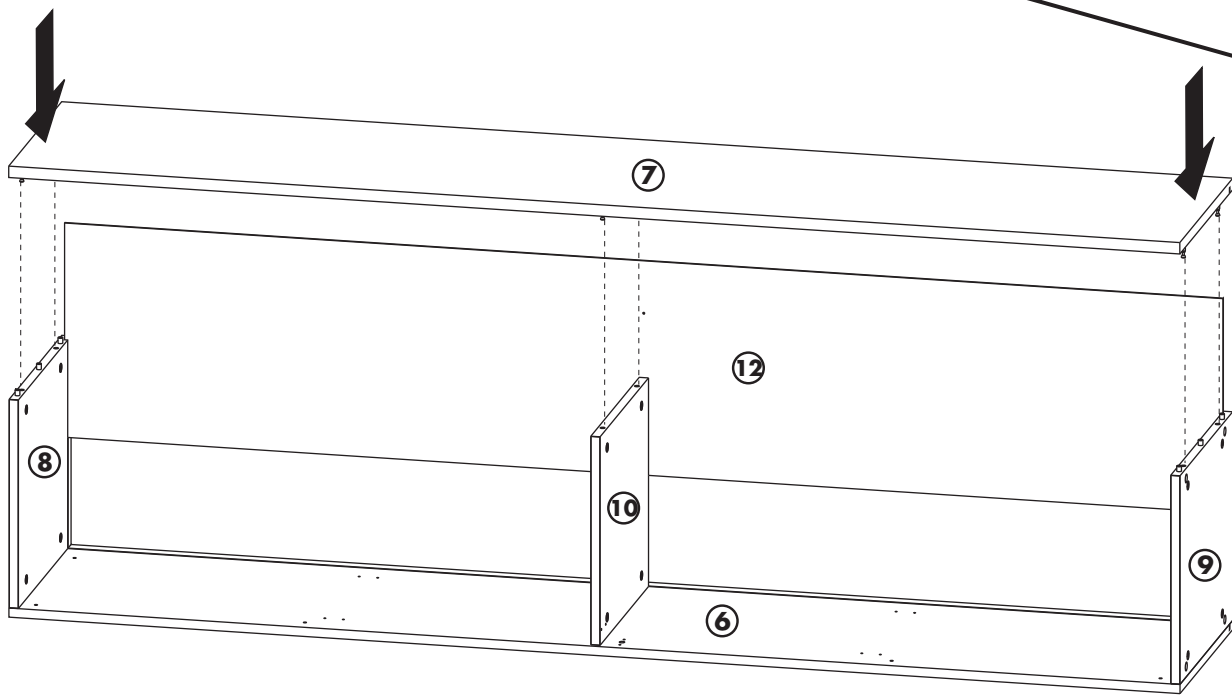

G

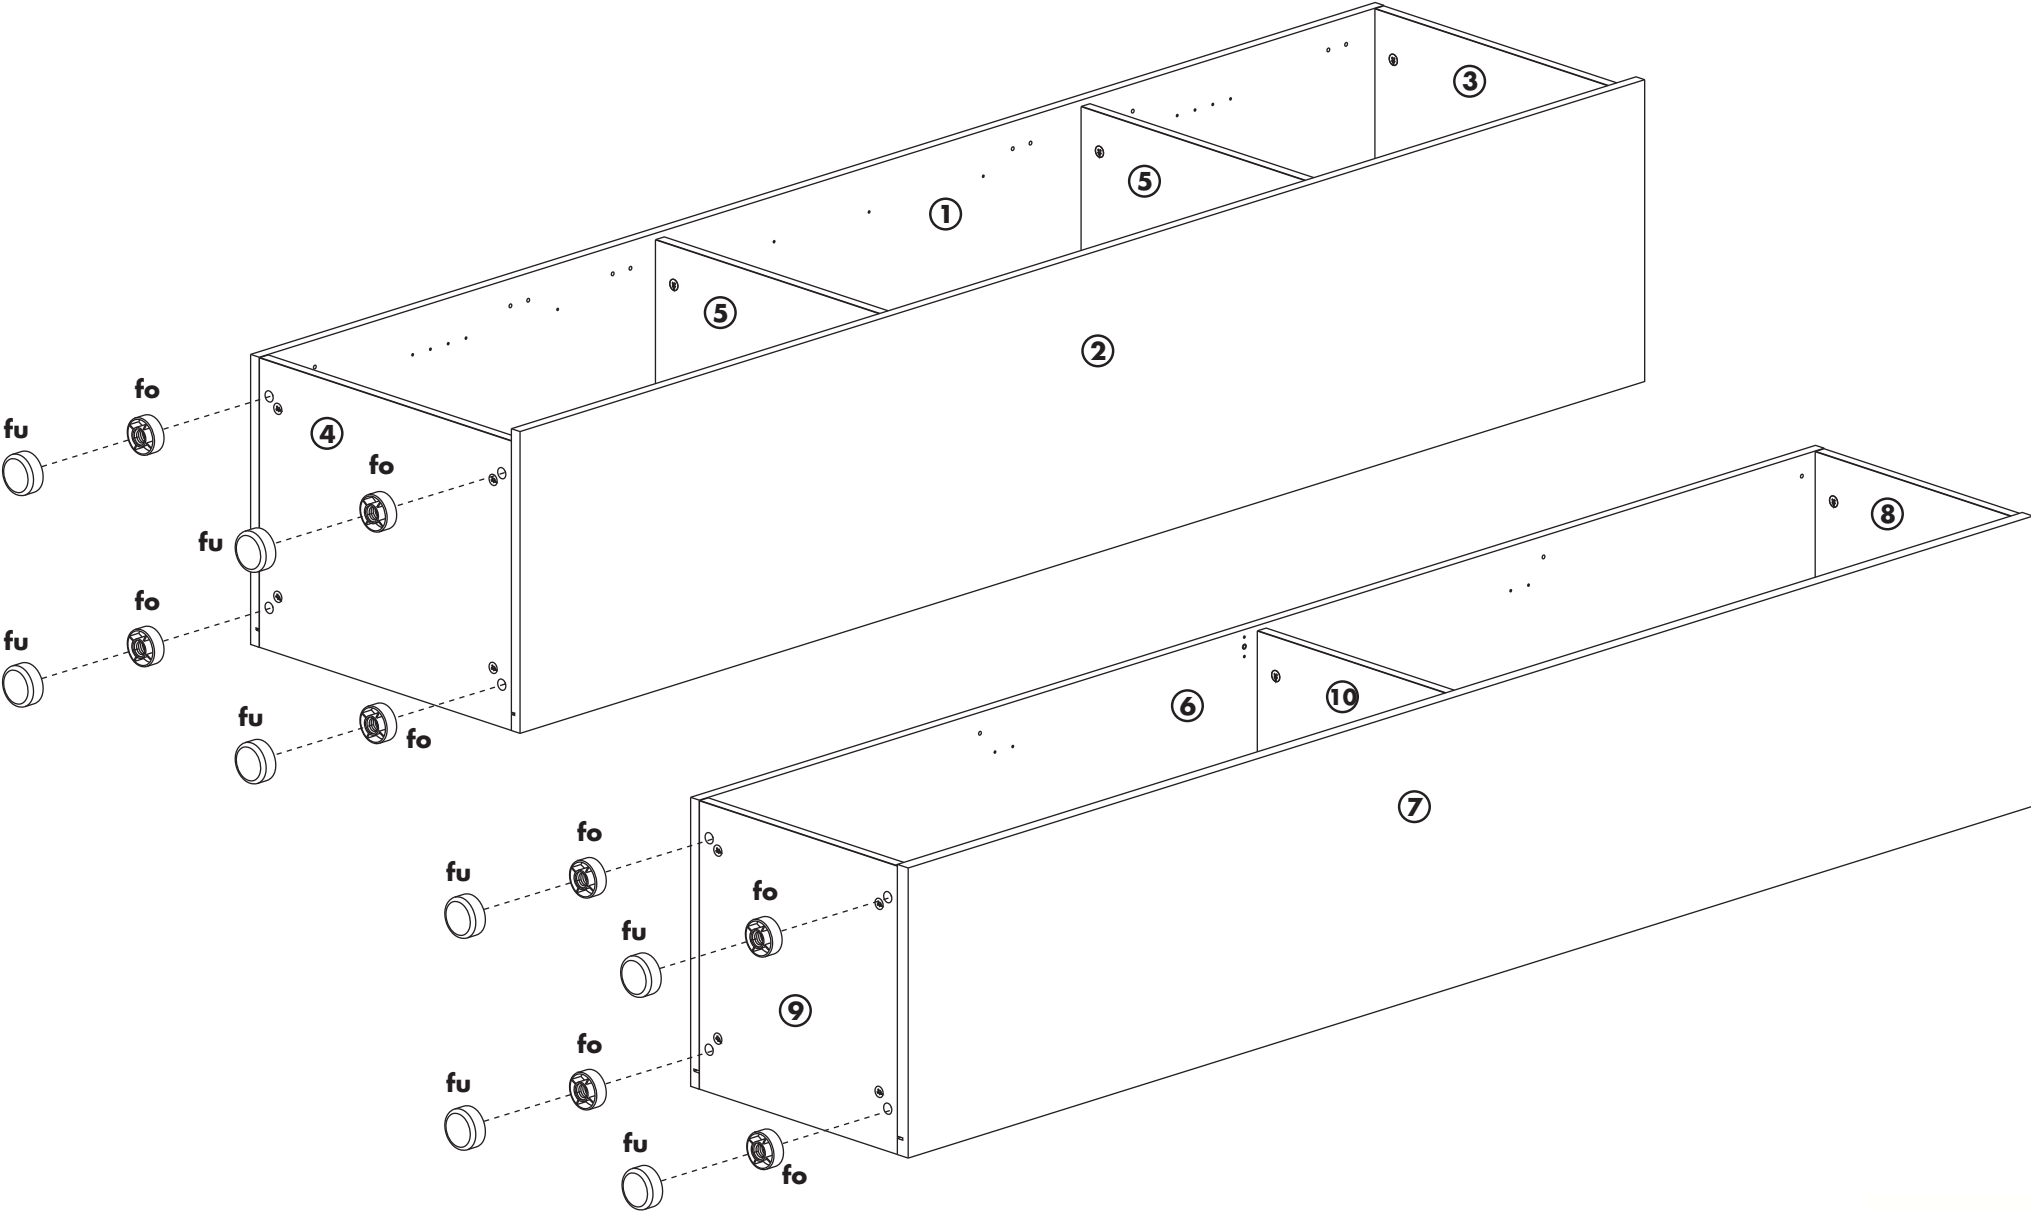


H

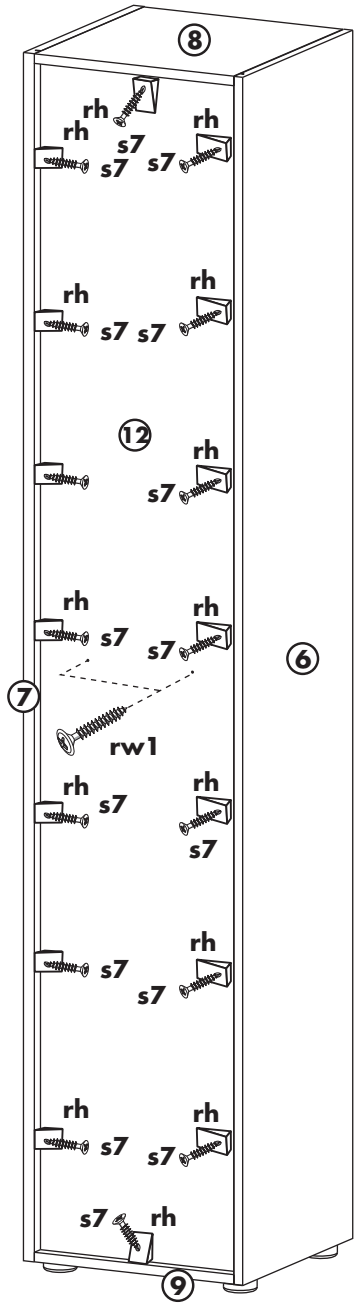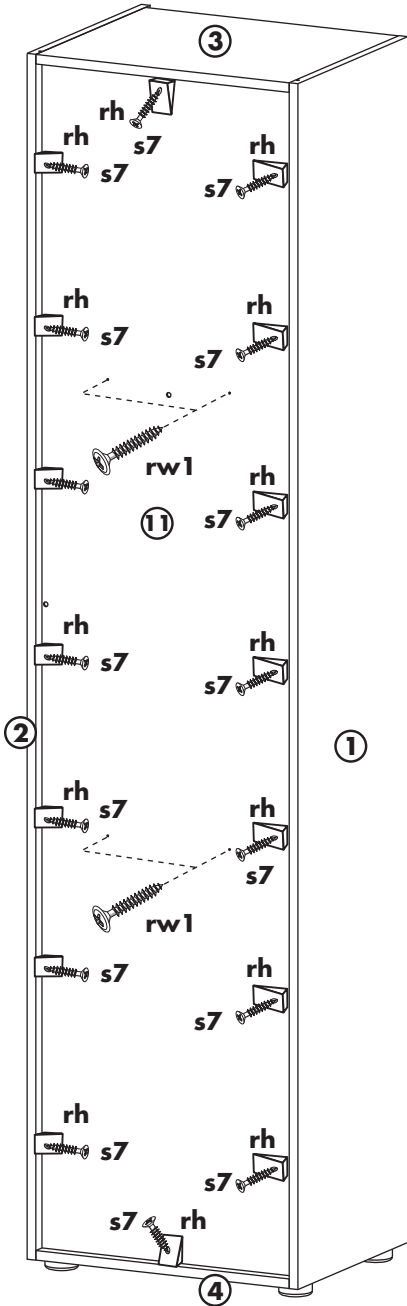



6x 3 x 20 rw1

32x 3 x 20 s7


32x rh

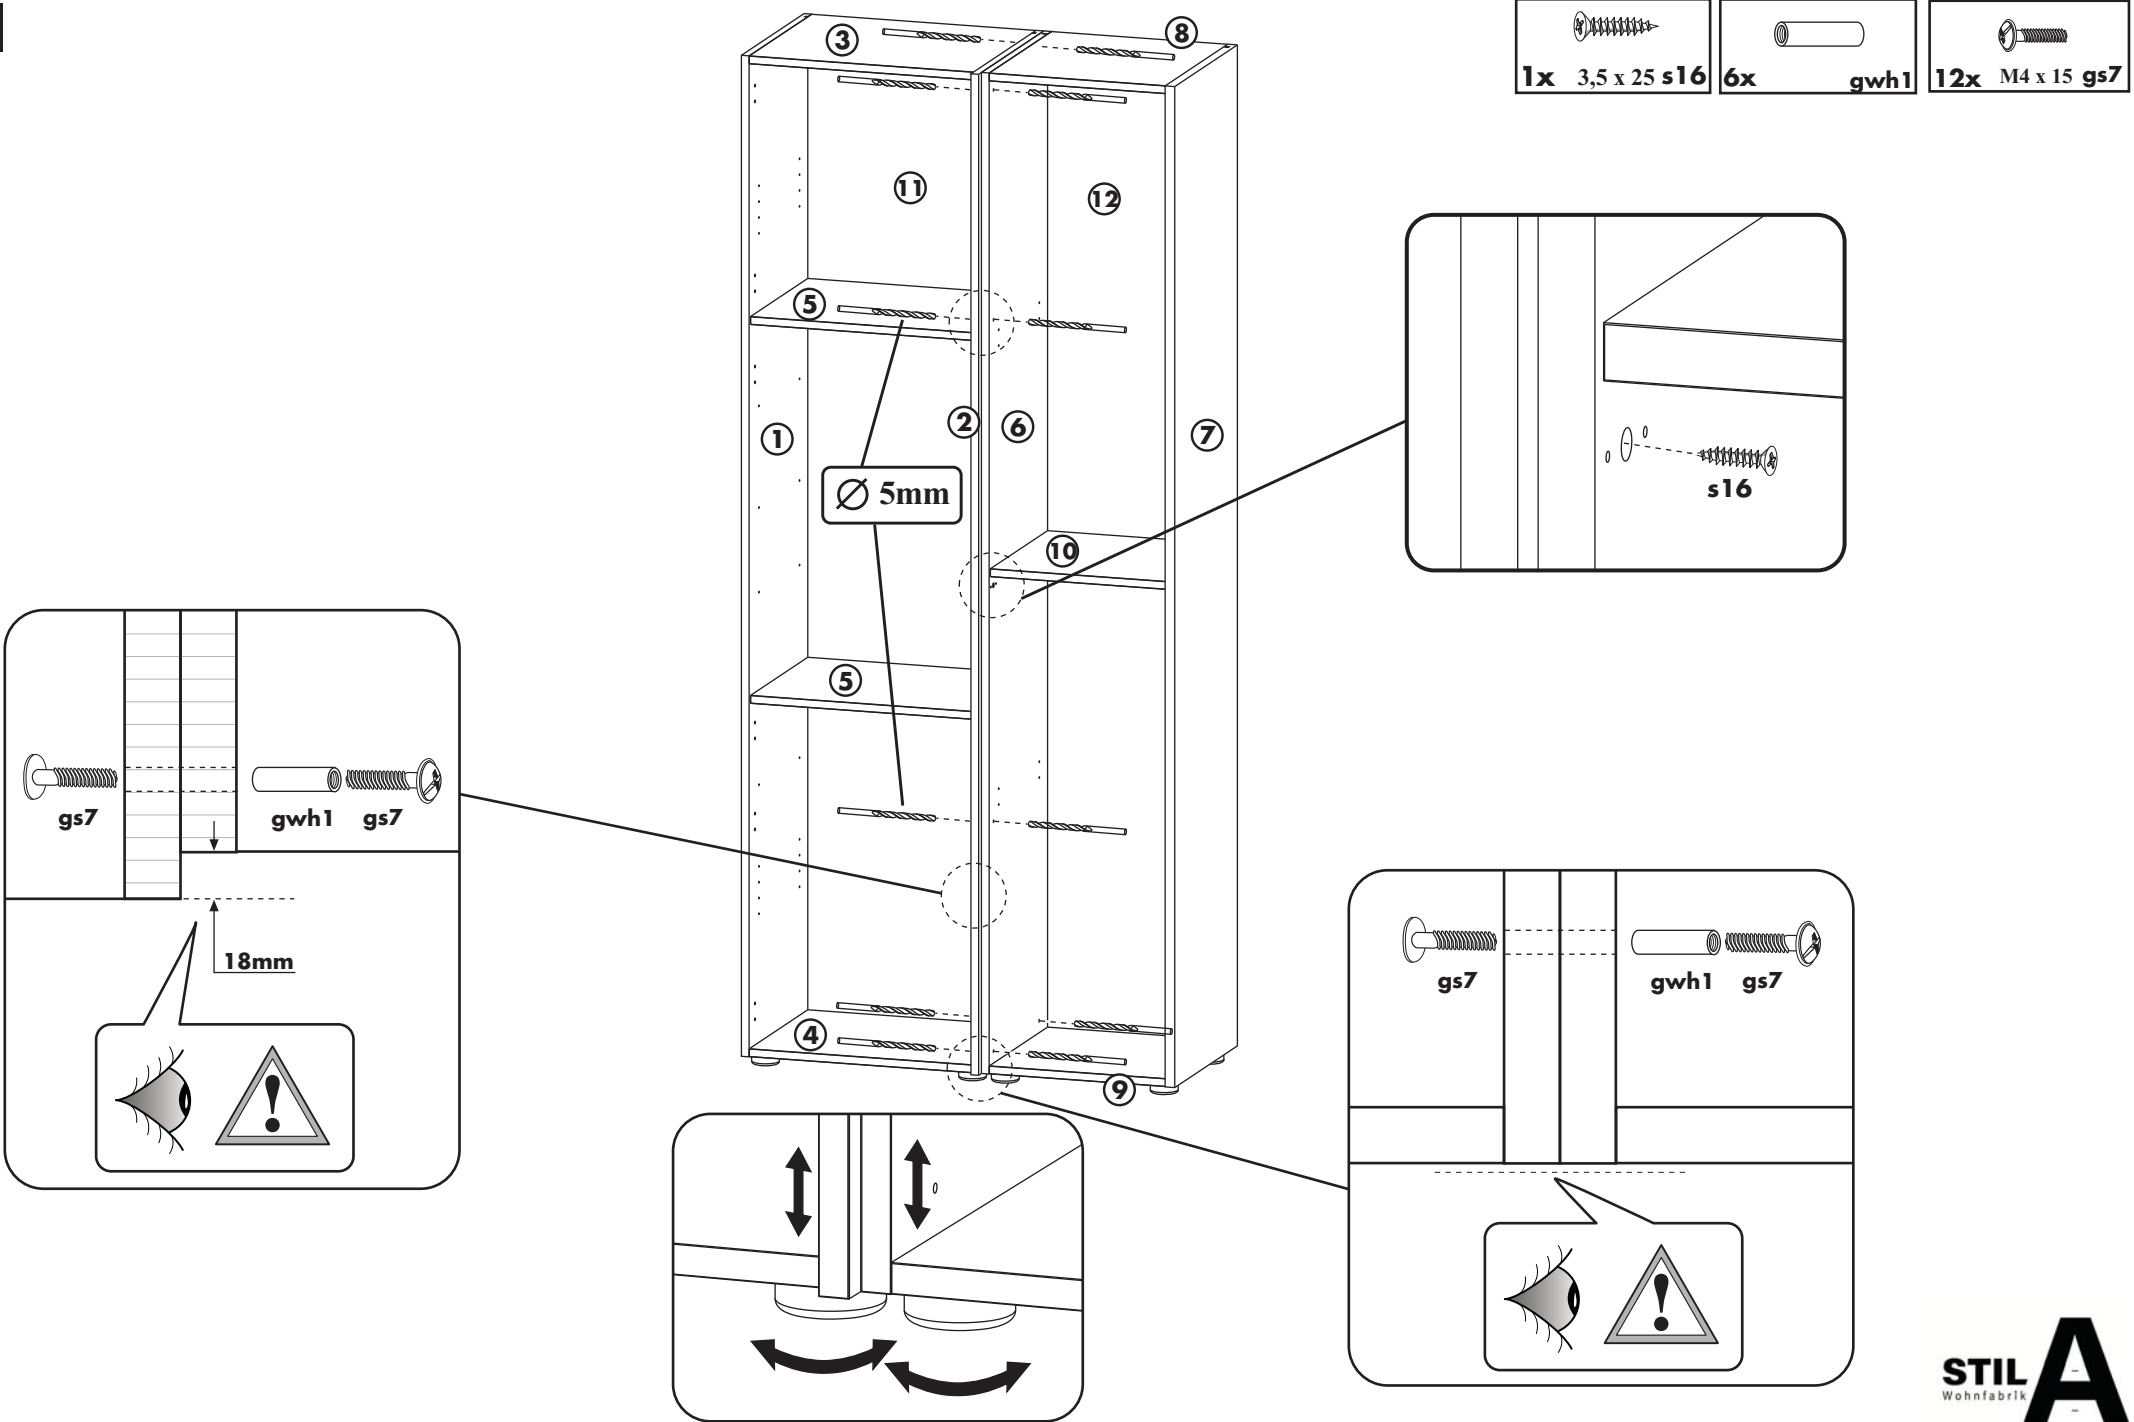


J

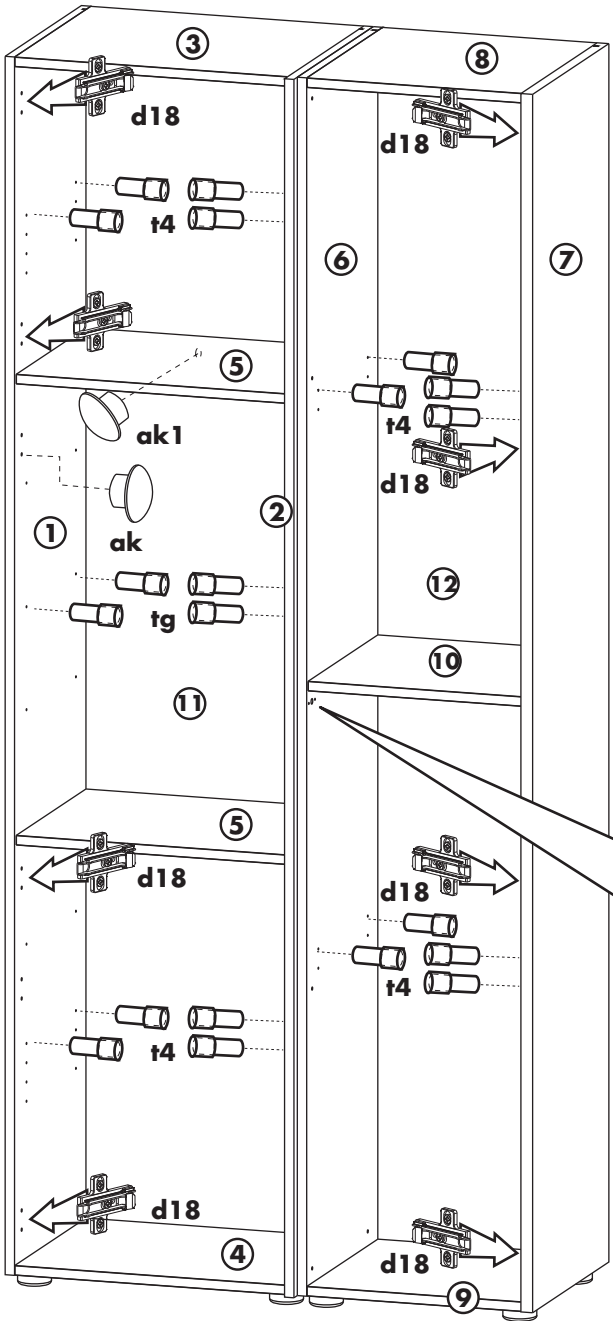


 4x tg	 16x t4	 5x ak	 2x ak1
 1x mg5b	 1x mg5d	 1x mg5a	 2x s6
 8x D 2mm d18			

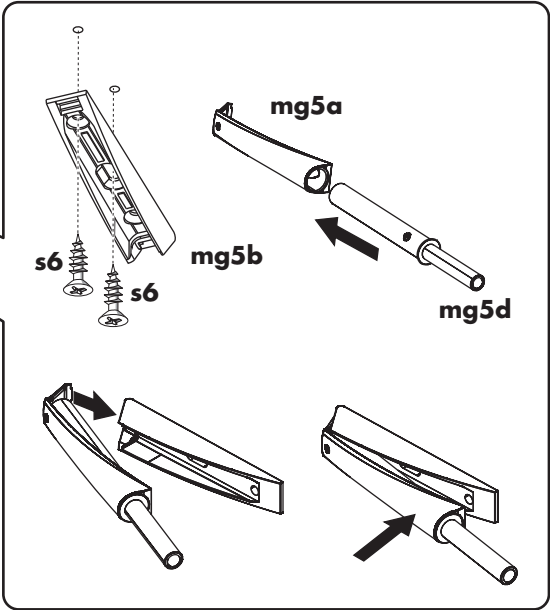




K

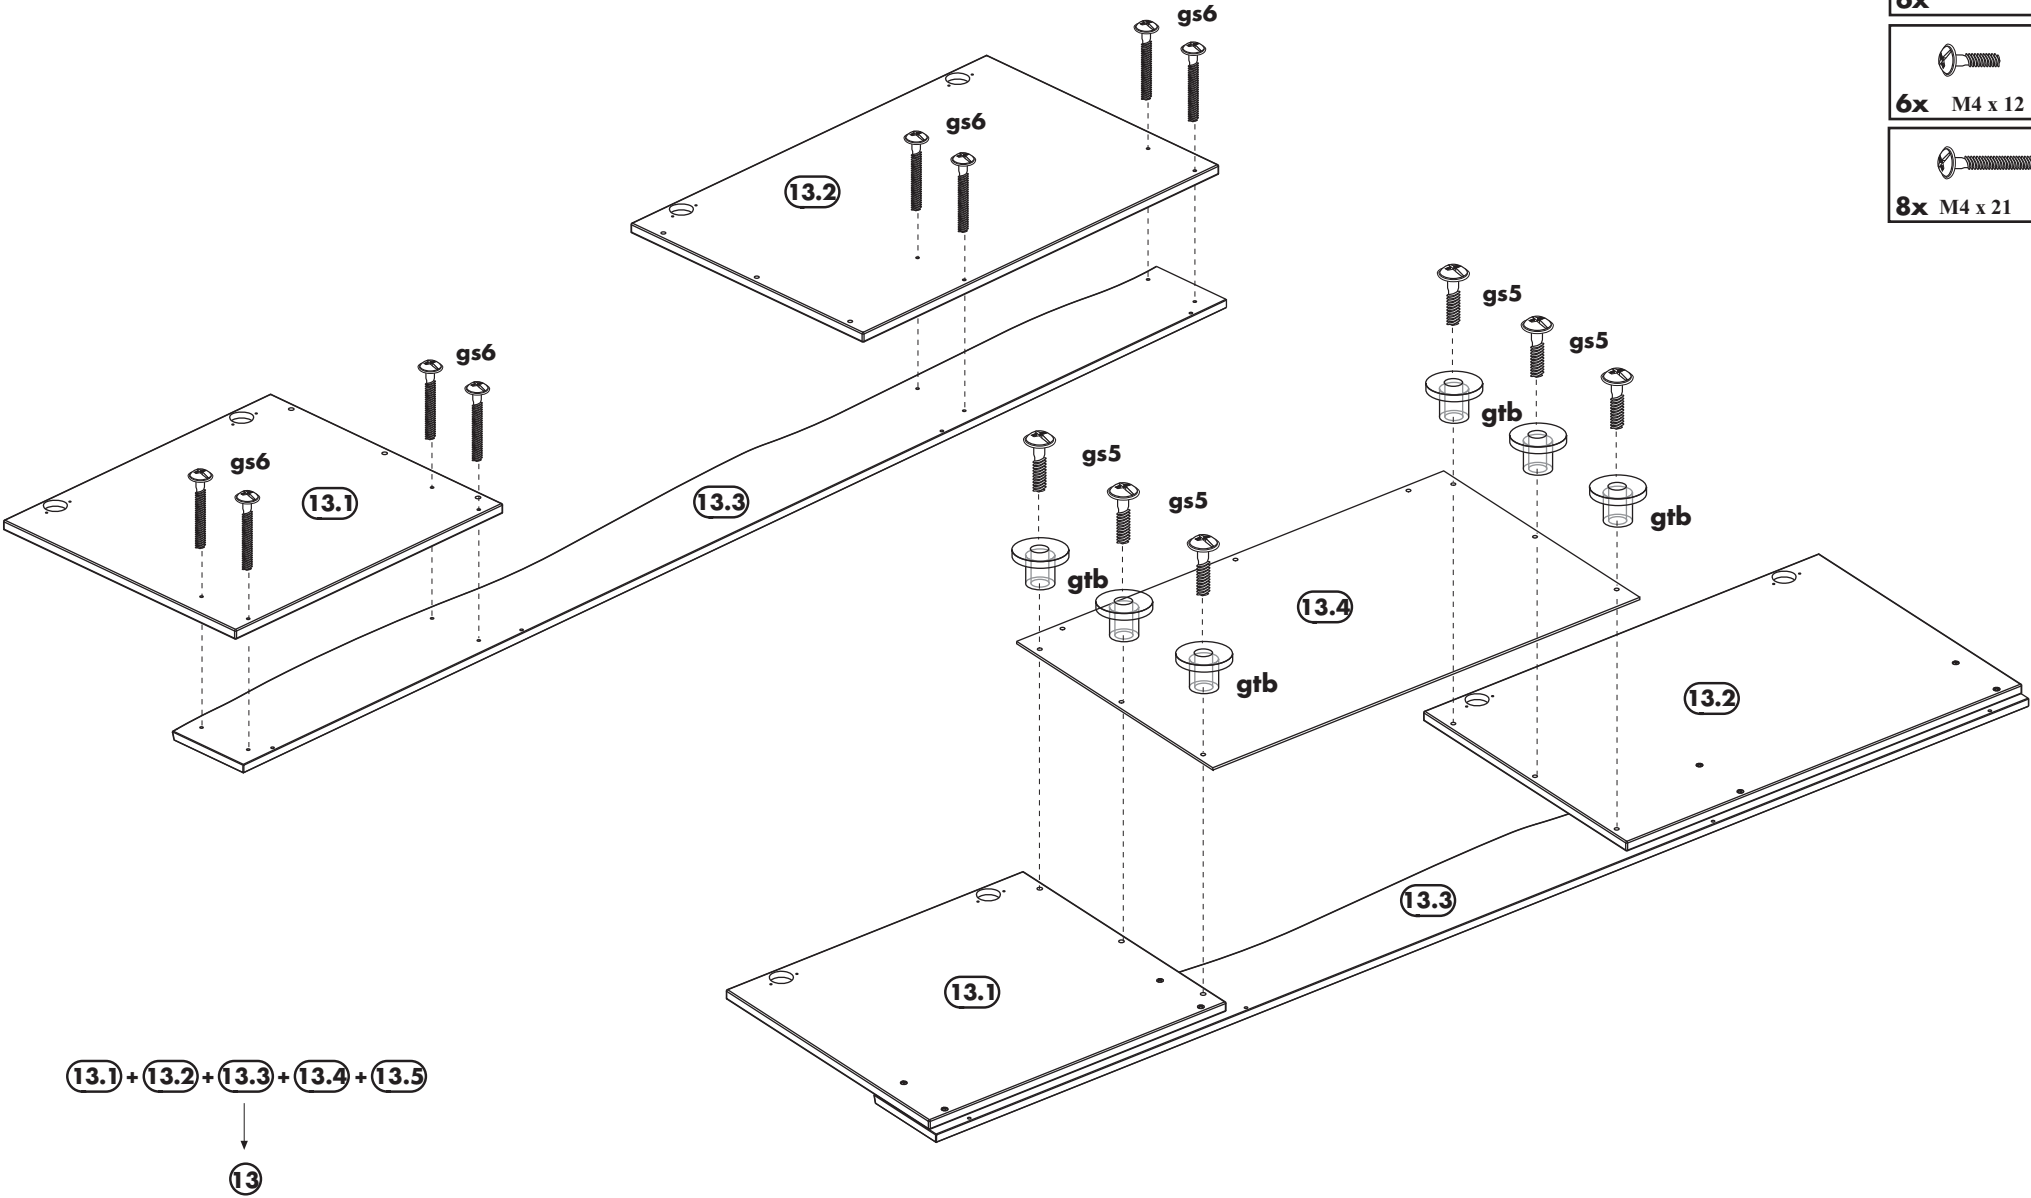

L

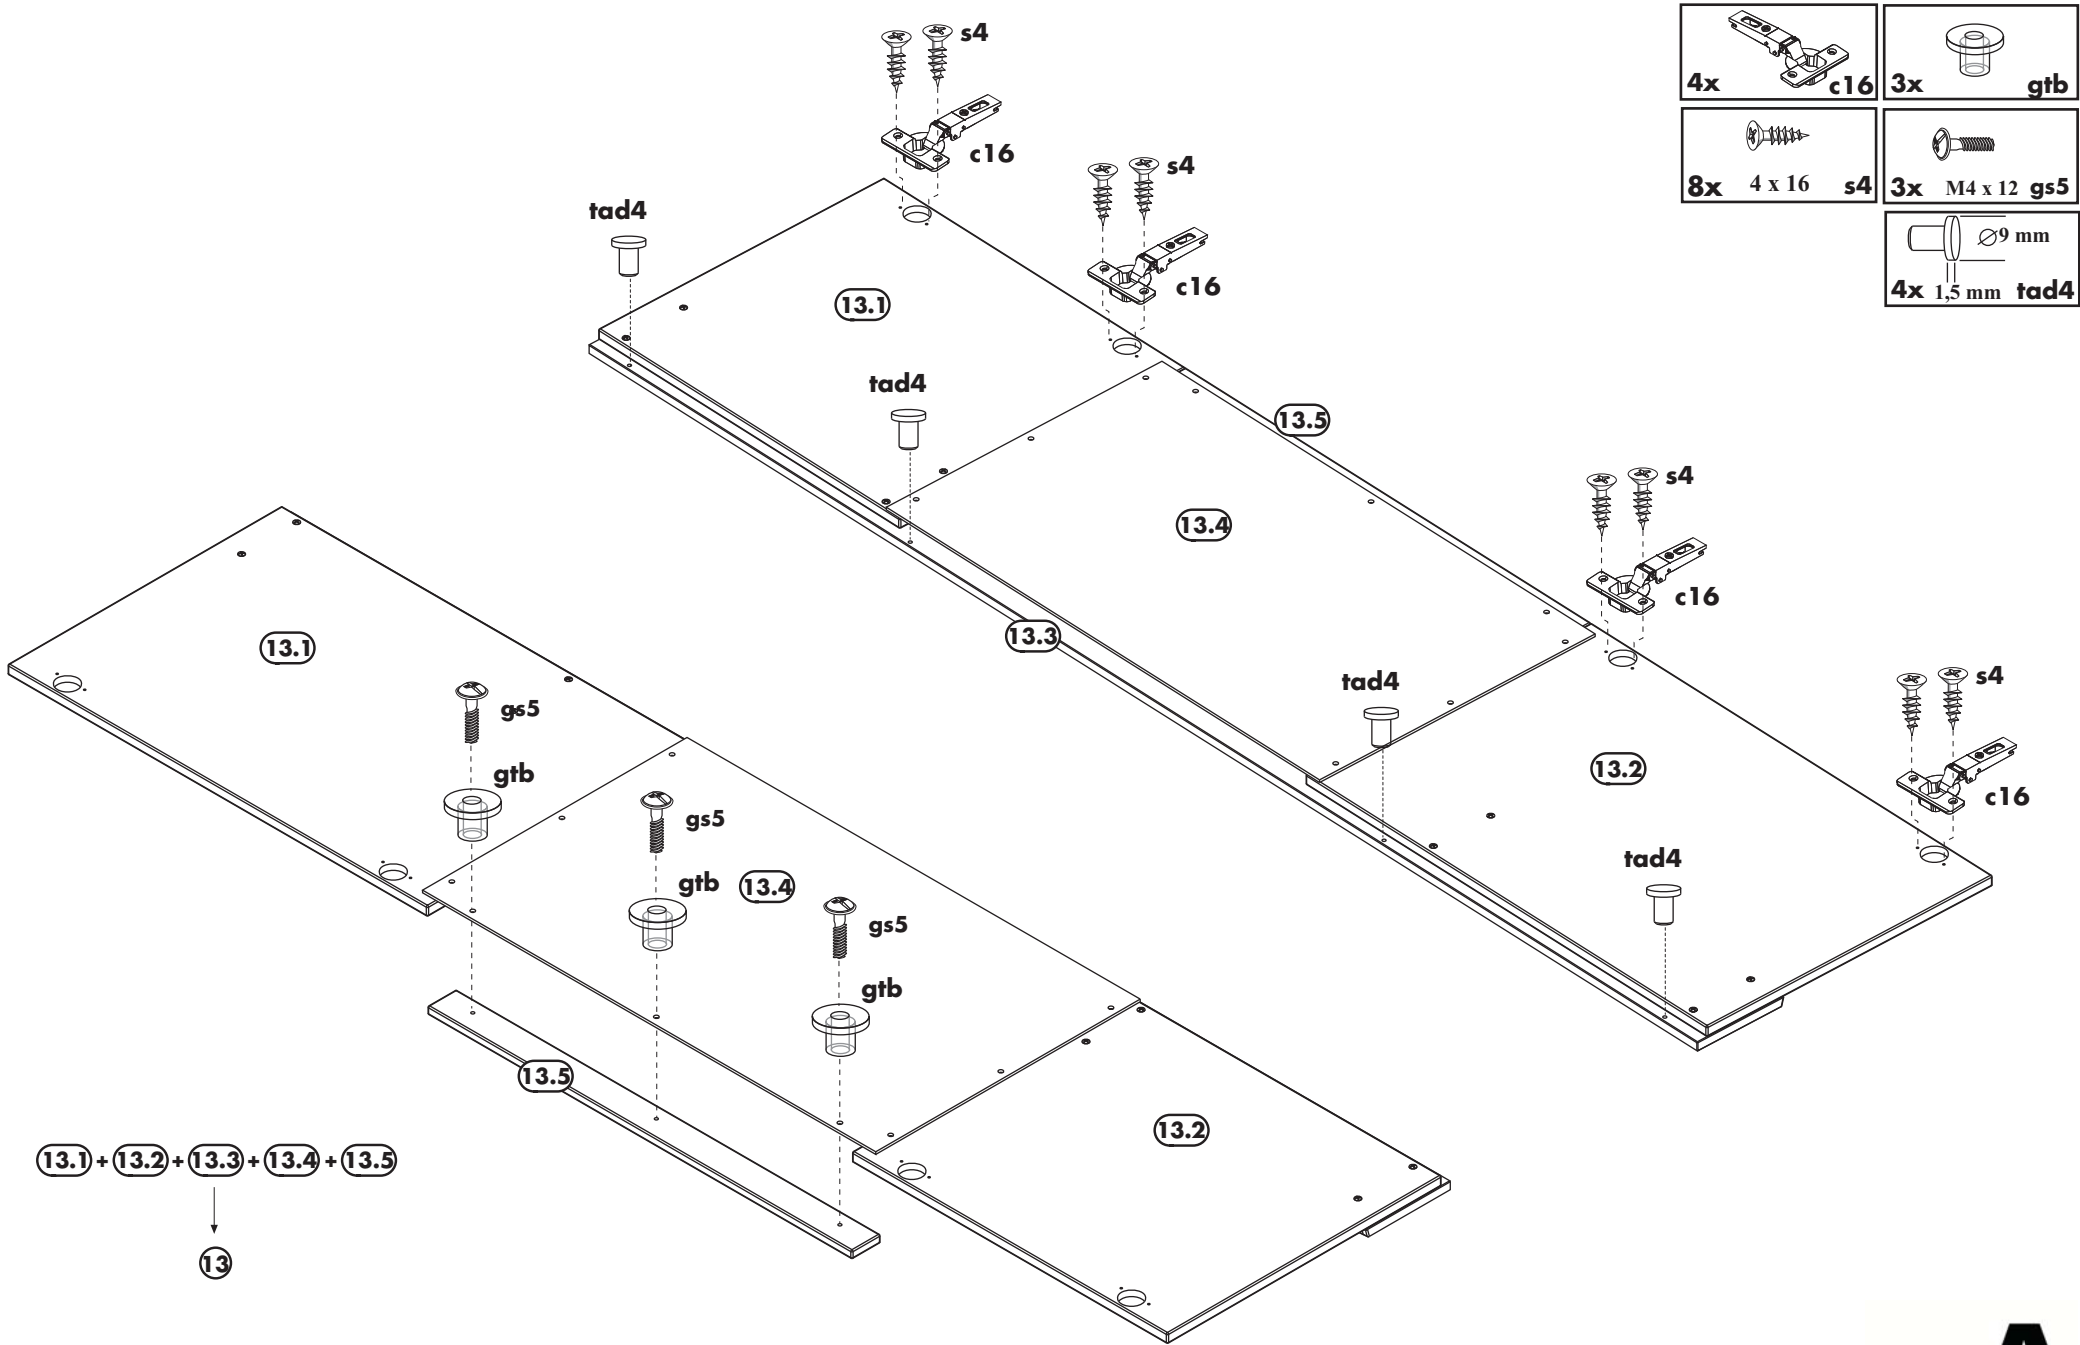


M

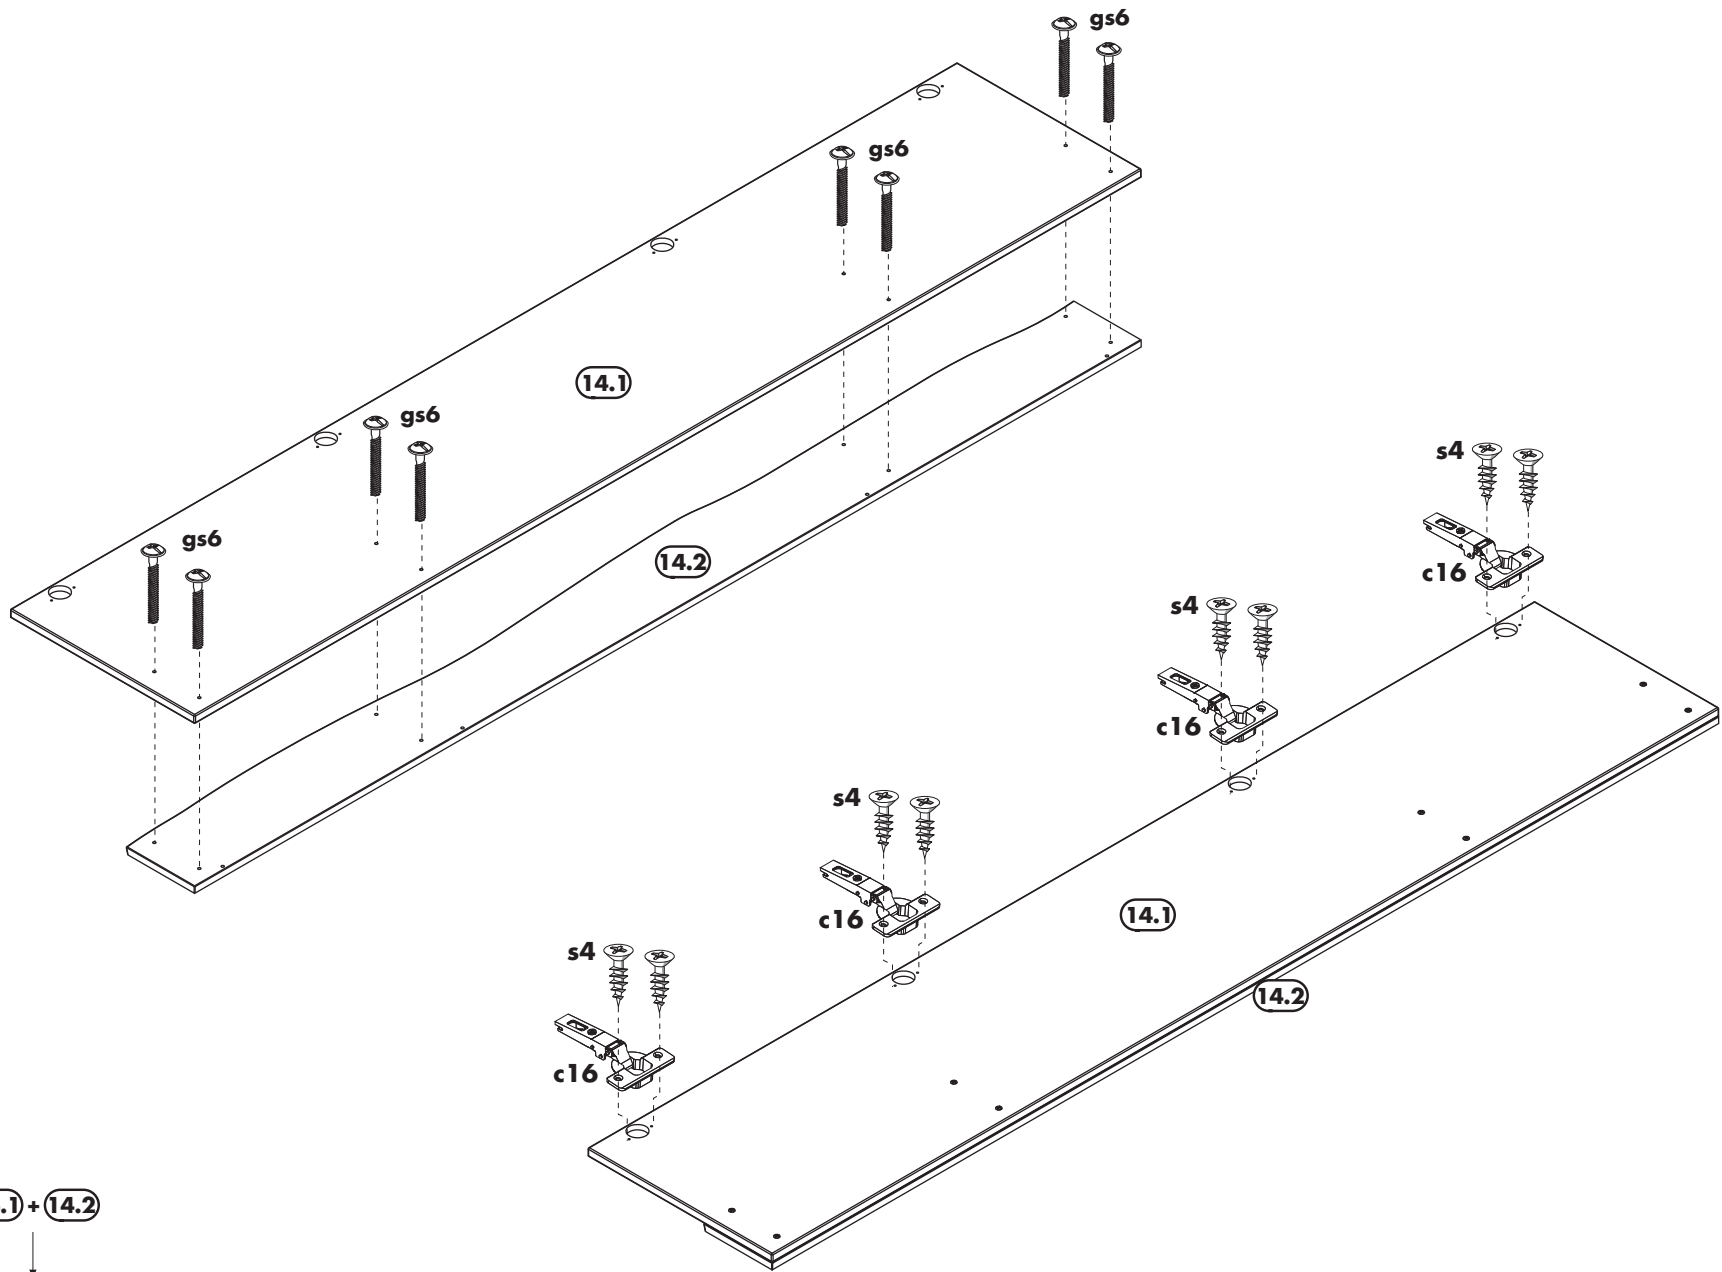



14.1 + 14.2

↓
14

N

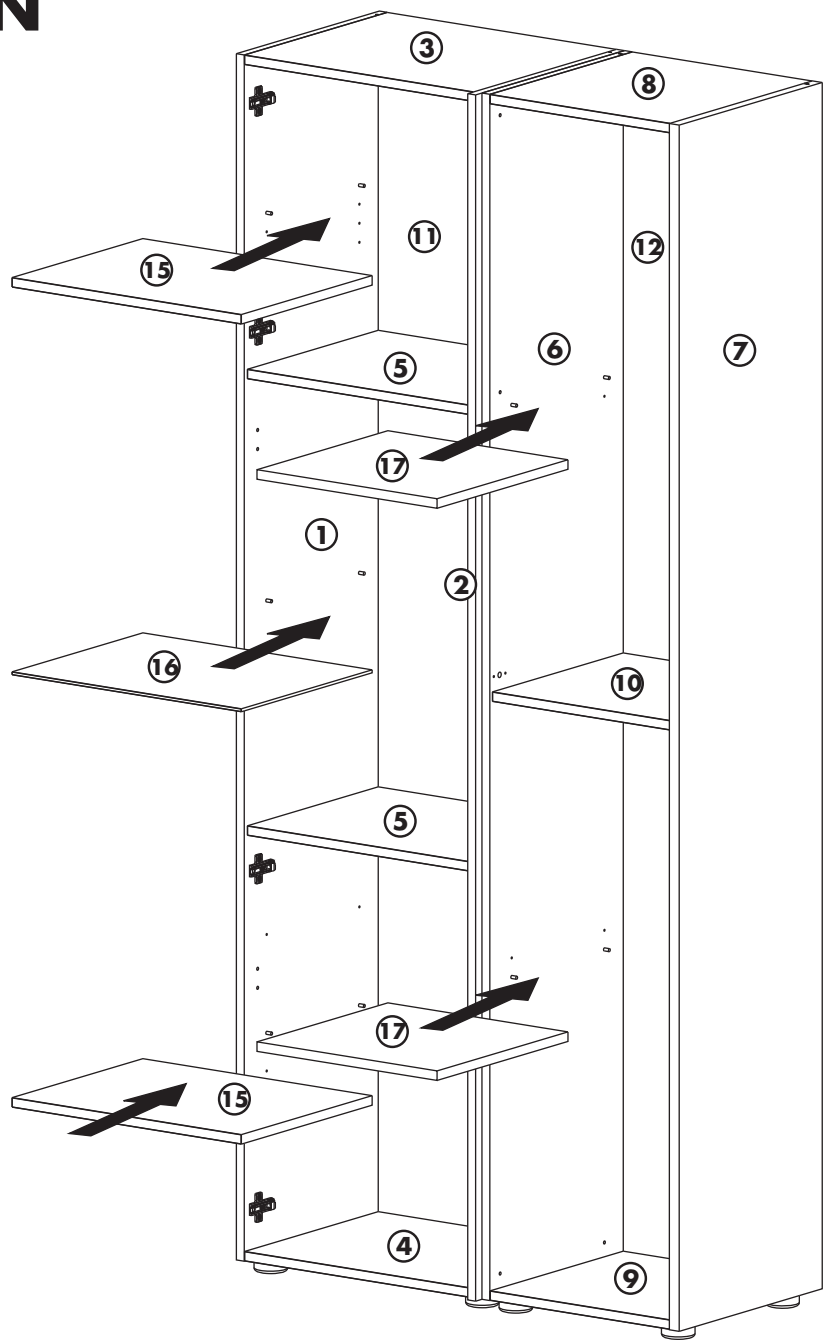


O

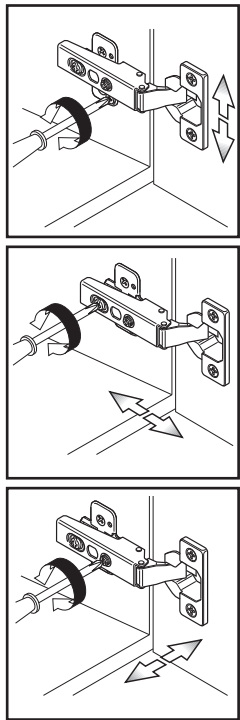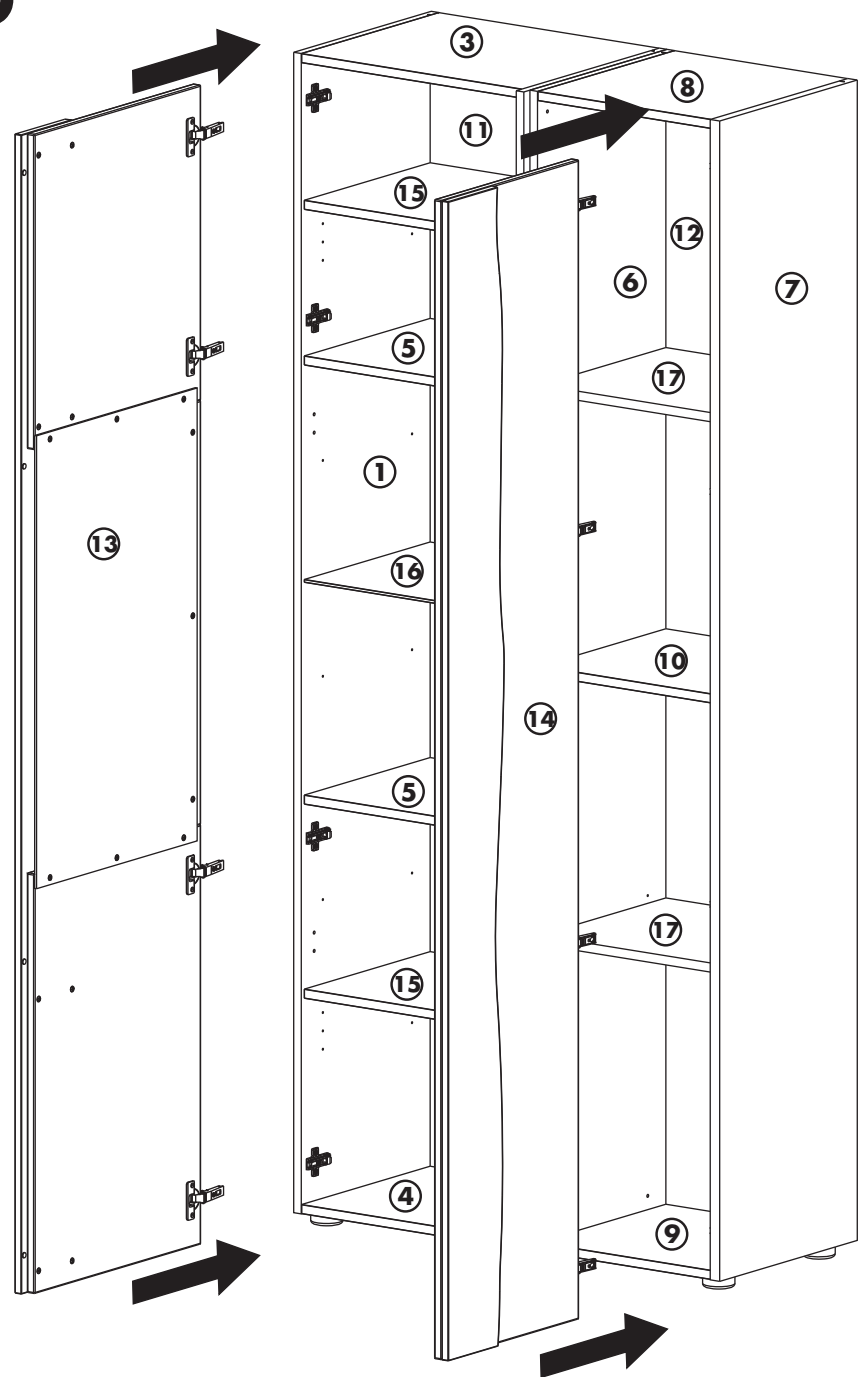


P

			
2x 5 x 100 s28	2x 3,5 x 15 s5	2x wd	2x rv

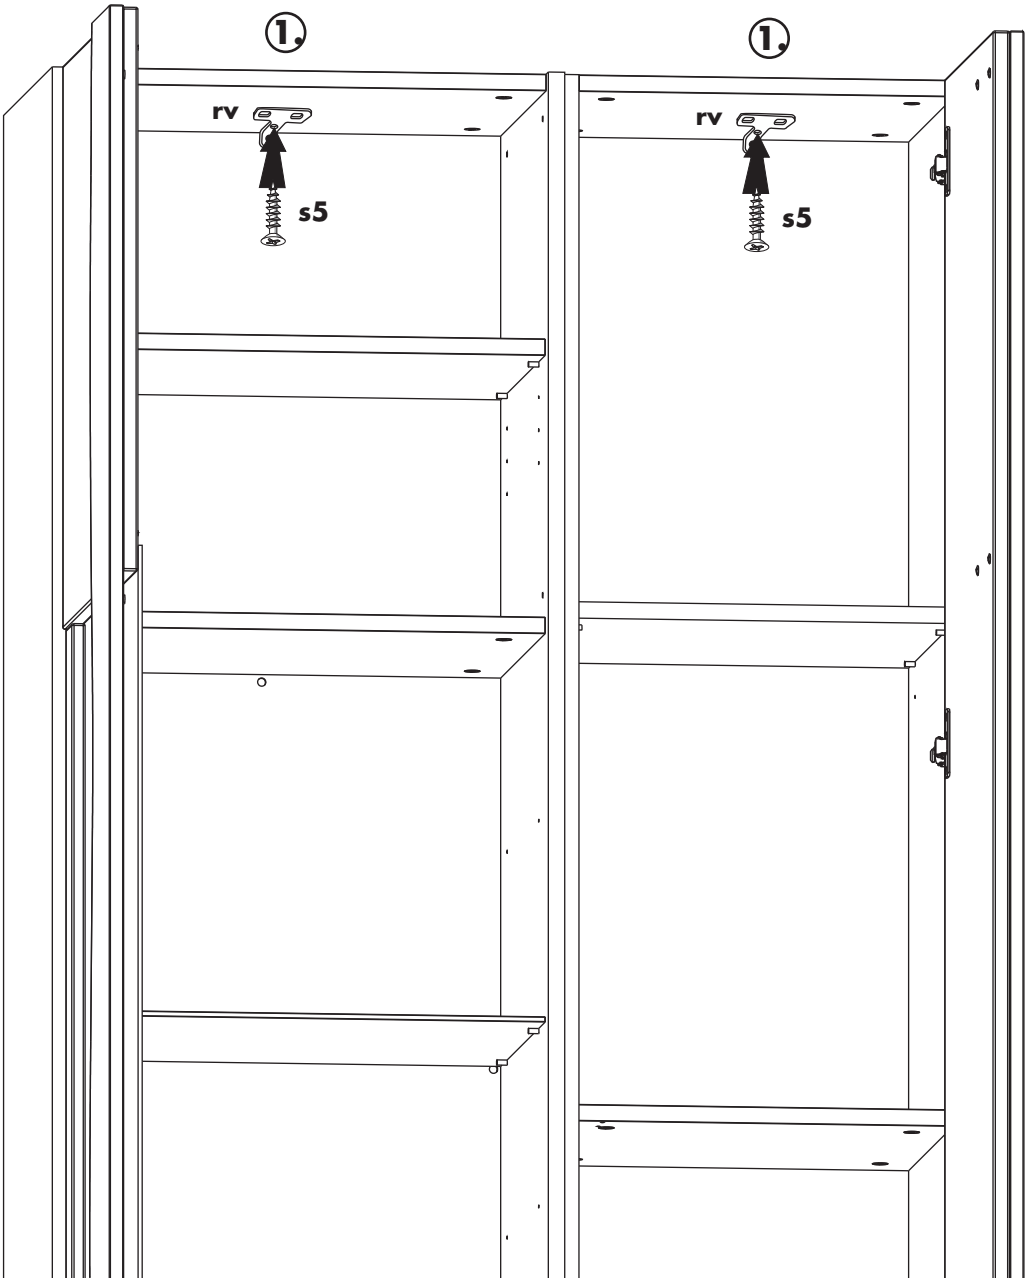

Kippsicherung
anbringen
Install anti-tip device

2. Wand markieren
mark wall

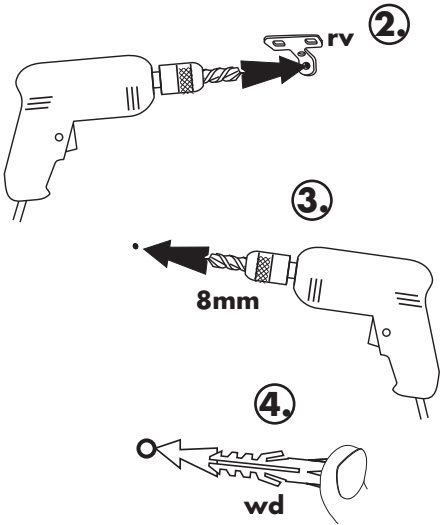

5. Schraube eindrehen
Mount screw

