




Type 100-124

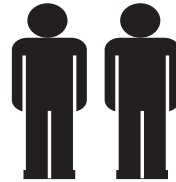

Type 100-125

Sie brauchen:
You need:

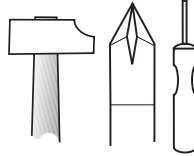

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.













Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!






Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings

CAD und Design
Light Line 15 100-124 / 02.26




 9x gtb	 2x wd	 2x rv	 2x 5 x 100 s28	 2x 3,5 x 15 s5
 12x a4	 8x e2	 9x M4 x 12 gs5	 4x 1,5 mm tad4	 4x 3 x 20 rw1
 4x fu	 4x fo	 8x M4 x 21 gs6	 8x 4 x 16 s4	 16x rh
 8x t4	 11x ak	 2x ak1	 4x D 2mm d18	 4x c16
 4x a1	 4x tg	 16x 3 x 20 s7	 12x 8 x 40 p1	 8x e5 3 mm

A

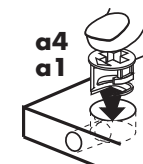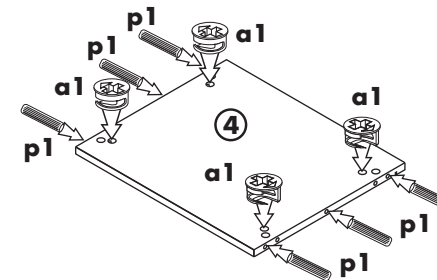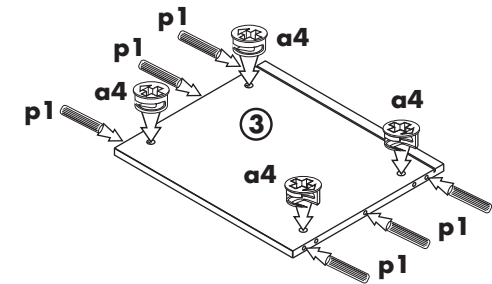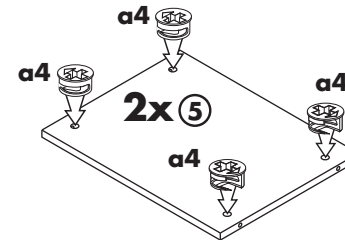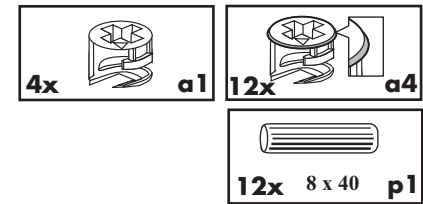


B1

Type 100-124

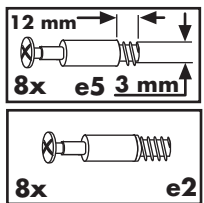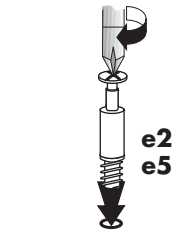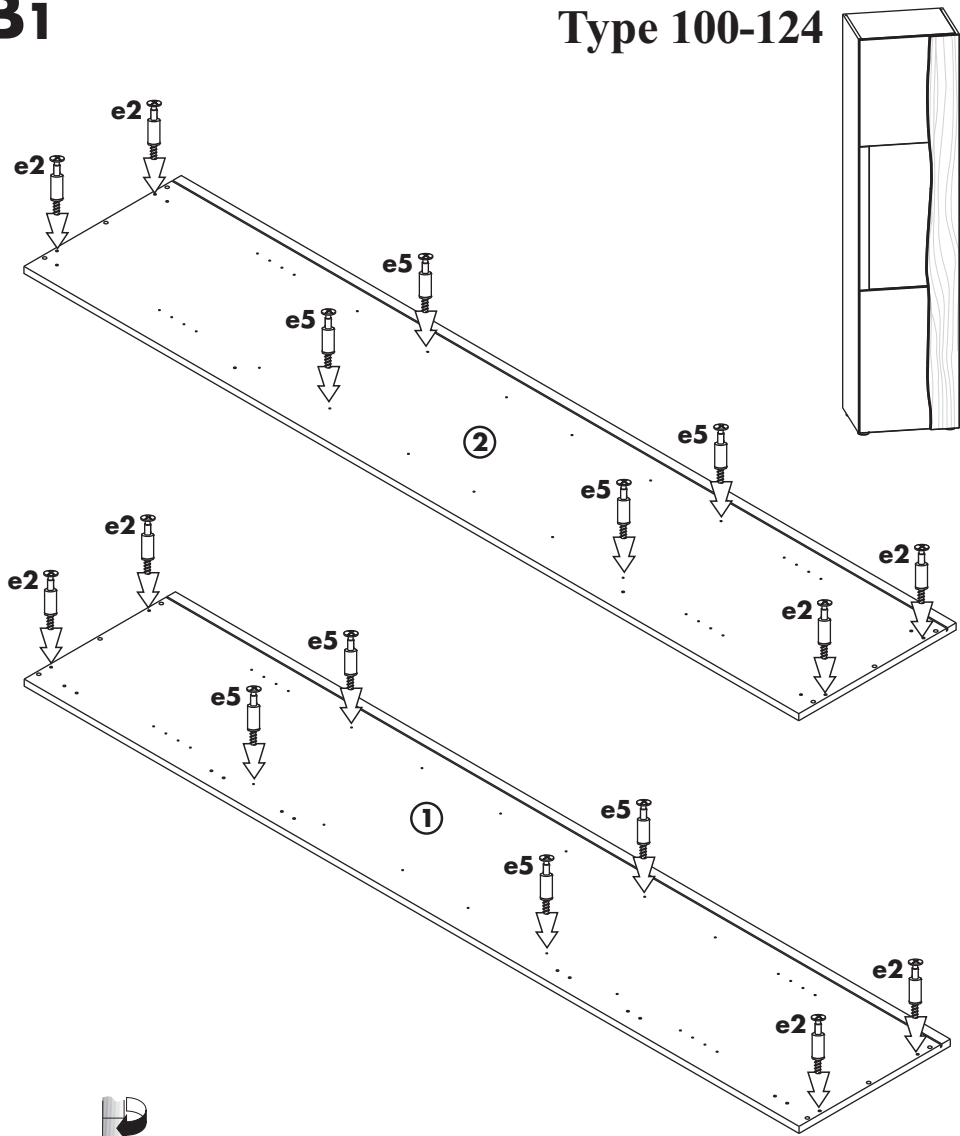



B2

Type 100-125


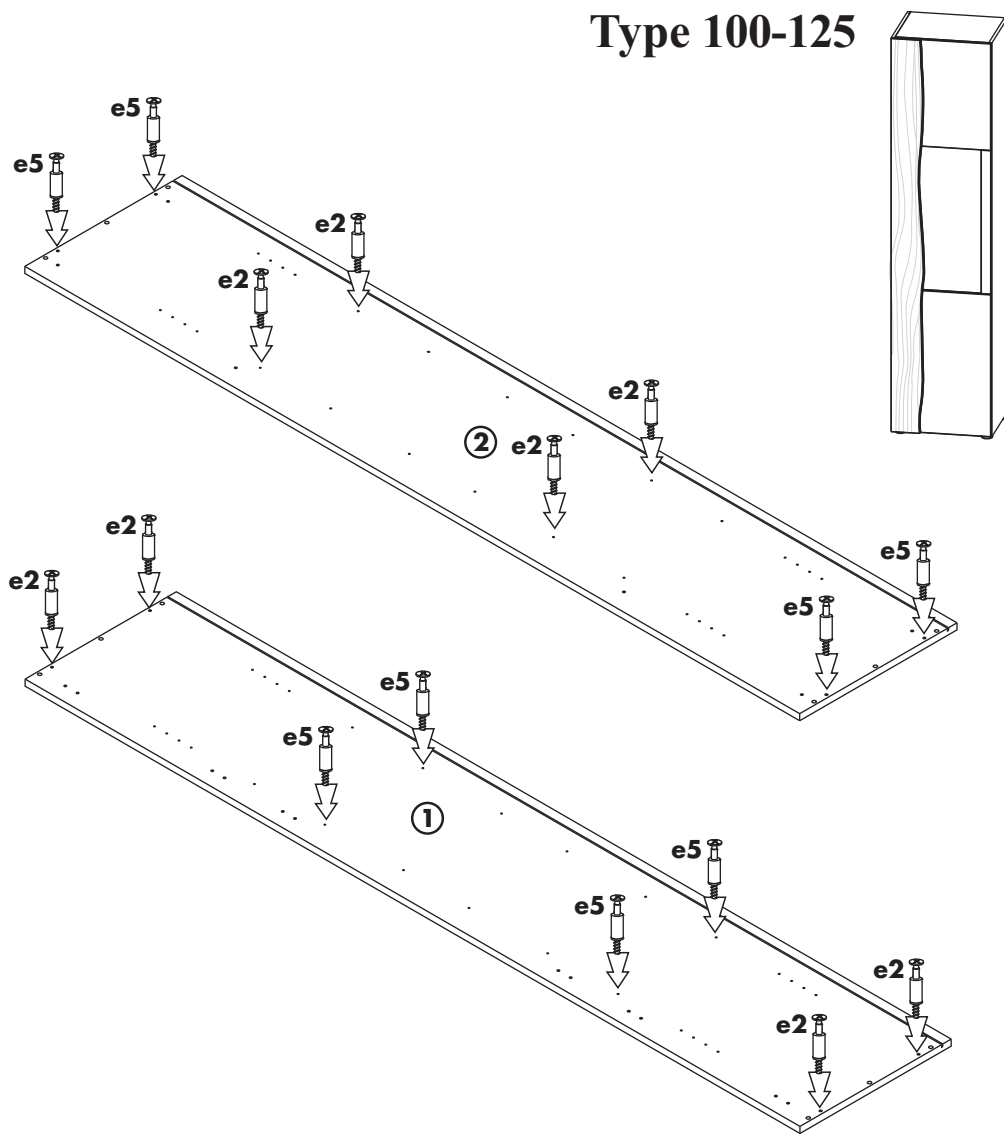


C1

Type 100-124



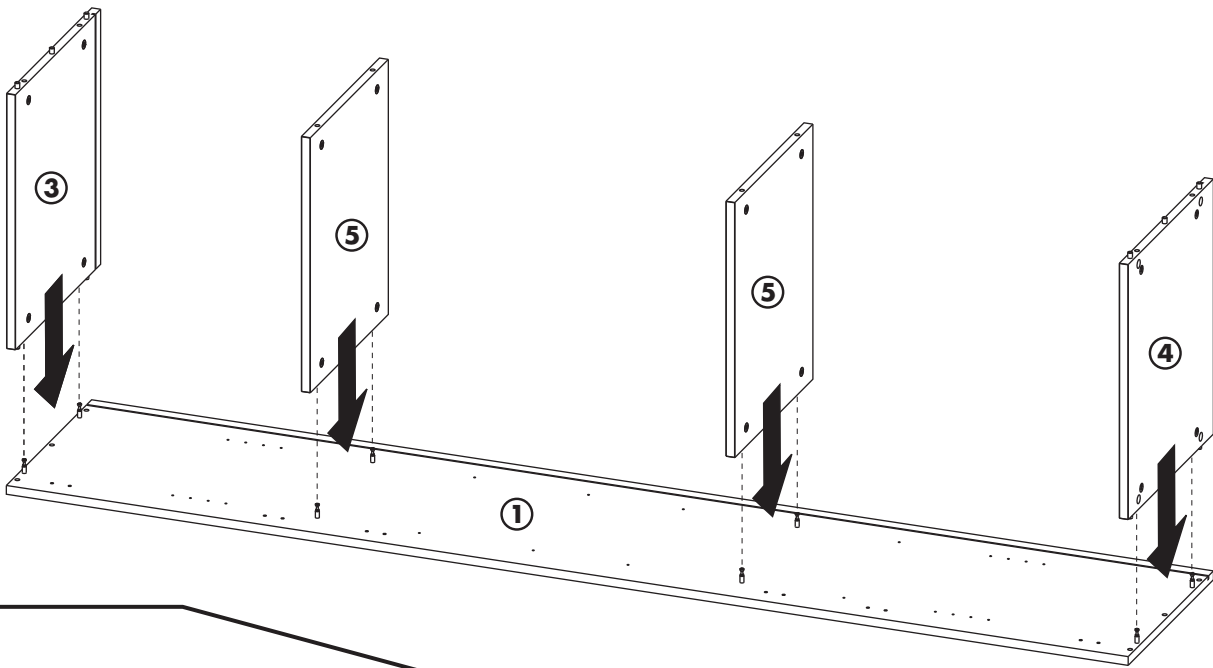
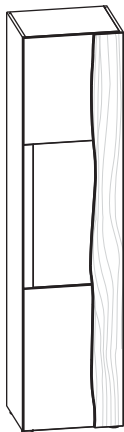


D1

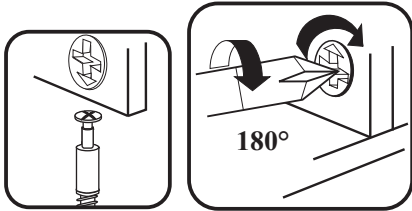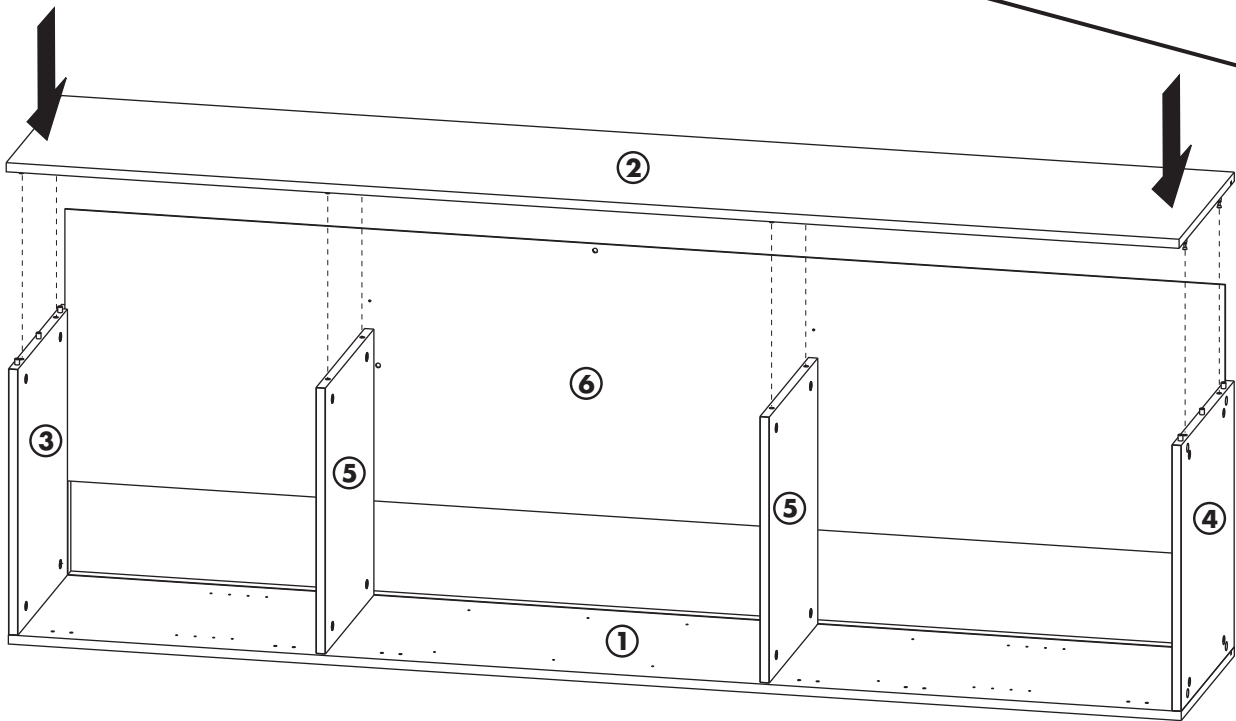


C2


Type 100-125

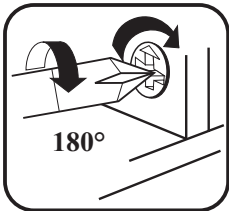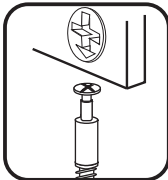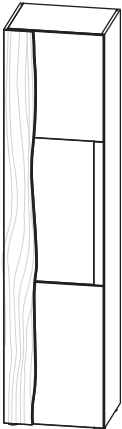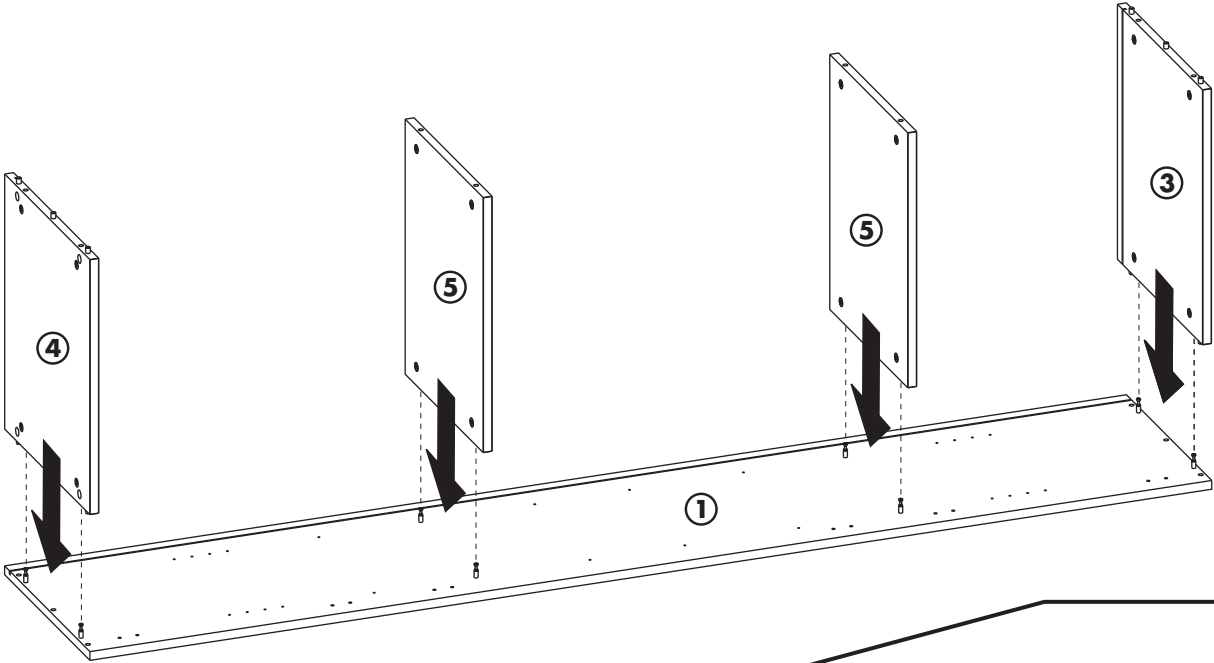



D2

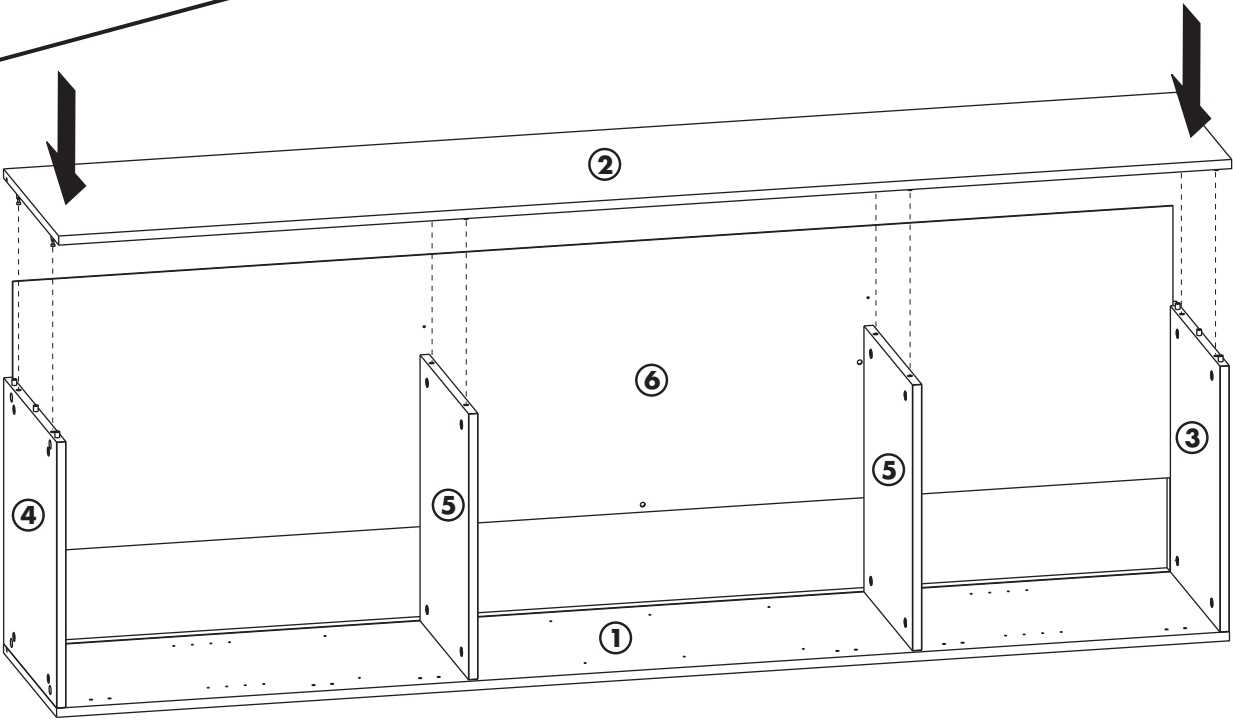


E1

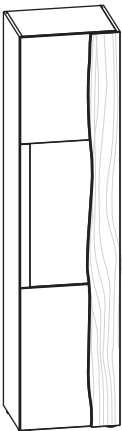


Type 100-124

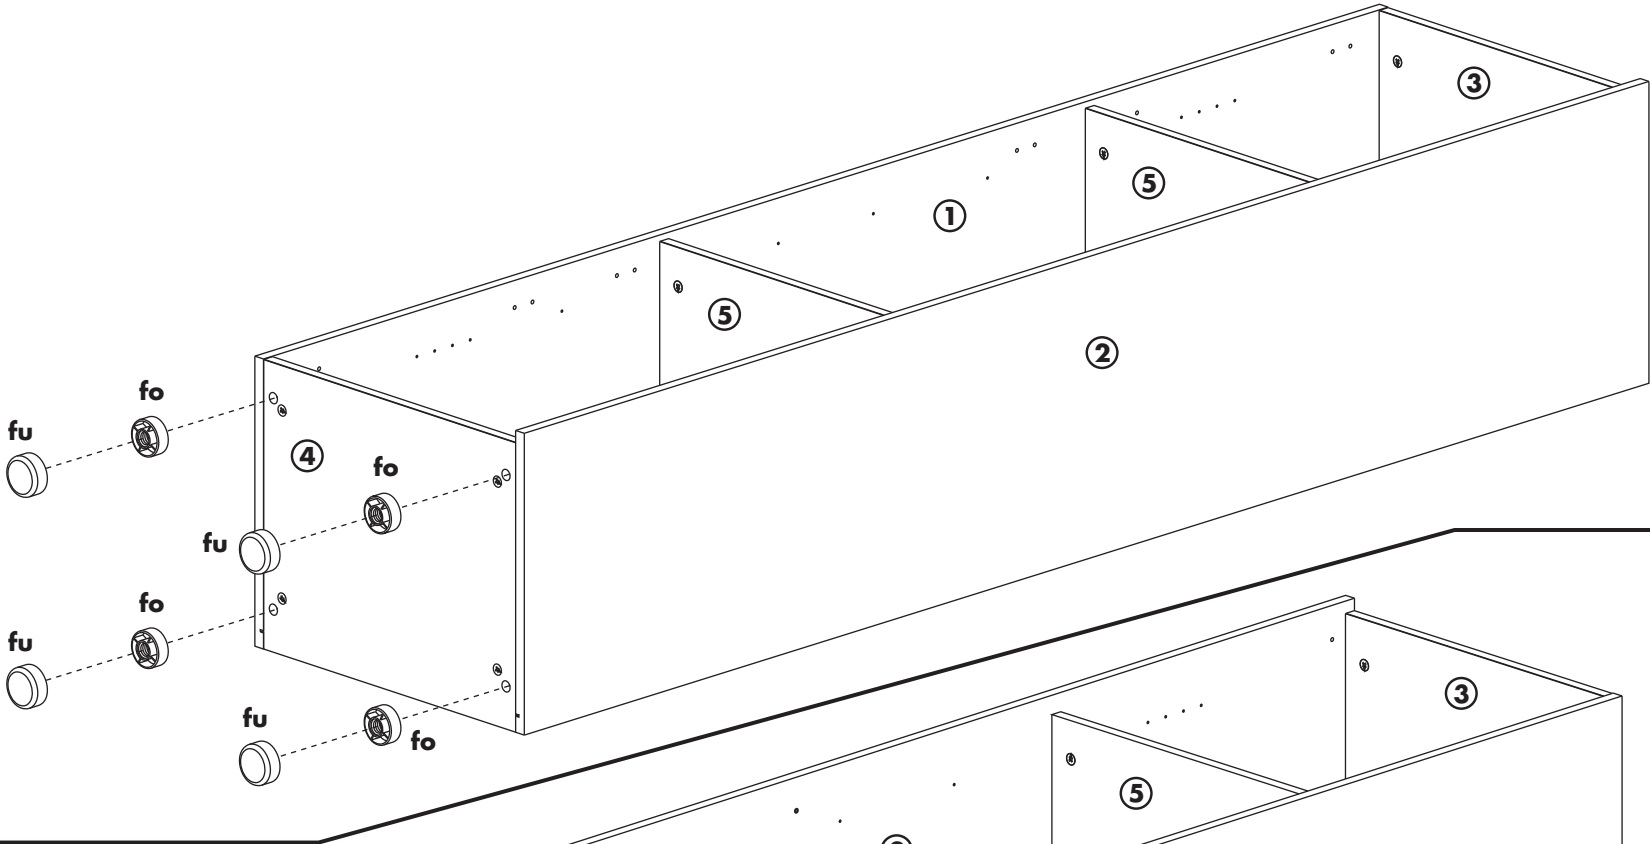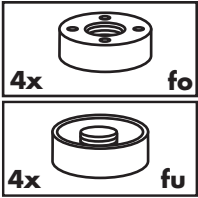


E2

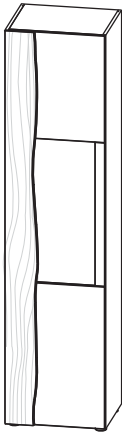

Type 100-125

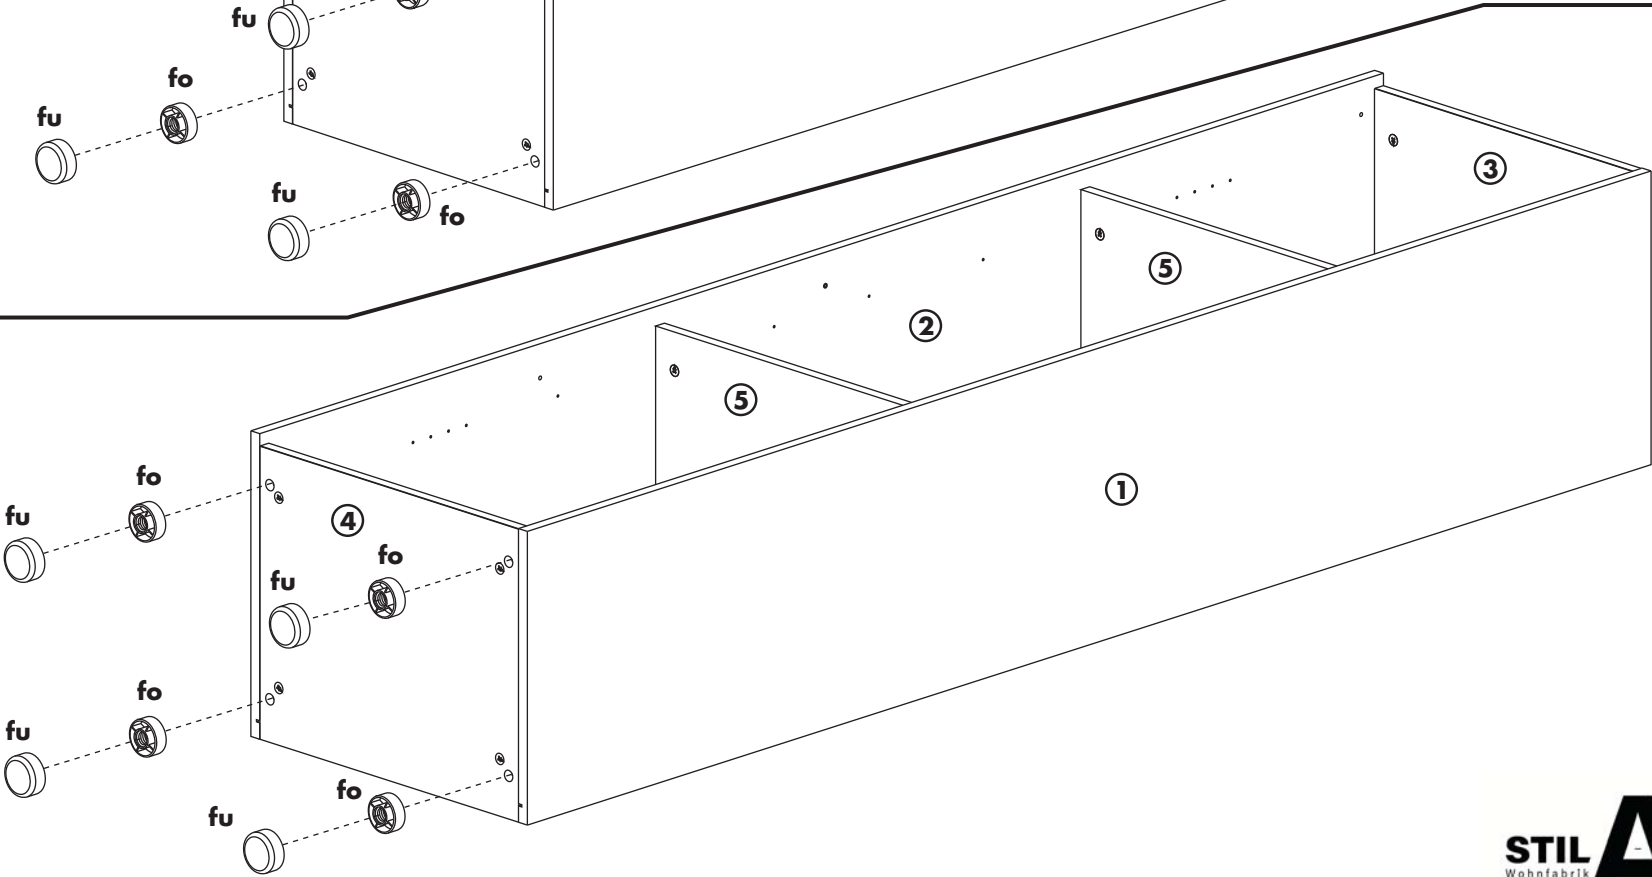

F

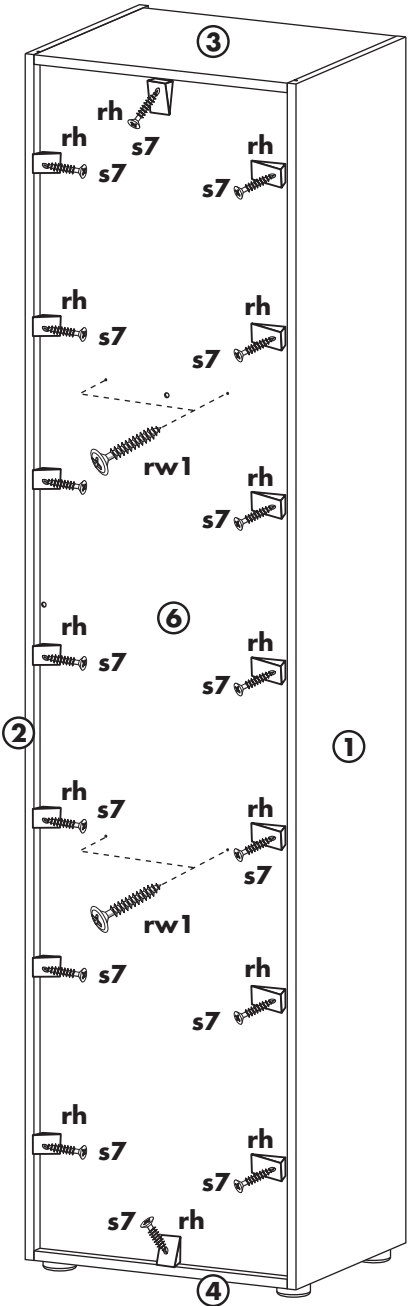




4x 3 x 20 rw1

16x 3 x 20 s7

16x rh

G1



Type 100-124

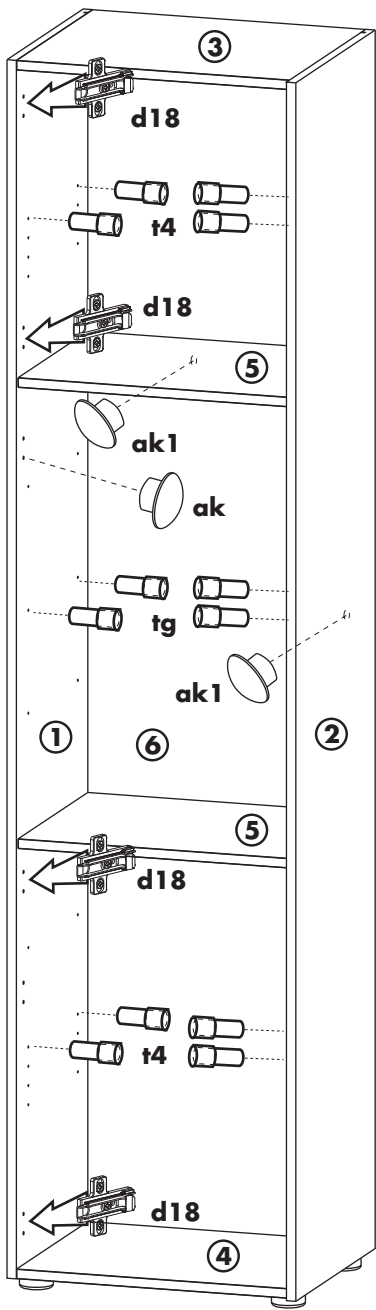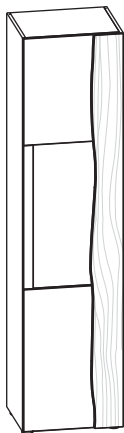


$\varnothing 13$ mm	$\varnothing 8$ mm
2x	ak1
$\varnothing 8$ mm	$\varnothing 5$ mm
11x	ak
$\varnothing 5$ mm	$\varnothing 3$ mm
8x	t4
$\varnothing 7$ mm	$\varnothing 3$ mm
4x	tg
4x	D 2mm d18

G2

Type 100-125

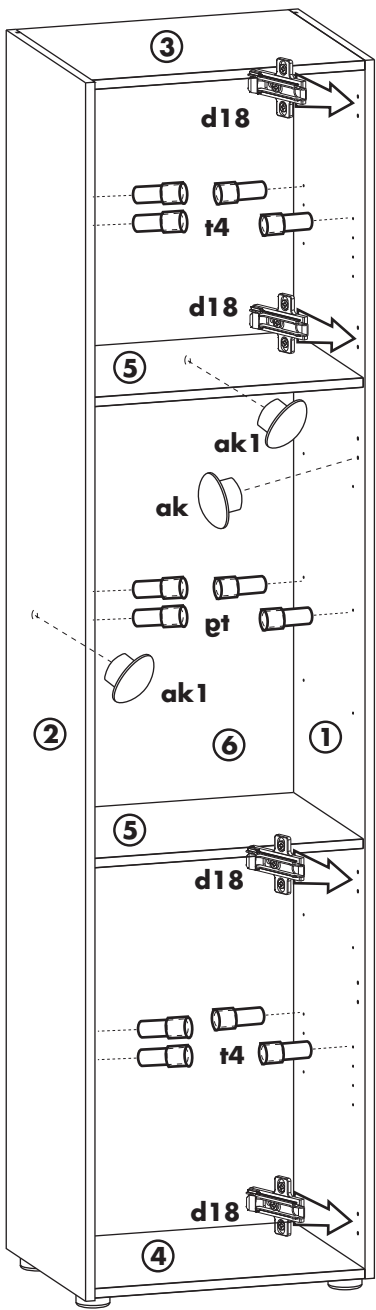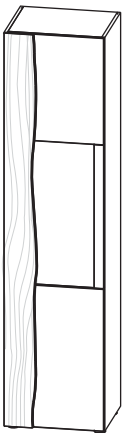



H1 Type 100-124

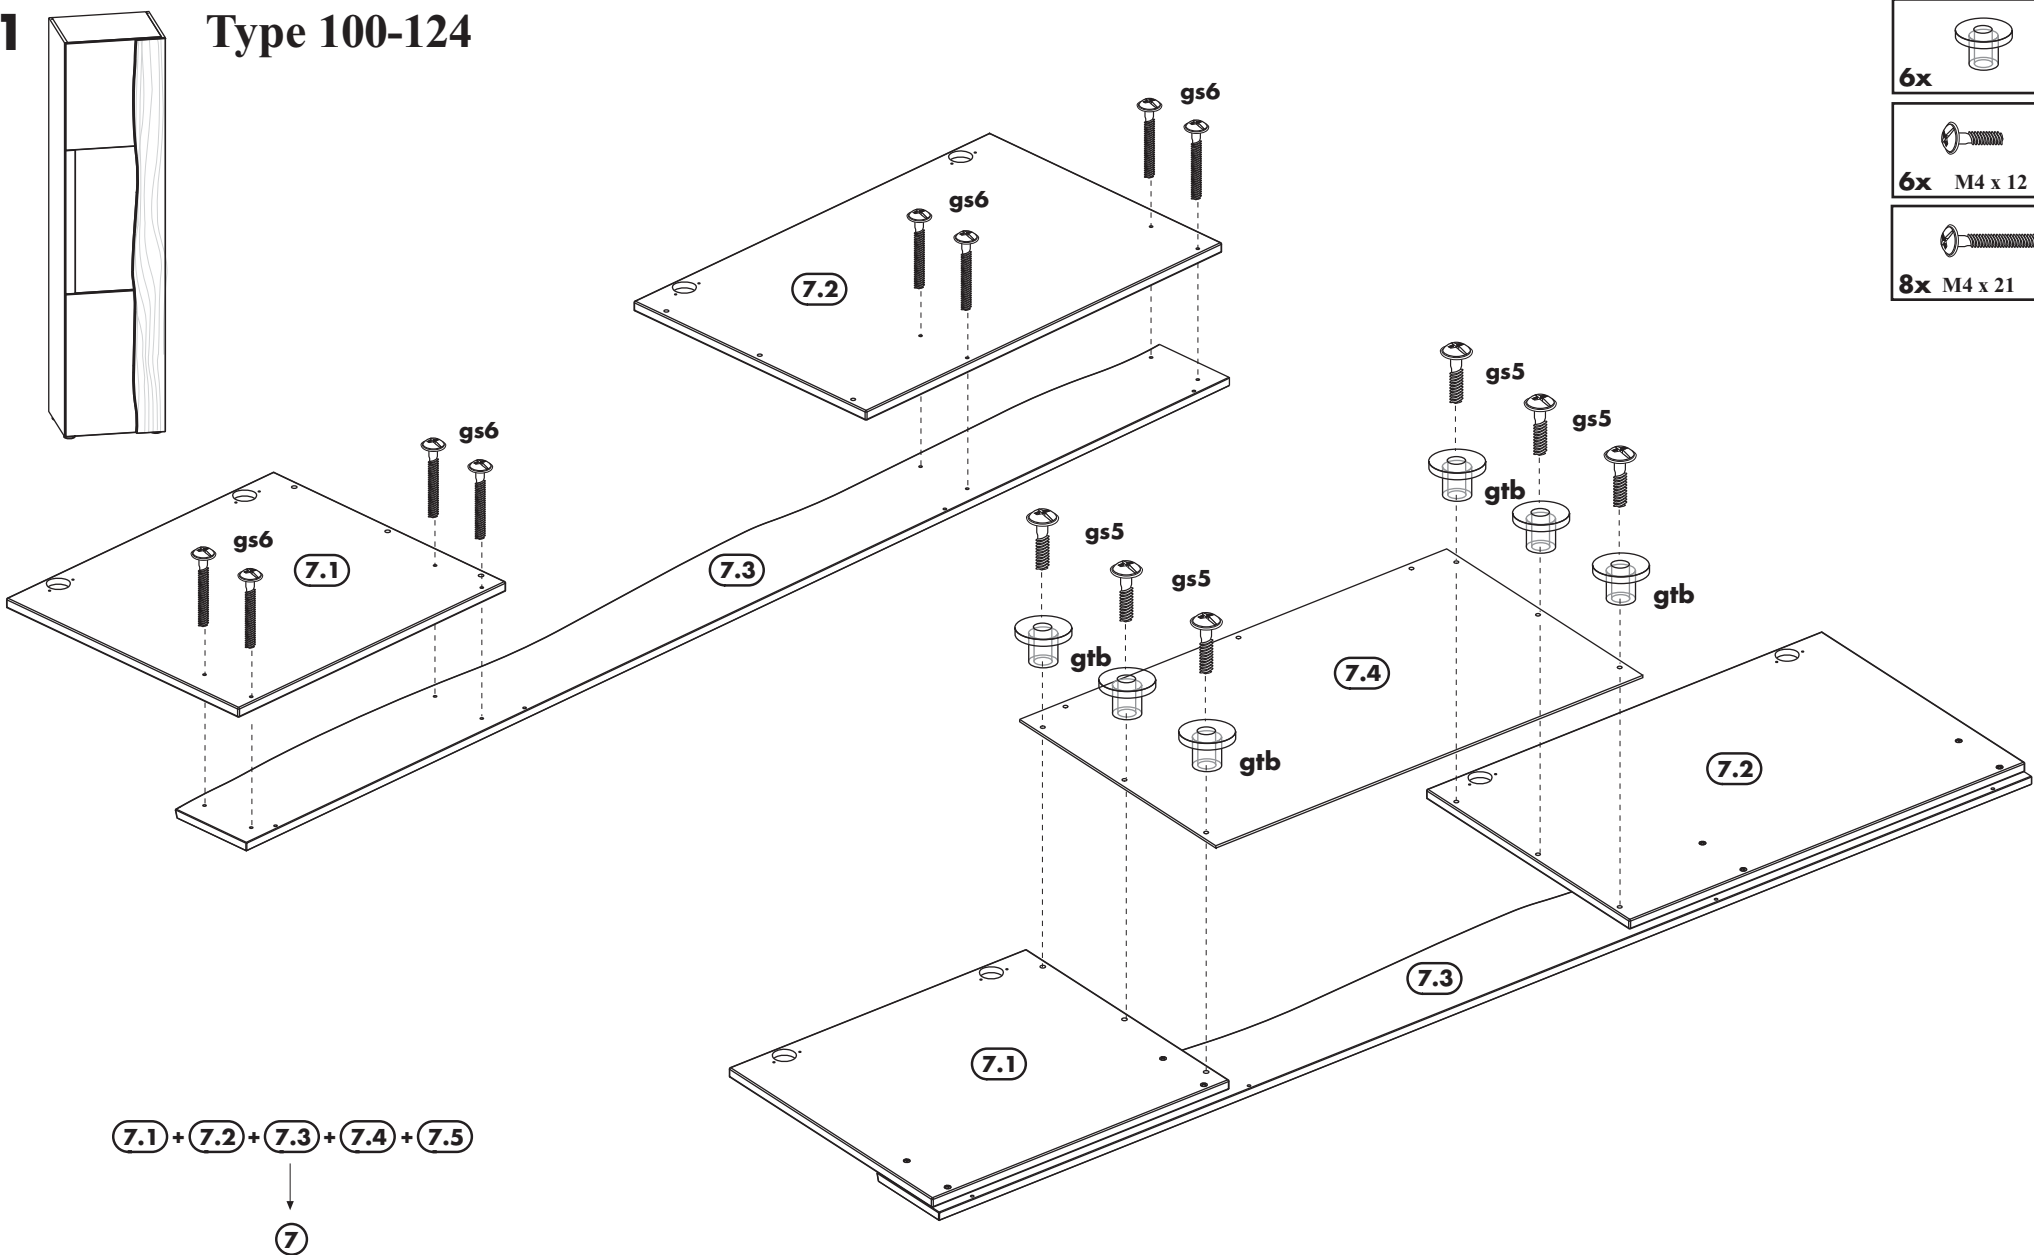



6x		gtb
6x		M4 x 12 gs5
8x		M4 x 21 gs6

11

Type 100-124

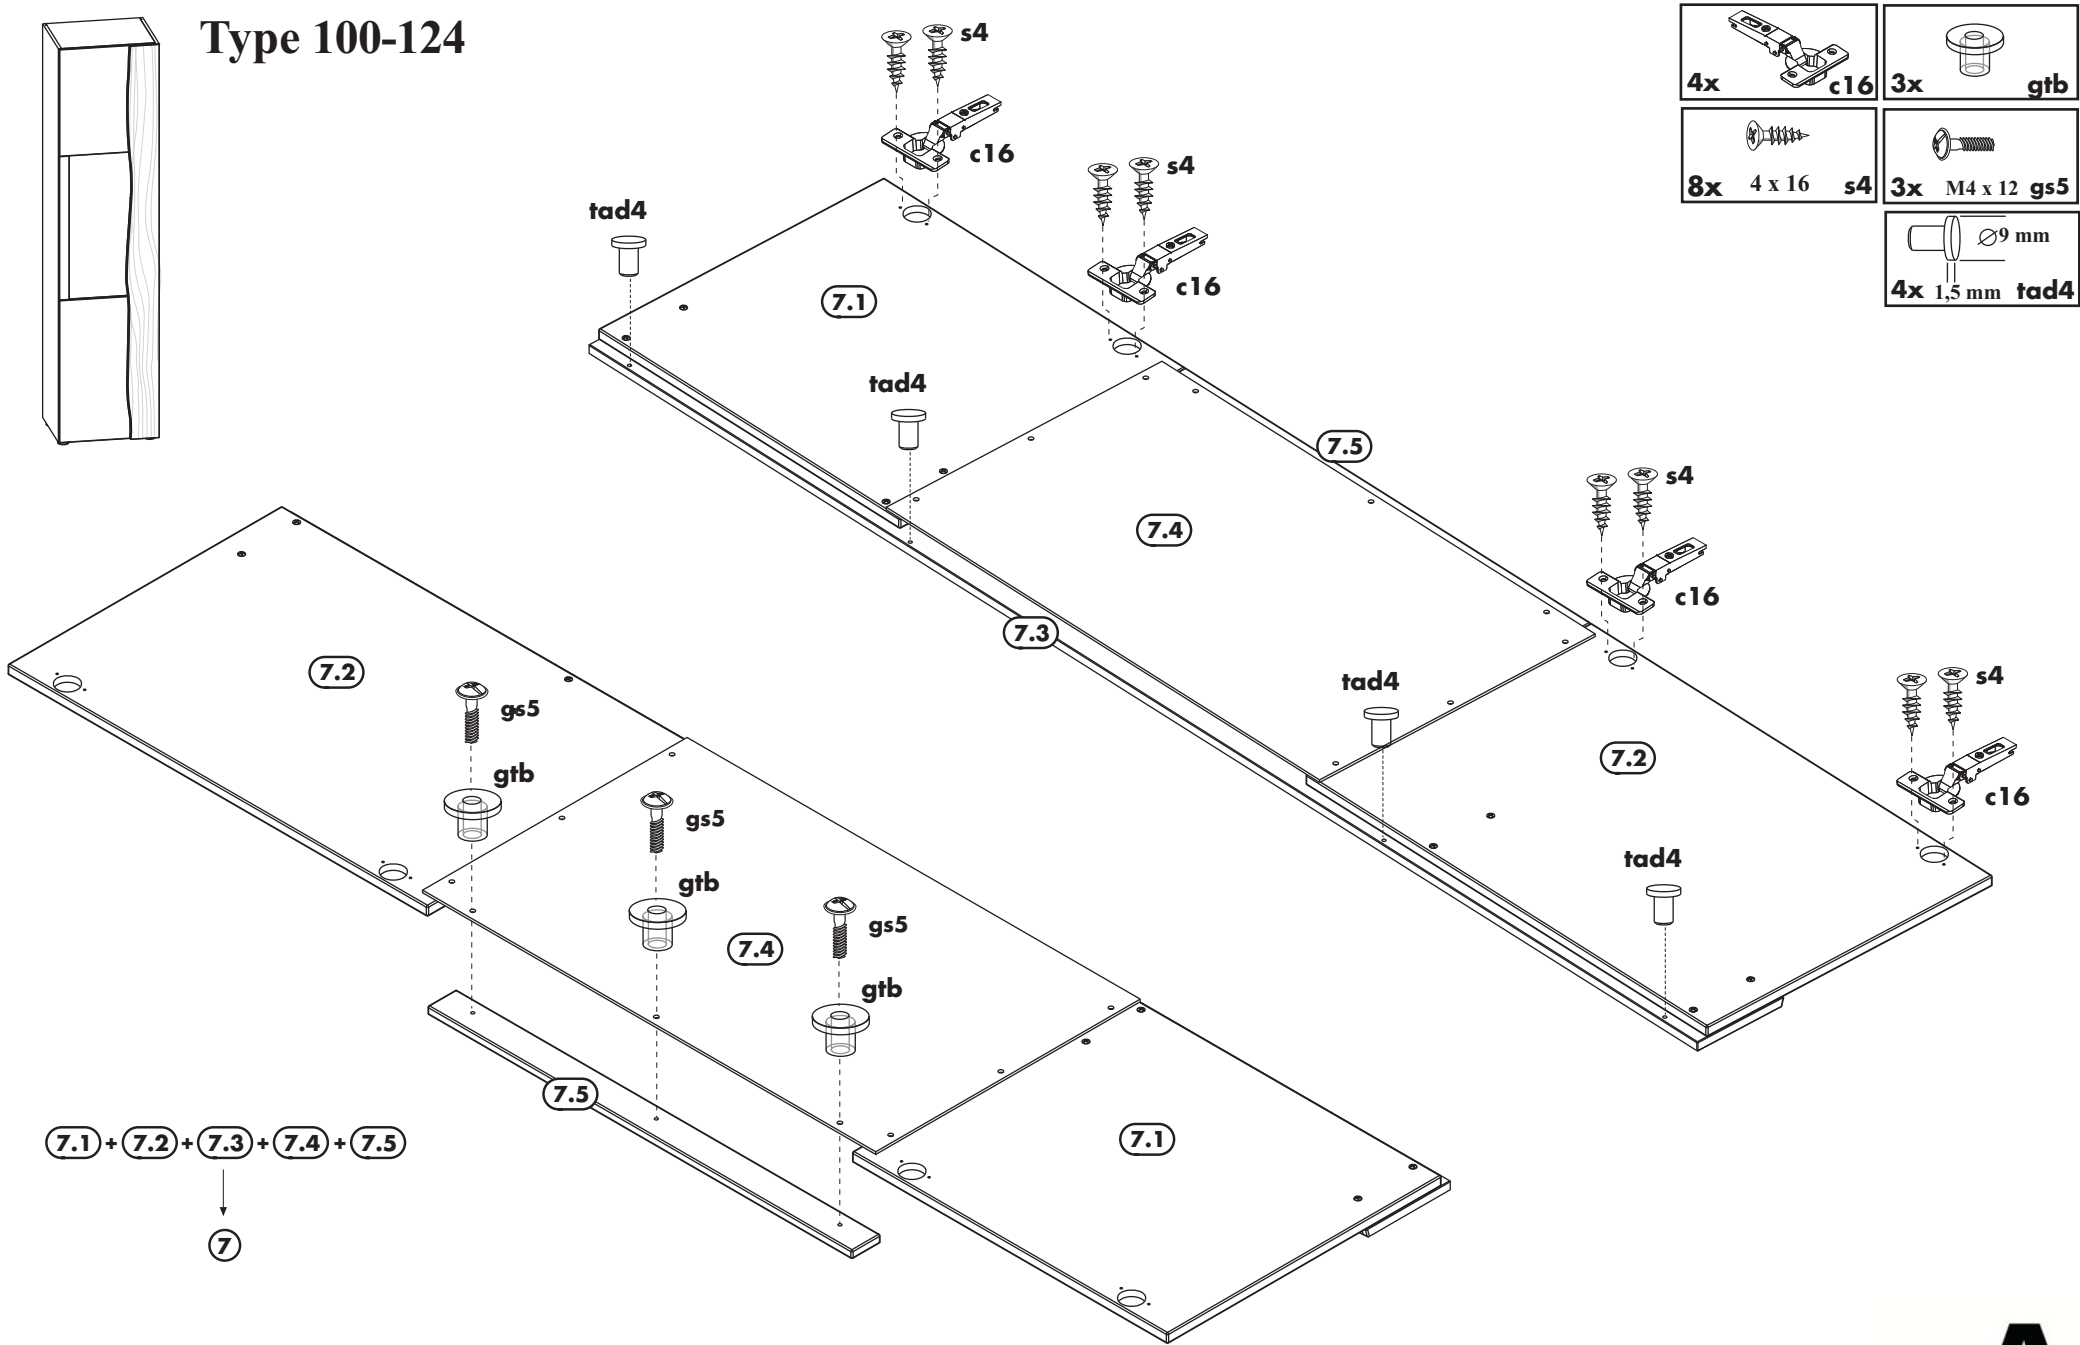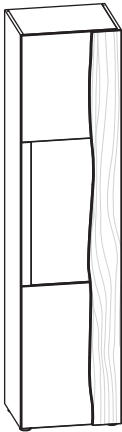


H2 Type 100-125

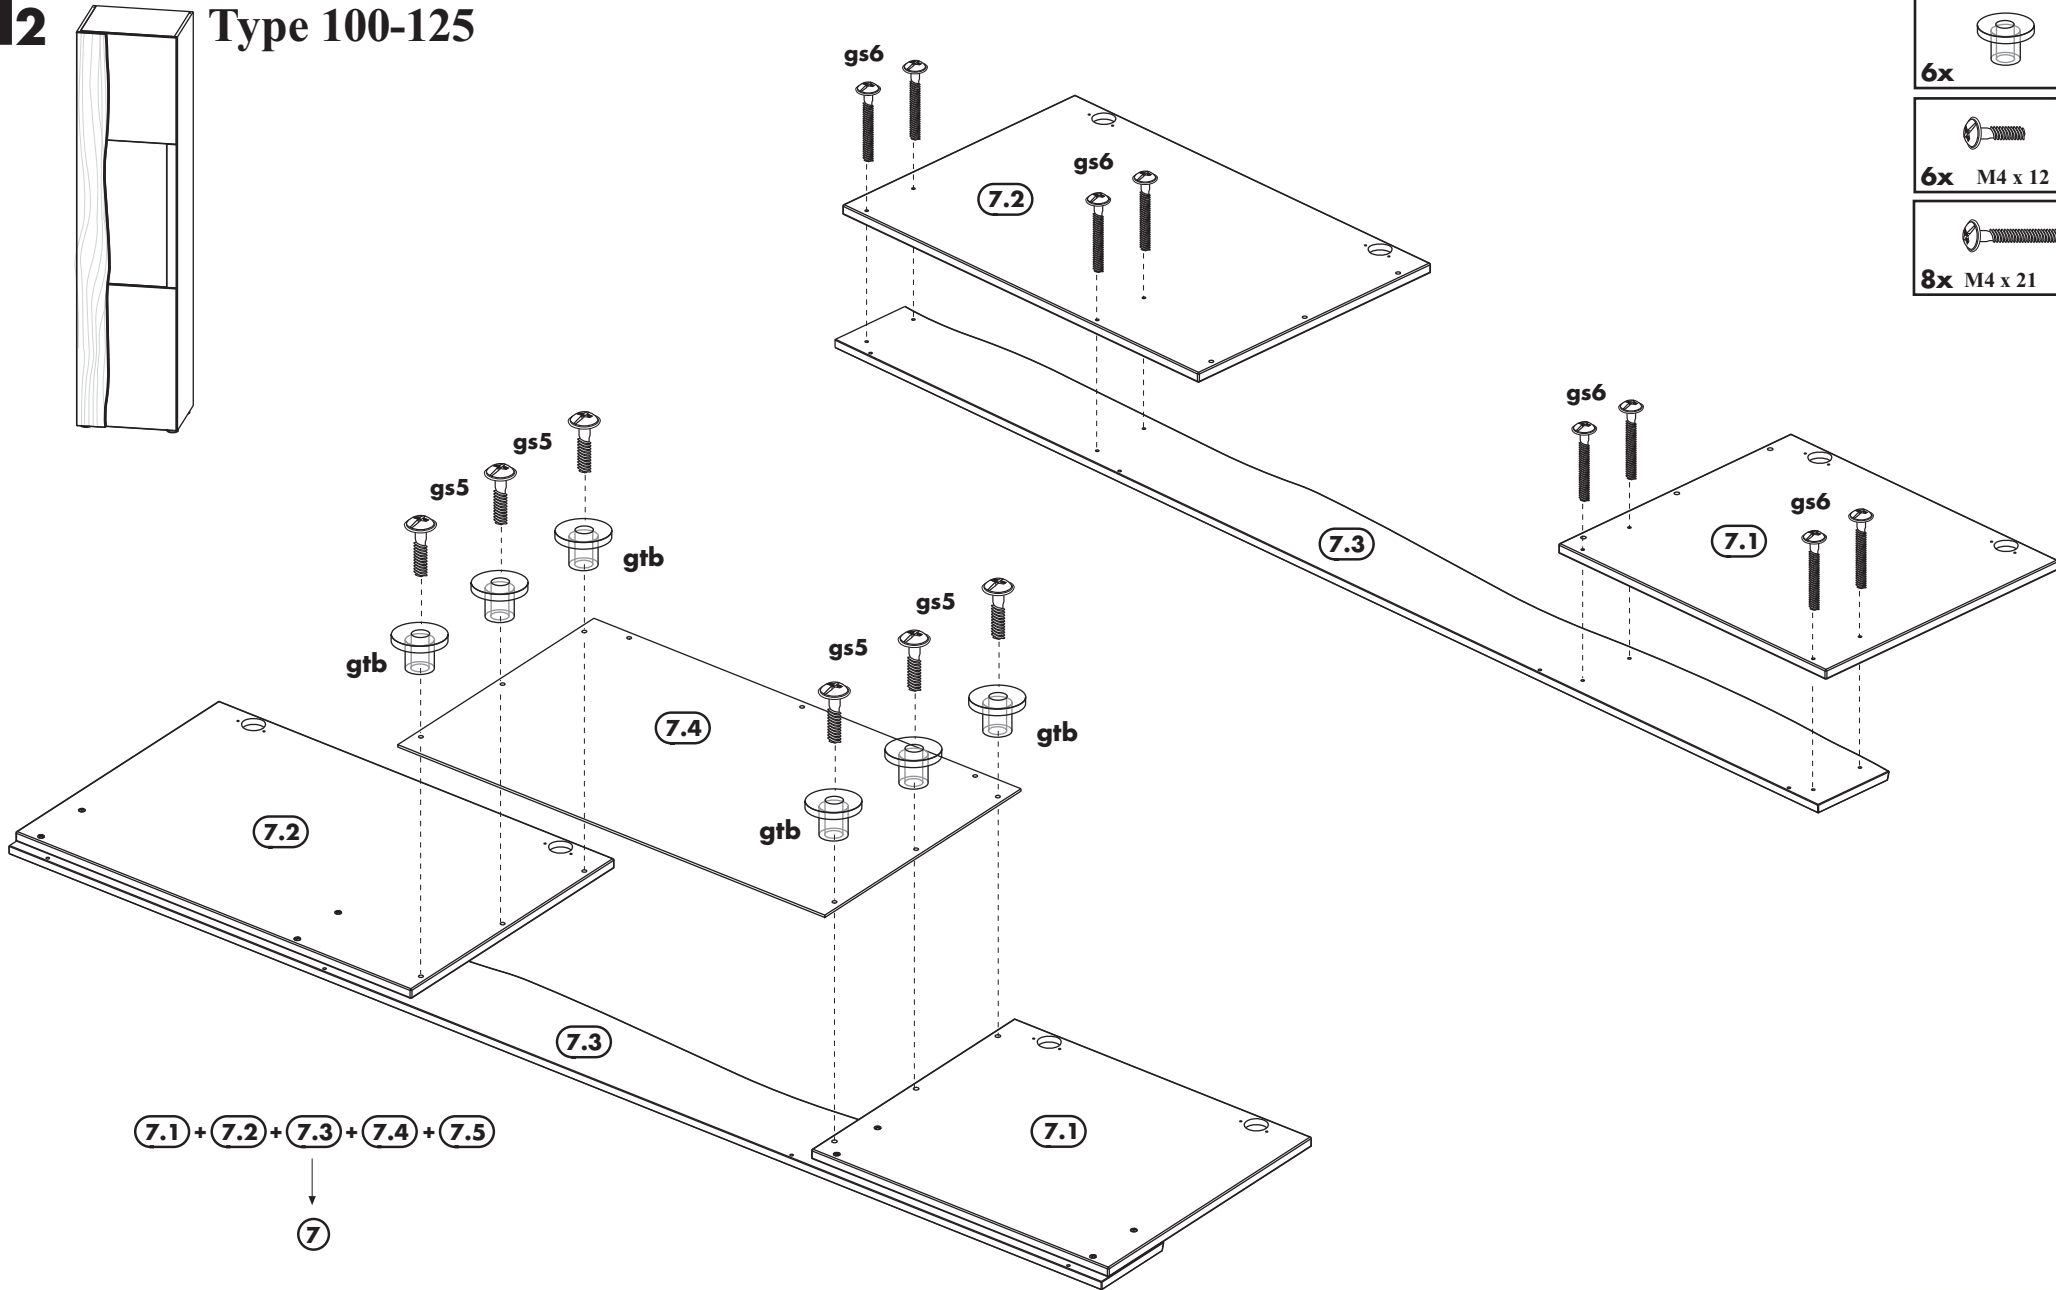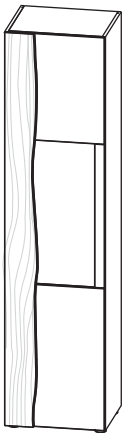


- 6x  gtb
- 6x  M4 x 12 gs5
- 8x  M4 x 21 gs6

l2


Type 100-125

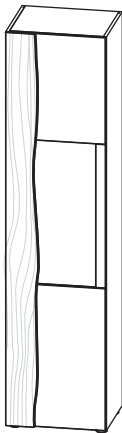


 4x c16	 3x gtb
 8x 4 x 16 s4	 3x M4 x 12 gs5
 4x 1,5 mm tad4 $\varnothing 9 \text{ mm}$	

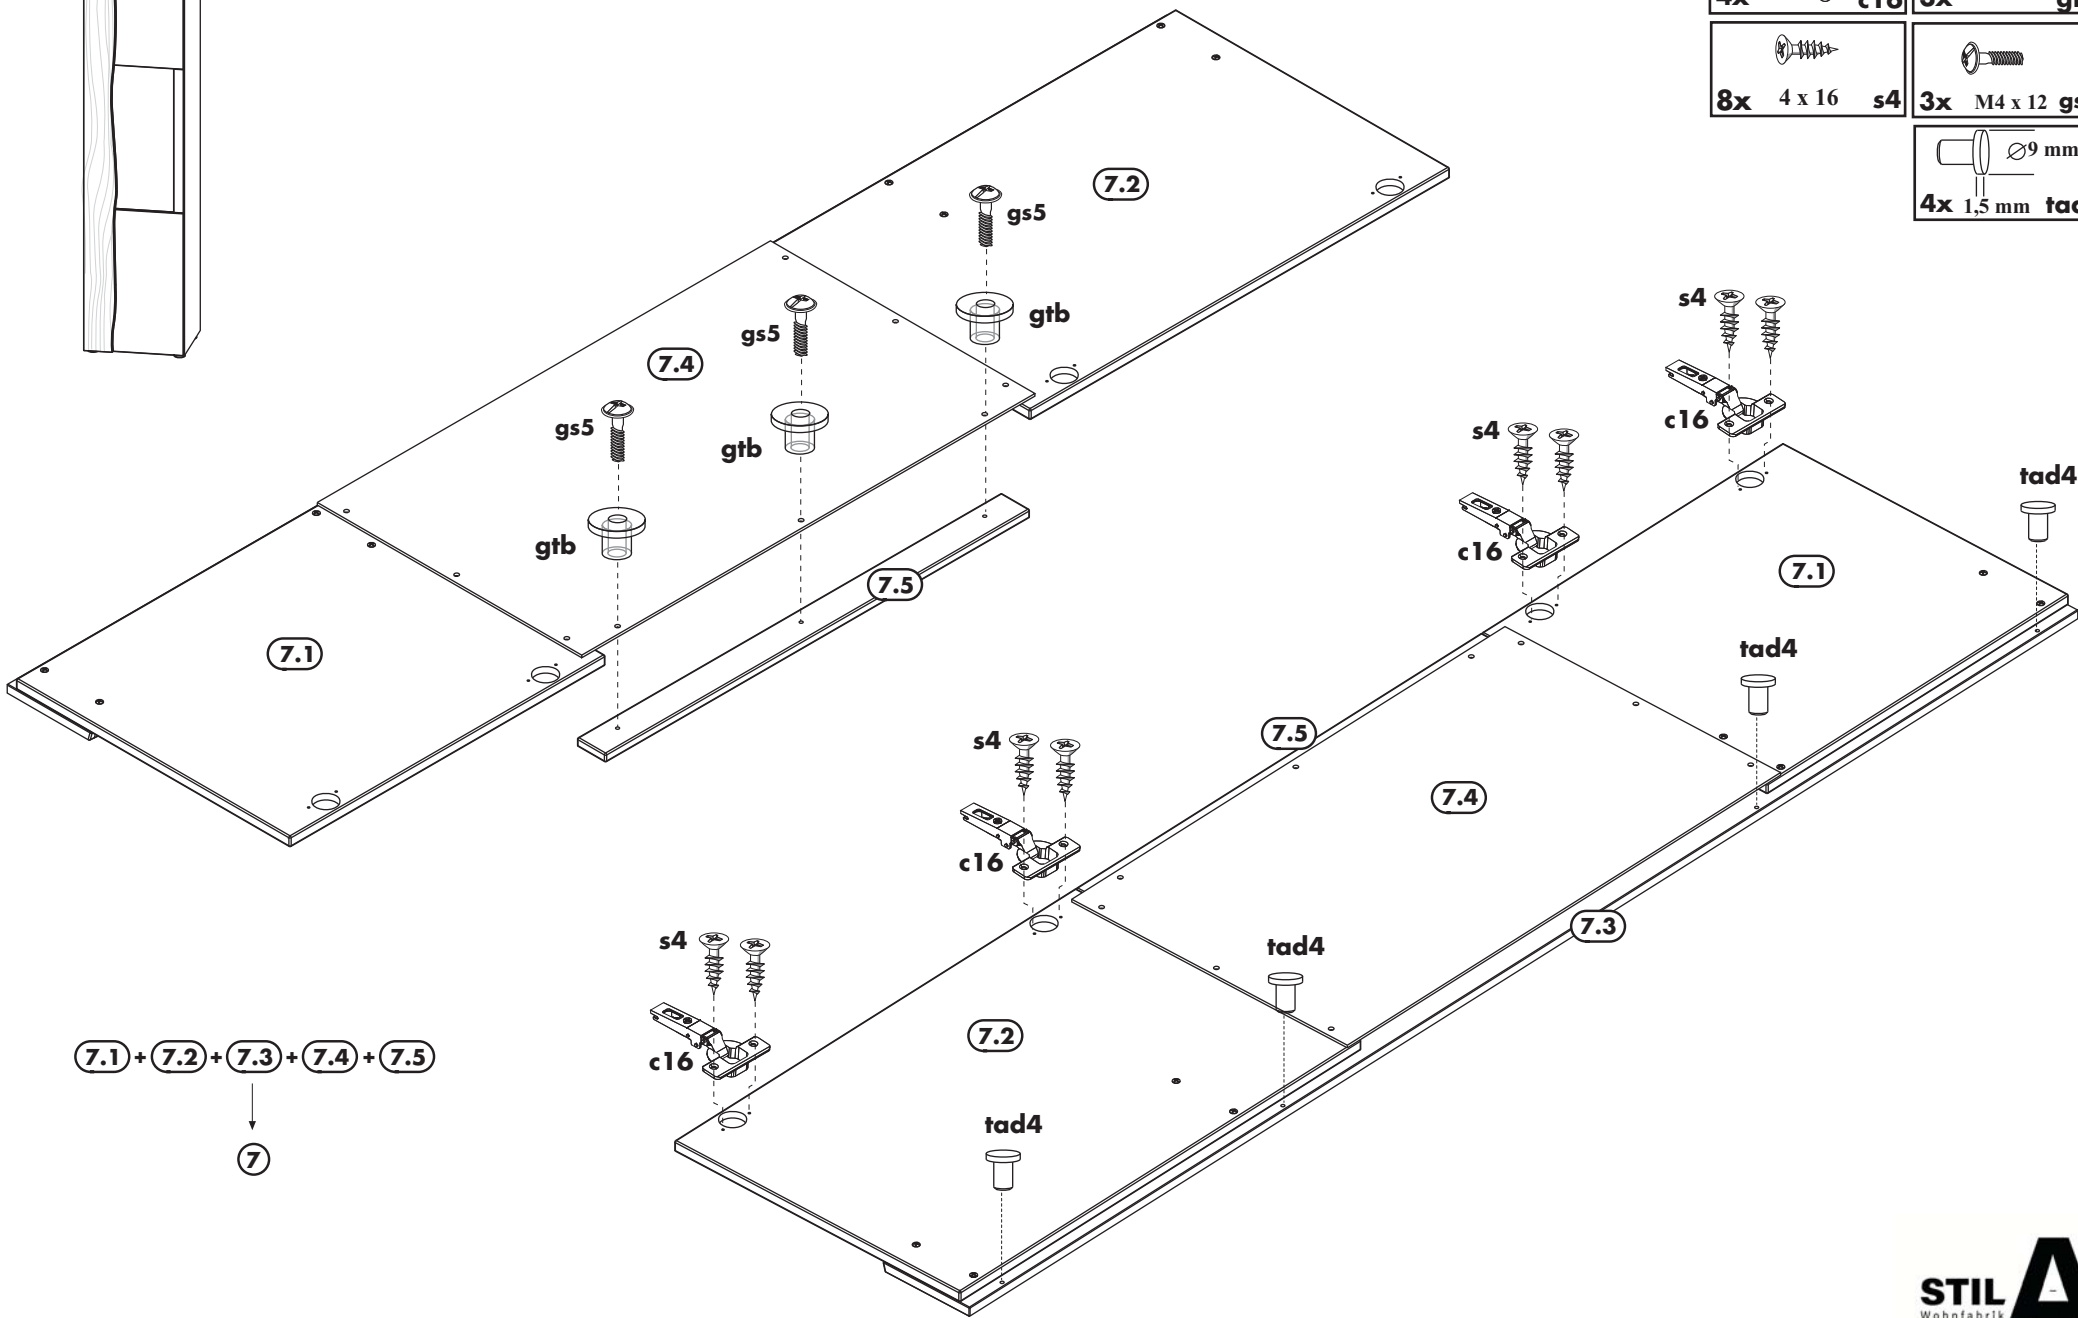


J1

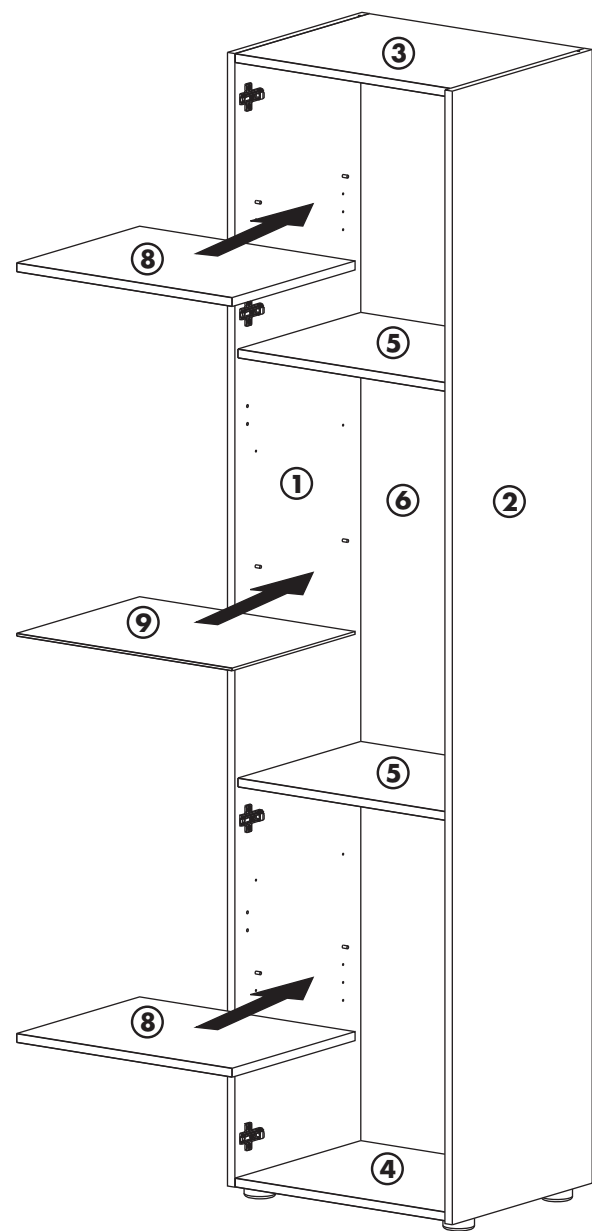



J2

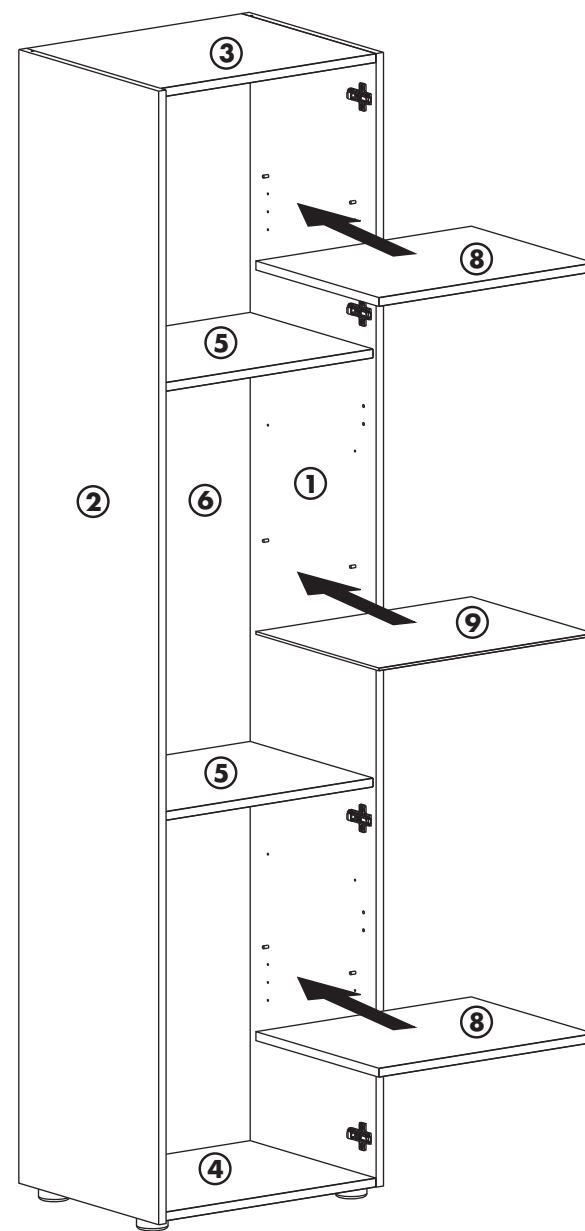


K1

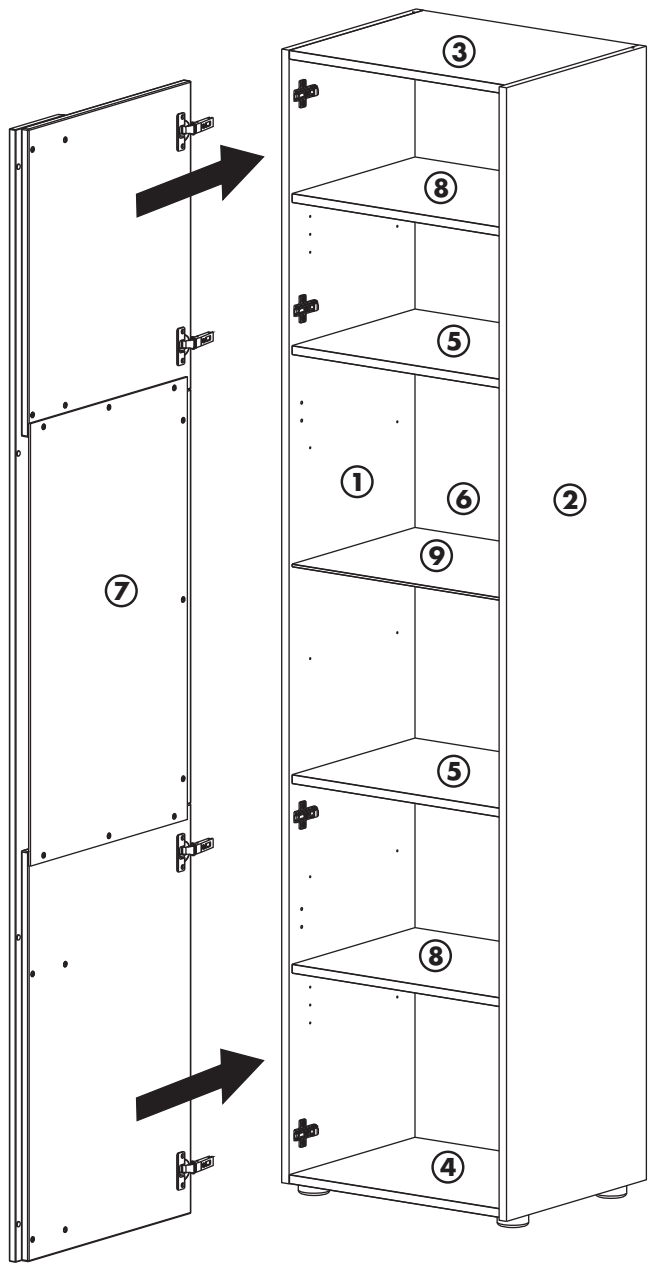

K2

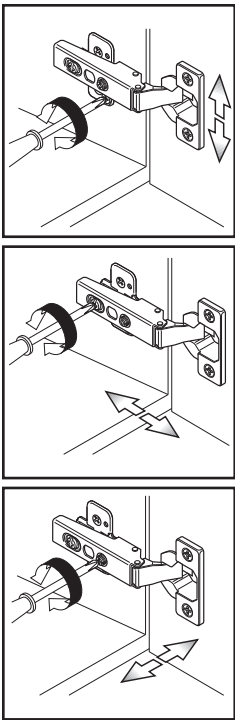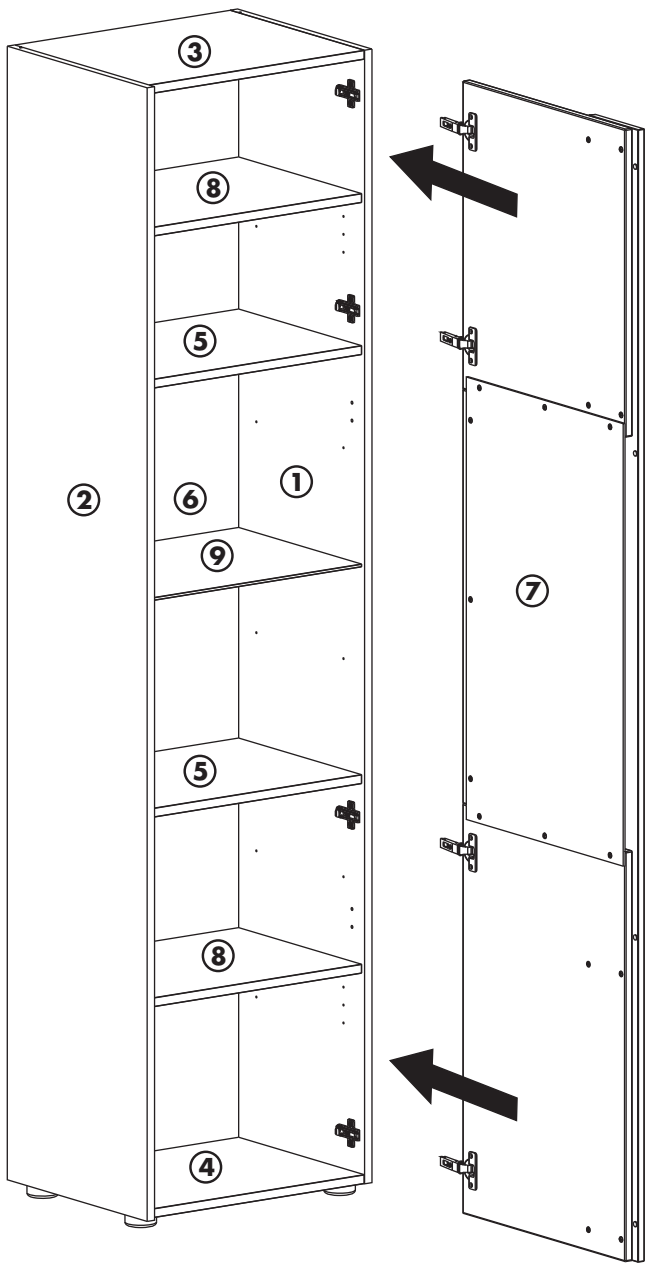


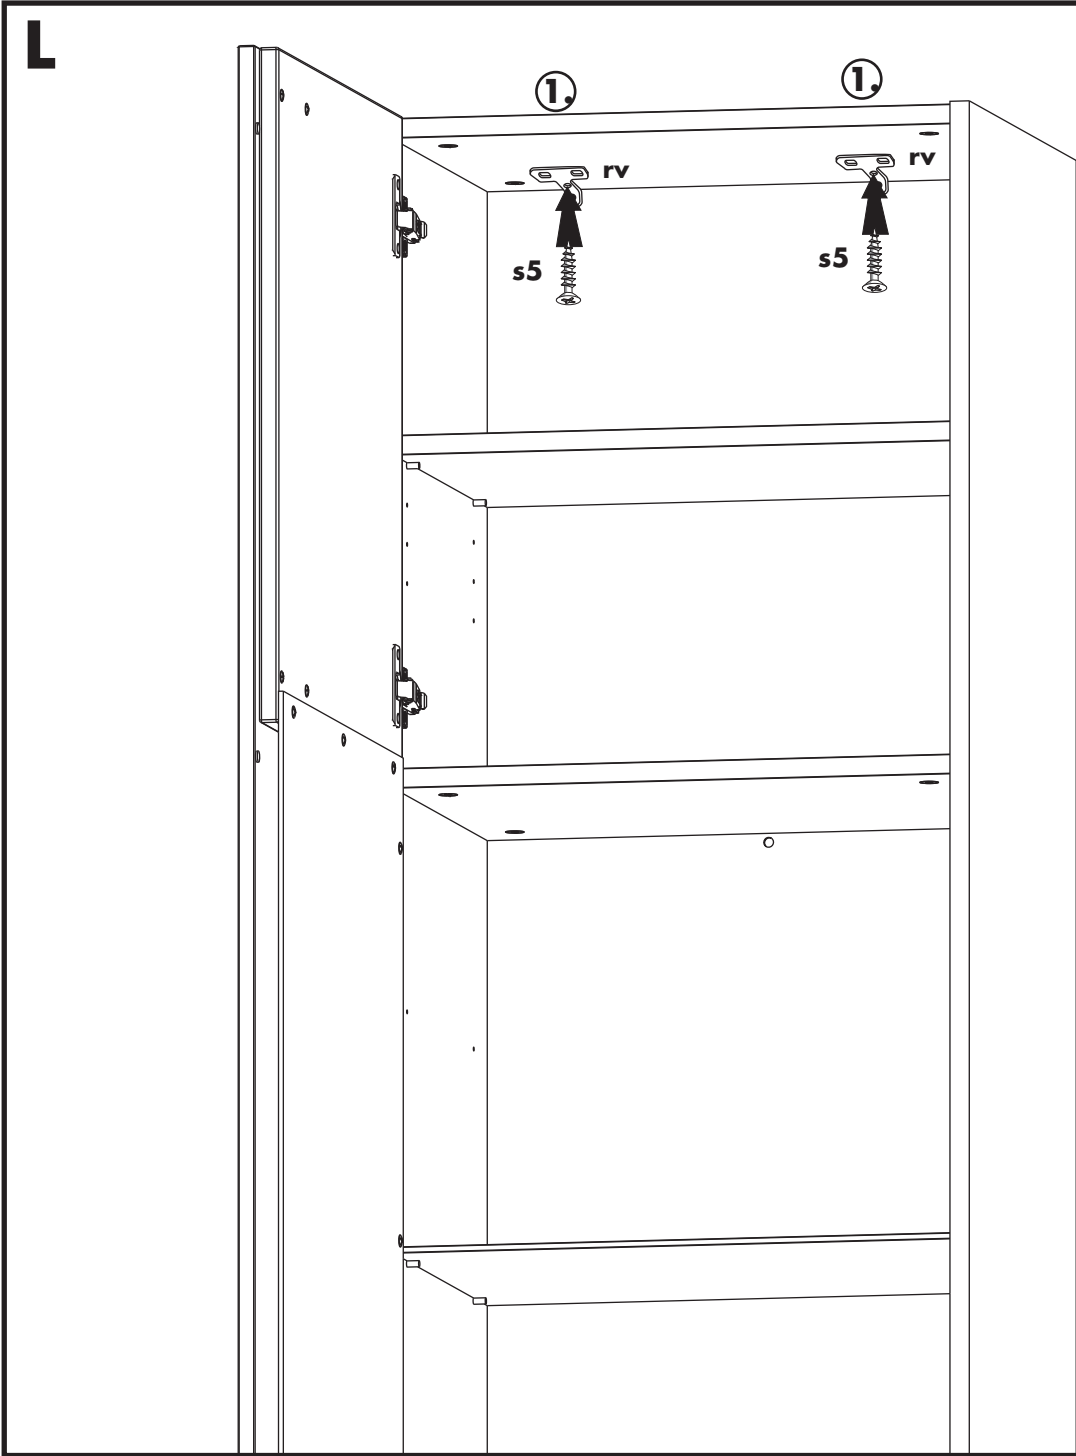

 2x 5 x 100 s28	 2x 3,5 x 15 s5	 2x wd	 2x rv
---	---	--	--

Kippsicherung
anbringen
Install anti-tip device

2. Wand markieren
mark wall

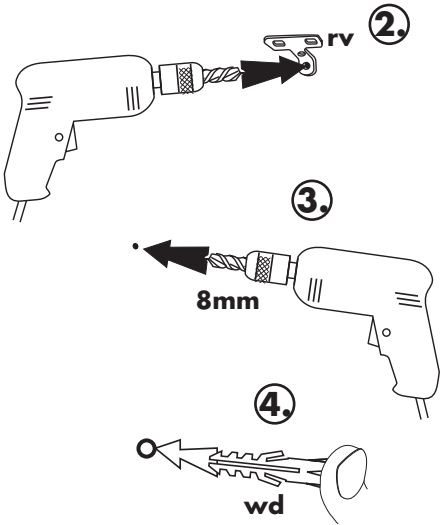

5. Schraube eindrehen
Mount screw

