





Type 100-130

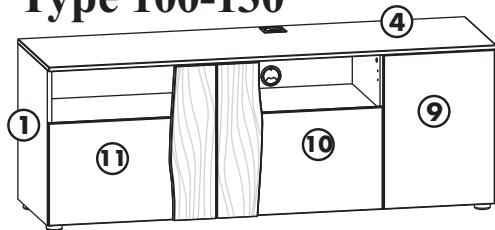

Type 100-131

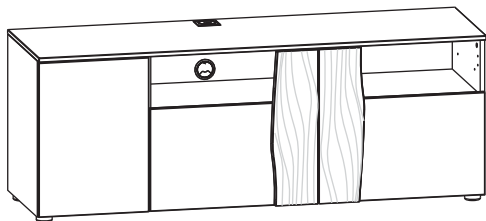

Sie brauchen:
You need:

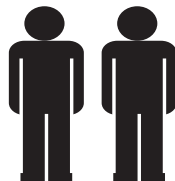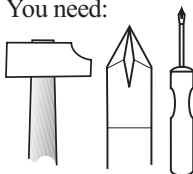

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.












Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!






Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Light Line 15 100_130 / 04.26

 4x 4,0 x 27 rw7	 1x mg5b	 1x mg5d	 1x mg5a
 6x a1	 14x a4	 20x e2	 2x 3 x 15 s6
 6x fu	 6x fo	 4x M4 x 21 gs6	 12x 4 x 16 s4
 12x t4	 40x ak	 12x ak1	 6x D 2mm d18
 4x 2,7 mm tad7	 1x kbs1	 1x kbs4	 24x 8 x 40 p1
 24x 3 x 20 s7	 24x rh	 4x c16	 2x c17


A

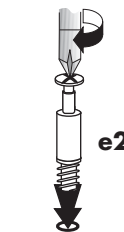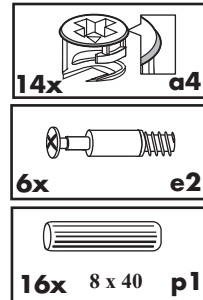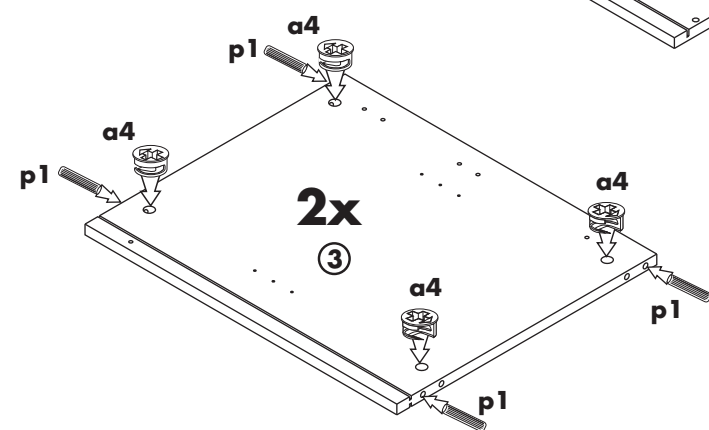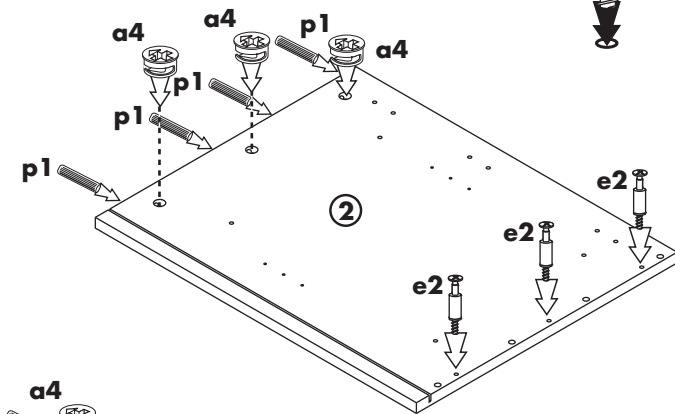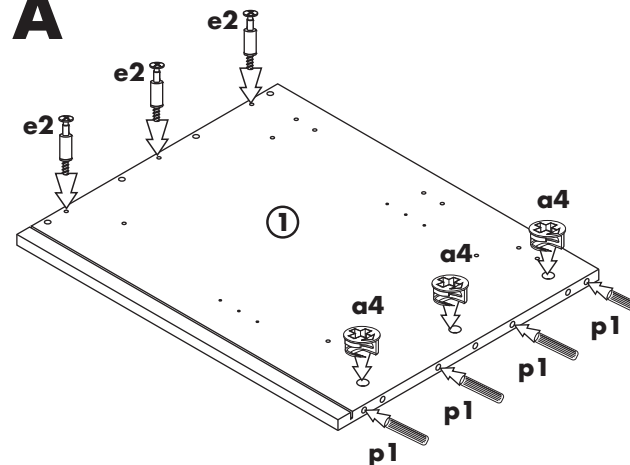




B1

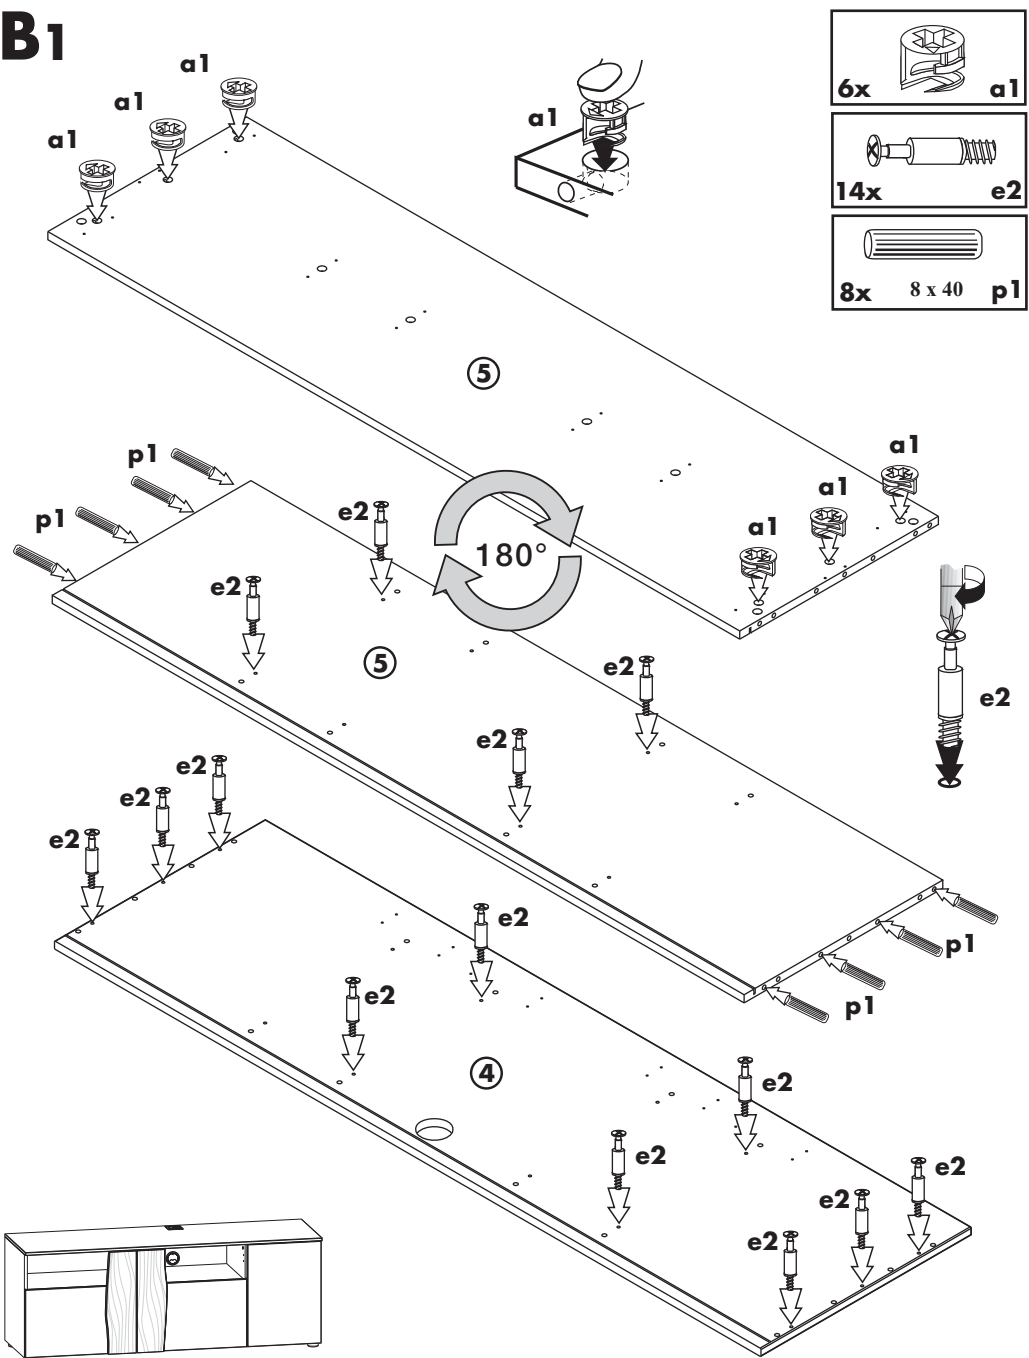


B2

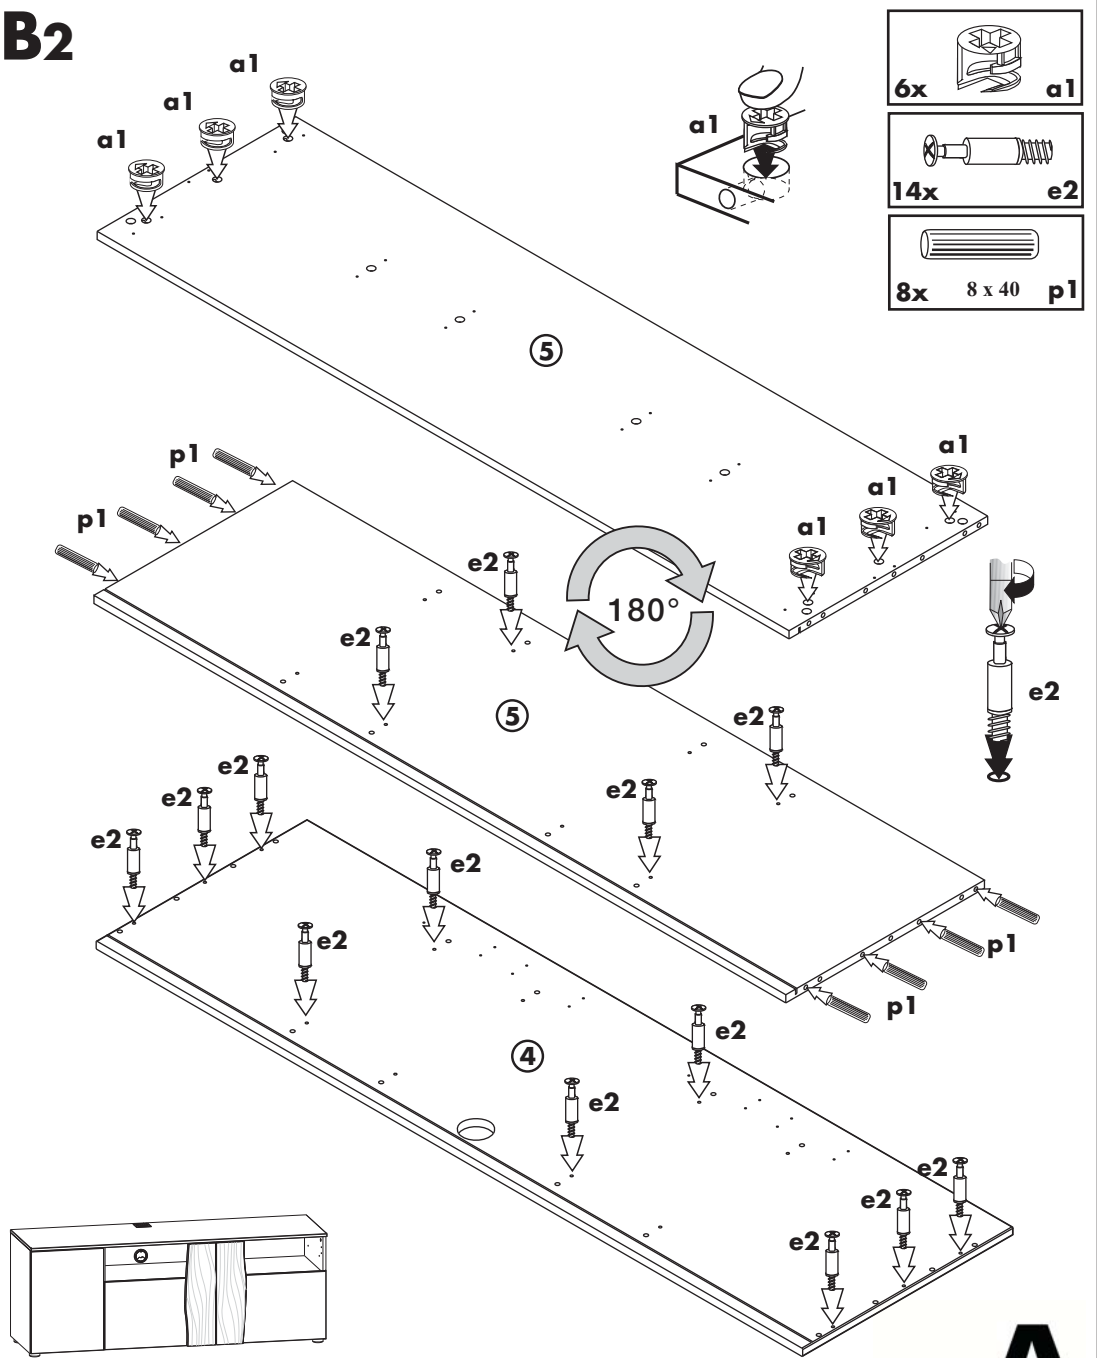


C1

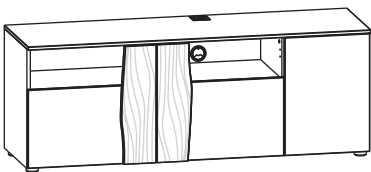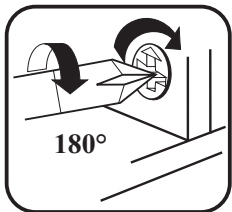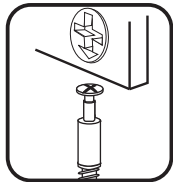


Type 100-130

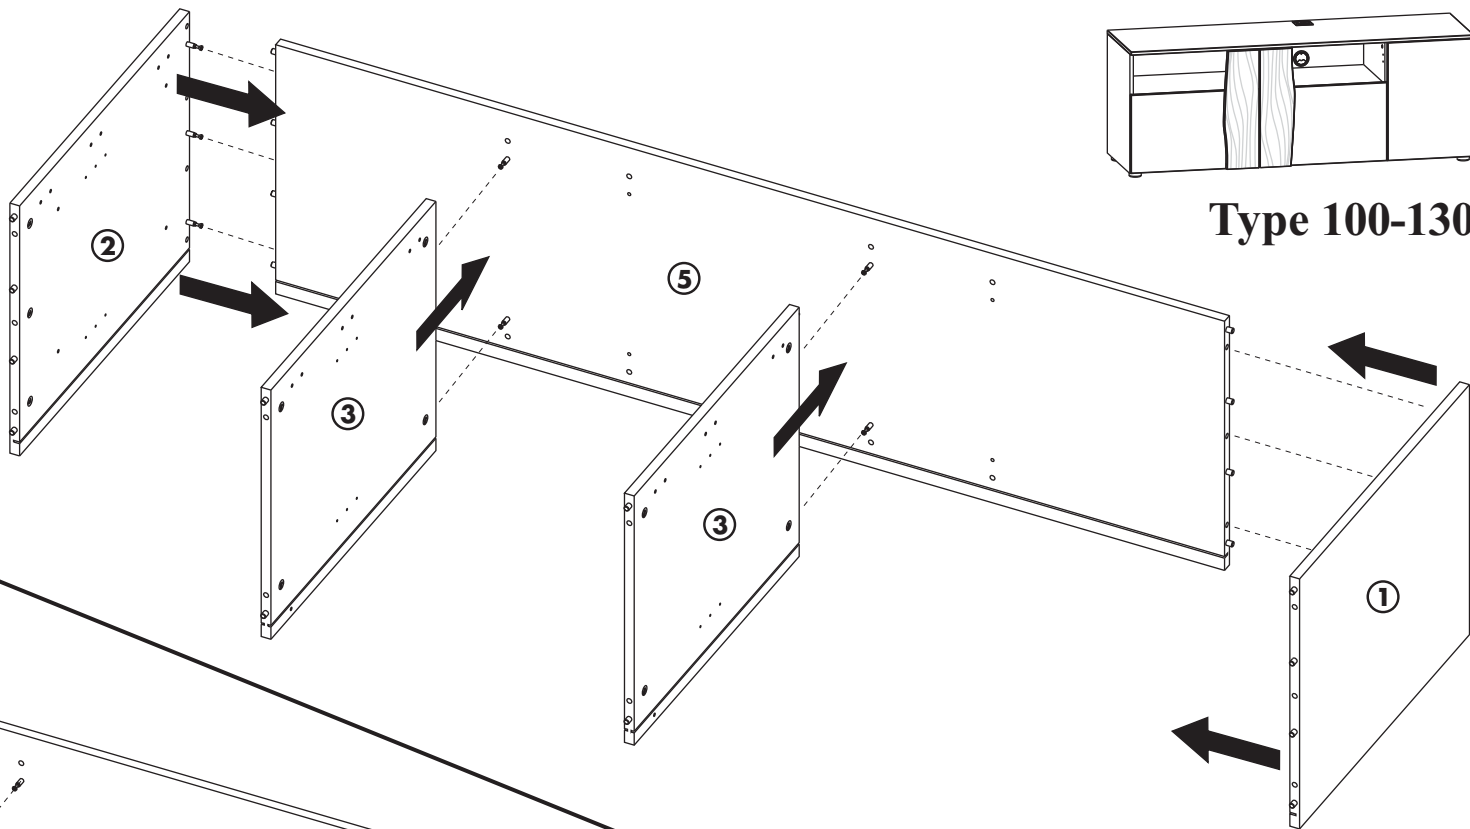


C2

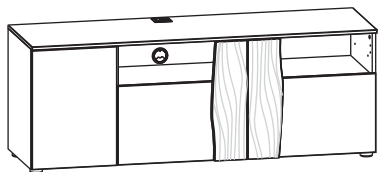


Type 100-131

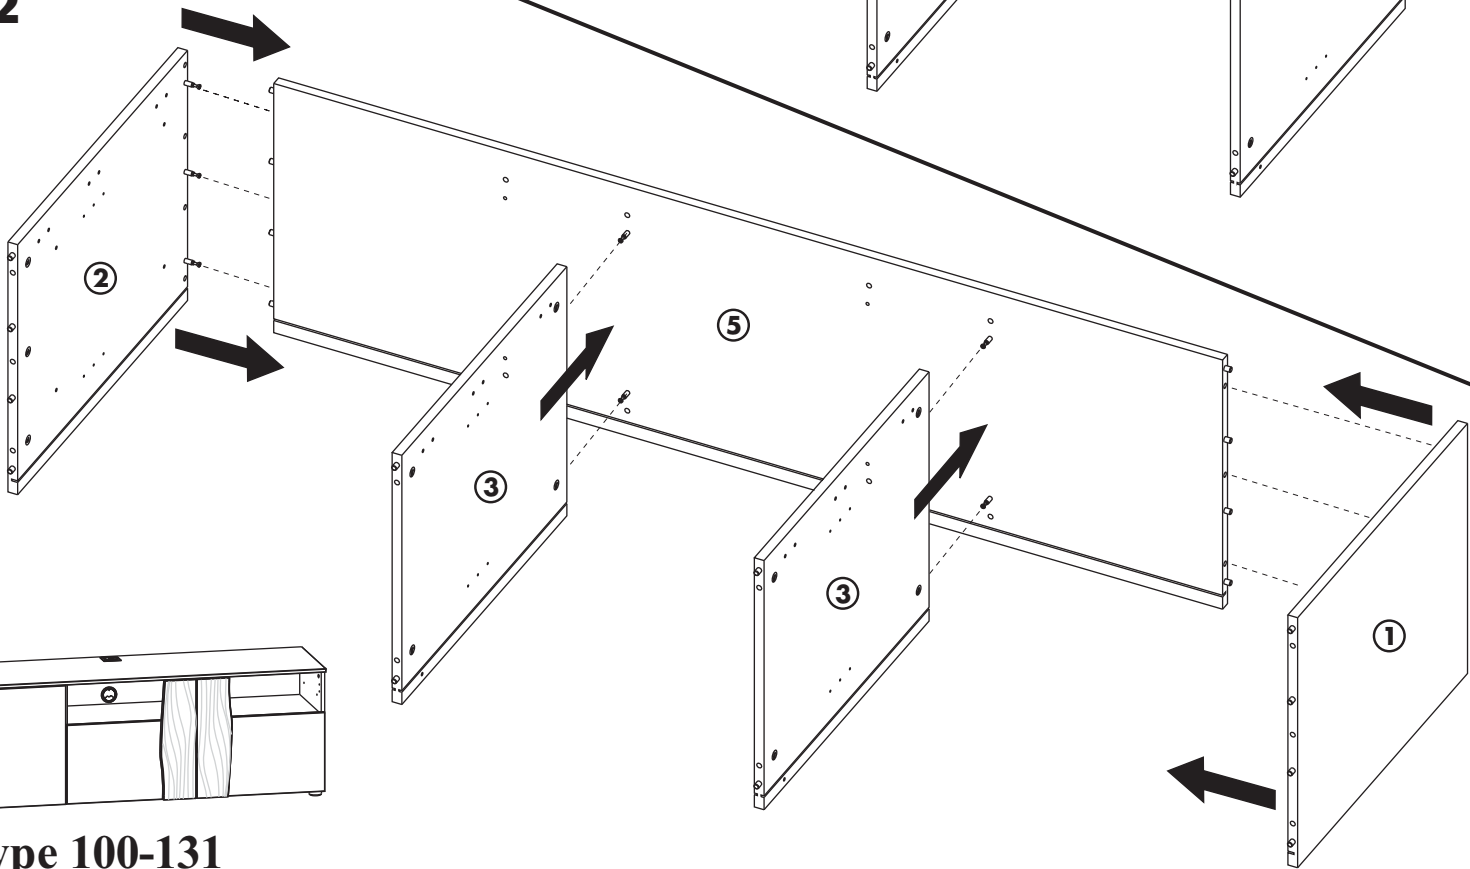


D2

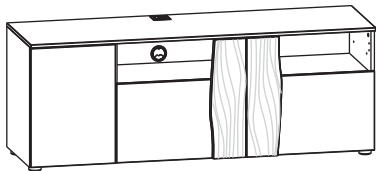


Type 100-131

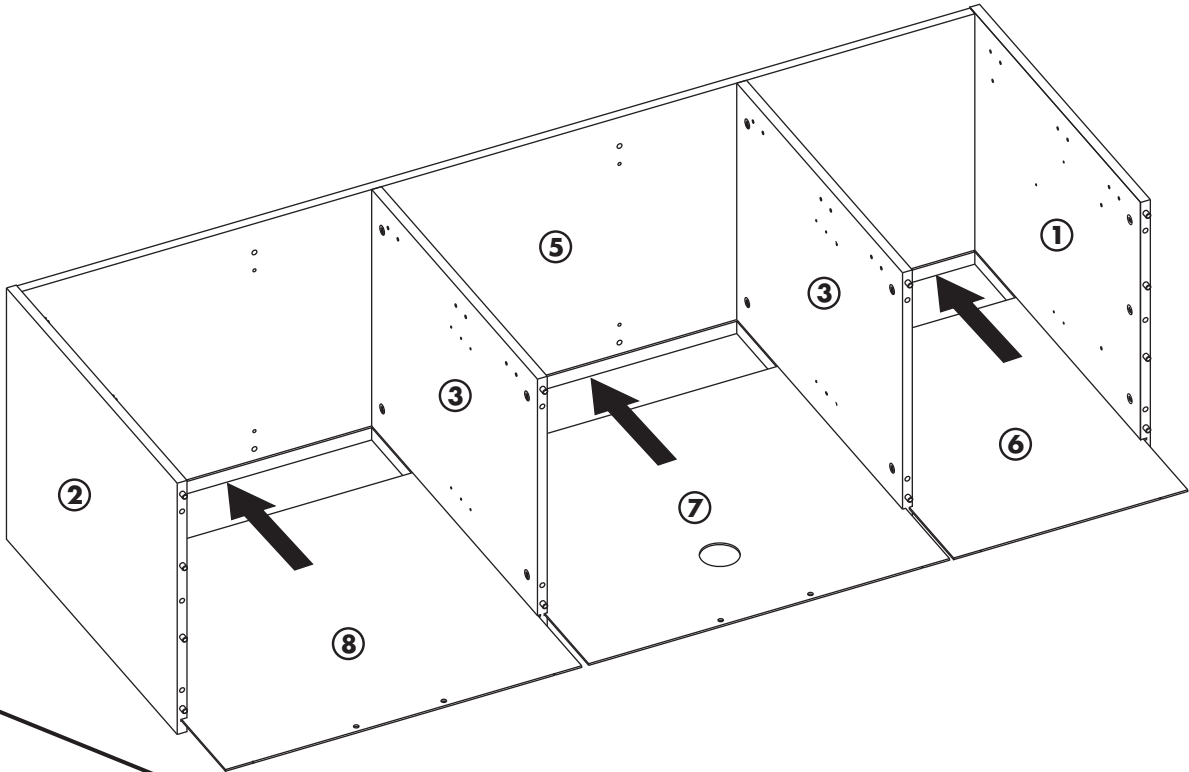

D1


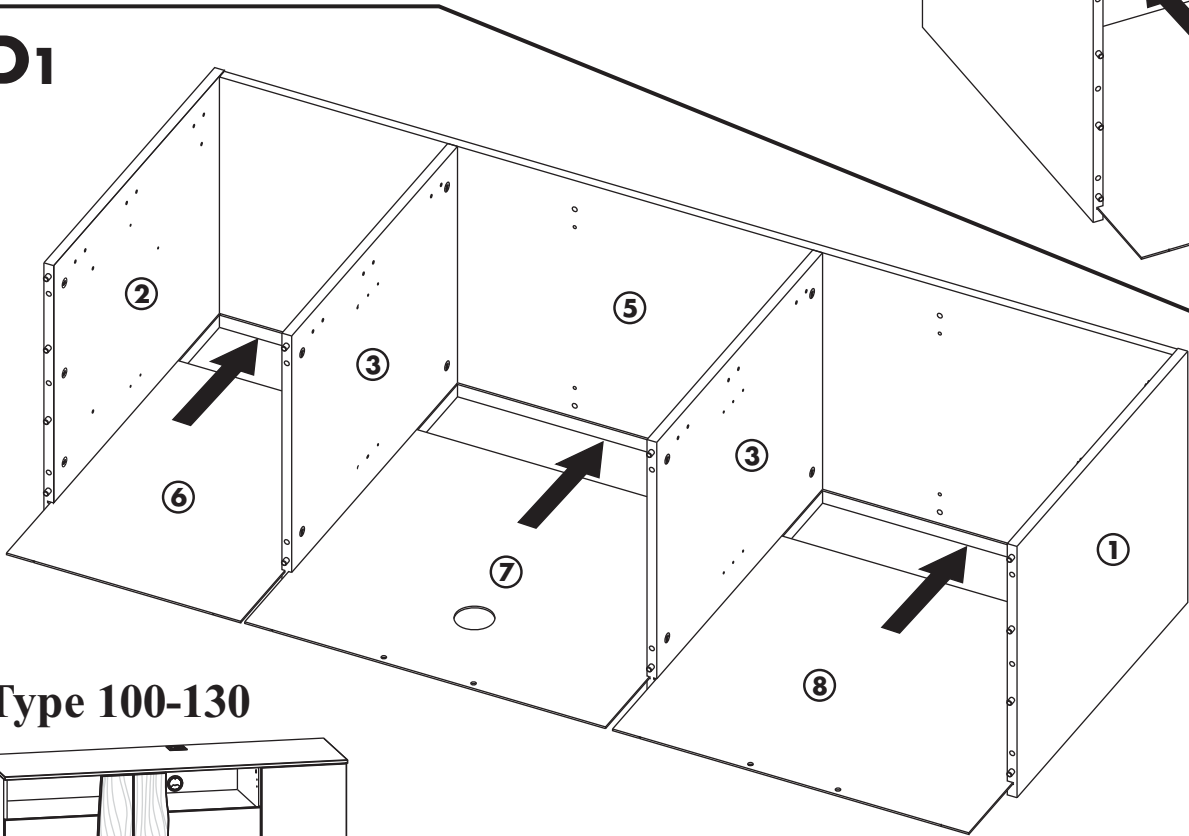


Type 100-130


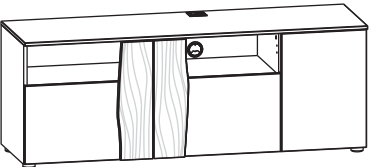


E1


Type 100-130

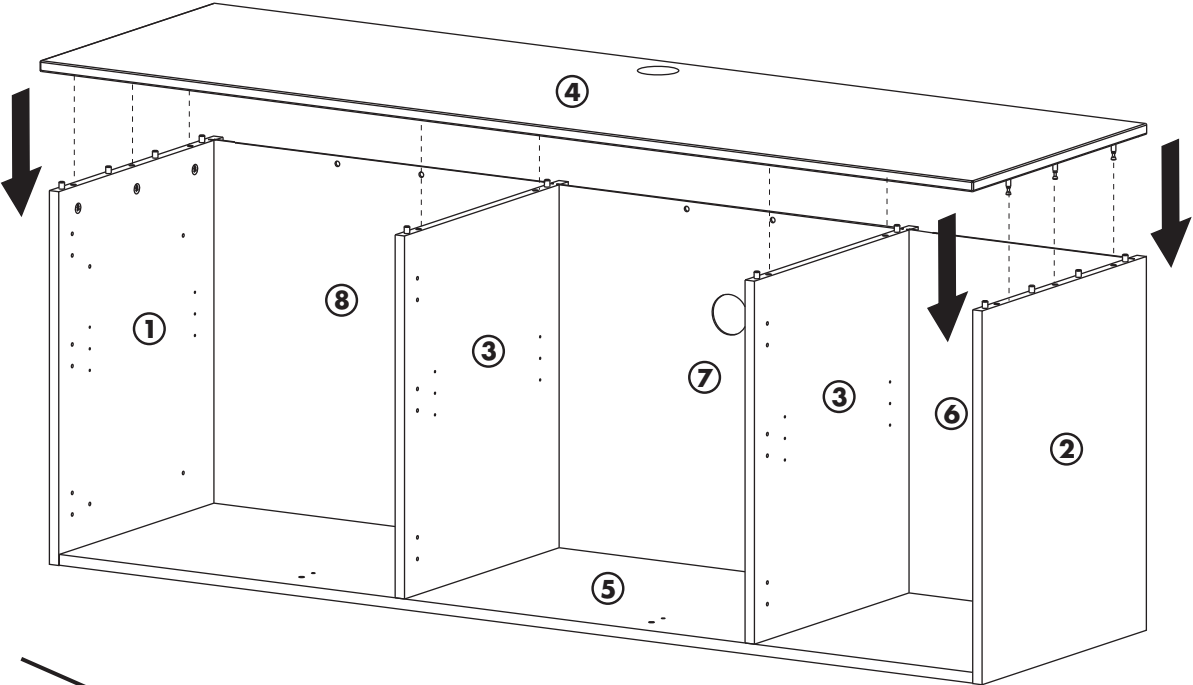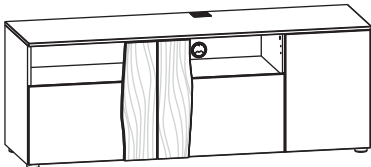


E2

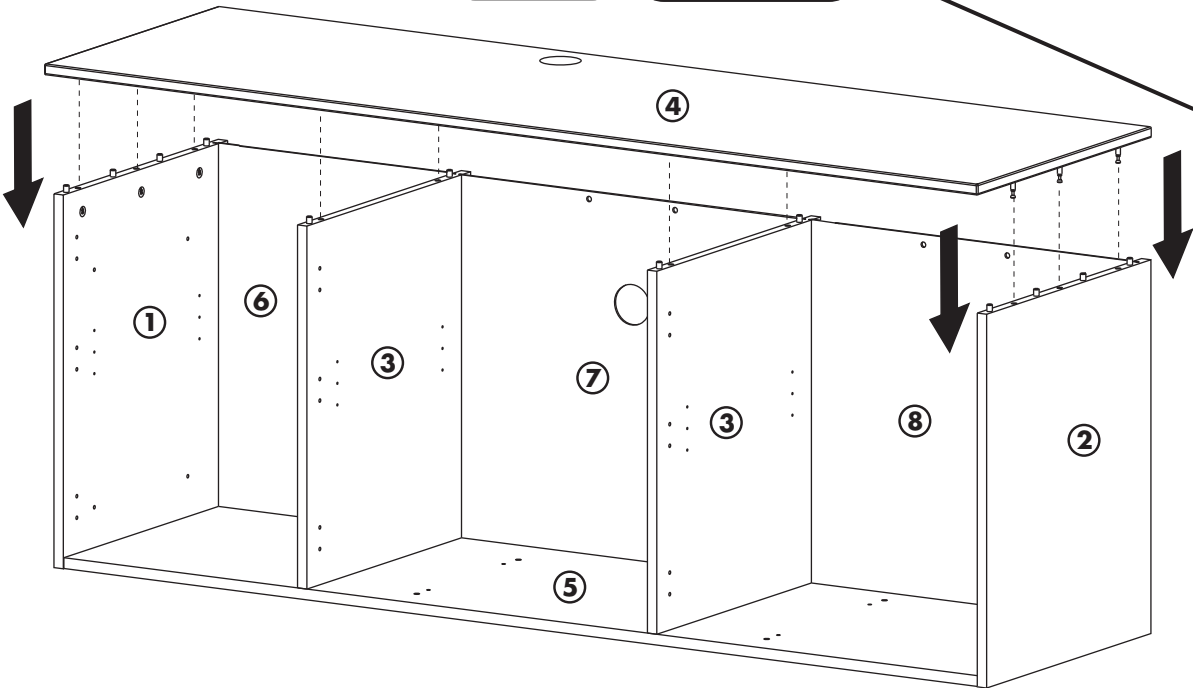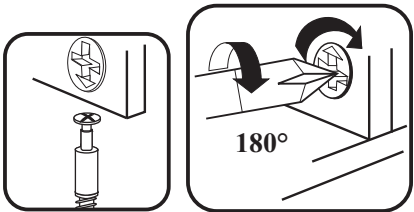


Type 100-131

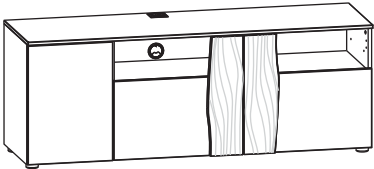




F1

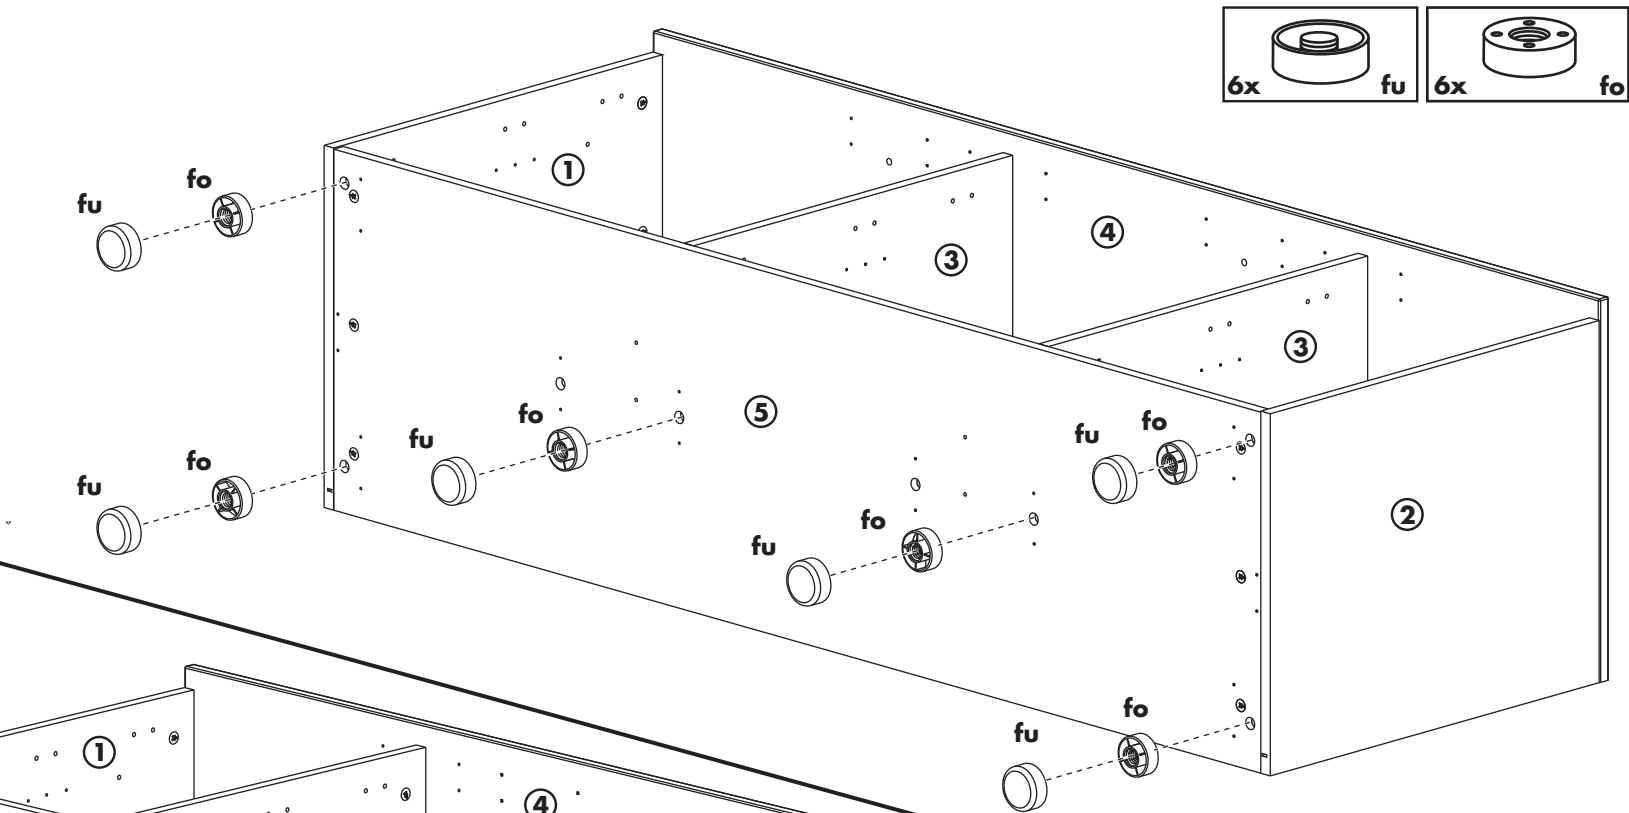



F2

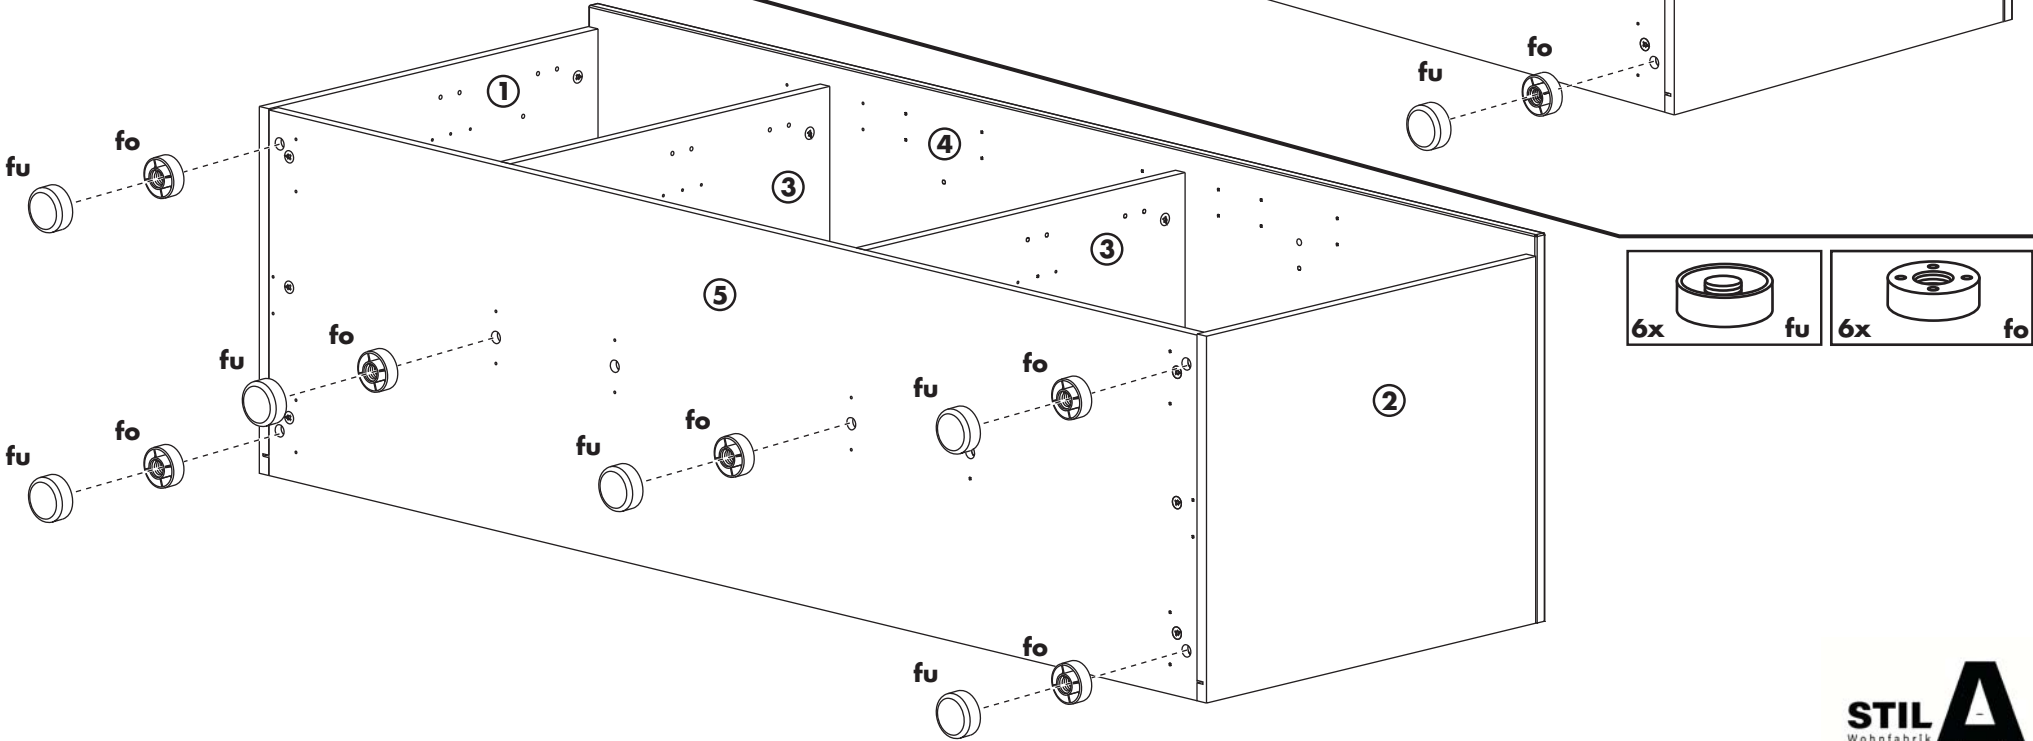



G

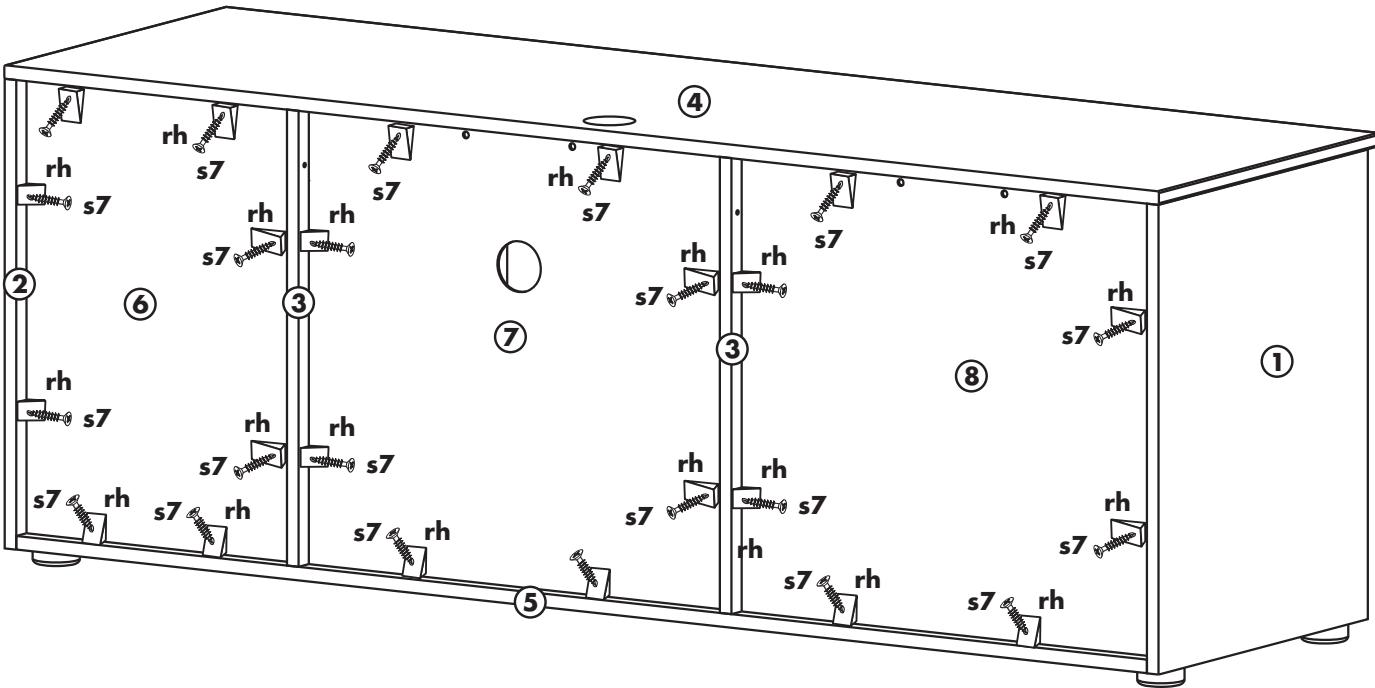


H

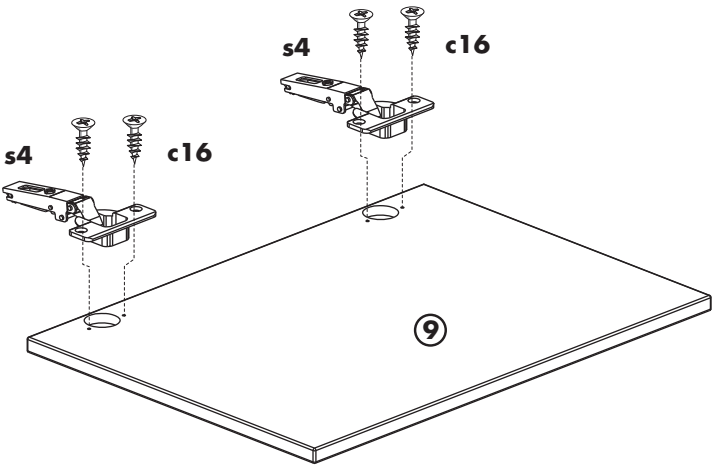

I

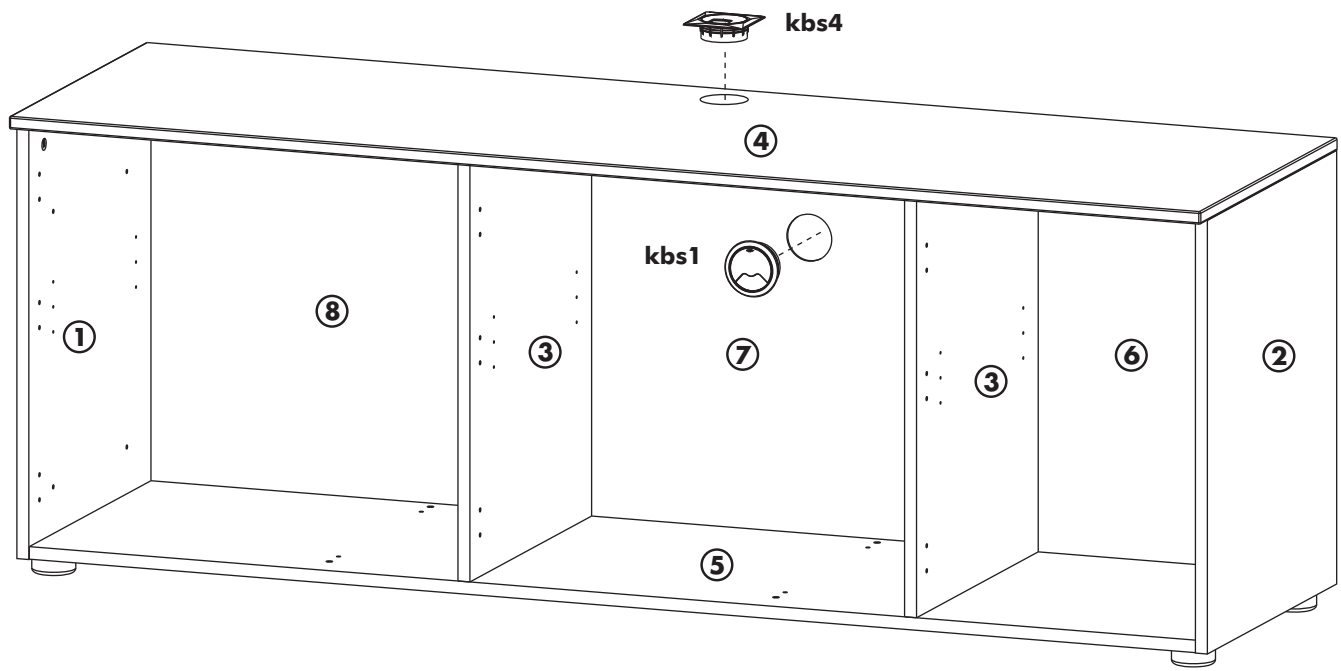


Type 100-130

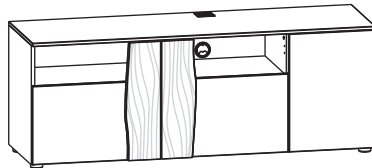

weiter mit Schritt J1
continued with step J1


Type 100-131

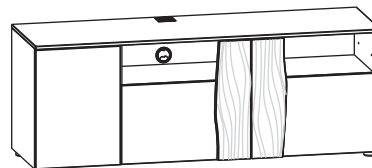

weiter mit Schritt J2
continued with step J2

J1

Type 100-130

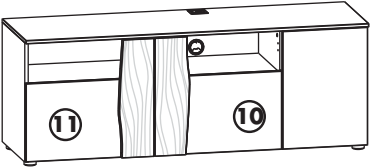

4x M4 x 21 gs6







2x c16

8x 4 x 16 s4

2x c17












4x 2,7 mm tad7

4x 4,0 x 27 rw7

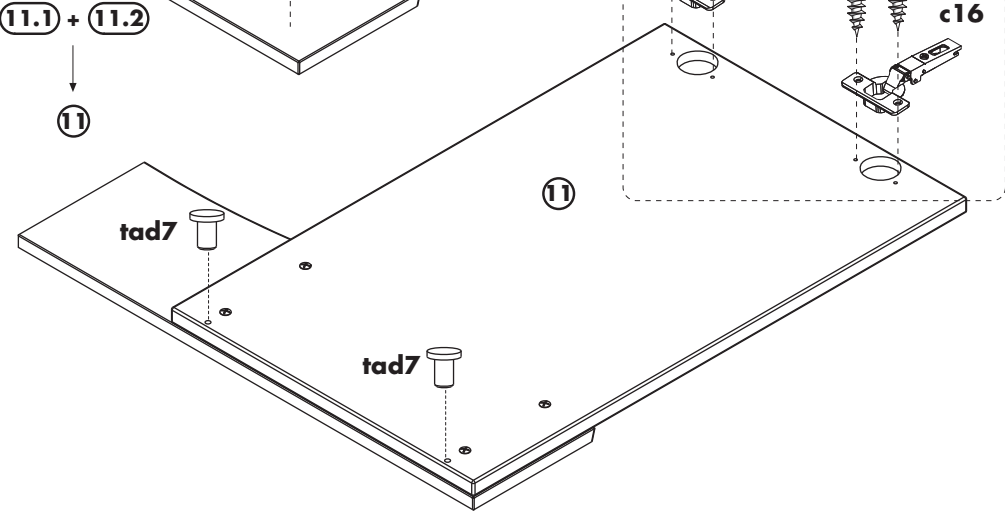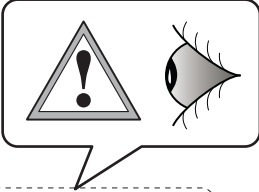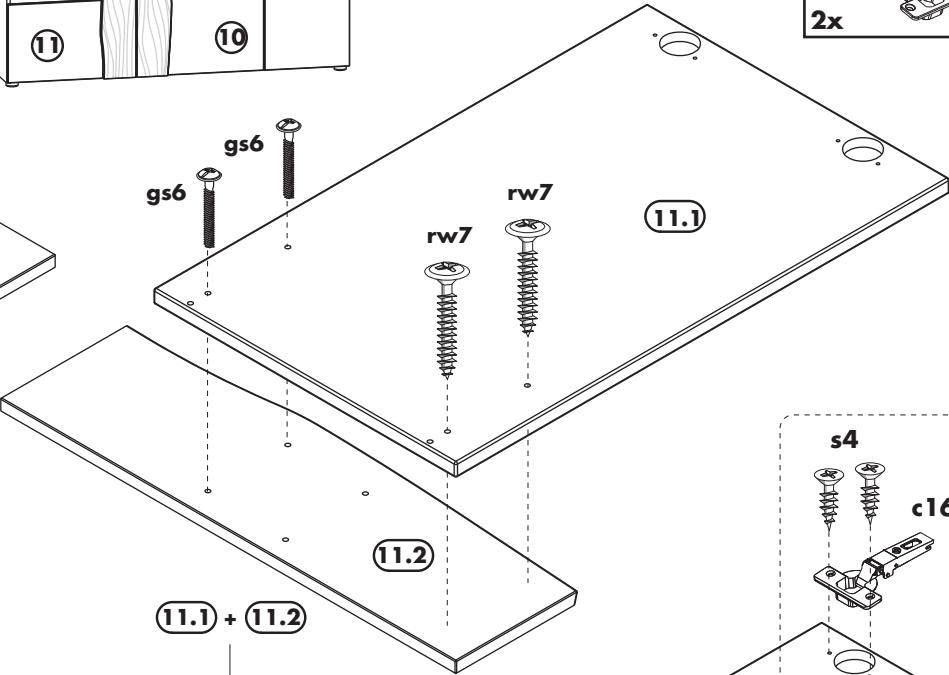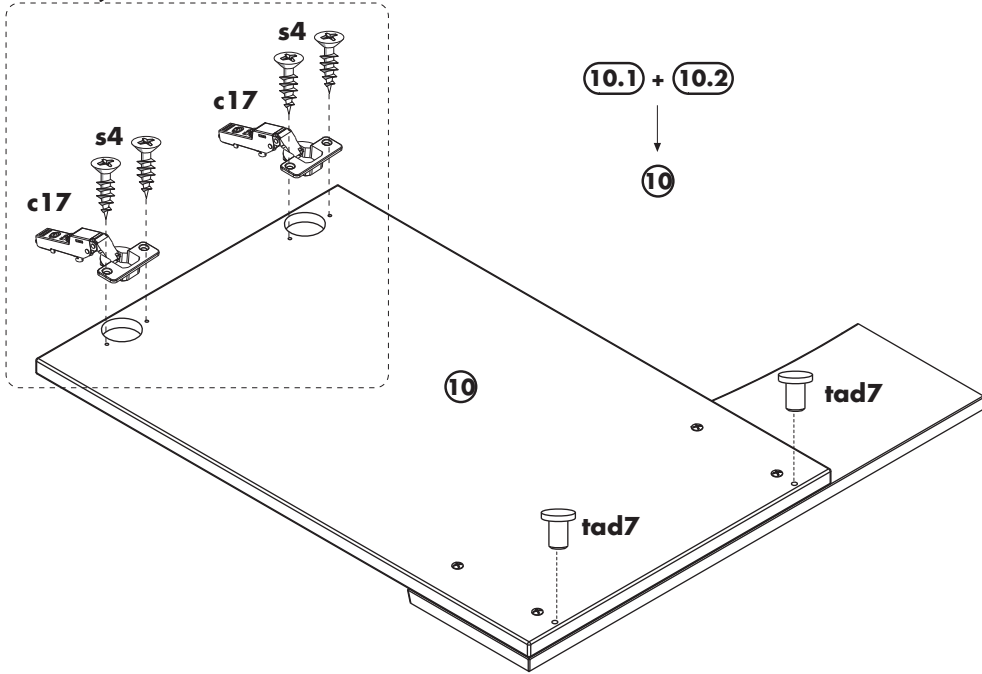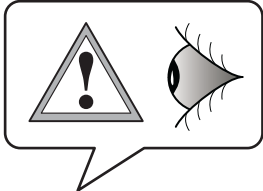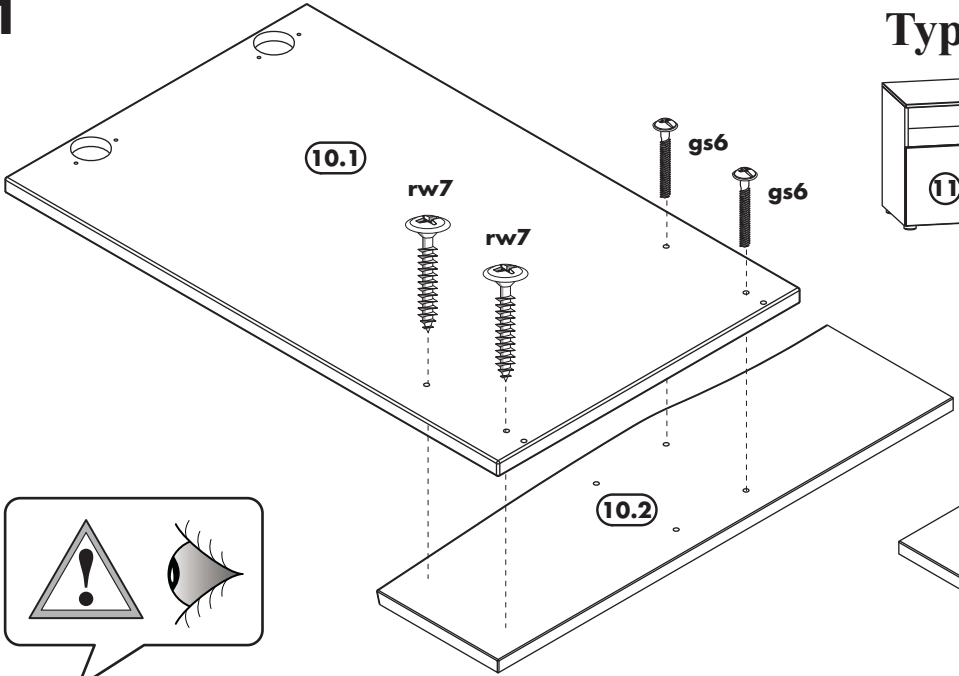



K1

Type 100-130

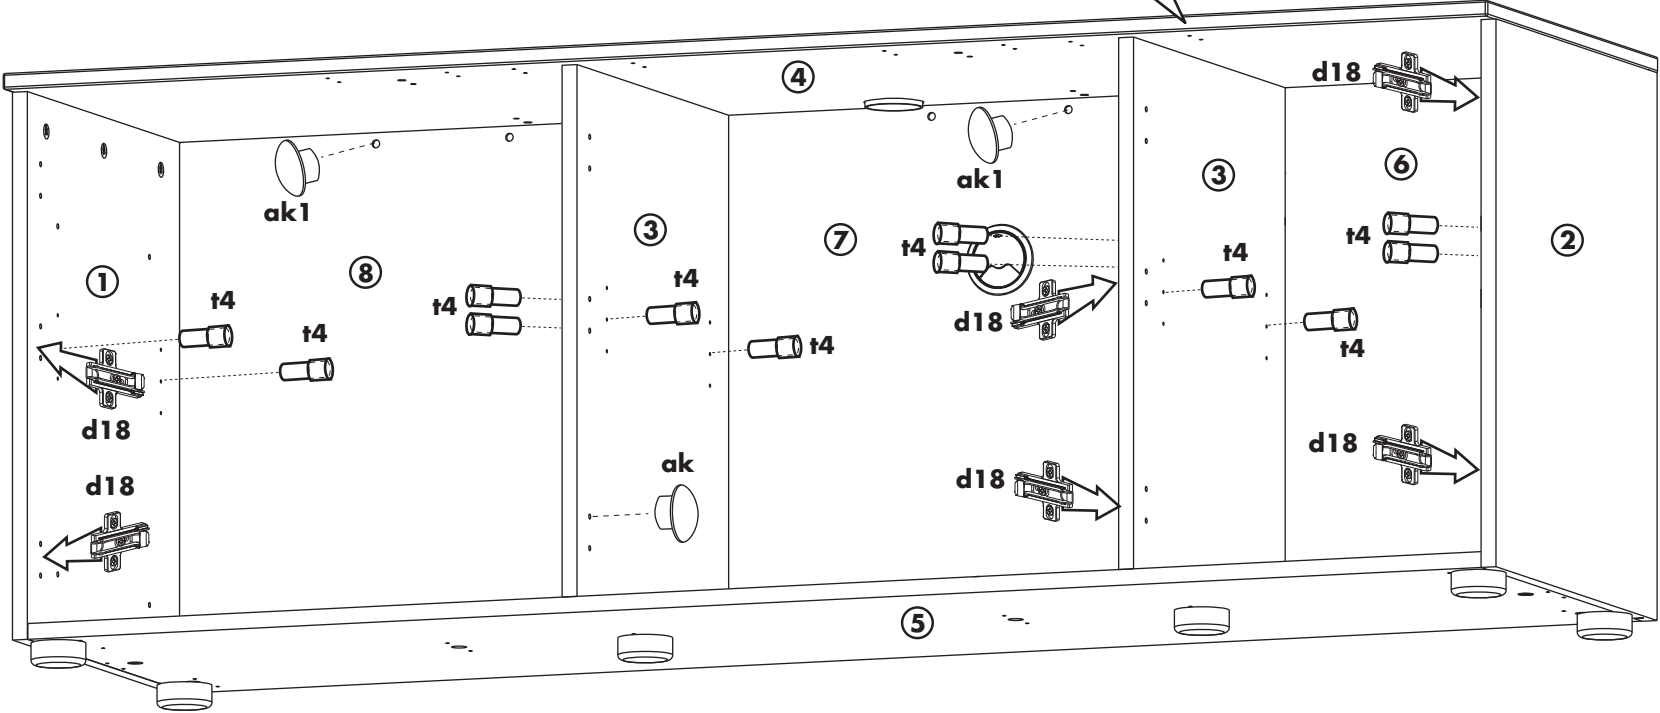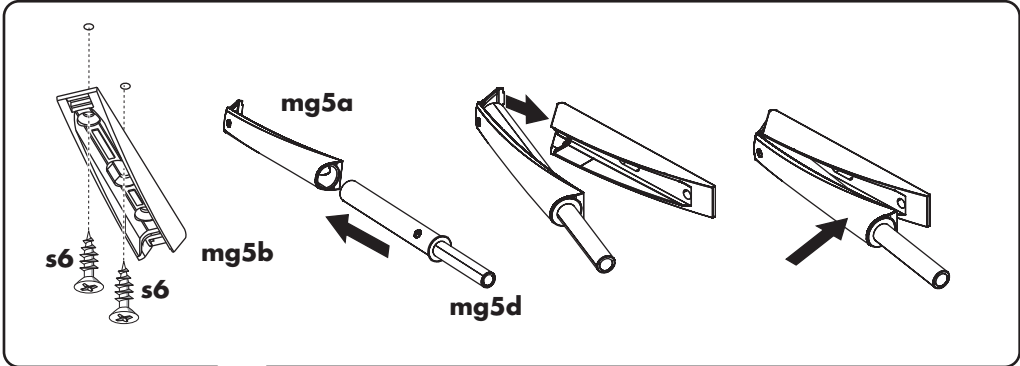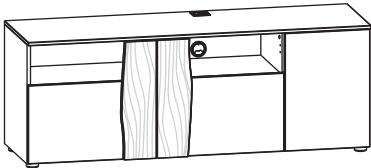




L1

Type 100-130

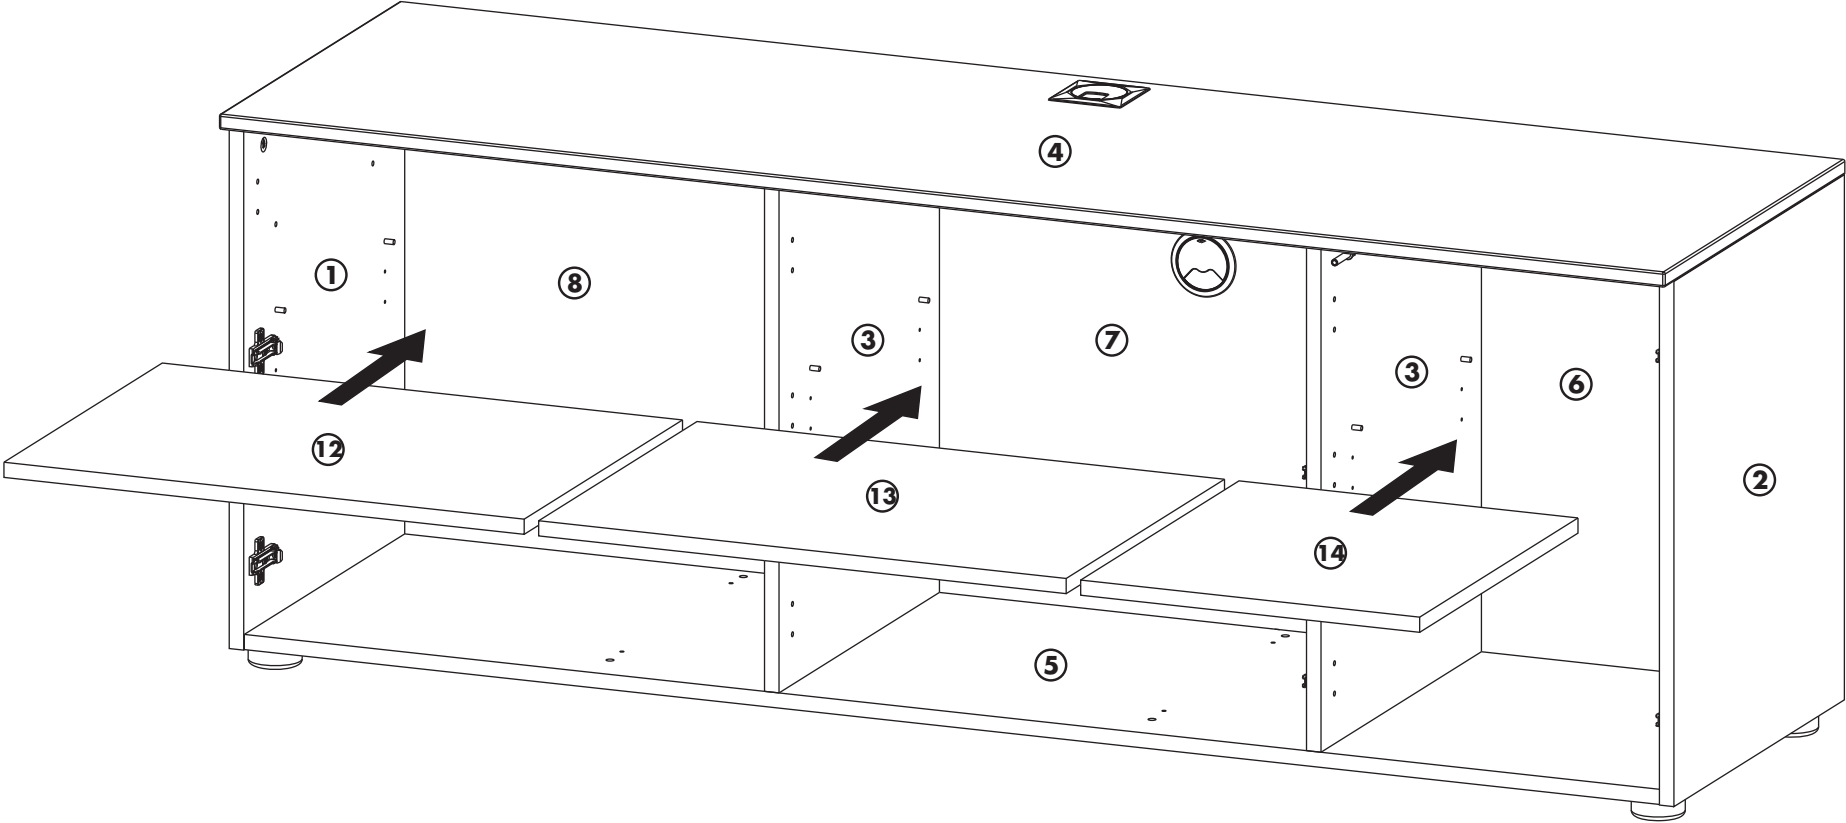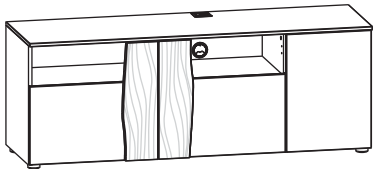


M1

Type 100-130


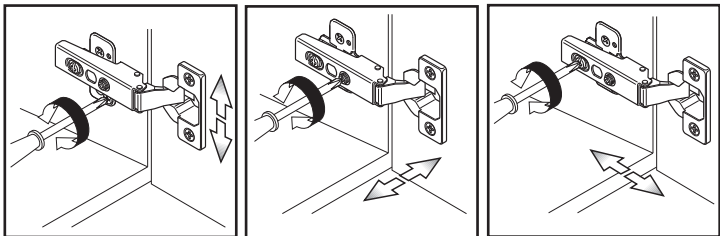
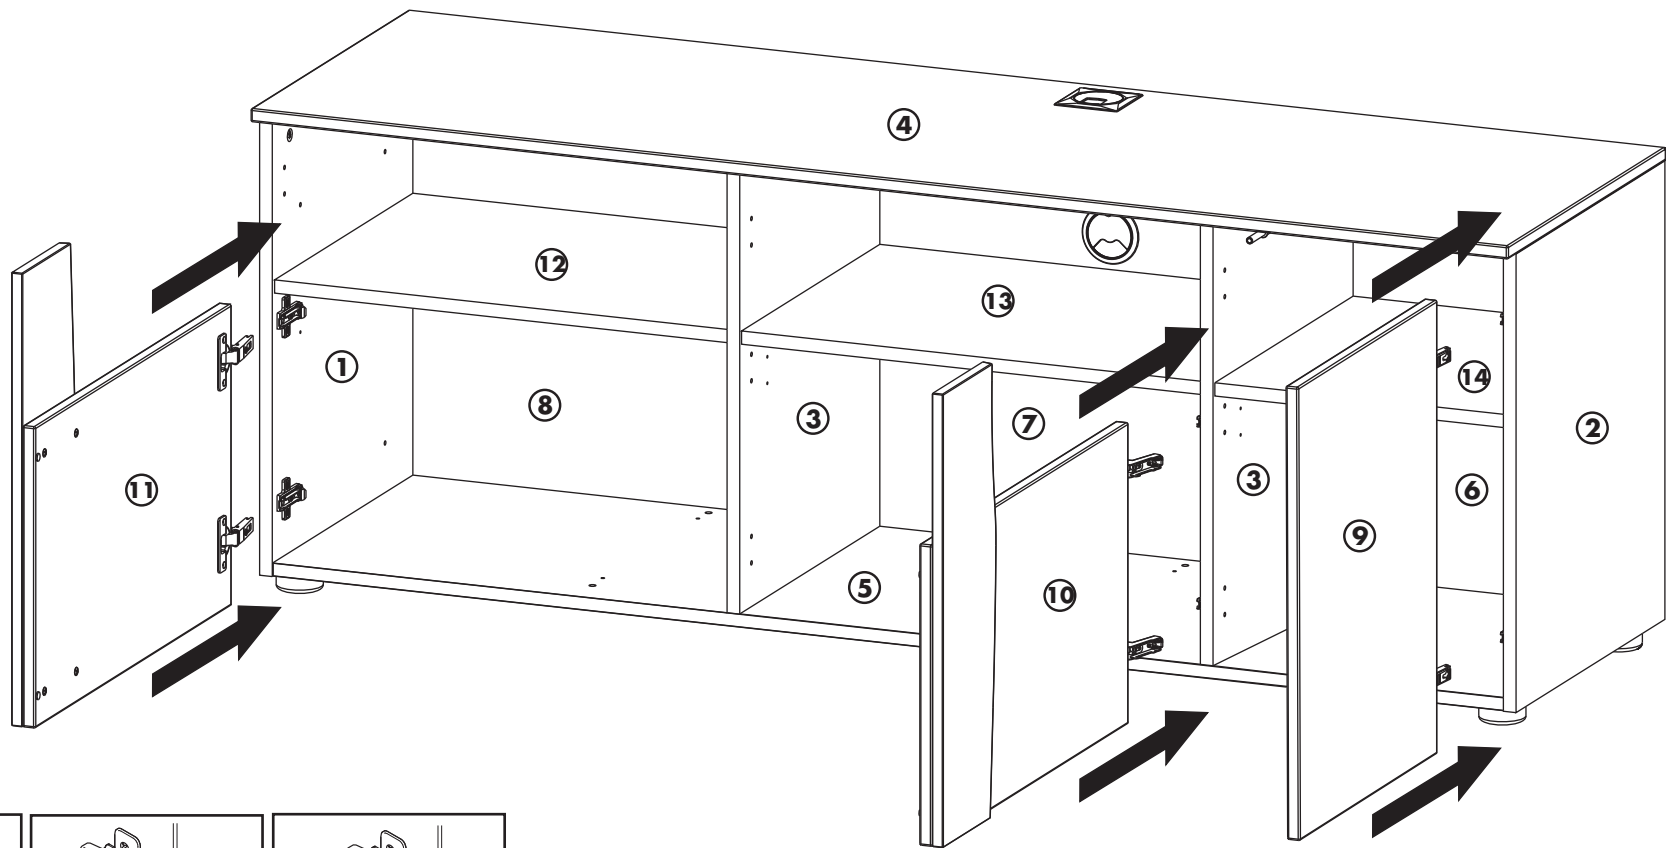
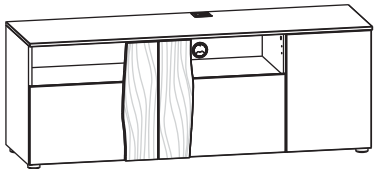


J2








Type 100-131

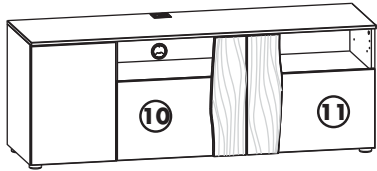




- | | | |
|--------------------|------------|---------------------|
|
4x M4 x 21 gs6 |
2x c16 |
8x 4 x 16 s4 |
| |
2x c17 |
4x 2,7 mm tad7 |
| | |
4x 4,0 x 27 rw7 |

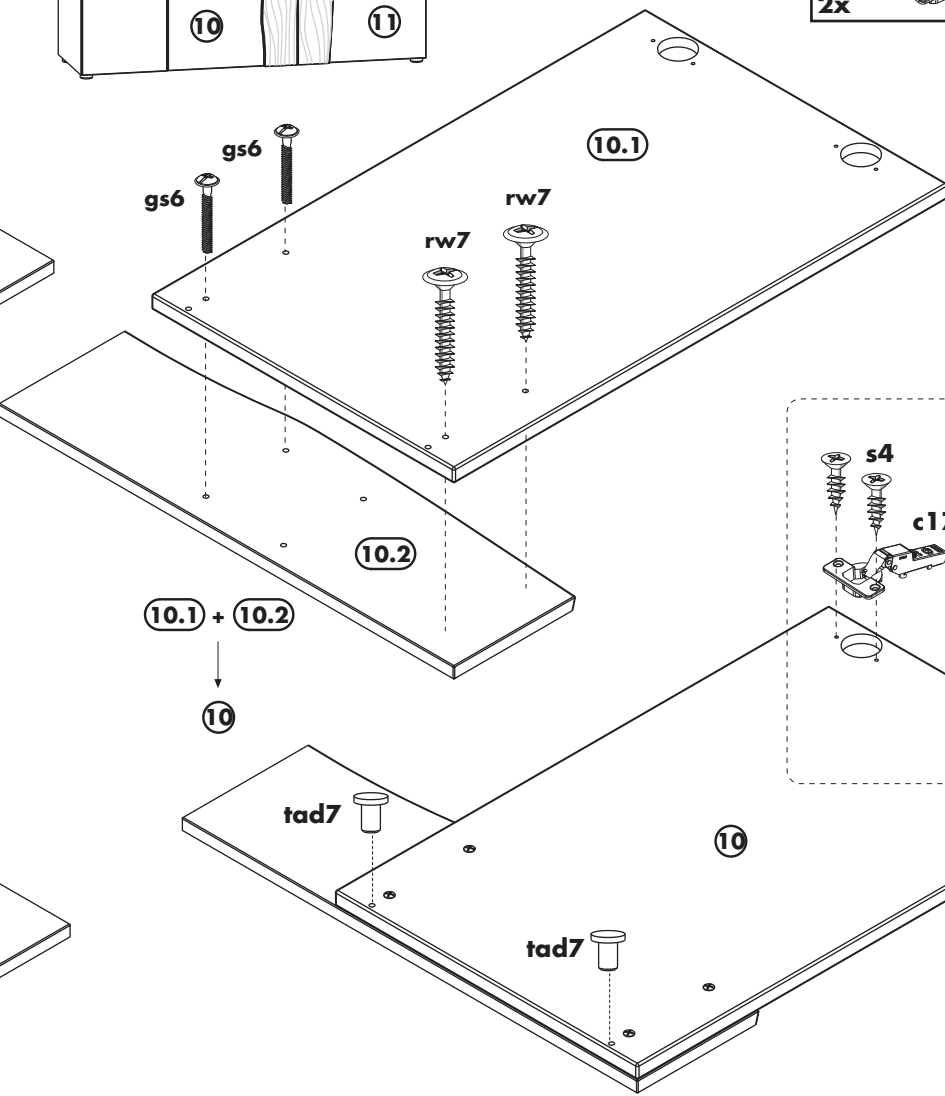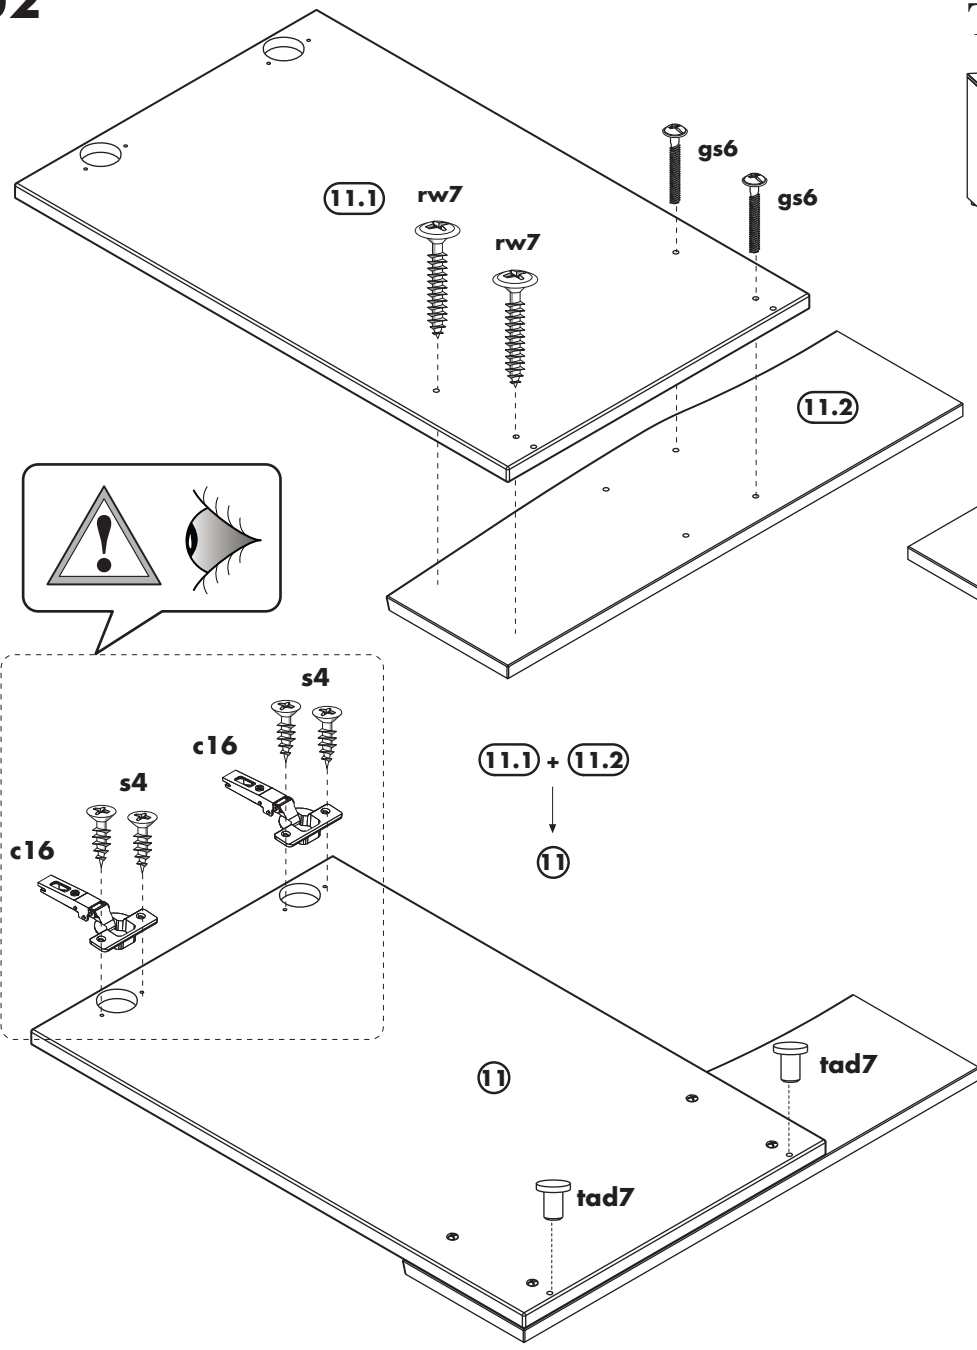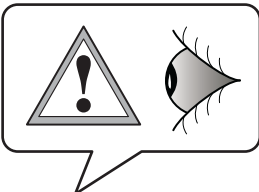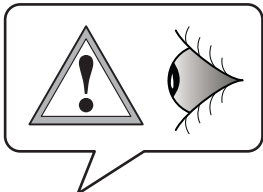

K2





Type 100-131

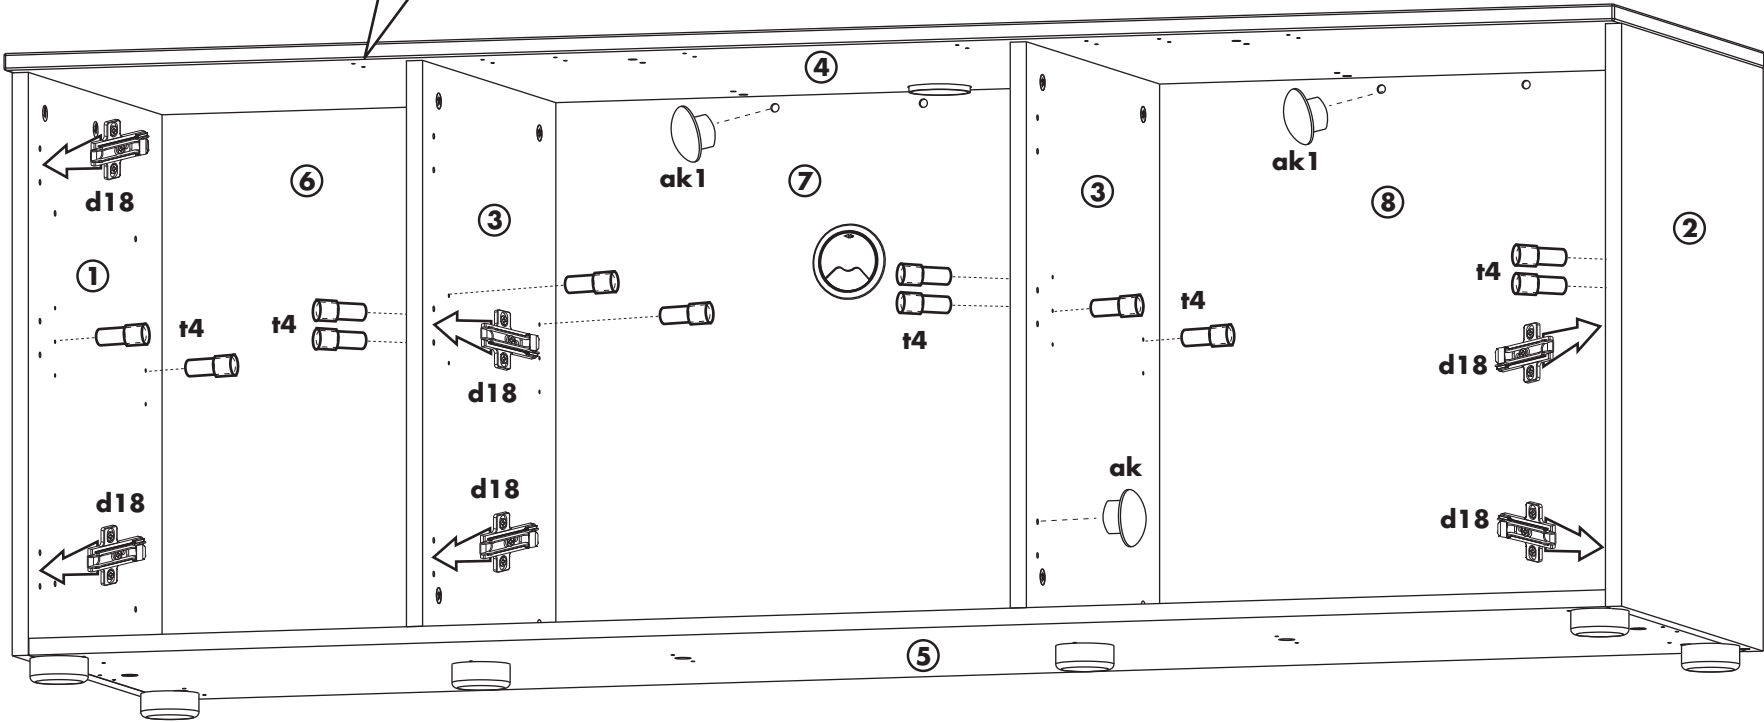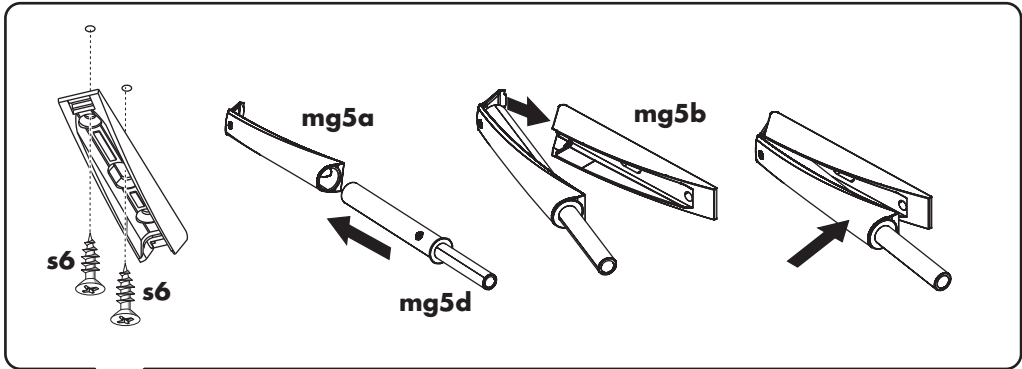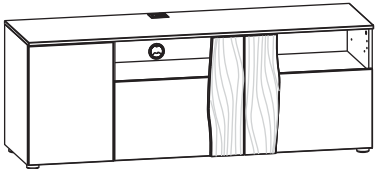

L2

Type 100-131

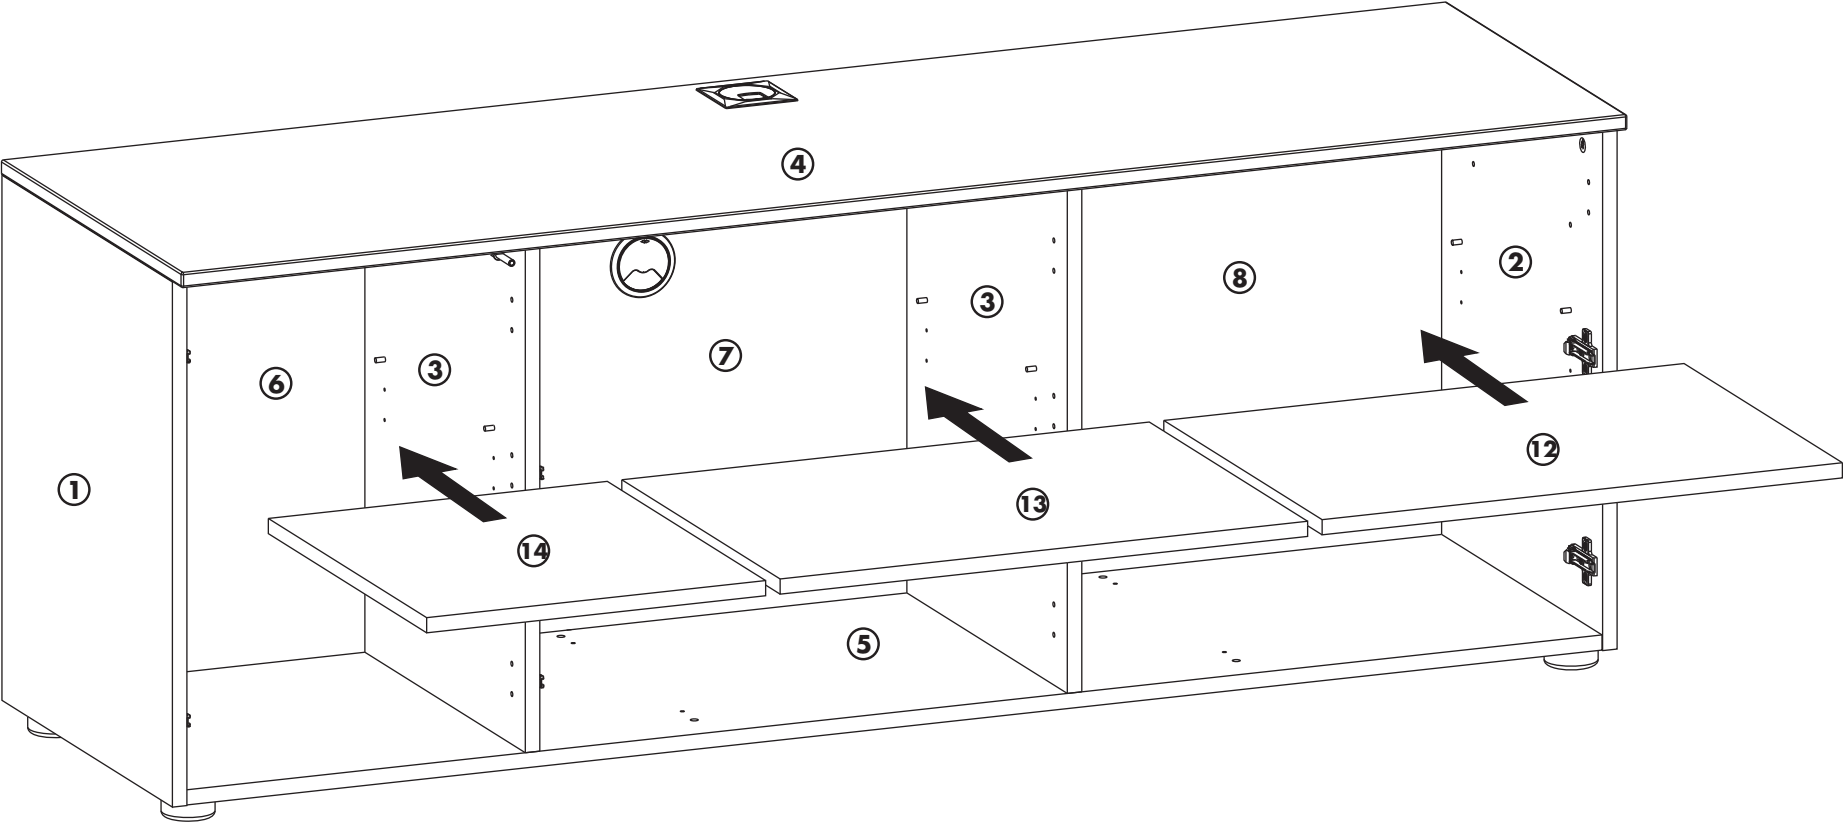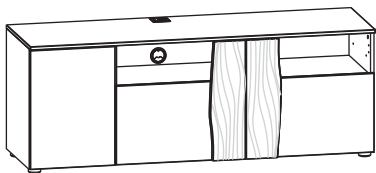

M2

Type 100-131

