





Type 100-132

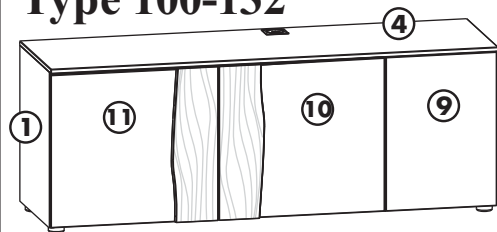

Type 100-133

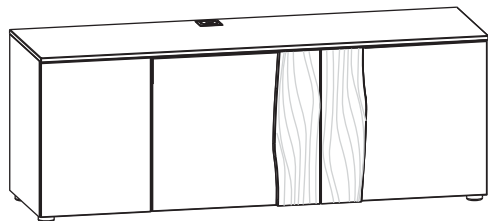

Sie brauchen:
You need:

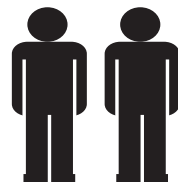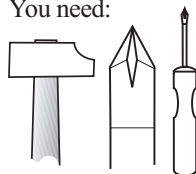

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.










Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!





Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Light Line 15 100_132 / 04.26

 6x a1	 14x a4	 20x e2	 6x 3 x 15 s6	 24x 3 x 20 s7
 6x fu	 6x fo	 8x M4 x 21 gs6	 12x 4 x 16 s4	 24x rh
 12x t4	 40x ak	 10x ak1	 6x D 2mm d18	 4x c16
 4x 4,0 x 27 rw7	 1x kbs1	 1x kbs4	 24x 8 x 40 p1	 2x c17


A

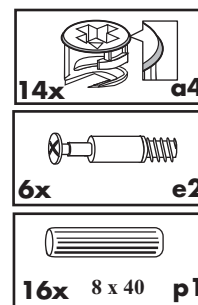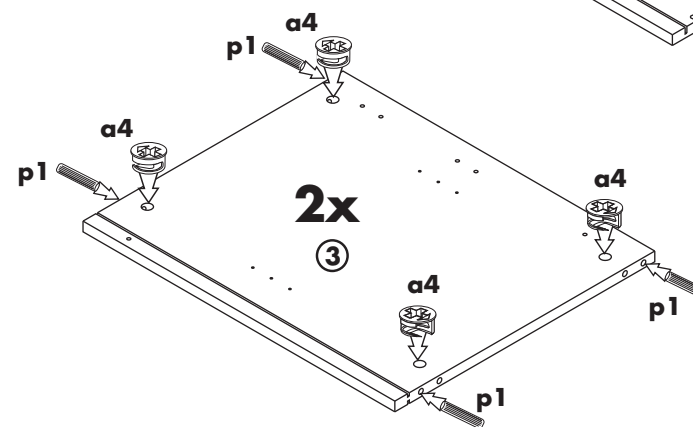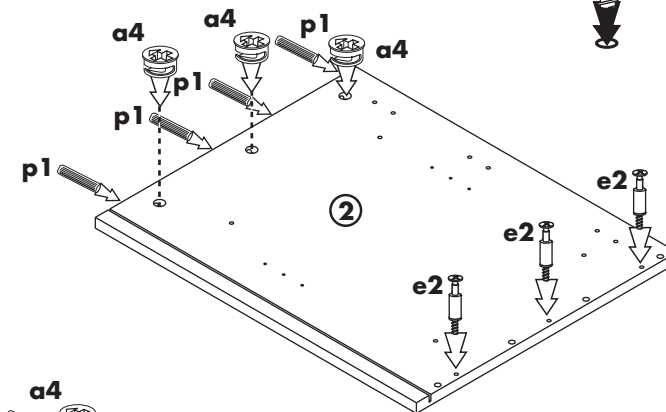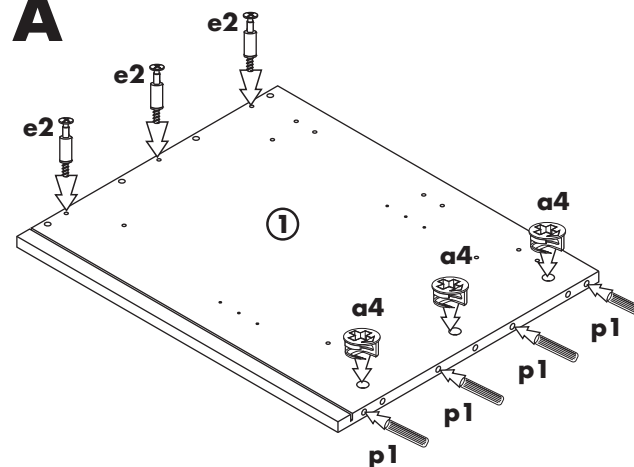




B1

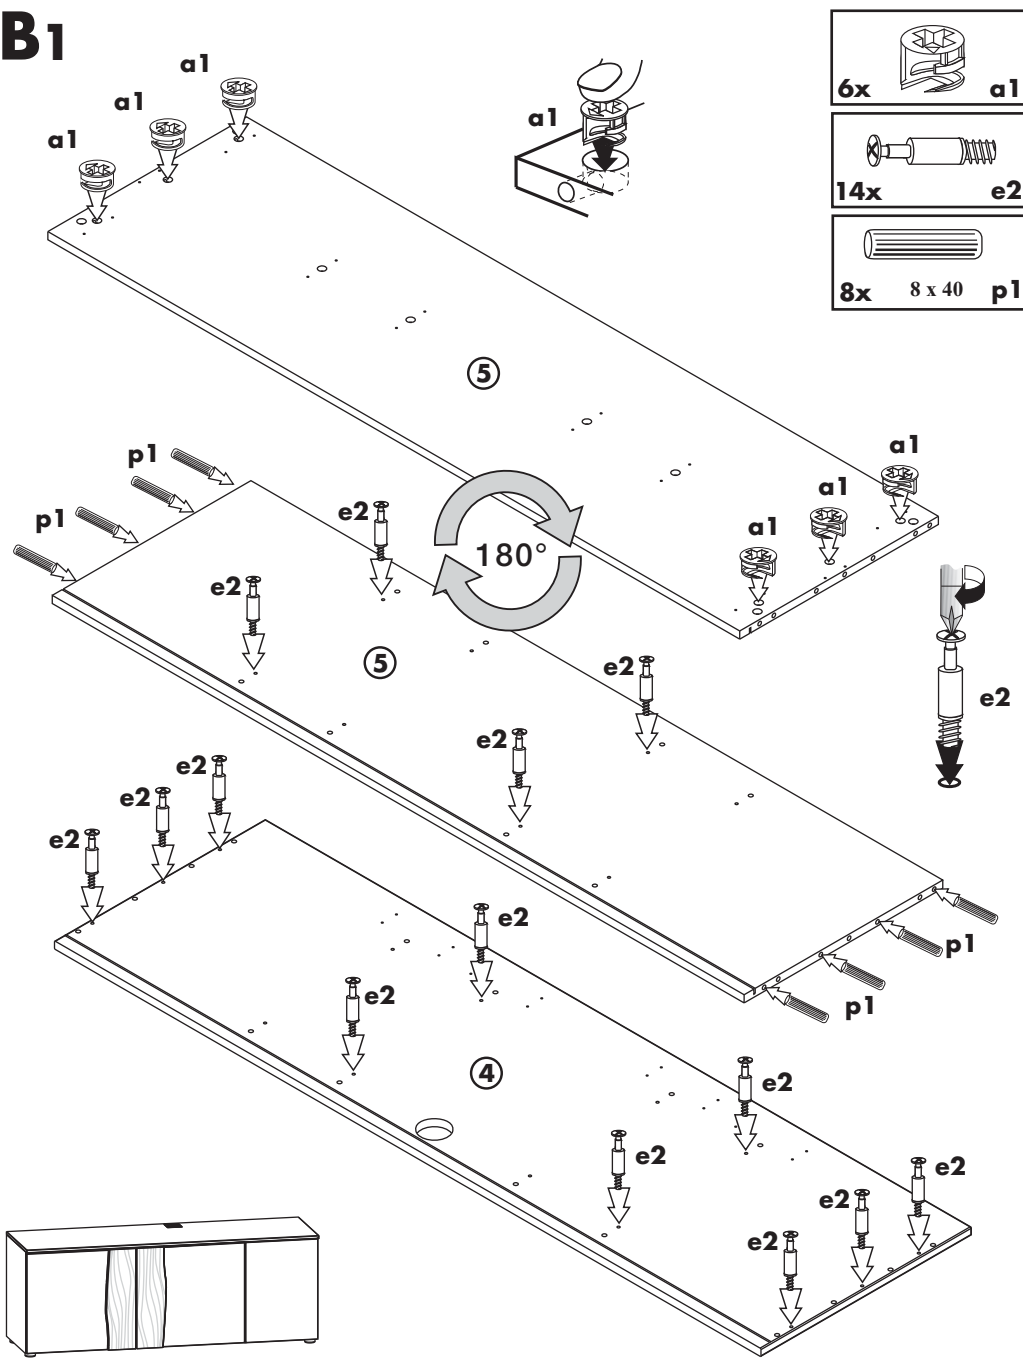


B2

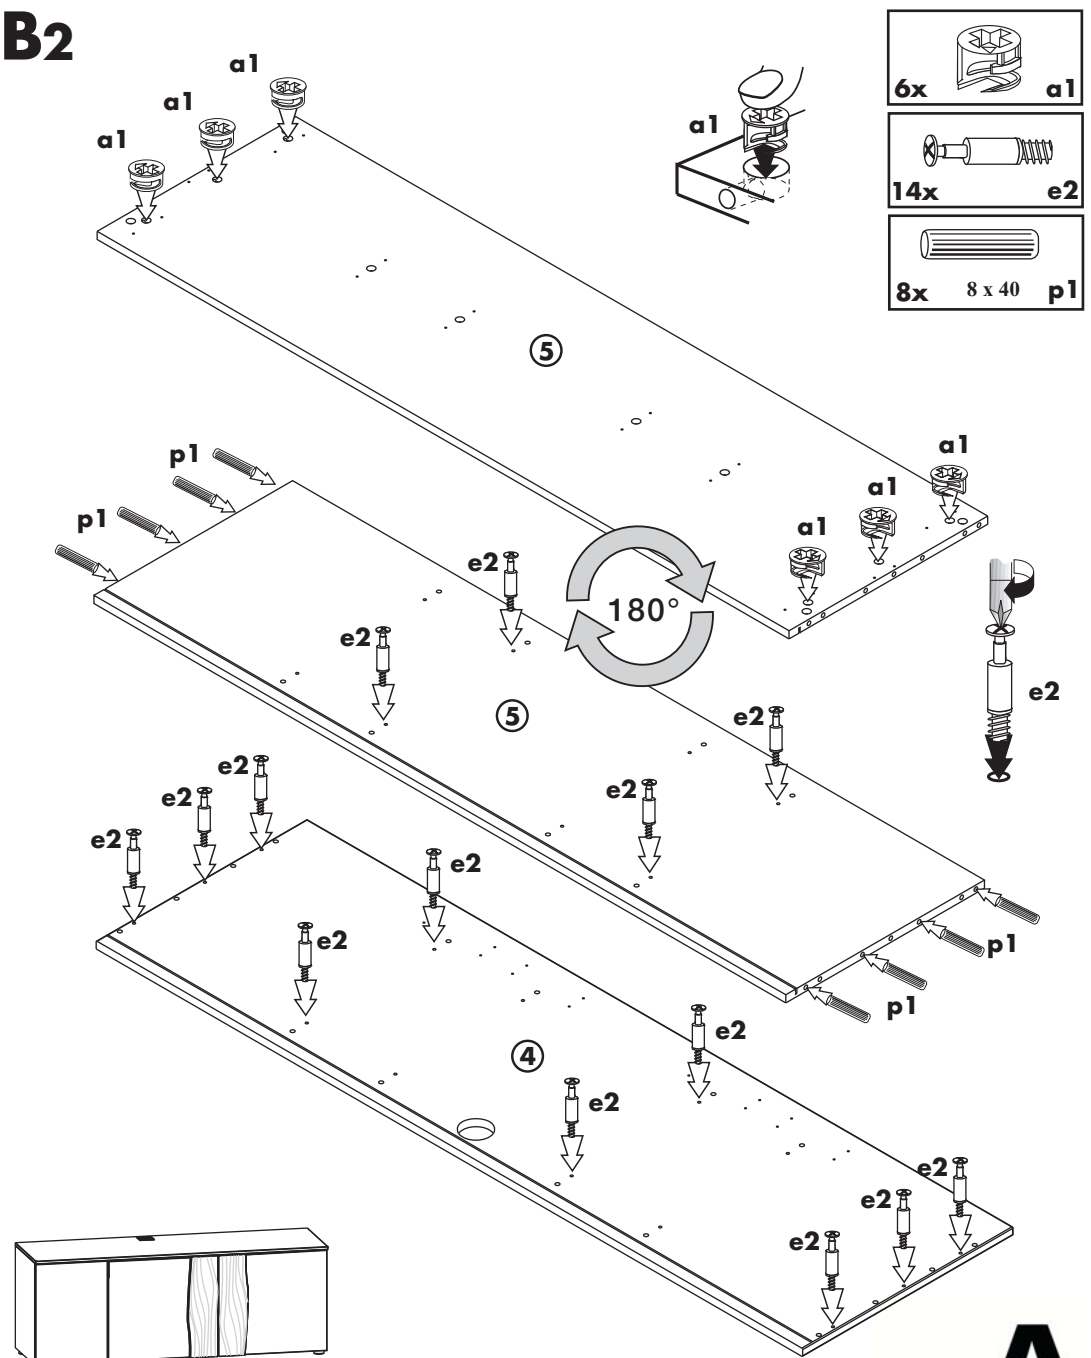


C1

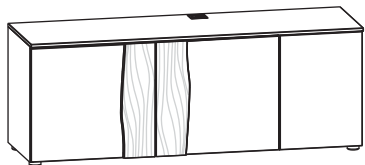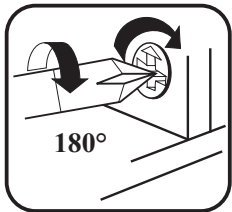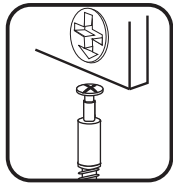


Type 100-132

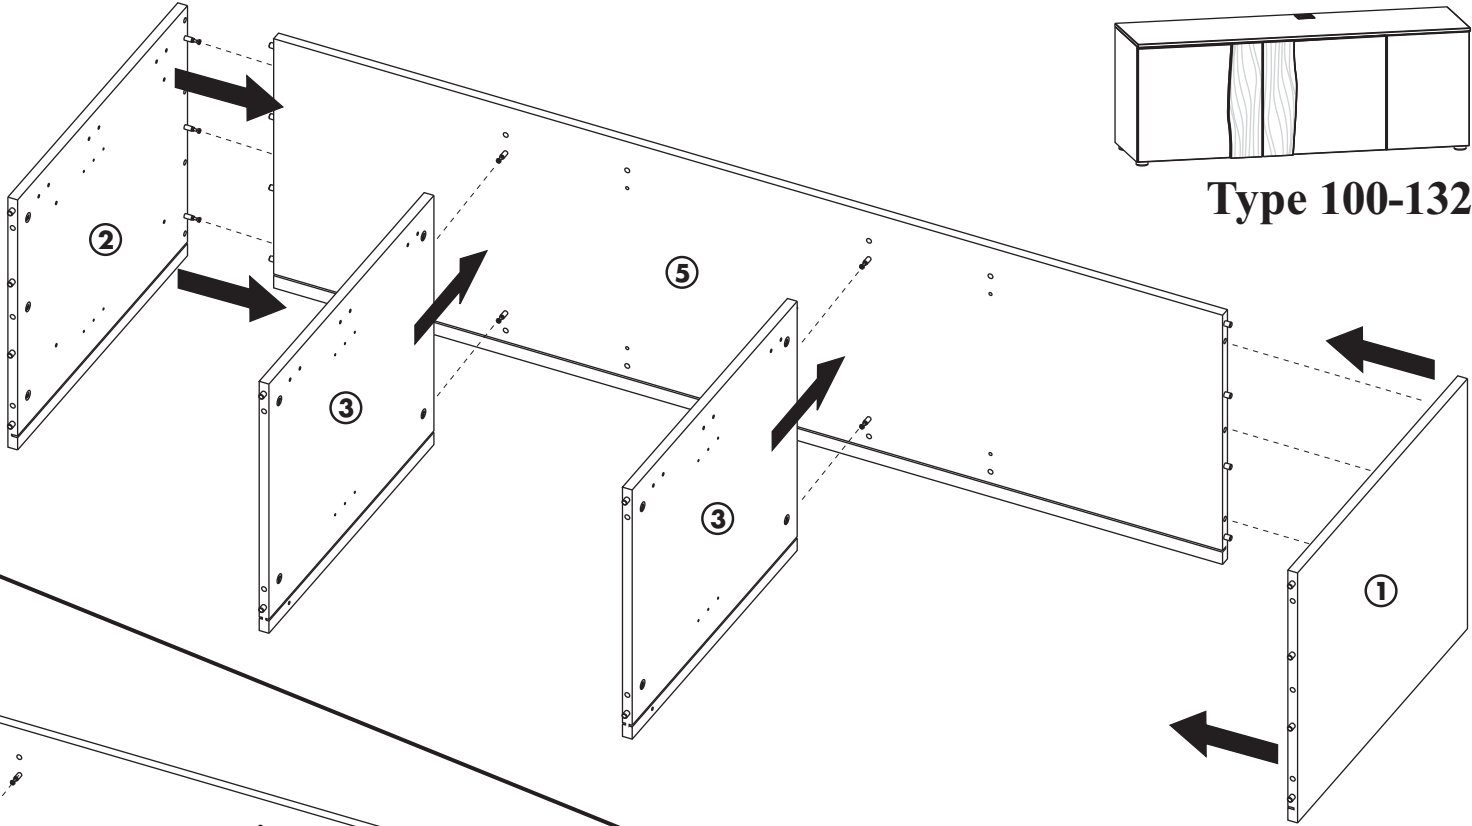


C2

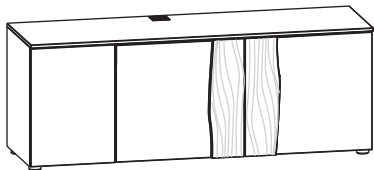


Type 100-133

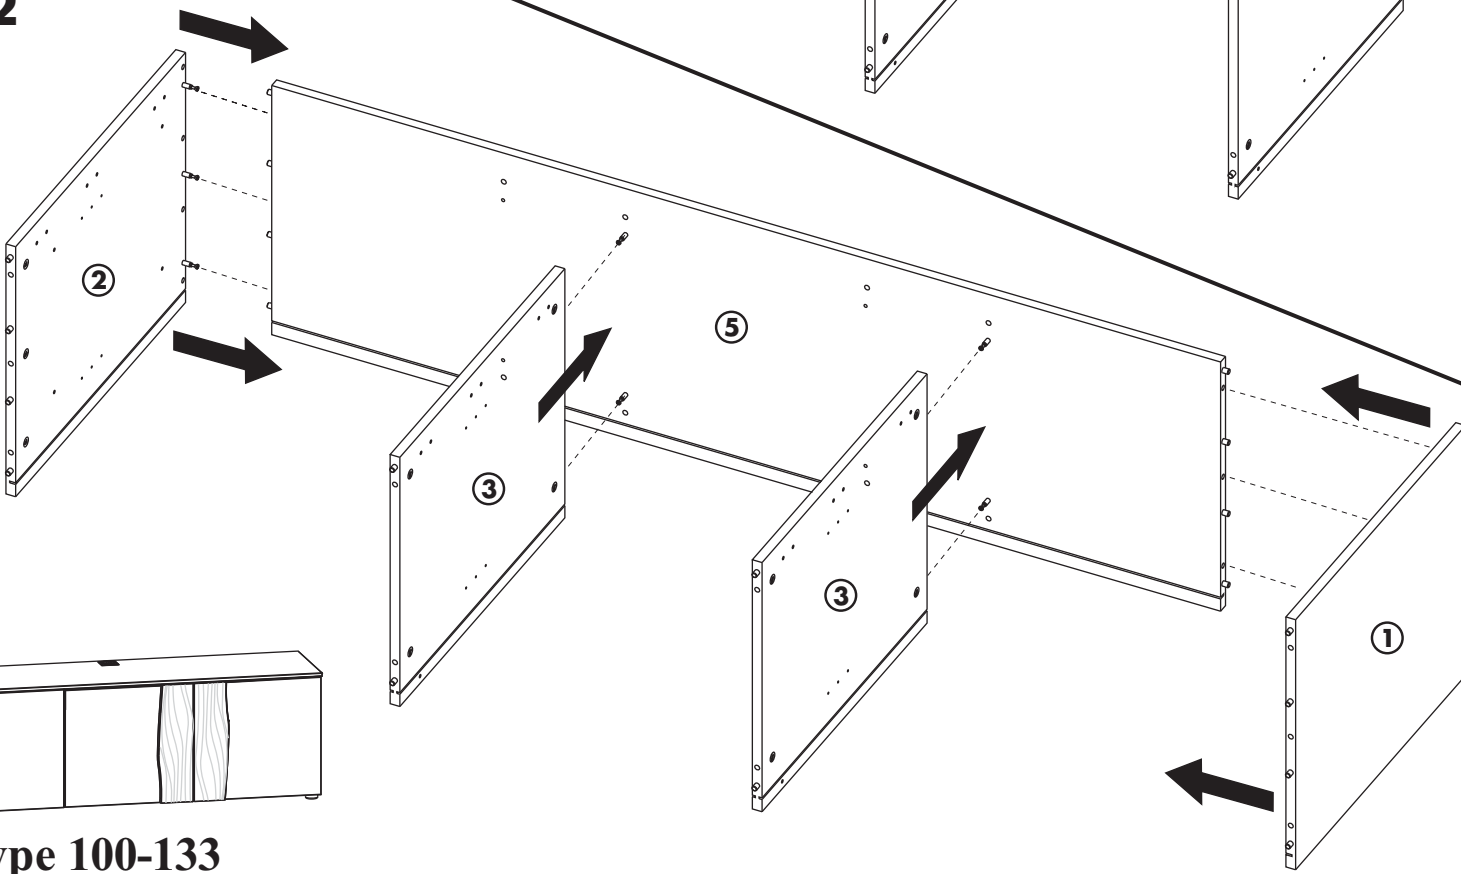


D2

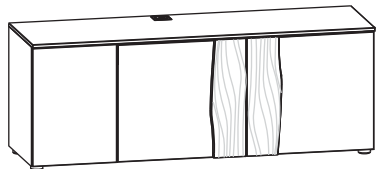


Type 100-133

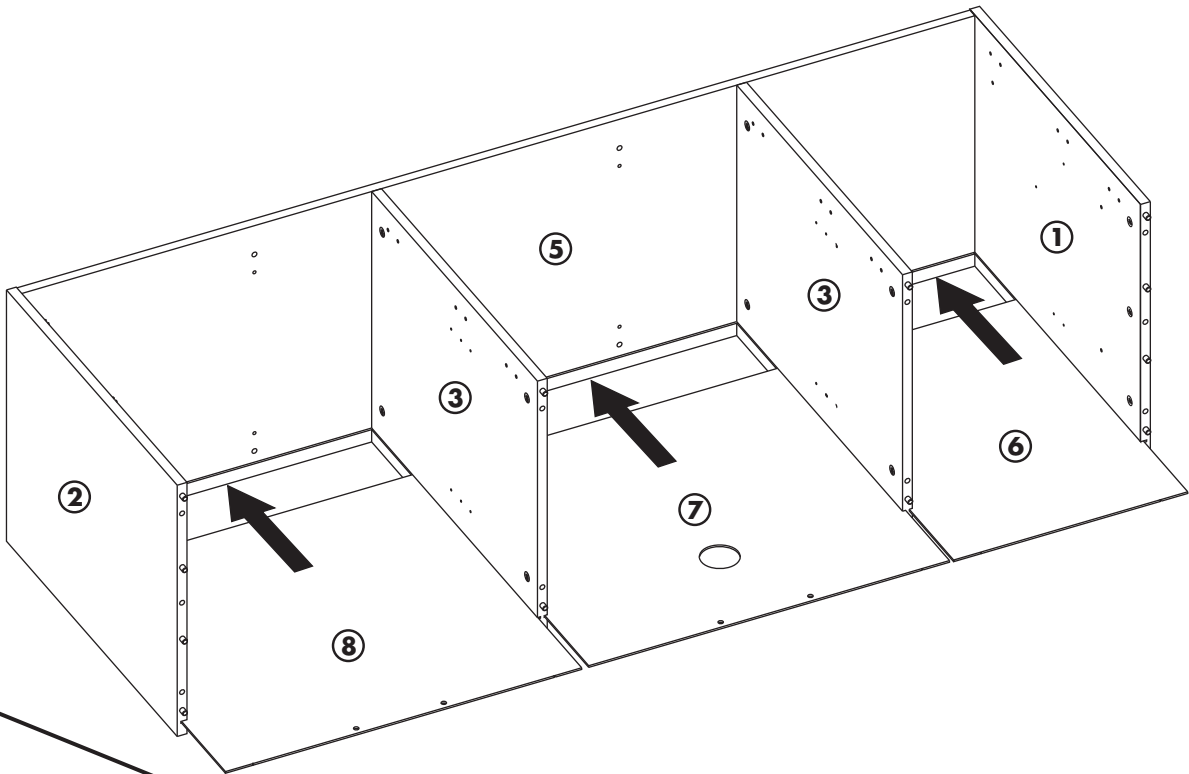

D1


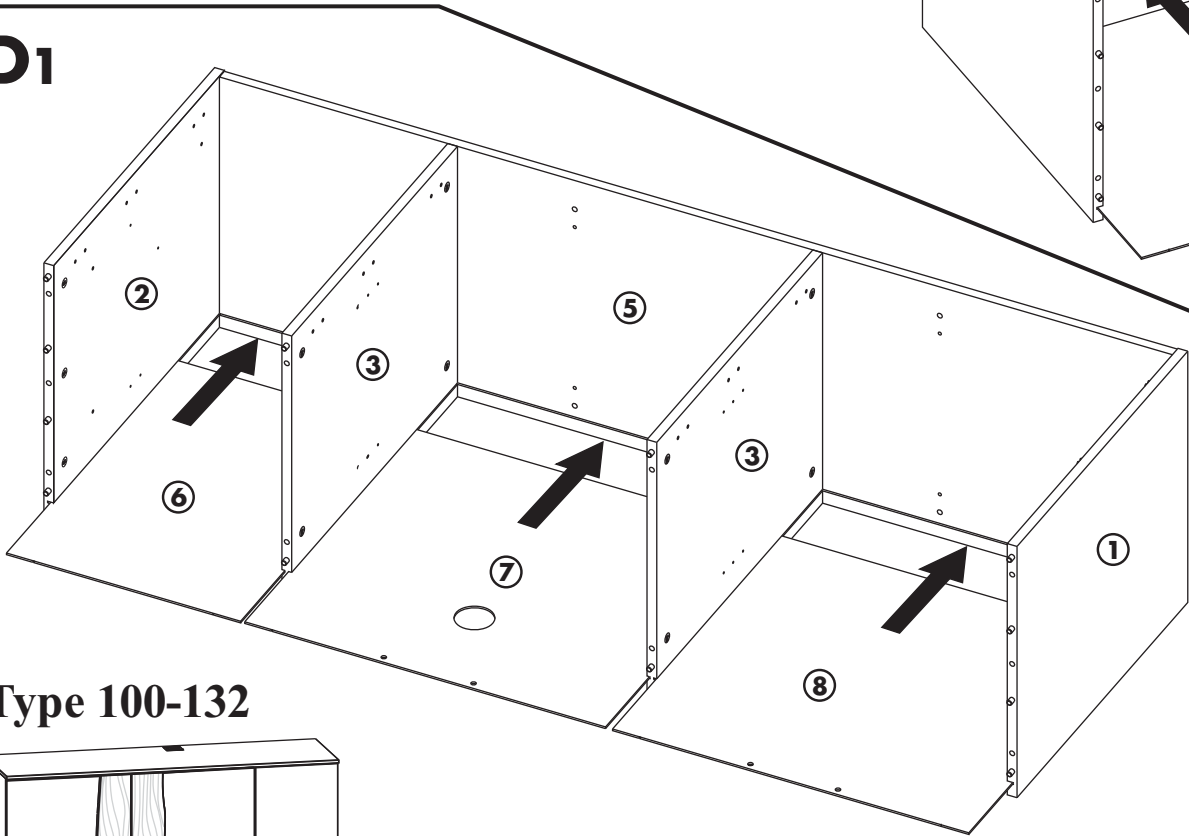


Type 100-132


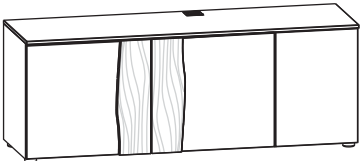


E1


Type 100-132

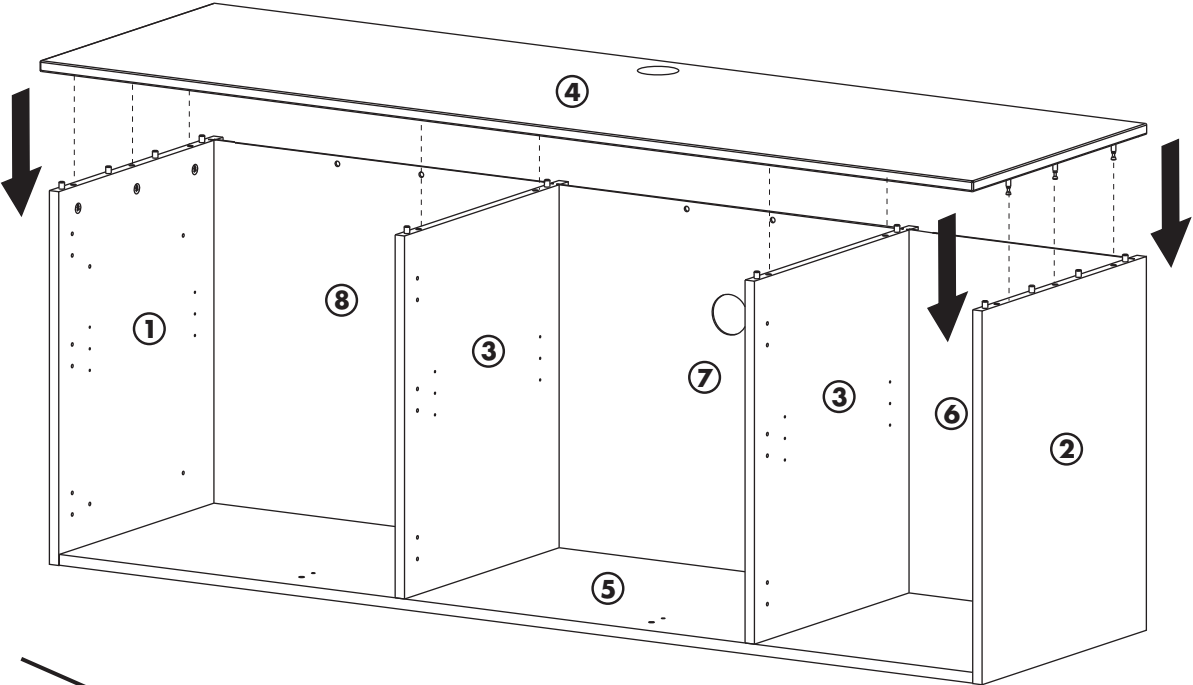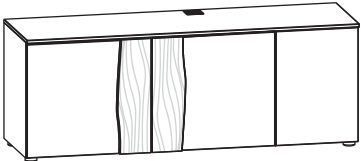


E2

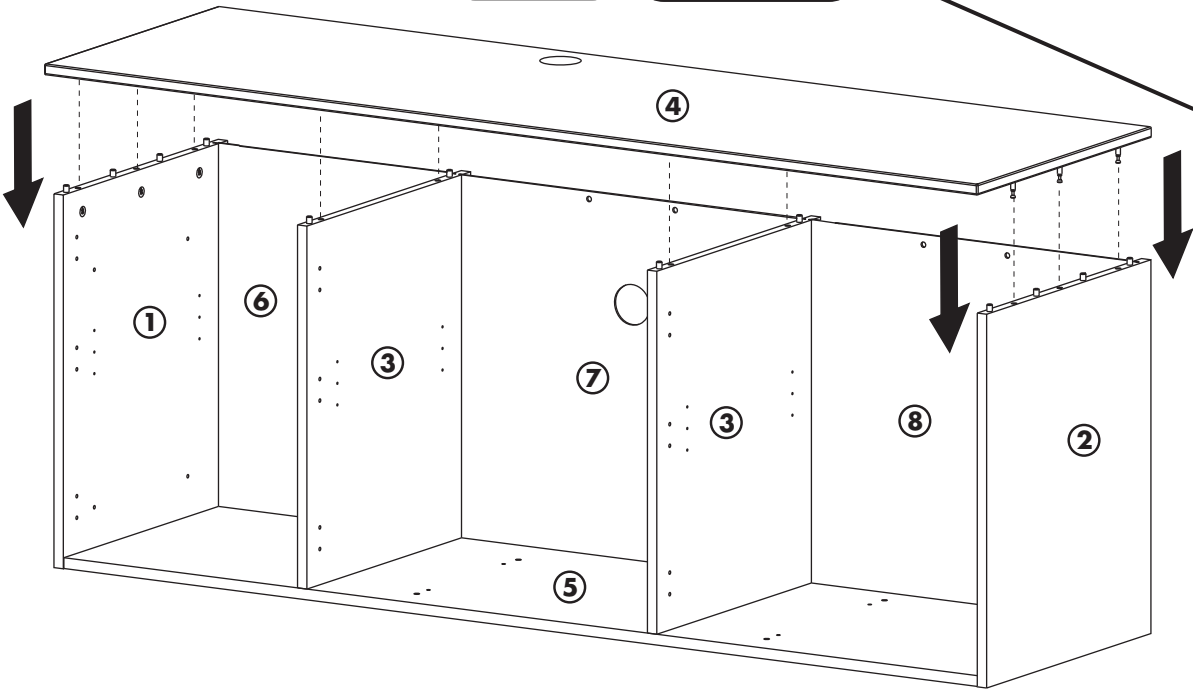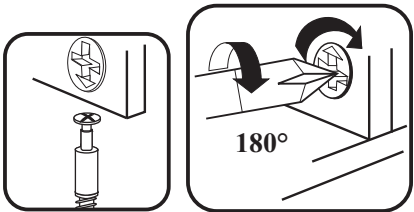


Type 100-133

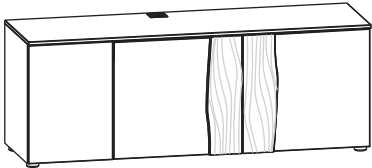




F1

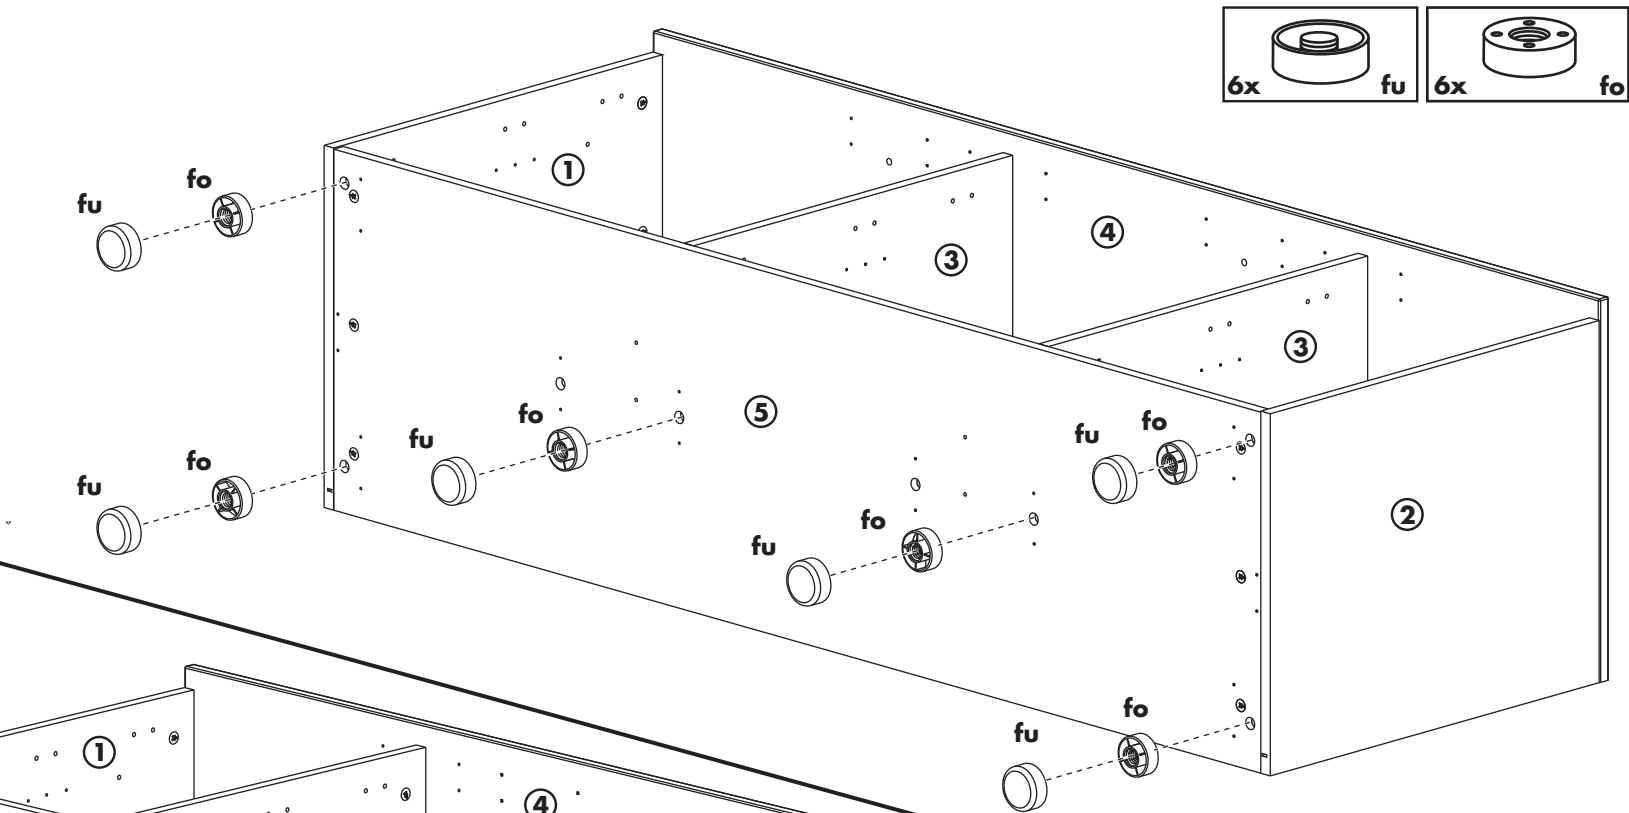



F2

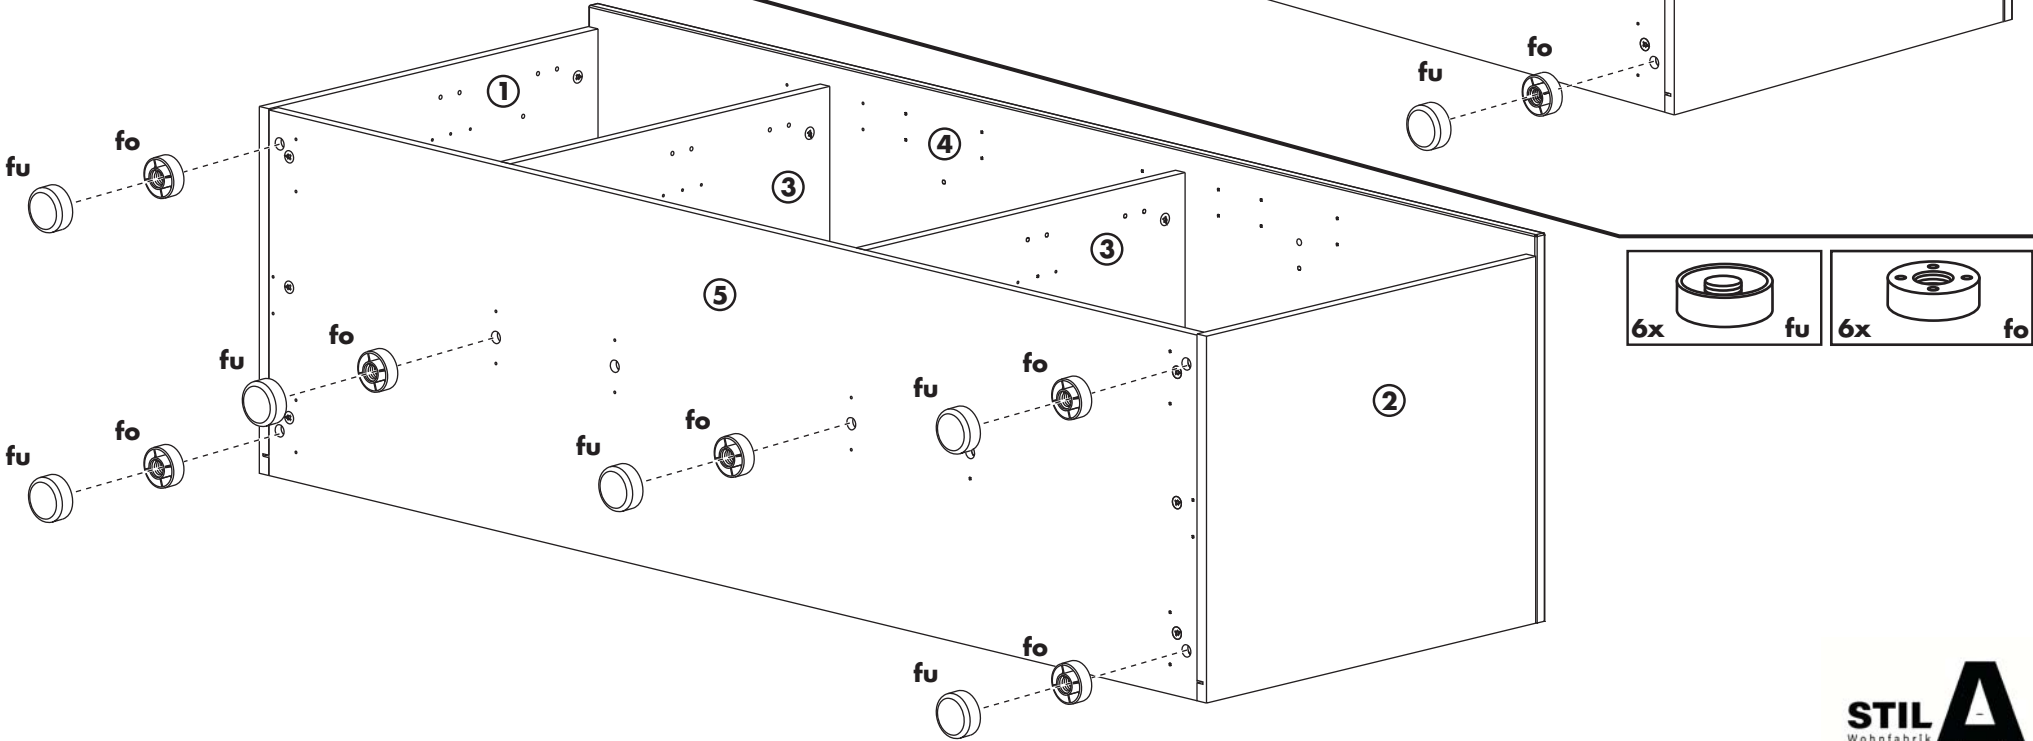


G


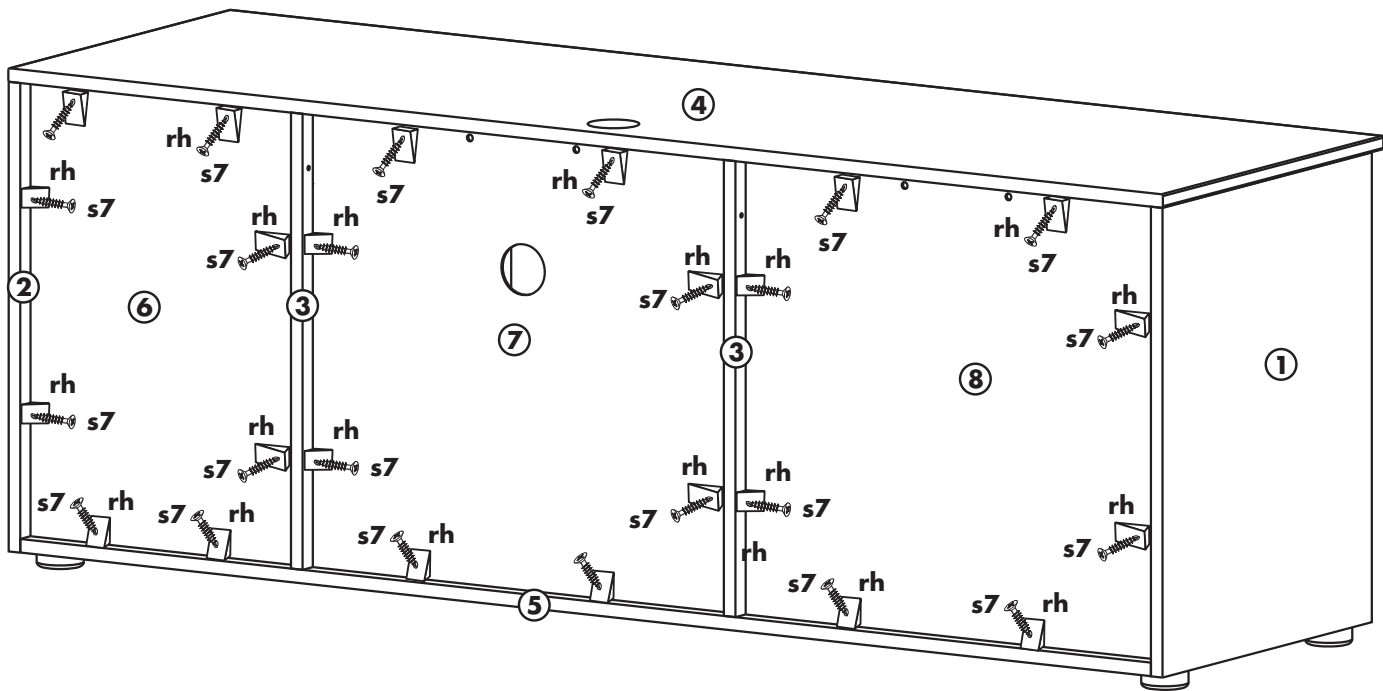


H

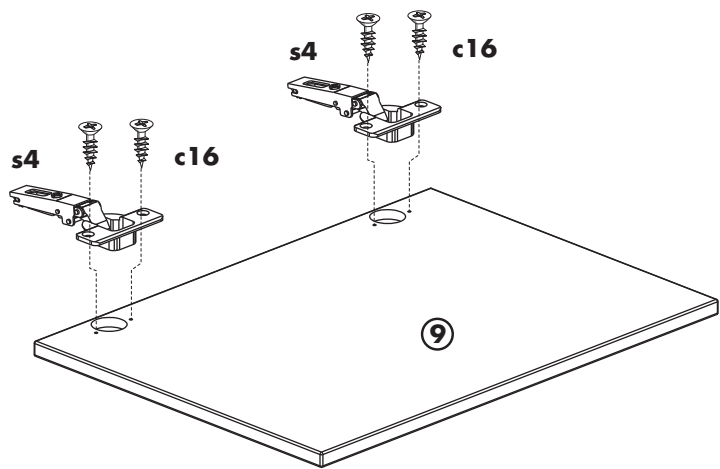


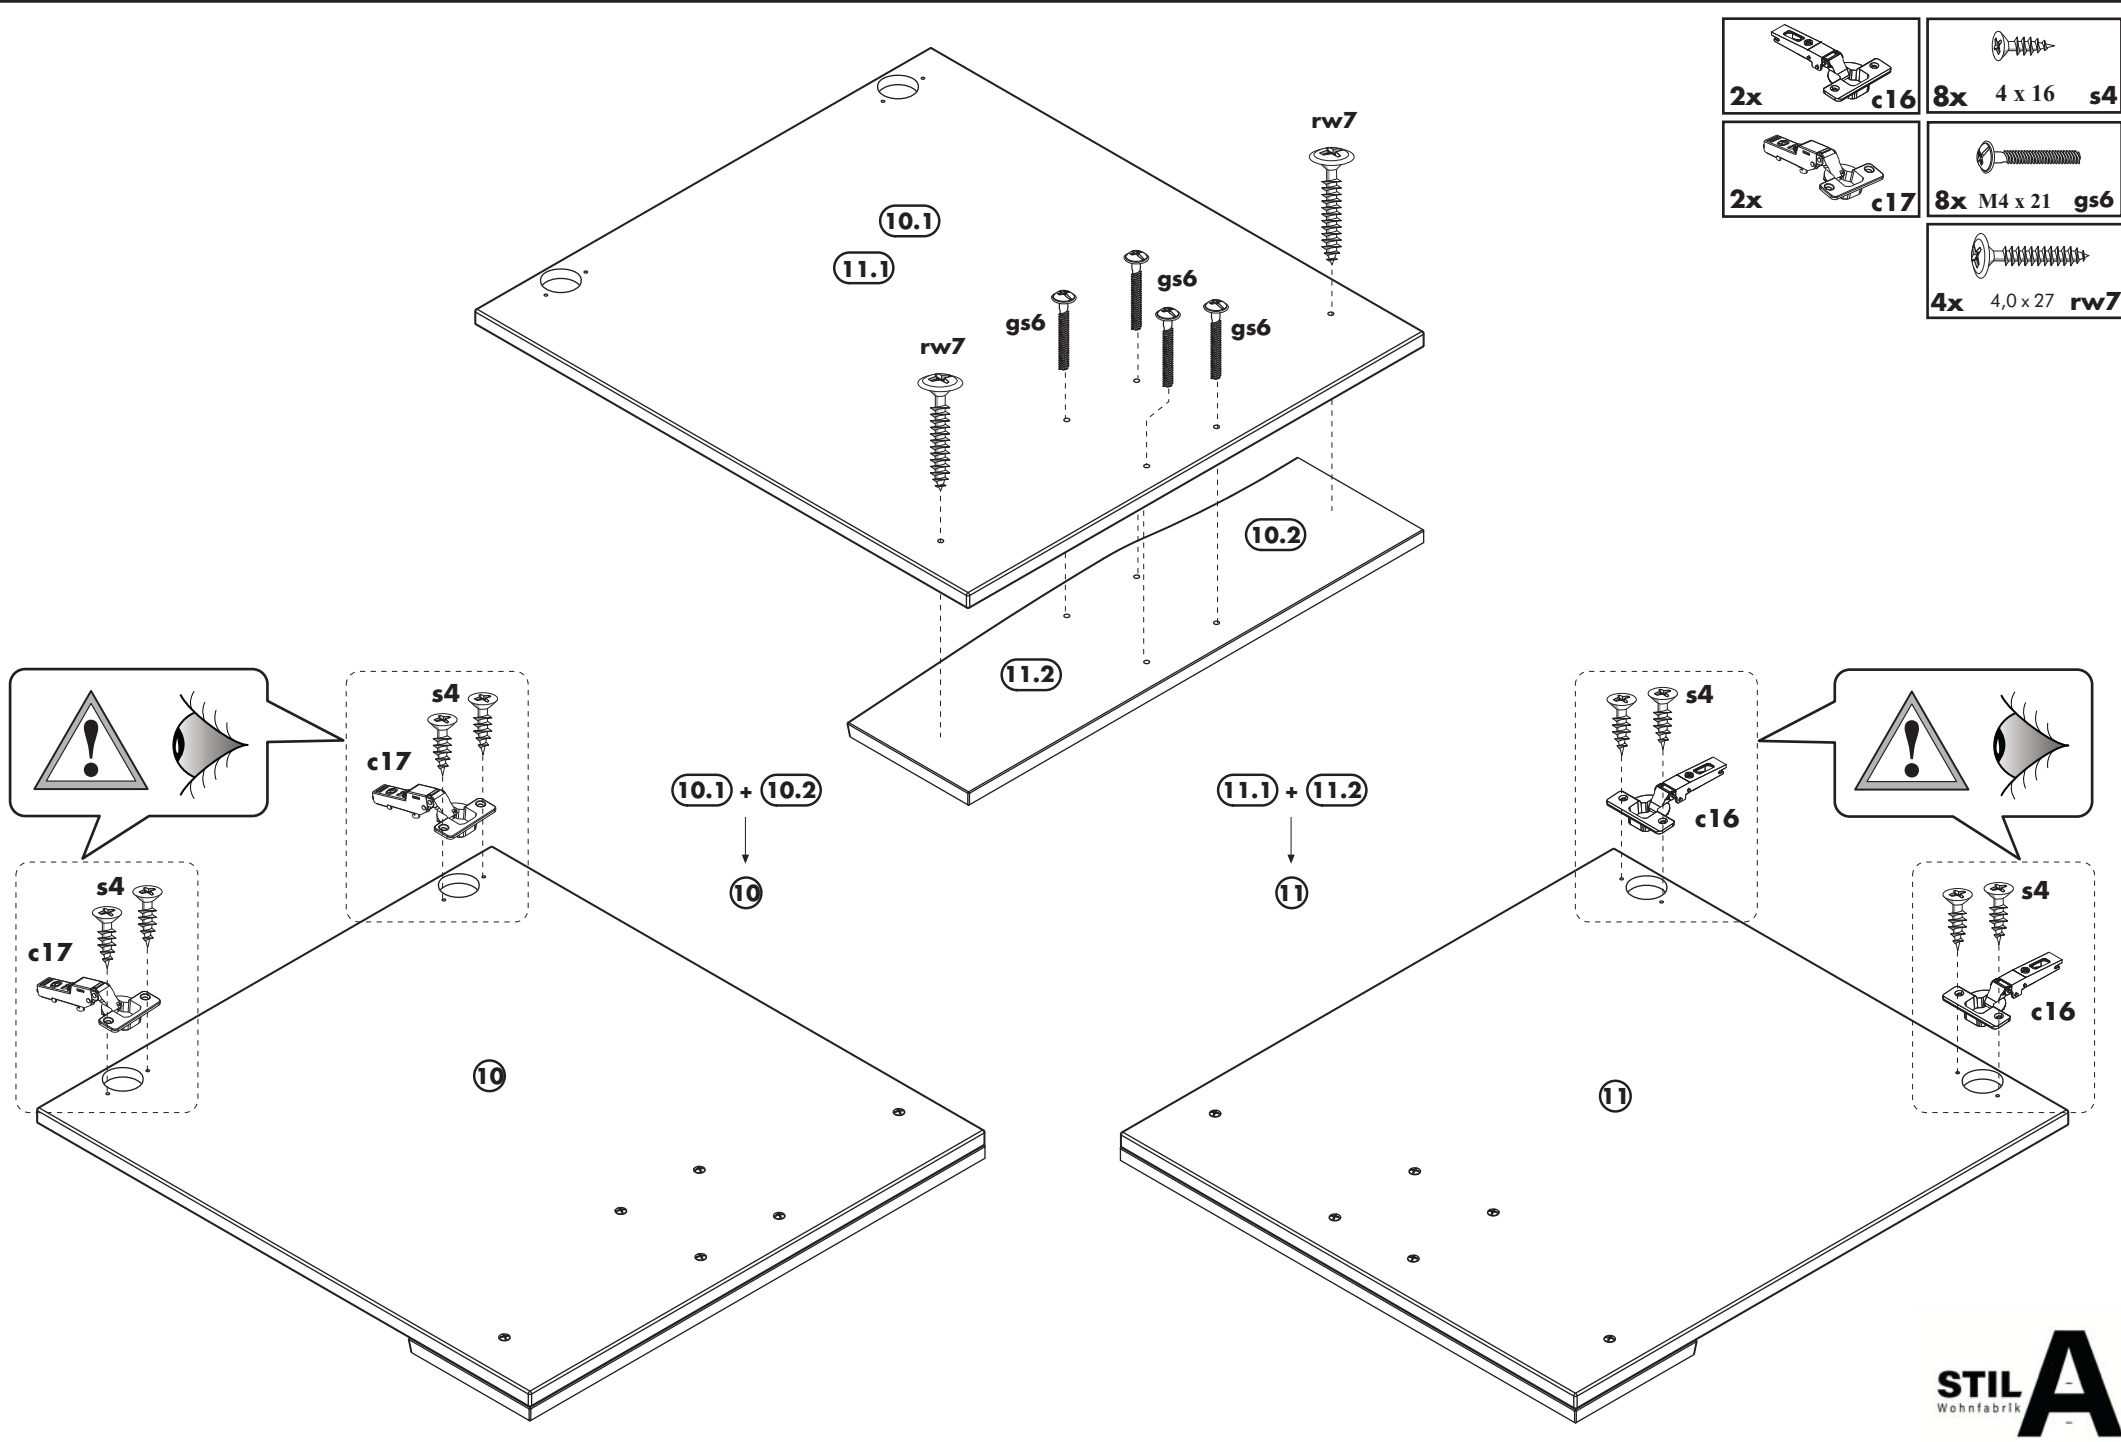

J

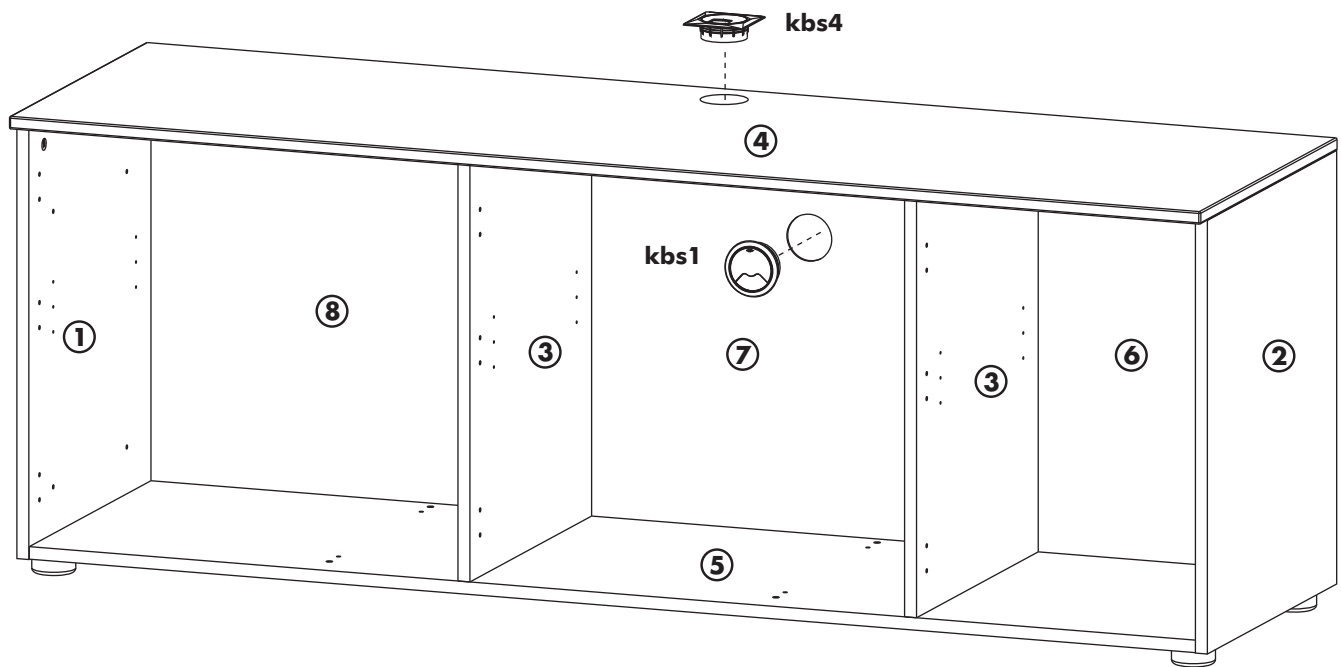


Type 100-132

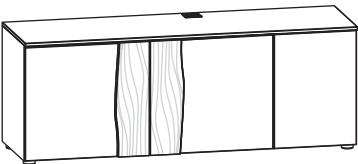

weiter mit Schritt K1
continued with step K1












Type 100-133

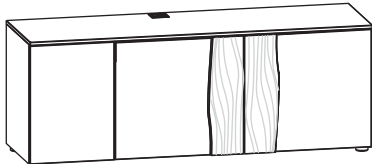

weiter mit Schritt K2
continued with step K2



K1

Type 100-132

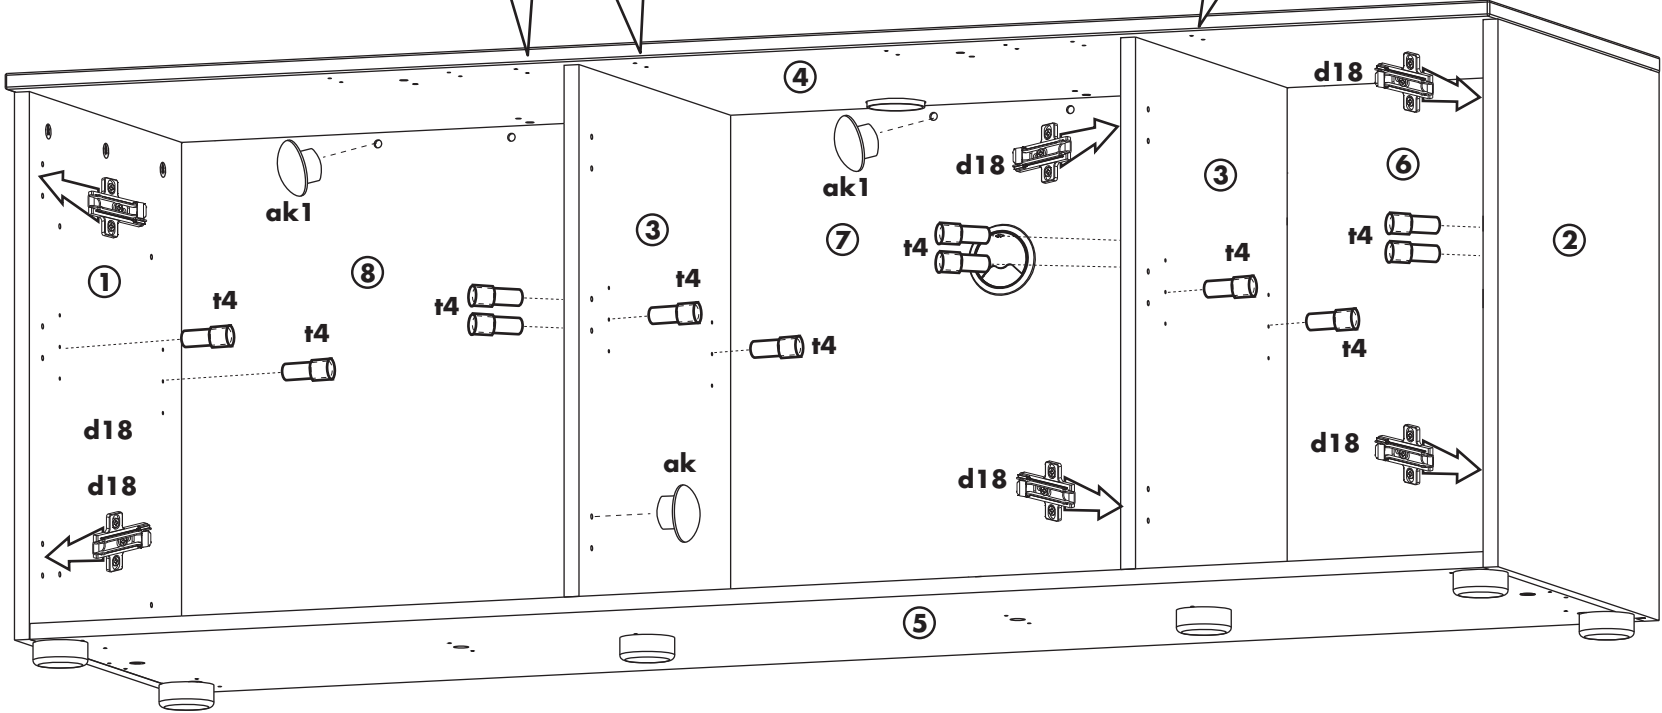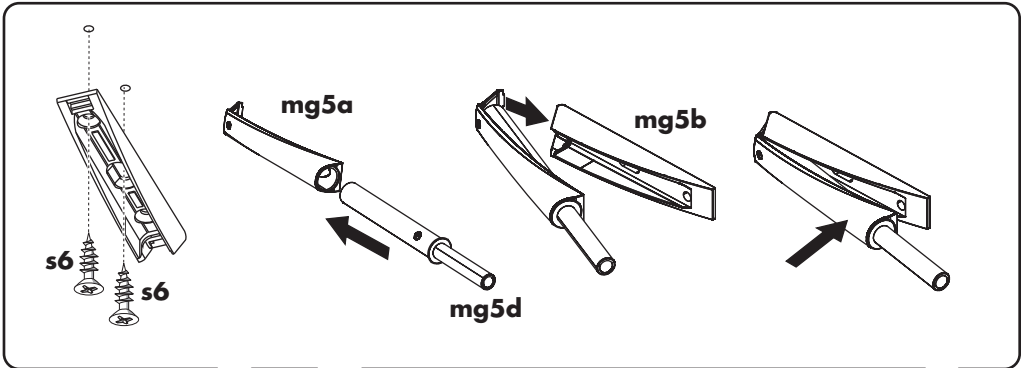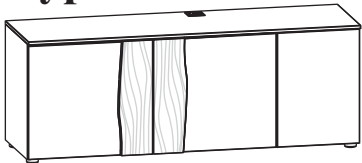




L1

Type 100-132






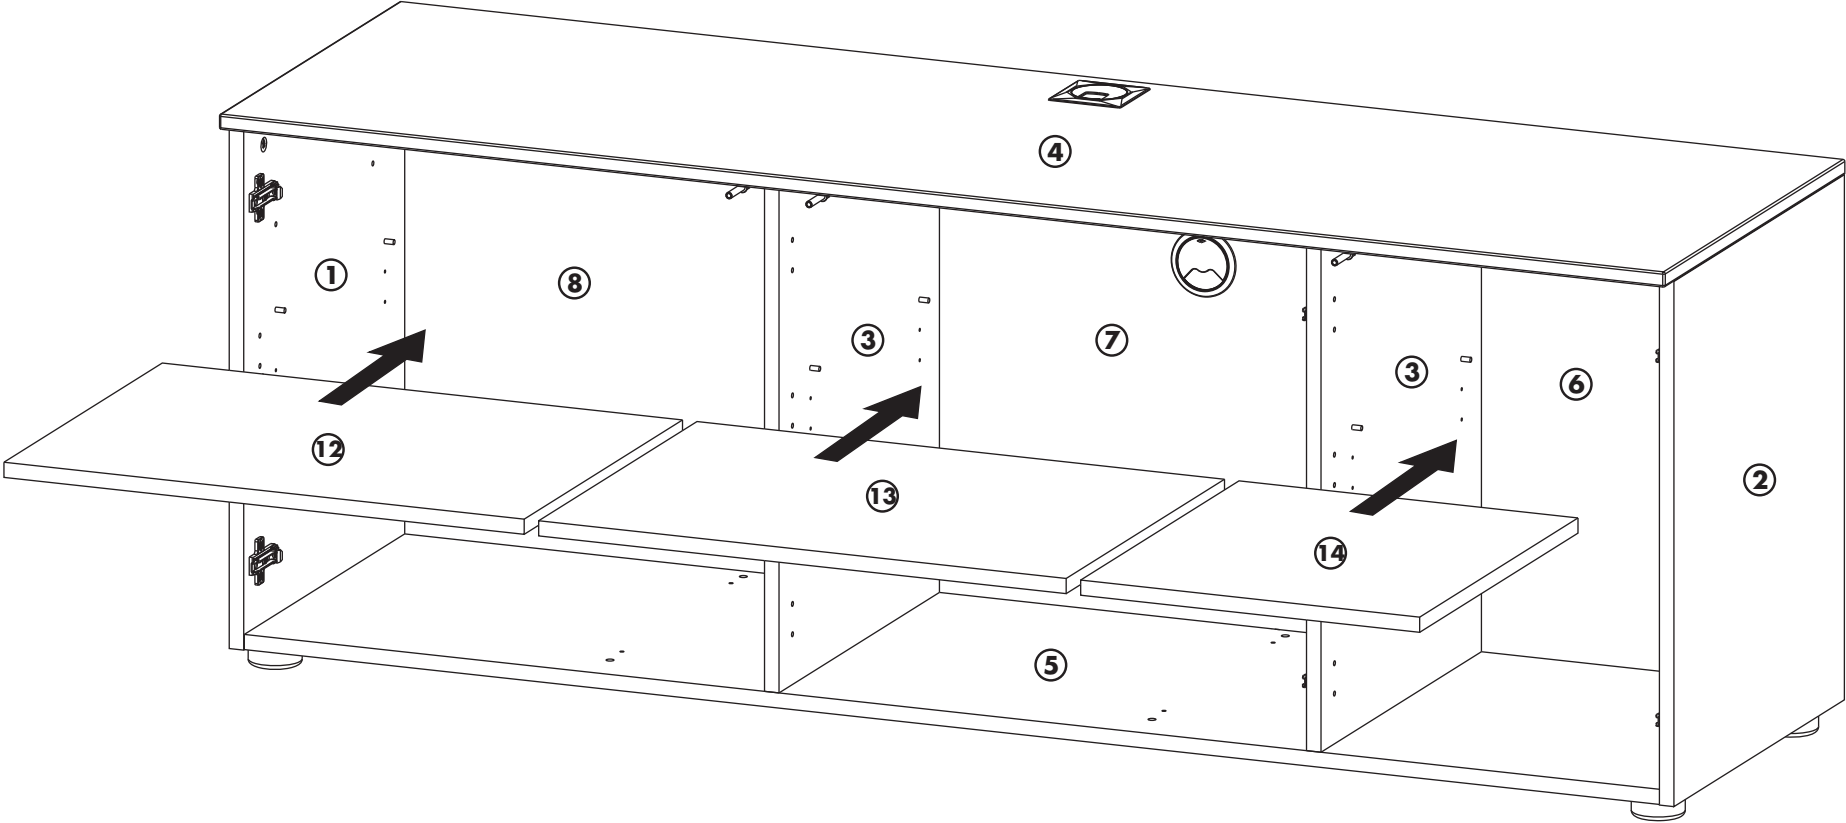
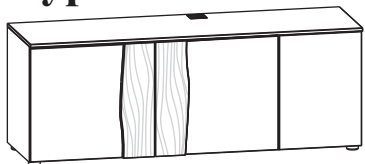


M1




Type 100-132

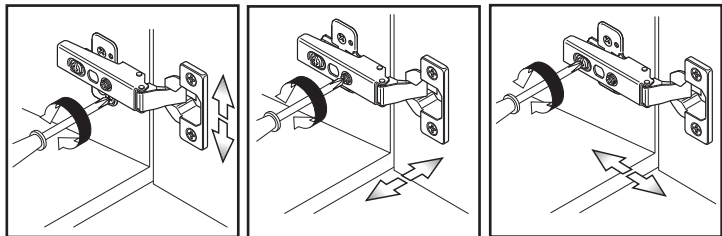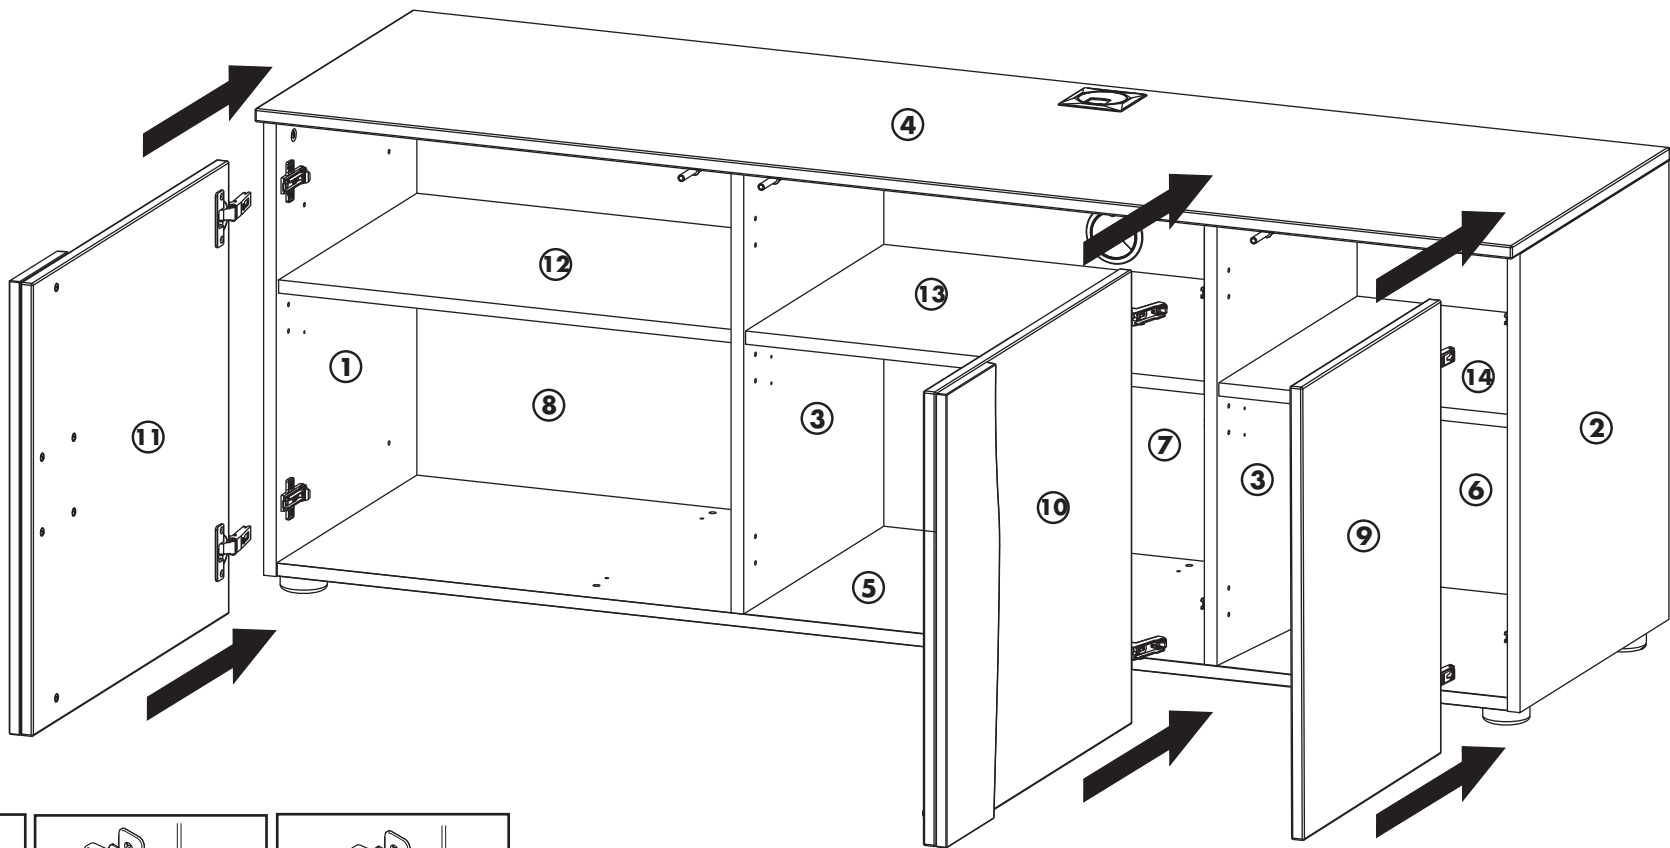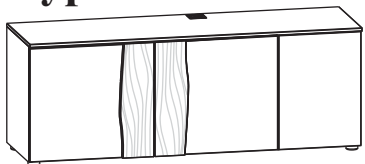

K2





Type 100-133

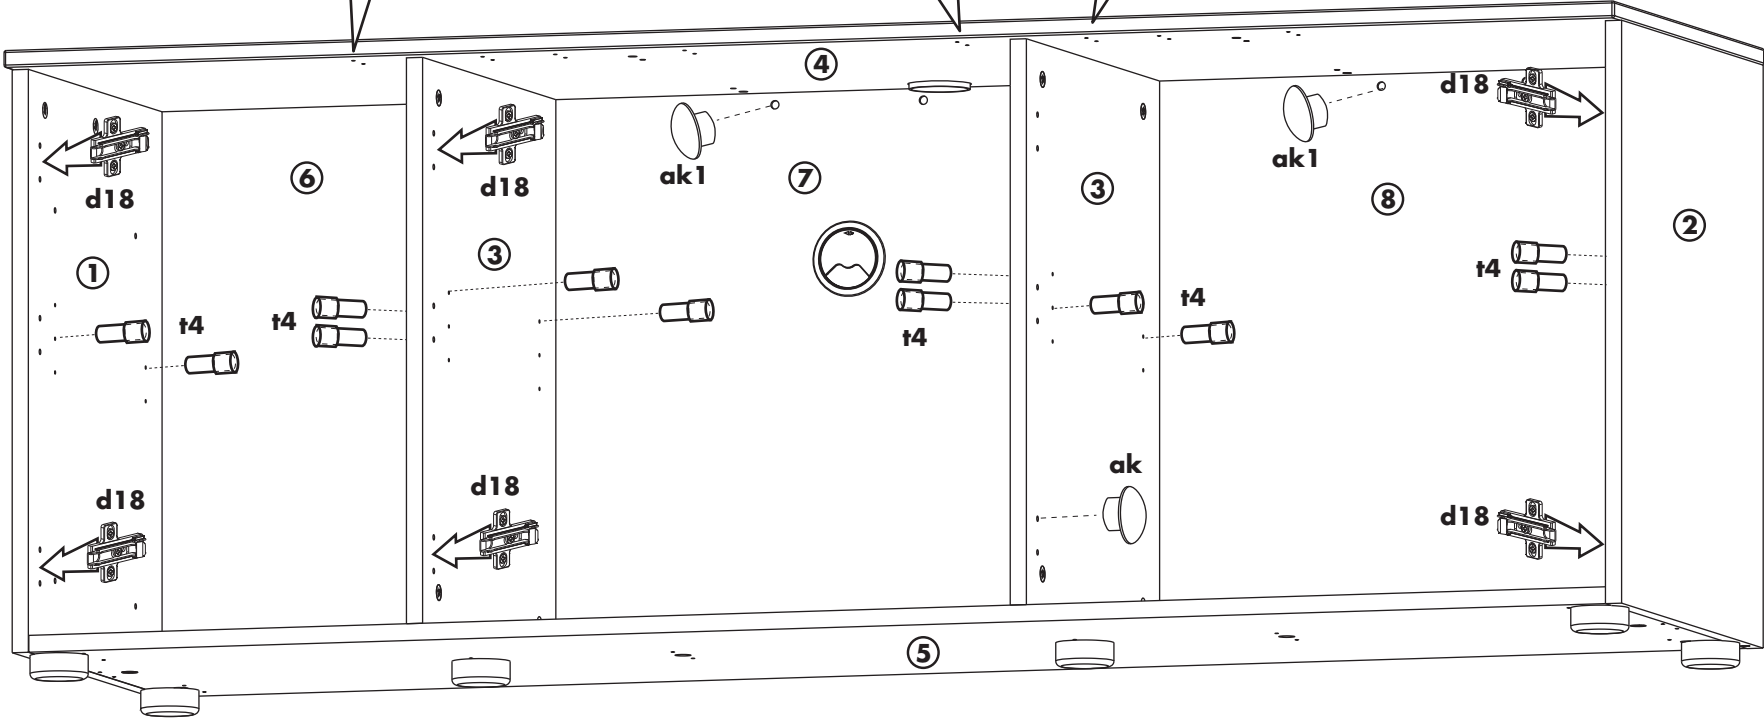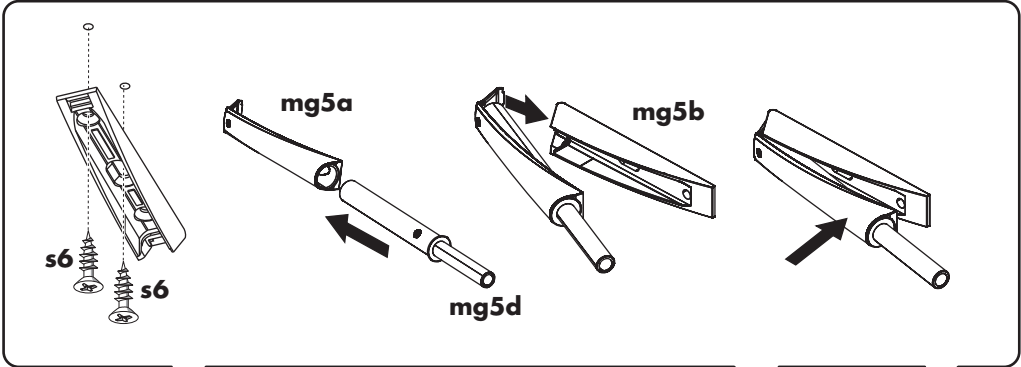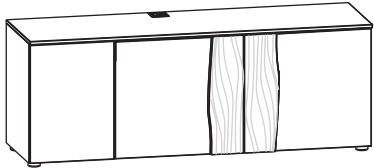

L2

Type 100-133

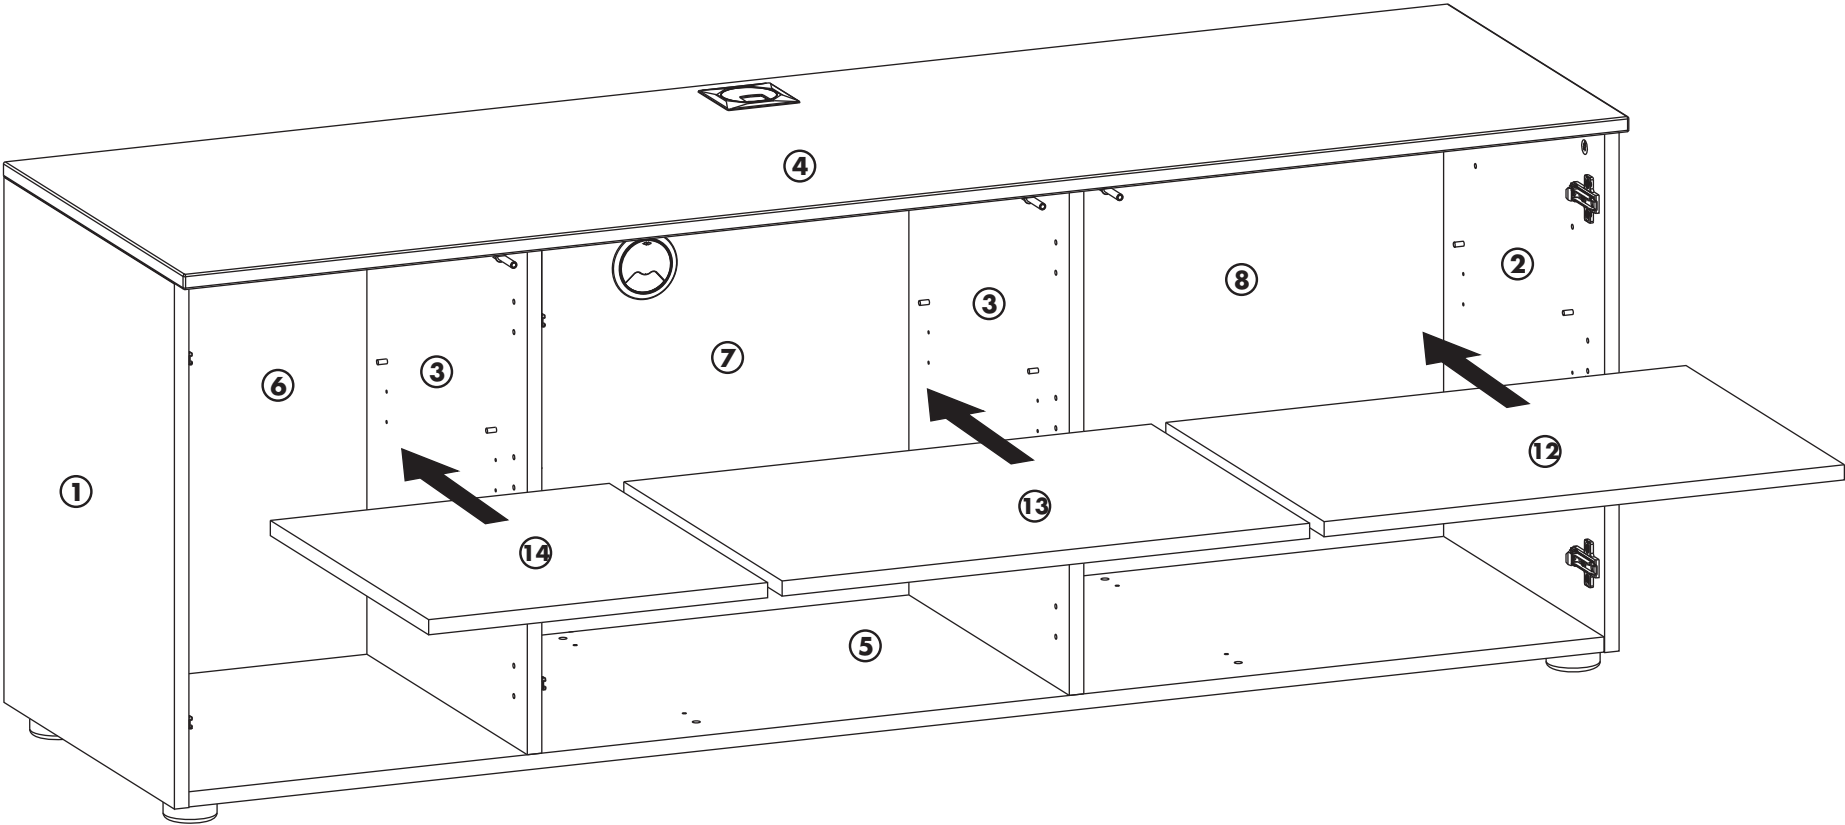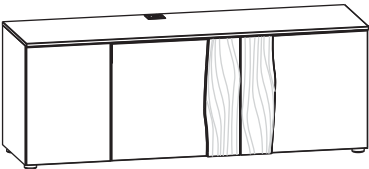

M2

Type 100-133

