





Type 100-220

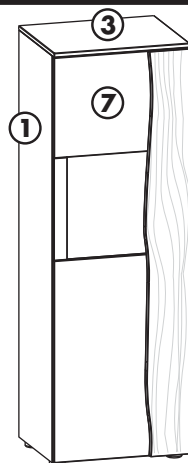

Type 100-221

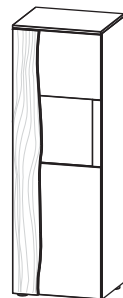

Sie brauchen:
You need:

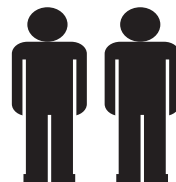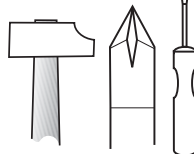

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen. Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.

If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!


Only clean with a duster or damp cloth. Don't use strong detergents or solvents.

Beschlagliste Fittings


CAD und Design
Light Line 15 100_220 / 02.26

 4x 4,0 x 27 rw7	 2x wd	 2x rv	 2x 5 x 100 s28	 2x 3,5 x 15 s5
 12x a4	 8x e2	 8x M4 x 12 gs5	 8x gtb	 4x 3 x 20 rw1
 4x fu	 4x fo	 4x M4 x 21 gs6	 8x 4 x 16 s4	 14x rh
 4x t4	 8x ak	 1x ak1	 4x D 2mm d18	 4x c16
 4x a1	 4x 1,5 mm tad4	 14x 3 x 20 s7	 12x 8 x 40 p1	 8x e5 3 mm


A

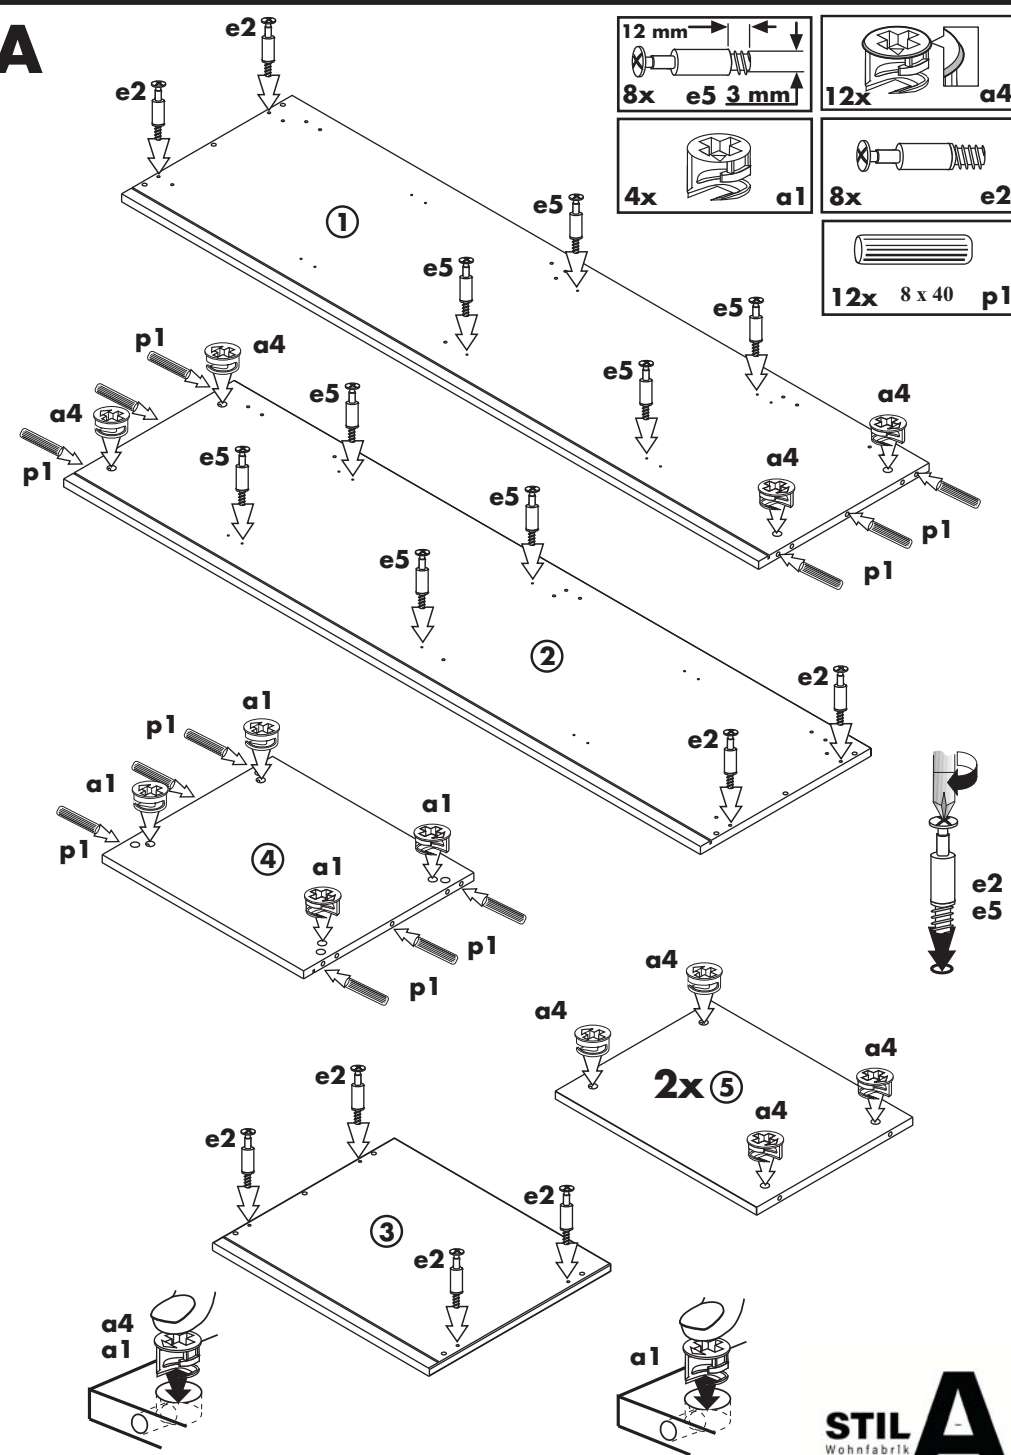




B

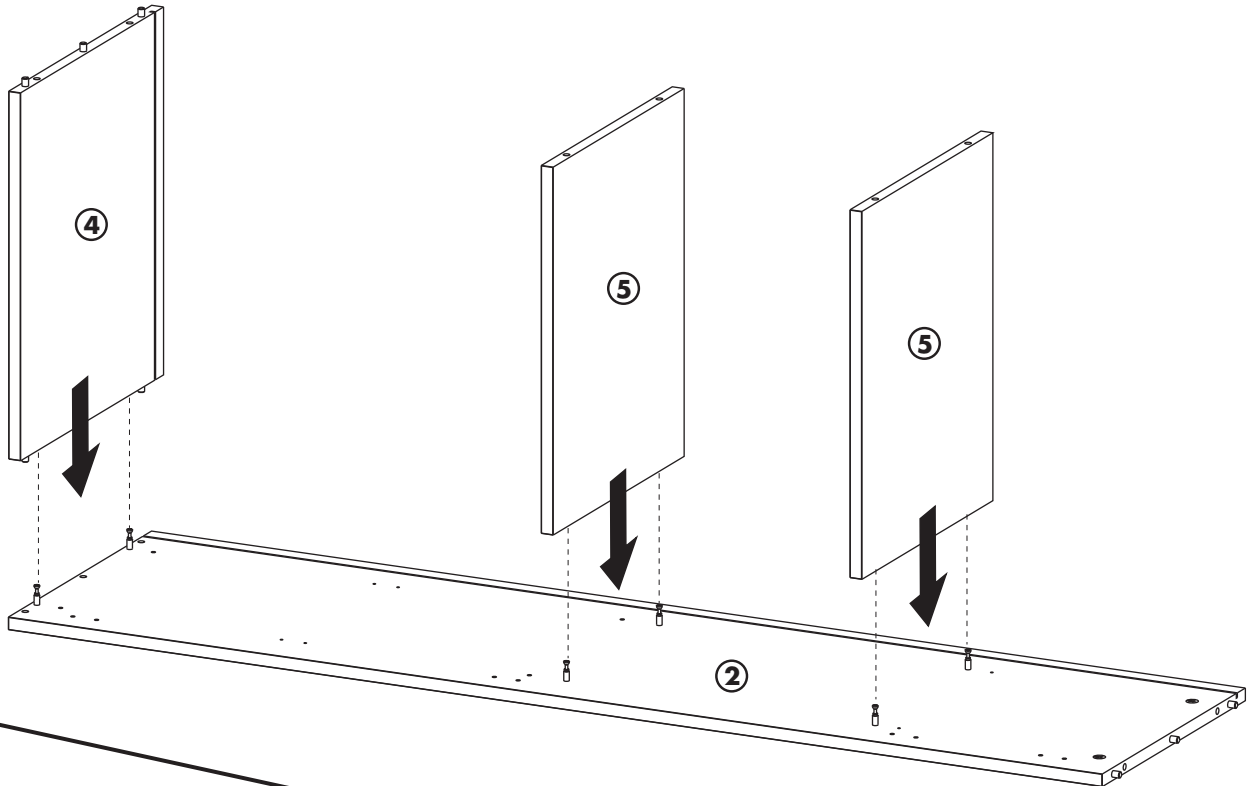



C

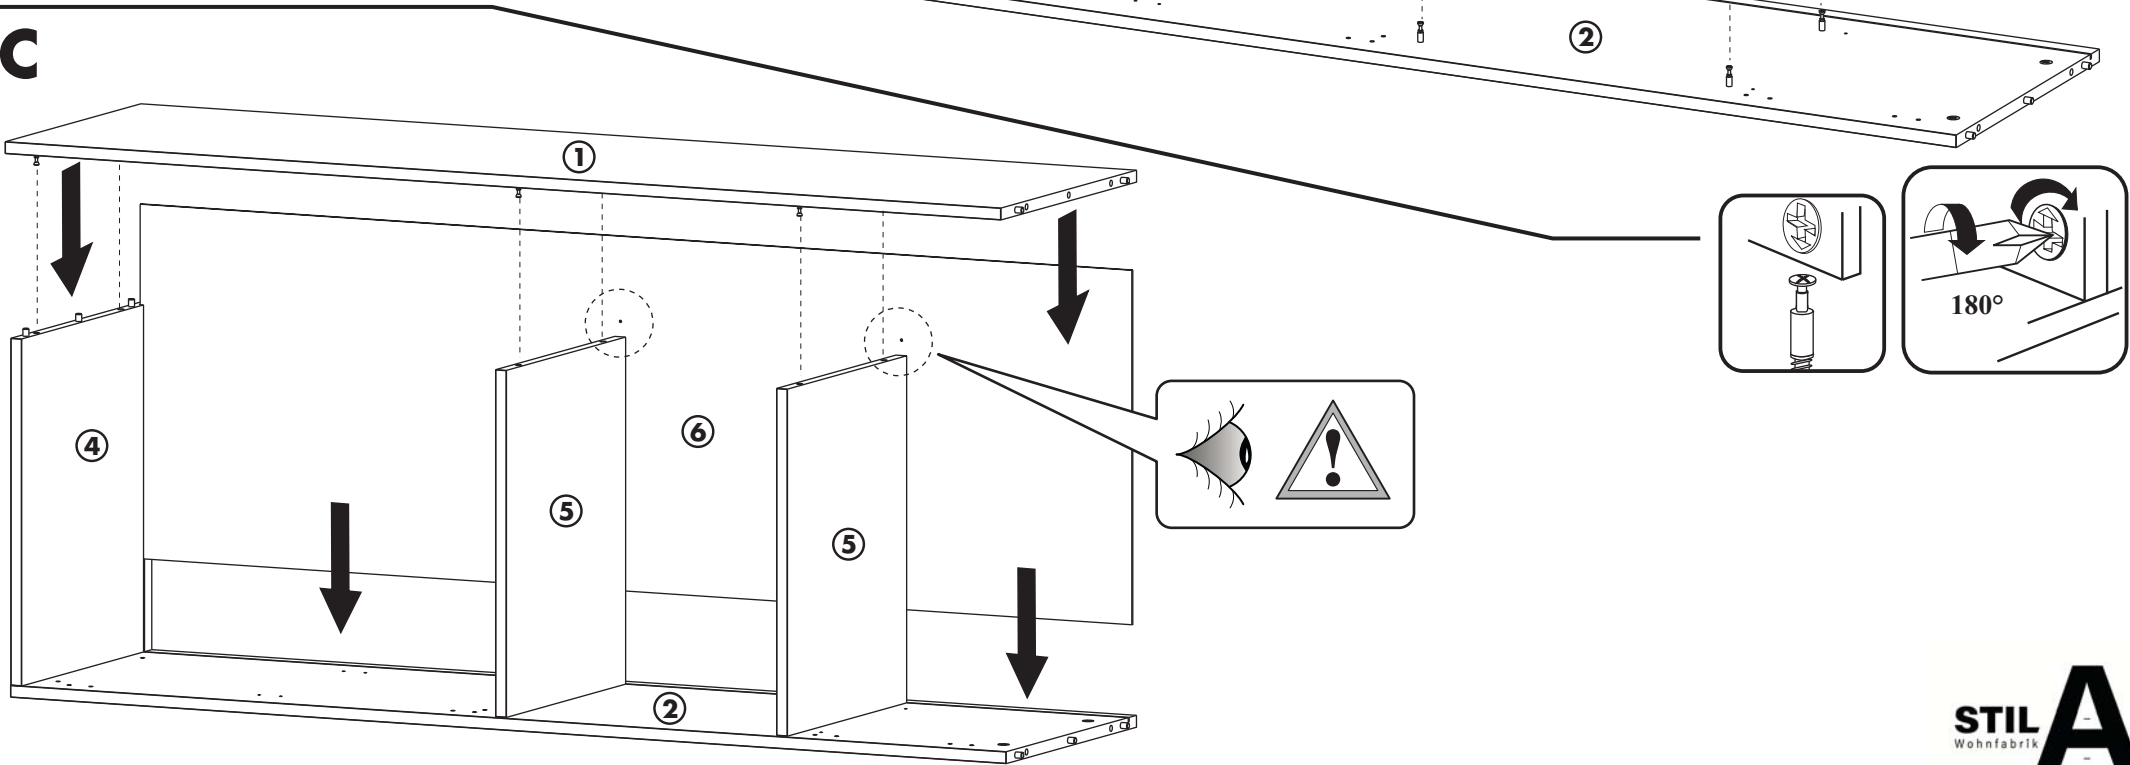





D

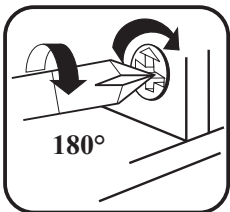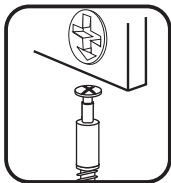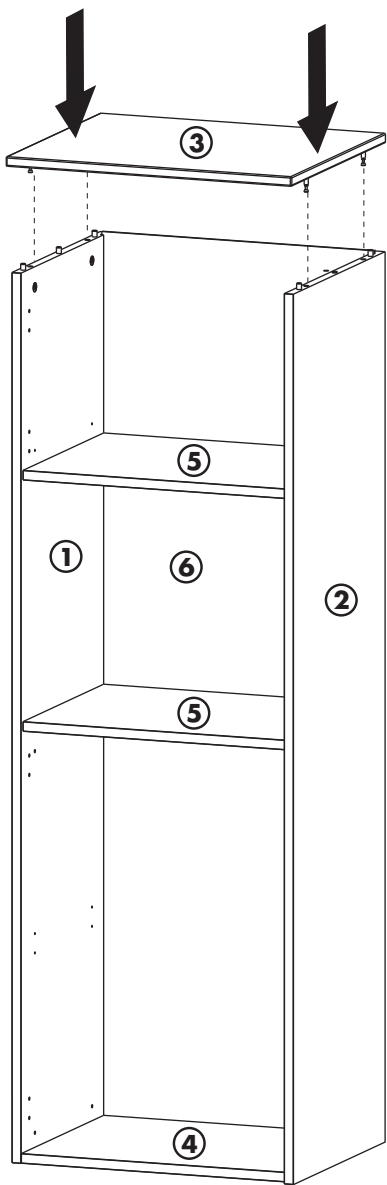







E

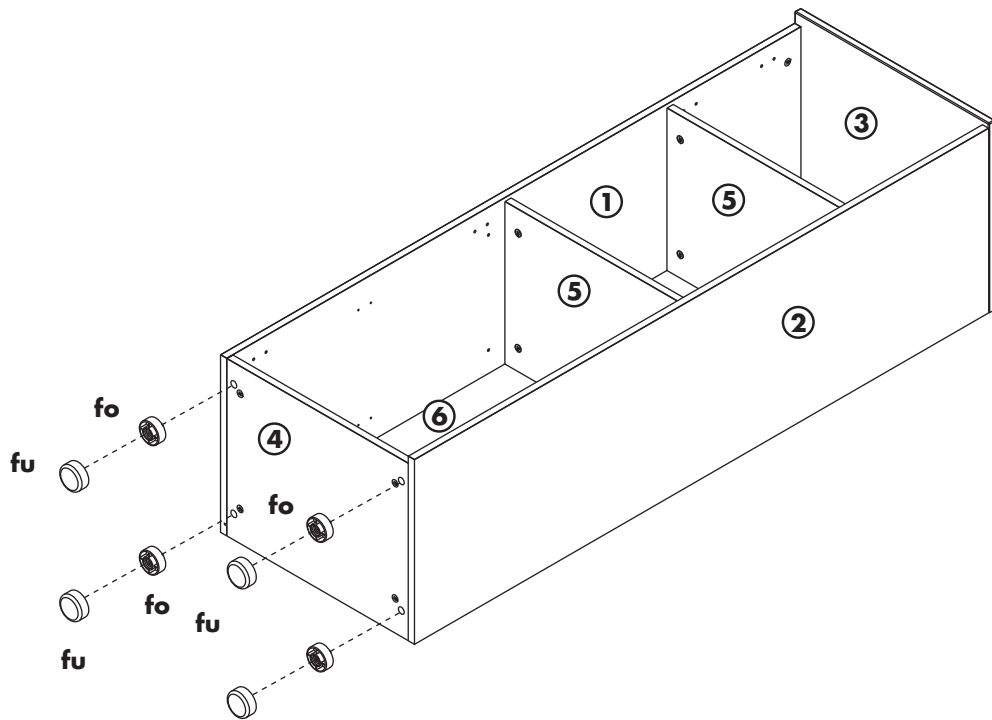

F

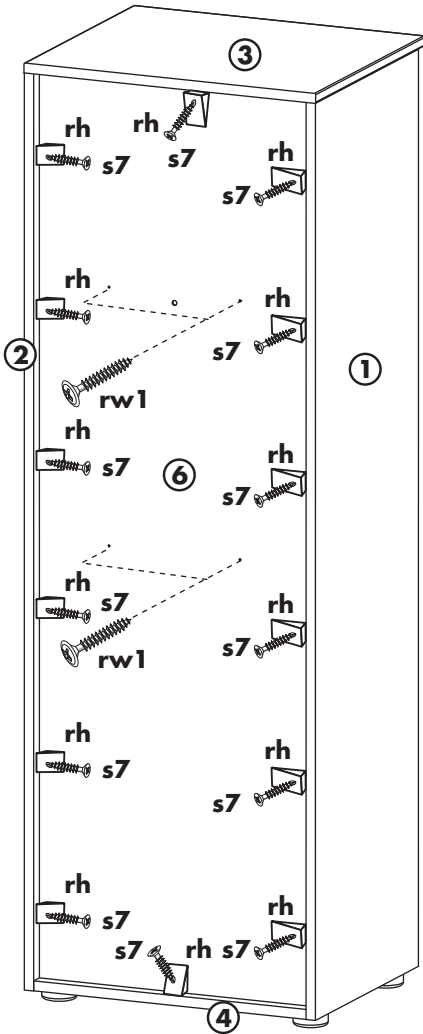



G1

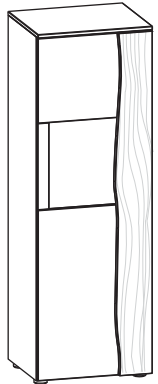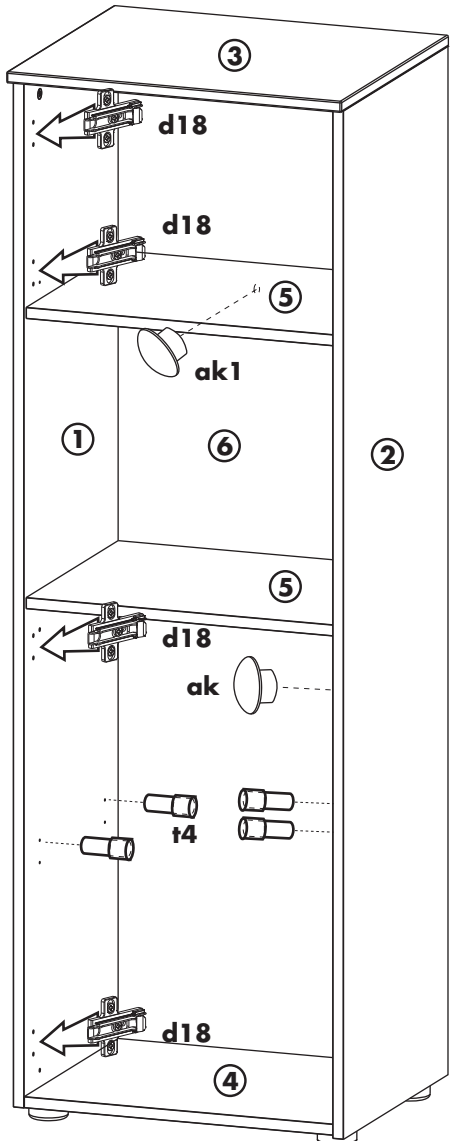


Type 100-220


G2

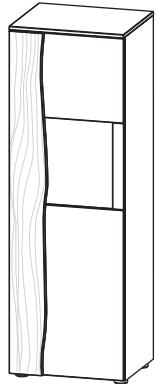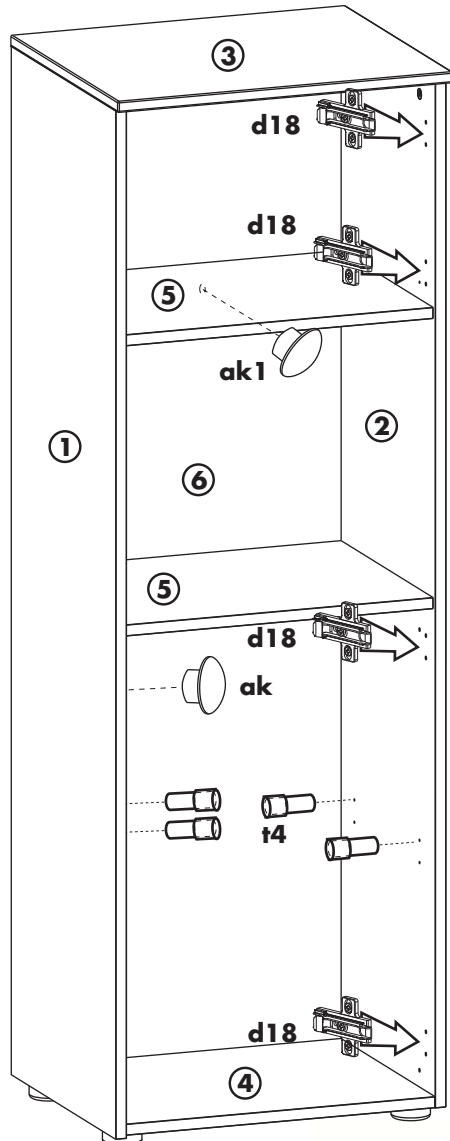


Type 100-221

H1

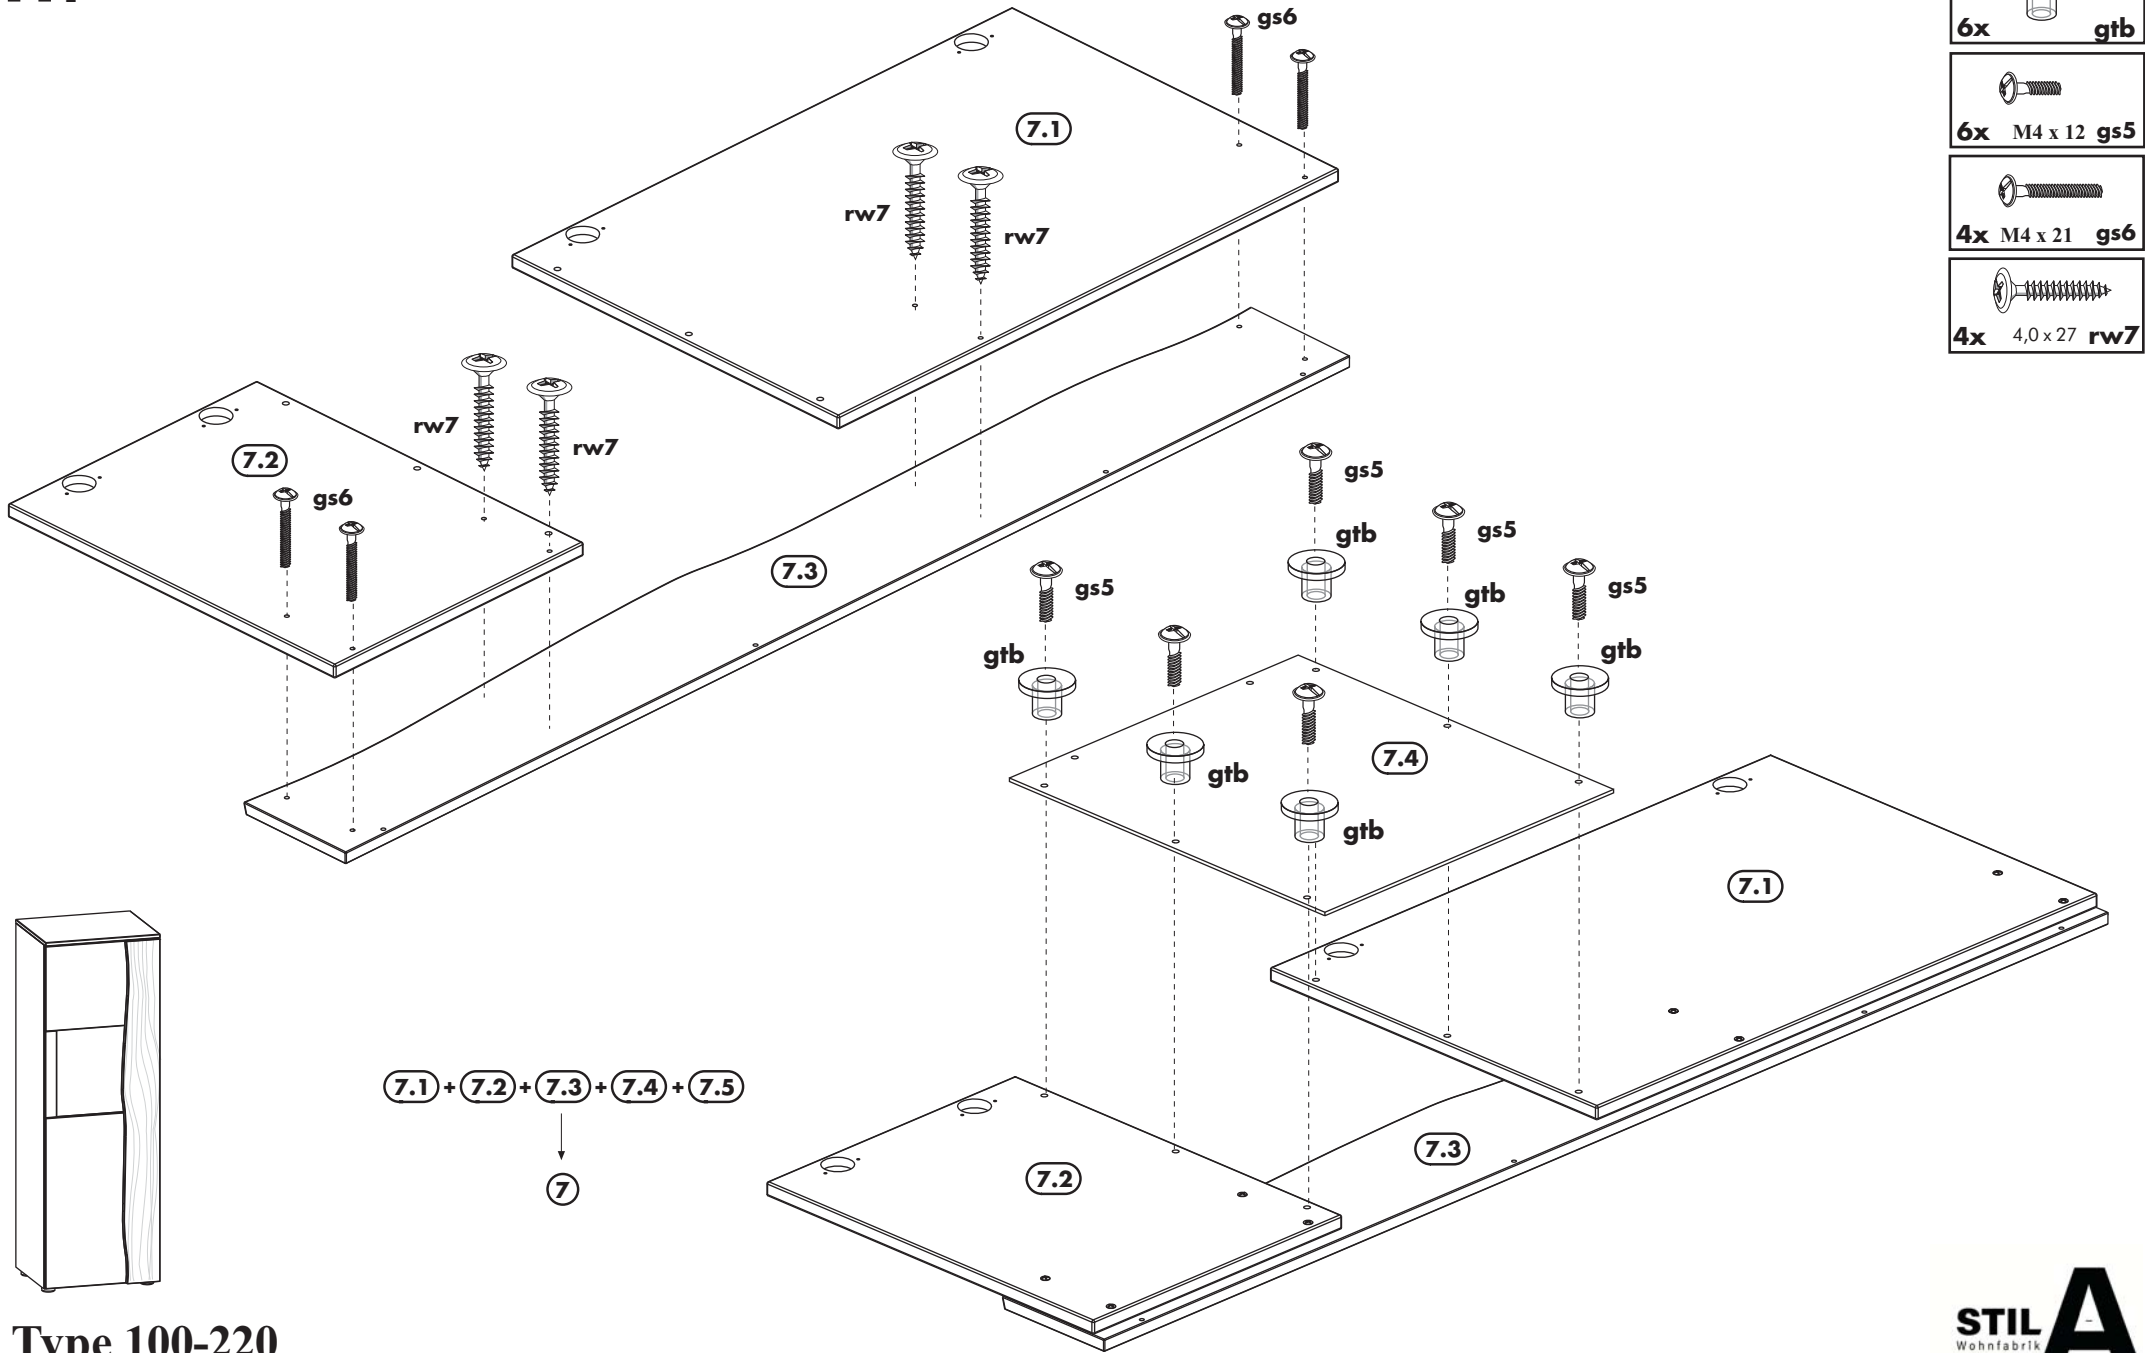


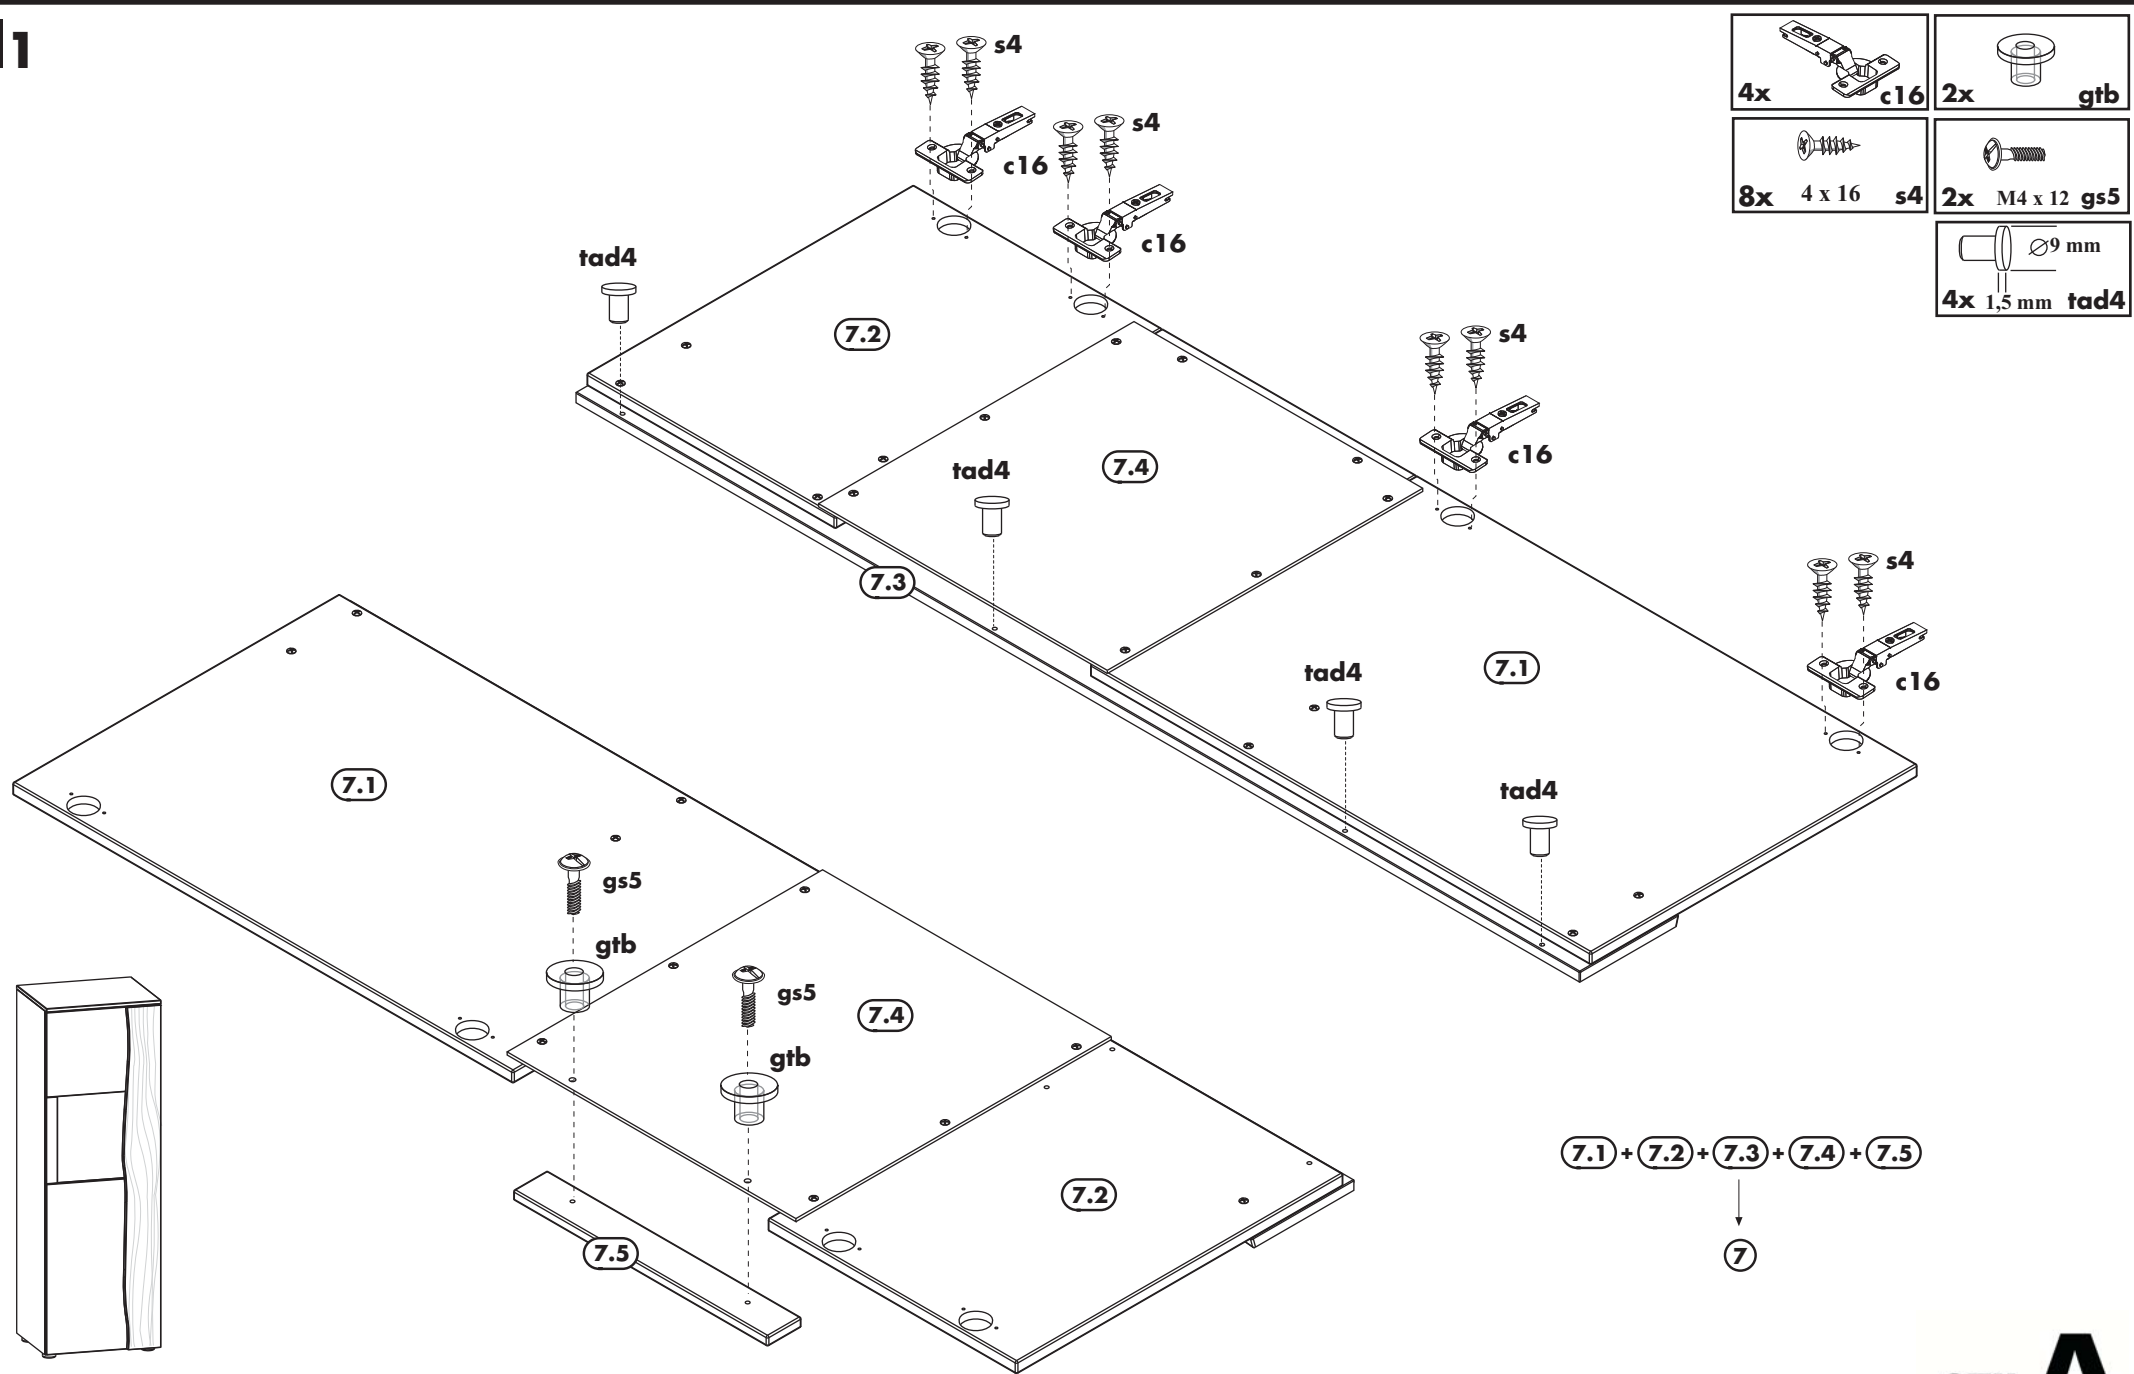



H2

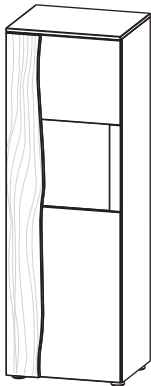

Type 100-221

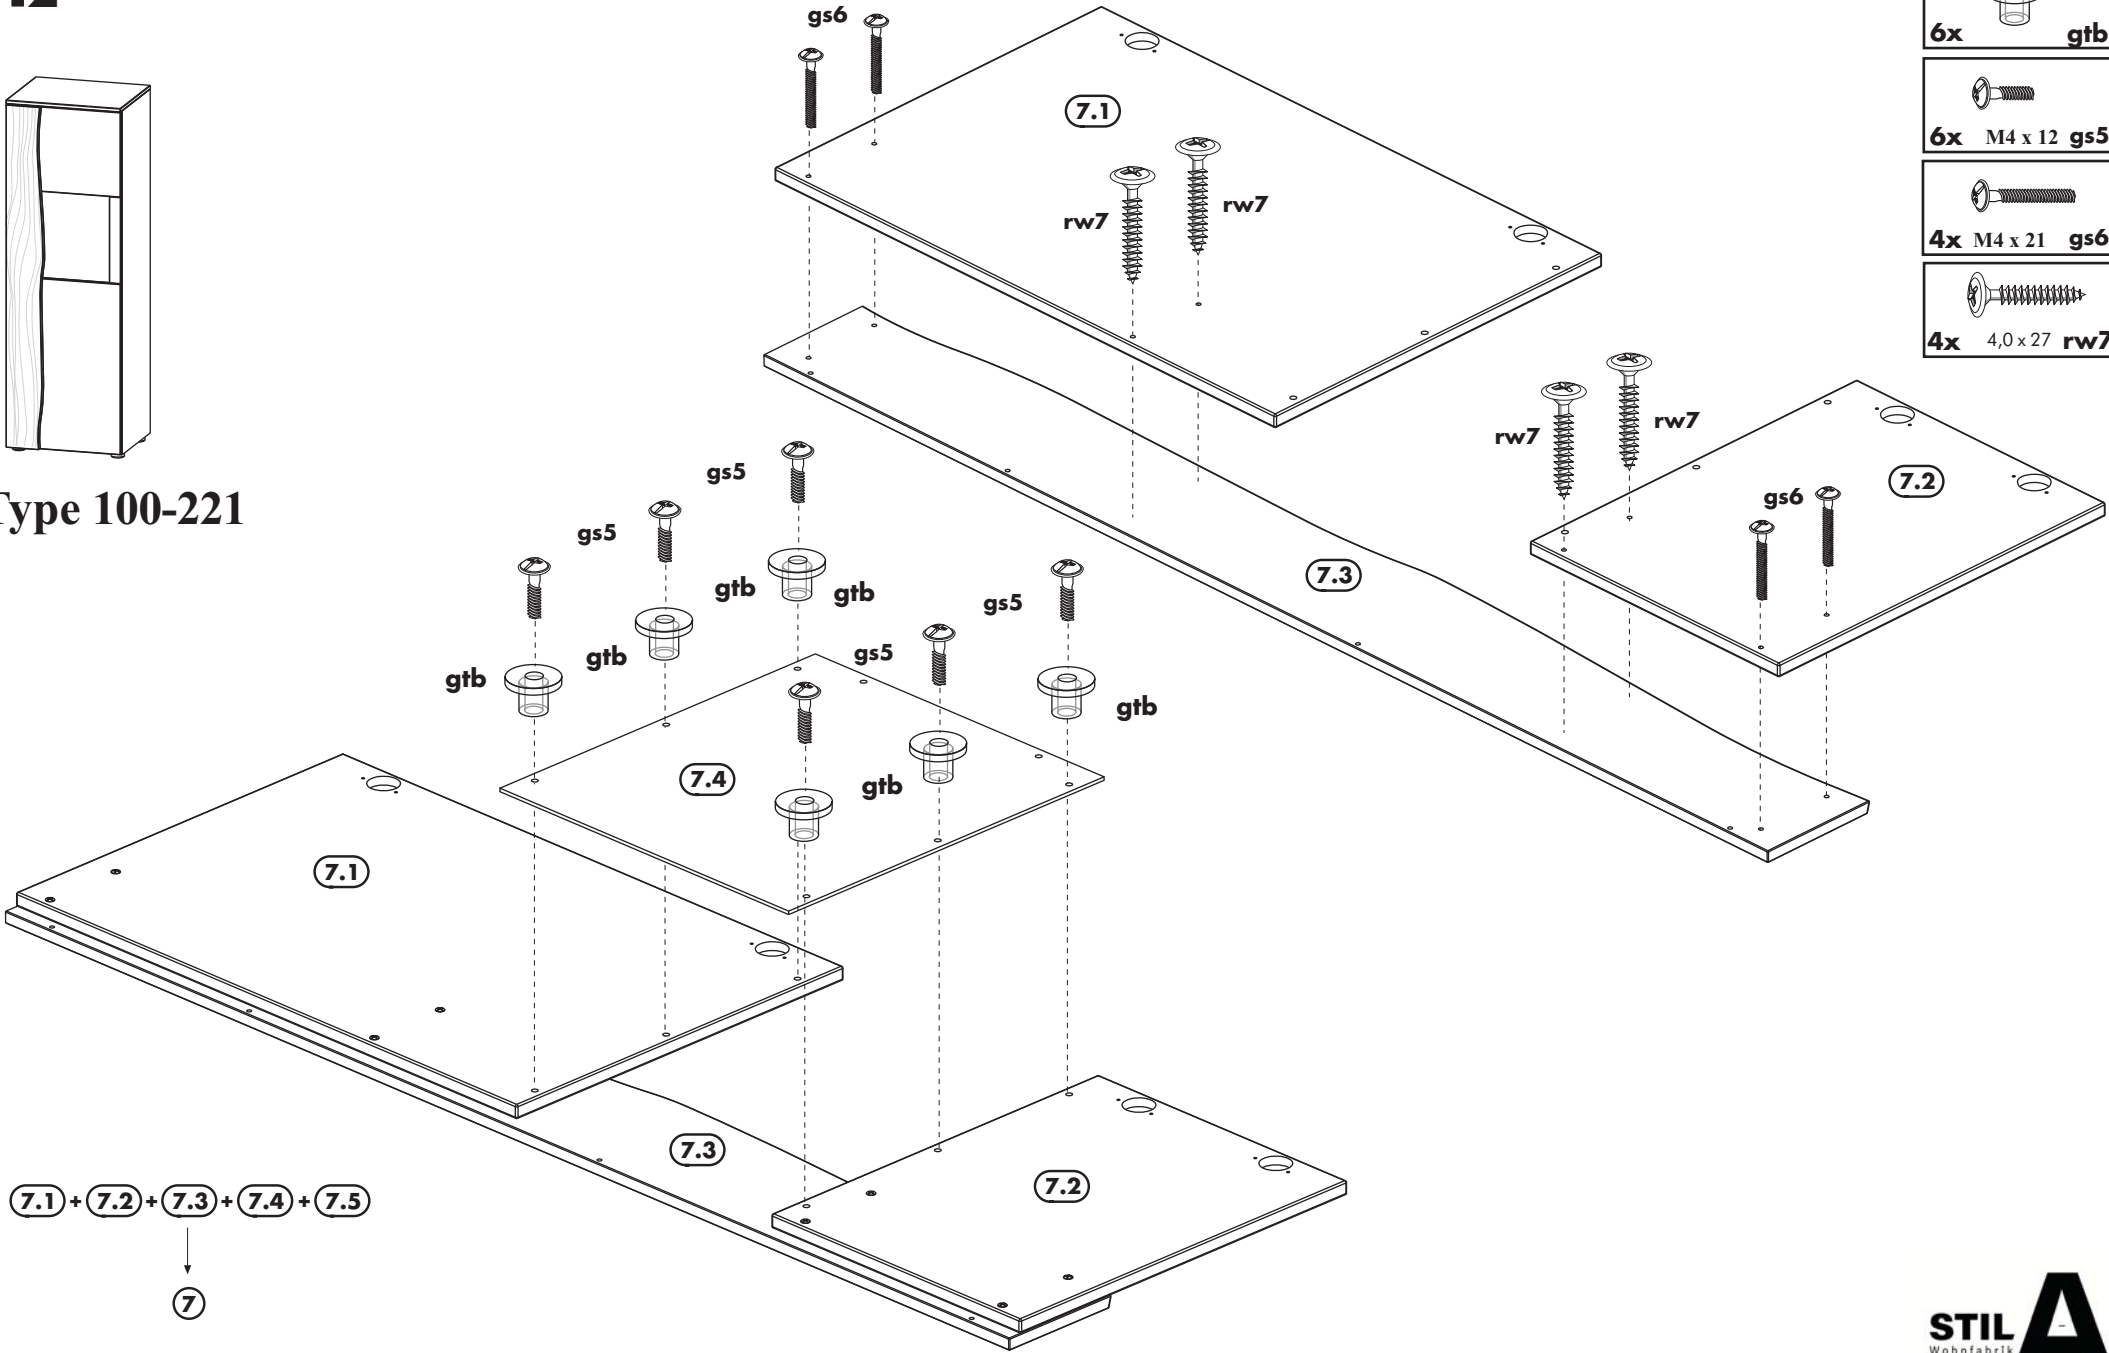


l2

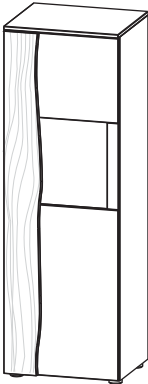
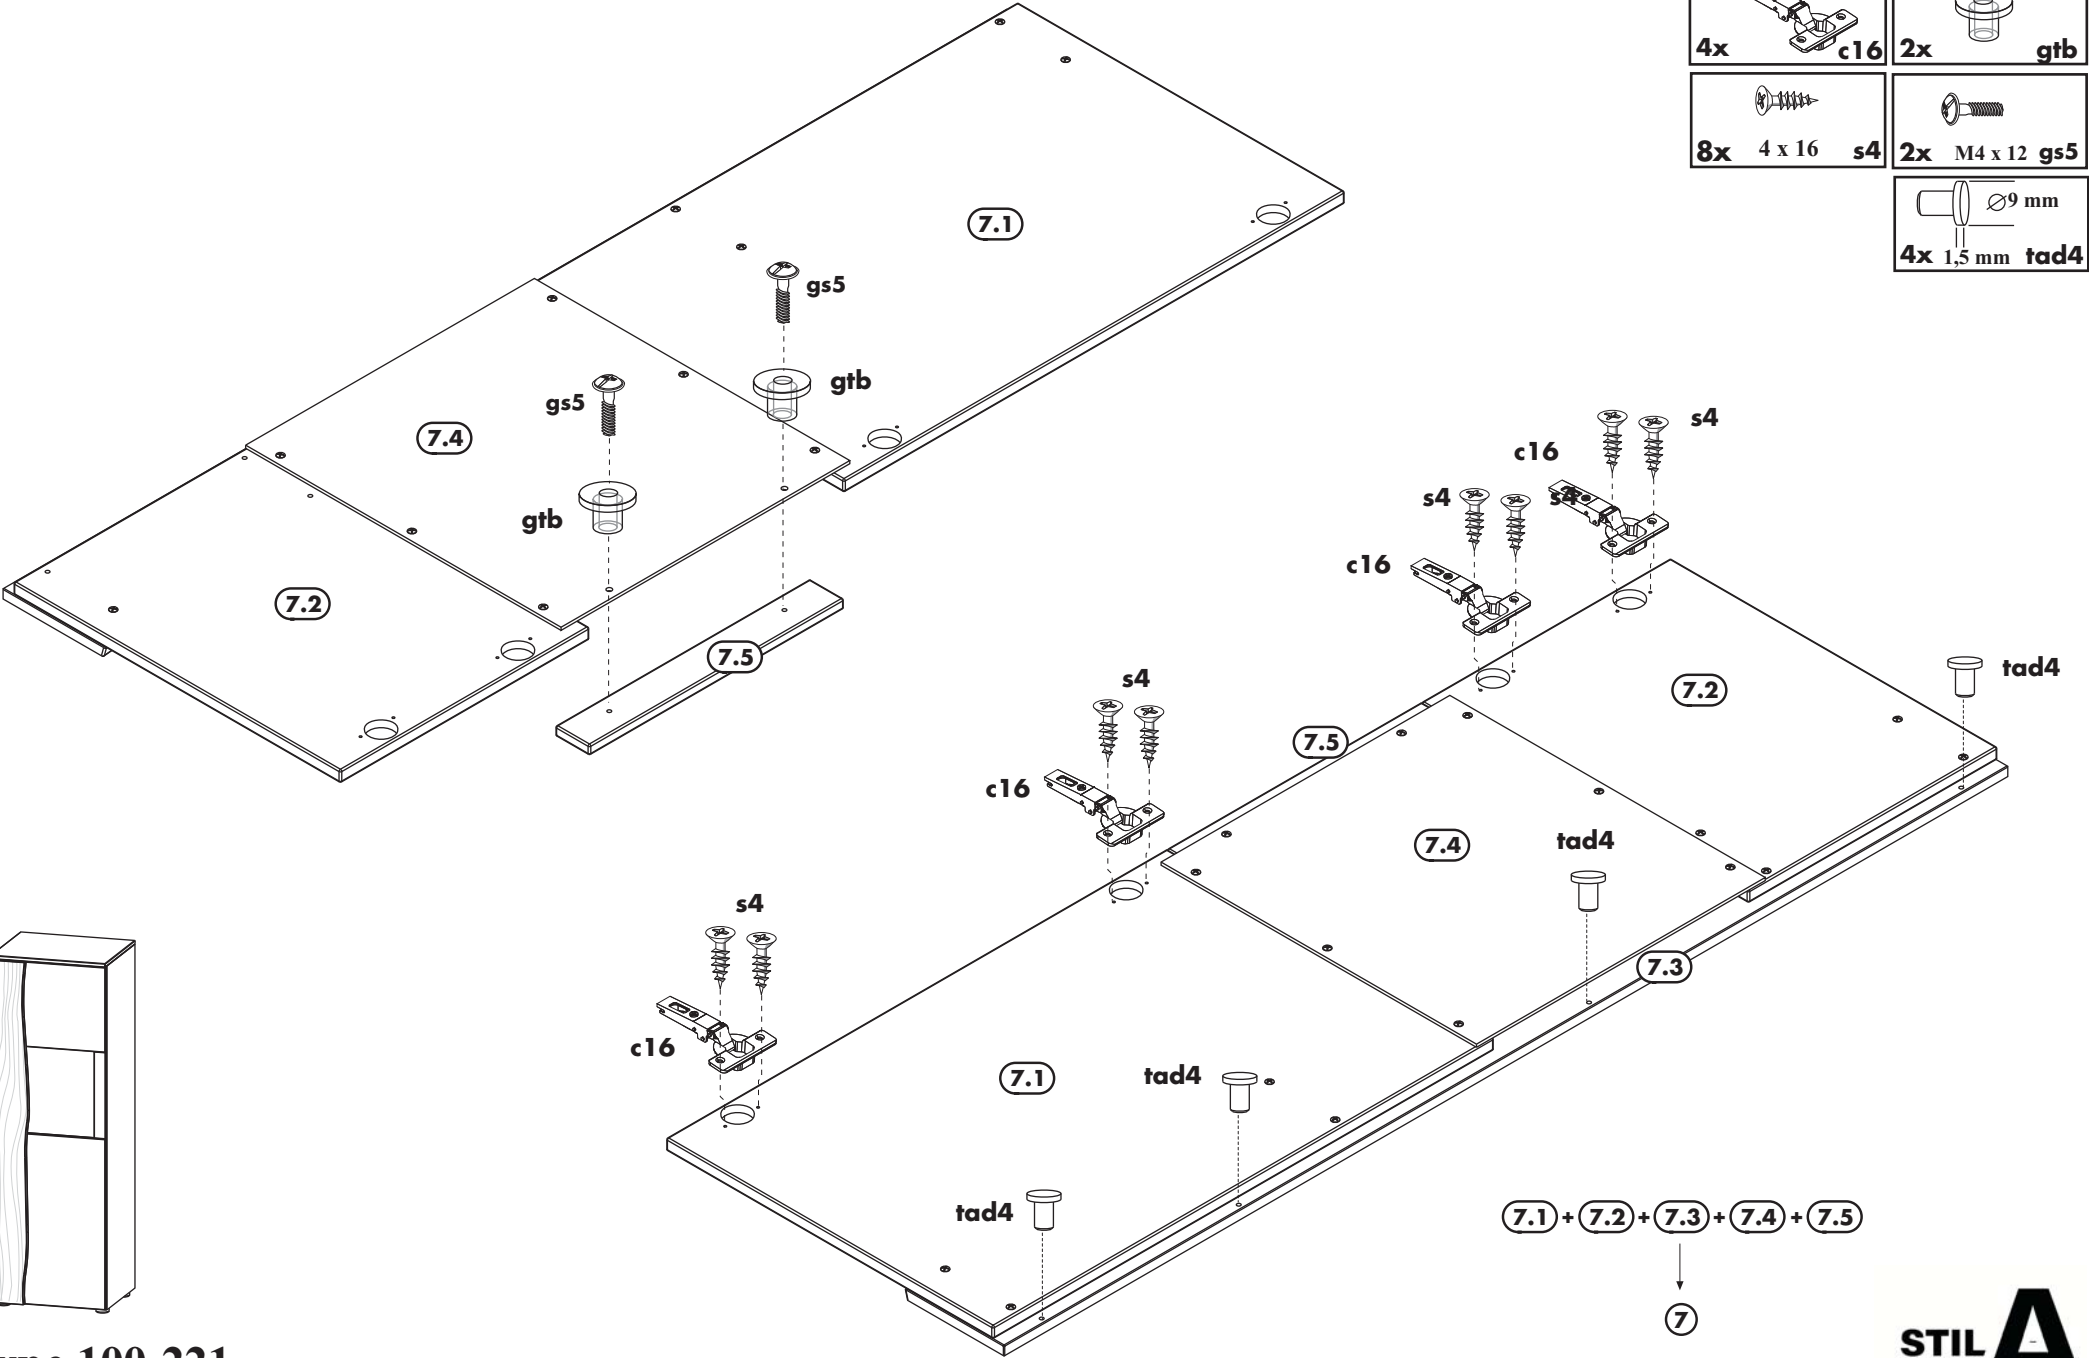


Type 100-221


J

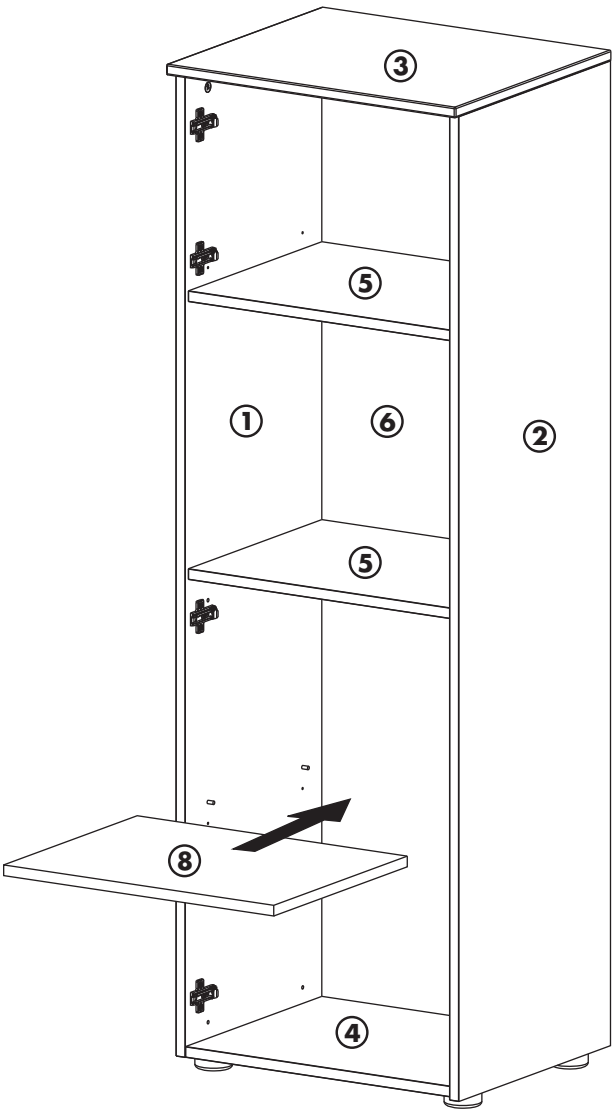

K

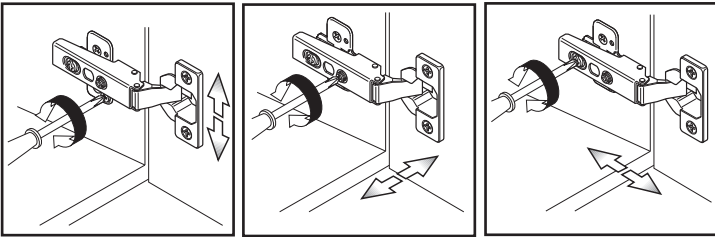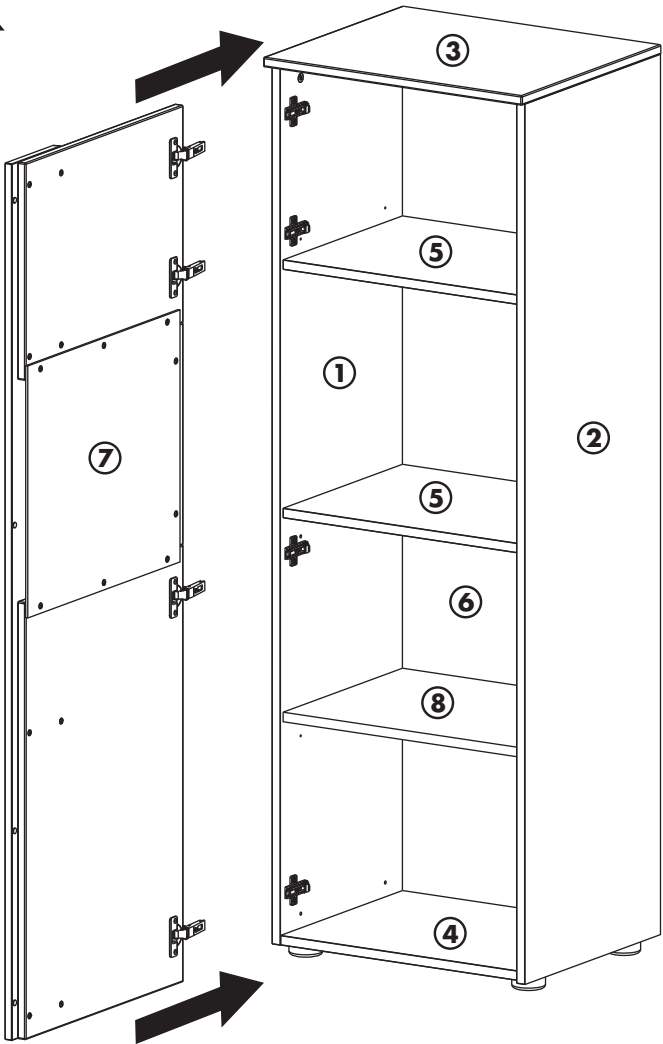


L

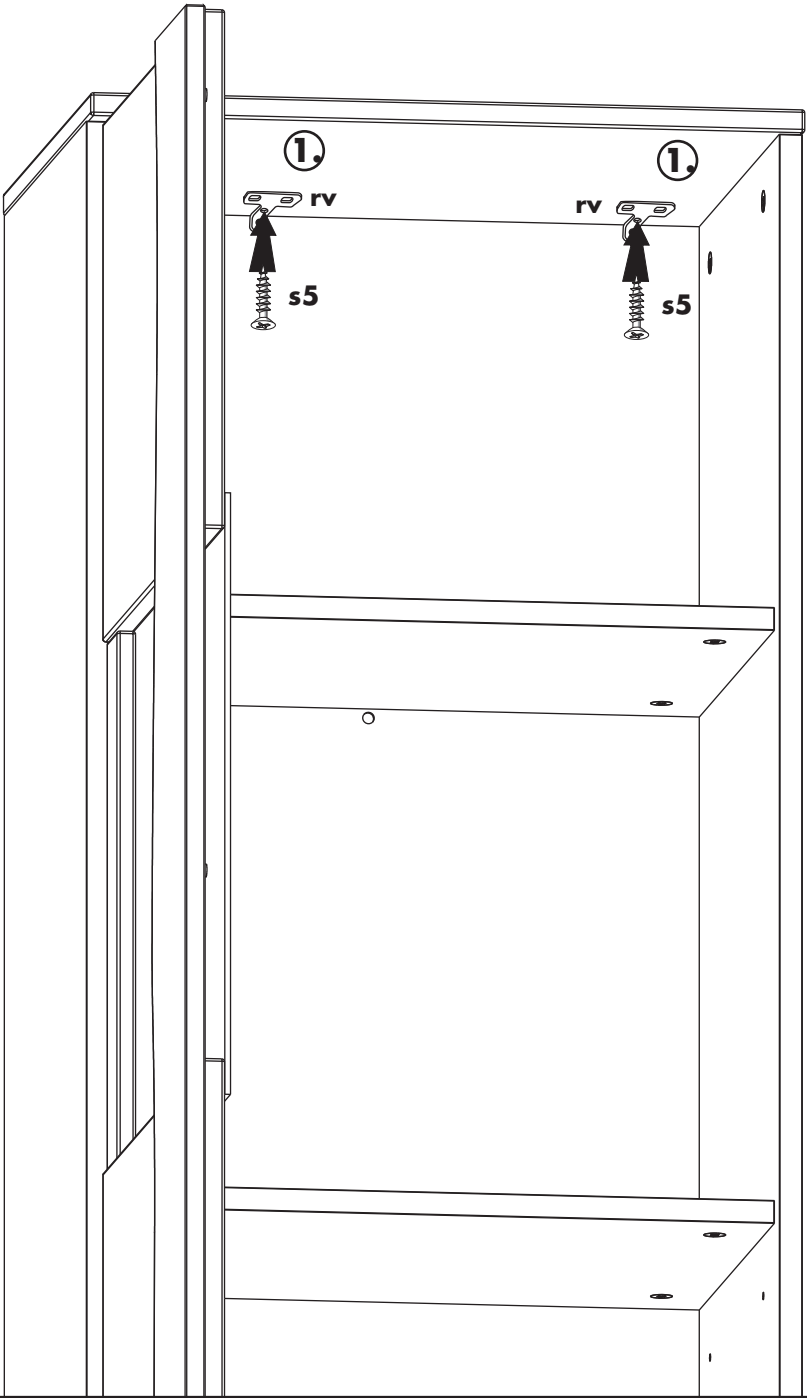

 2x 5 x 100 s28	 2x 3,5 x 15 s5	 2x wd	 2x rv
---	---	--	--

**Kippsicherung
anbringen**
Install anti-tip device

2. Wand markieren
mark wall

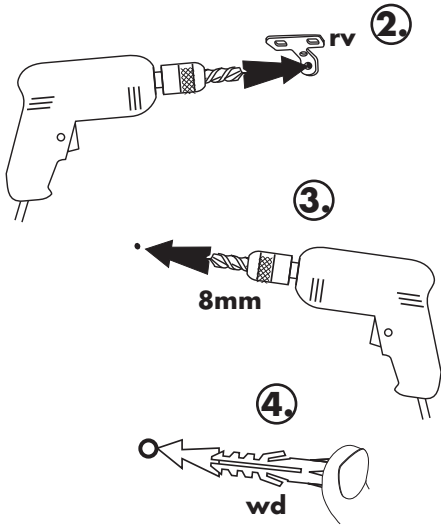

5. Schraube eindrehen
Mount screw

