



Type 135 Type 136

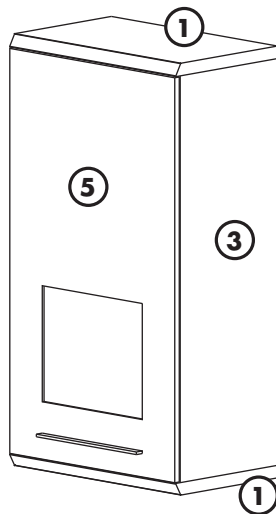

Sie brauchen:
You need:

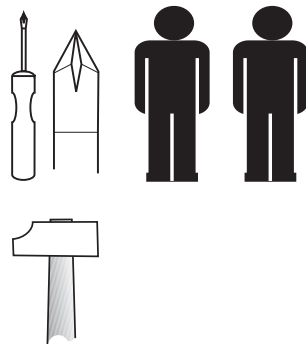

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.

Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.















If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture .

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.





After assembly keep these instructions in a safe place, you may need them sometime later!

Only clean with a duster or damp cloth.
Don't use strong detergents or solvents.


Beschlagliste Fittings

8x  13 mm a3	12x 8 x 40  p1	8x  rh	2x M4 x 23  gs3	1x  ak1
14x 4 x 16  s4	6 x  ak	3x  d4	3x  c3	8x  ak2
8x 3 x 20  s7	2 x 3 x 20  rw1	8x  e2	1x 422 mm  gr4	8x 4,5 x 40  s26
1x  light line ³	8x  tab			

Beschlagliste Fittings

4x  5,5 x 60 zks	2x 3,0 x 20  s7	1x  hbr	1x  hbl
4x  hbak	2x  hbw	4x  wd	

A

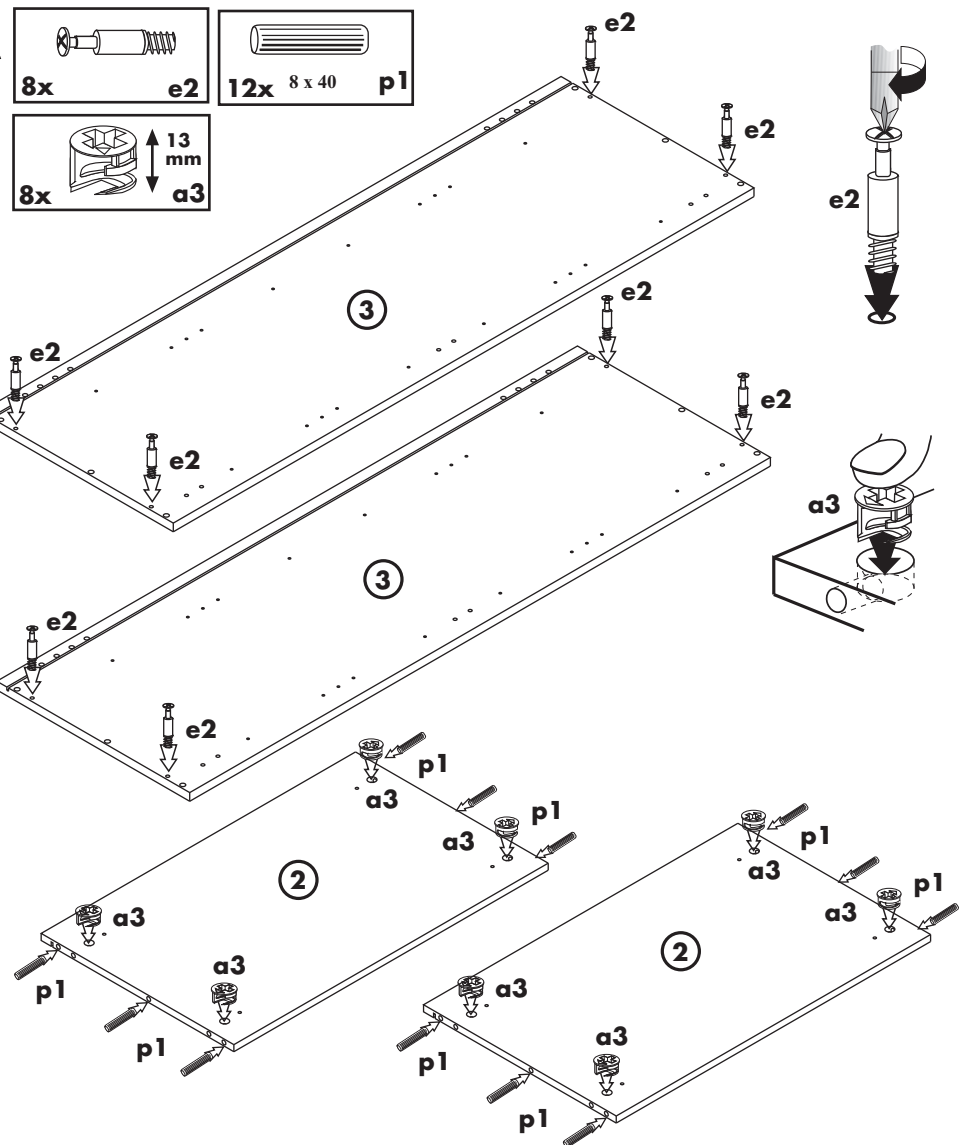

DIE HAUSMARKE

B

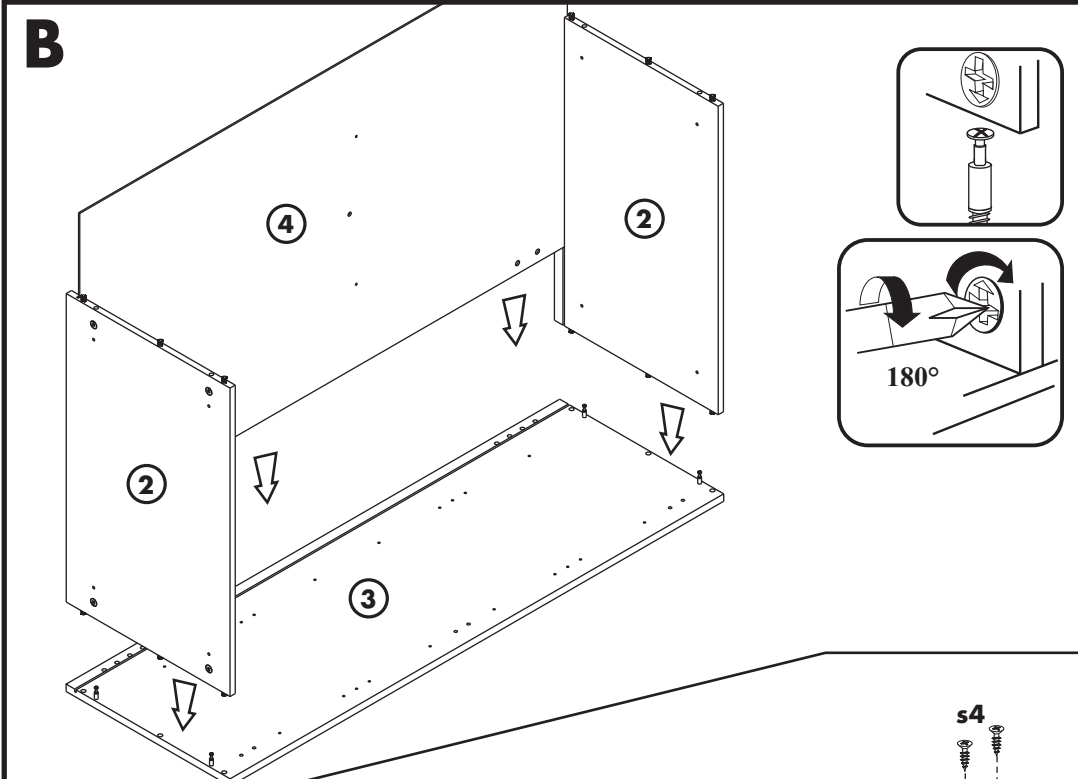


Diagram B shows the assembly of side panels 2 and 4 onto the base 3. Arrows indicate the direction of movement. Insets show a close-up of a cam bolt being inserted into a hole and a 180-degree rotation of a cam lock.

C

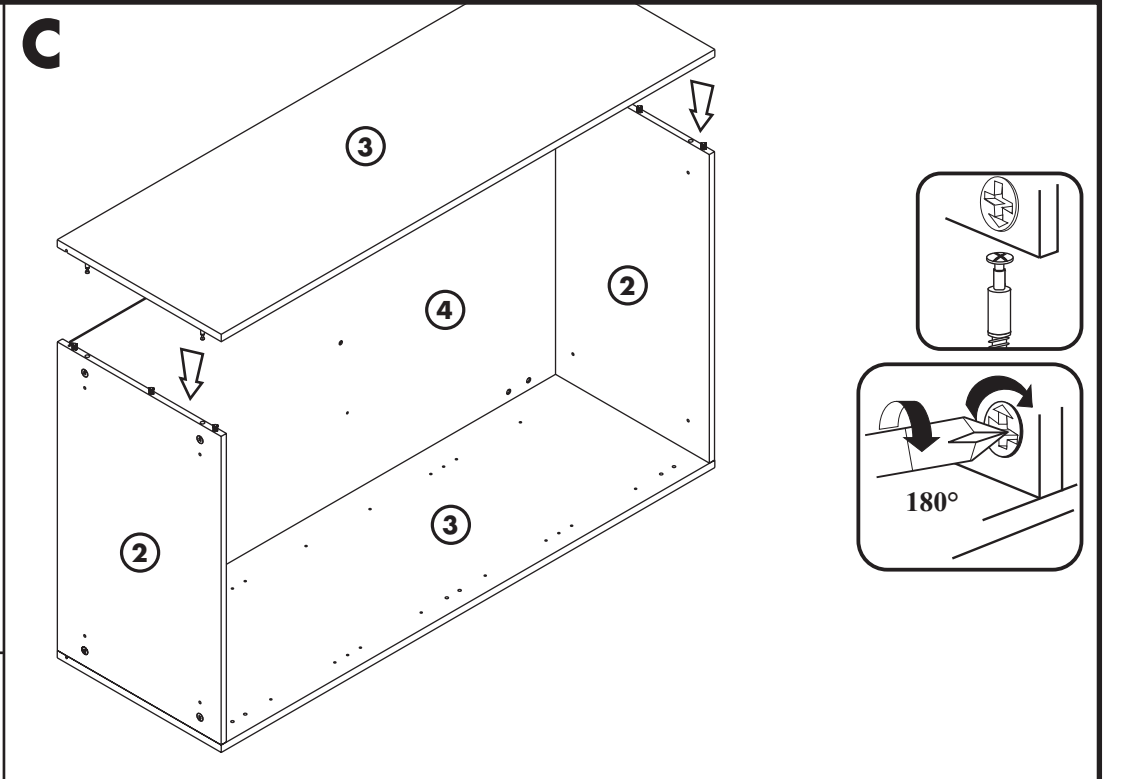


Diagram C shows the assembly of the top panel 3 onto the side panels 2 and 4. Arrows indicate the direction of movement. Insets show a close-up of a cam bolt being inserted into a hole and a 180-degree rotation of a cam lock.

D


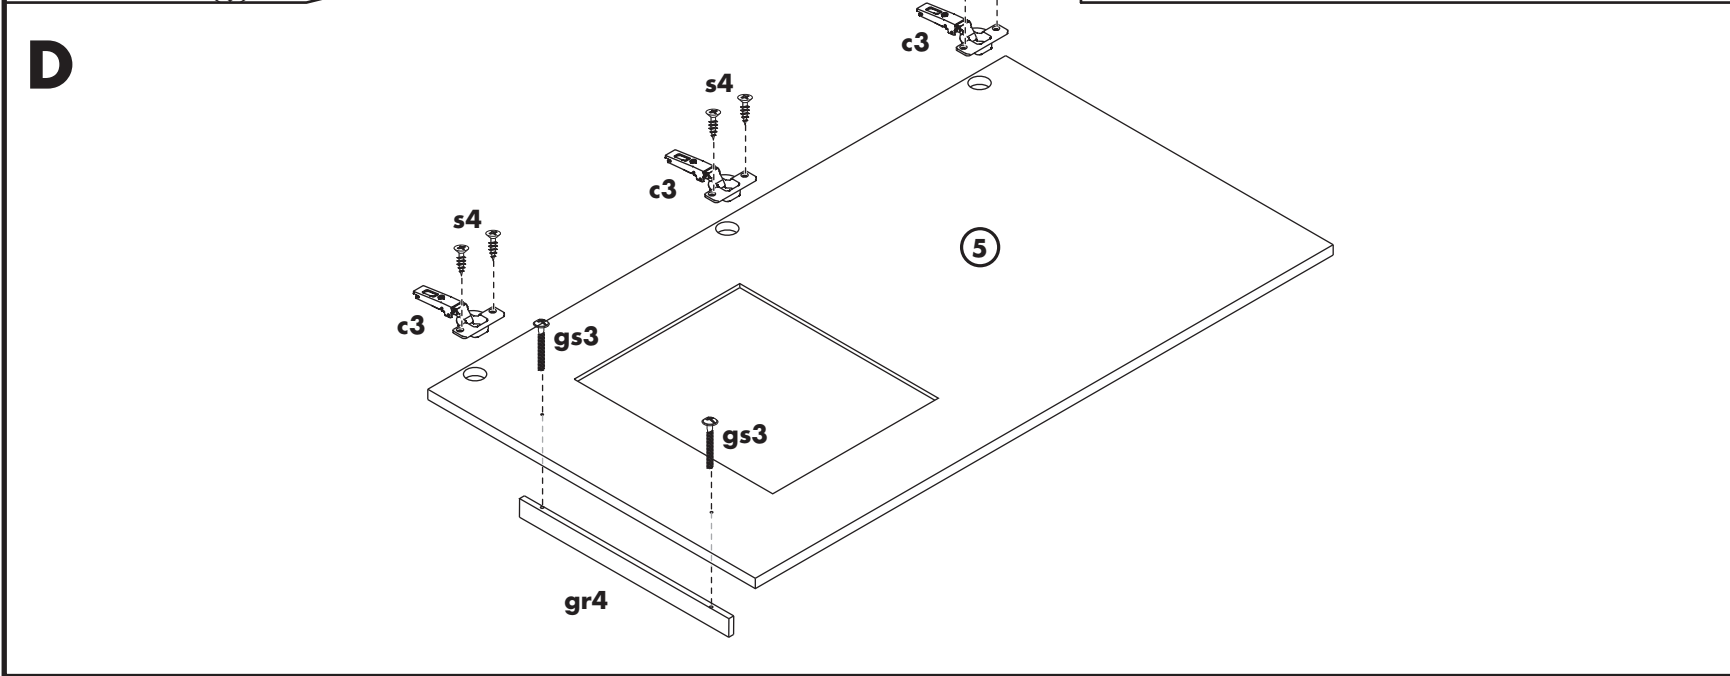


Diagram D shows the assembly of the bottom panel 5 onto the side panels 2 and 4. Arrows indicate the direction of movement. Insets show a close-up of a cam bolt being inserted into a hole and a 180-degree rotation of a cam lock.

 6x 4 x 16 s4	 2x M4 x 23 gs3
 1x 422 mm gr4	
 3x c3	

 DIE HAUSMARKE

E

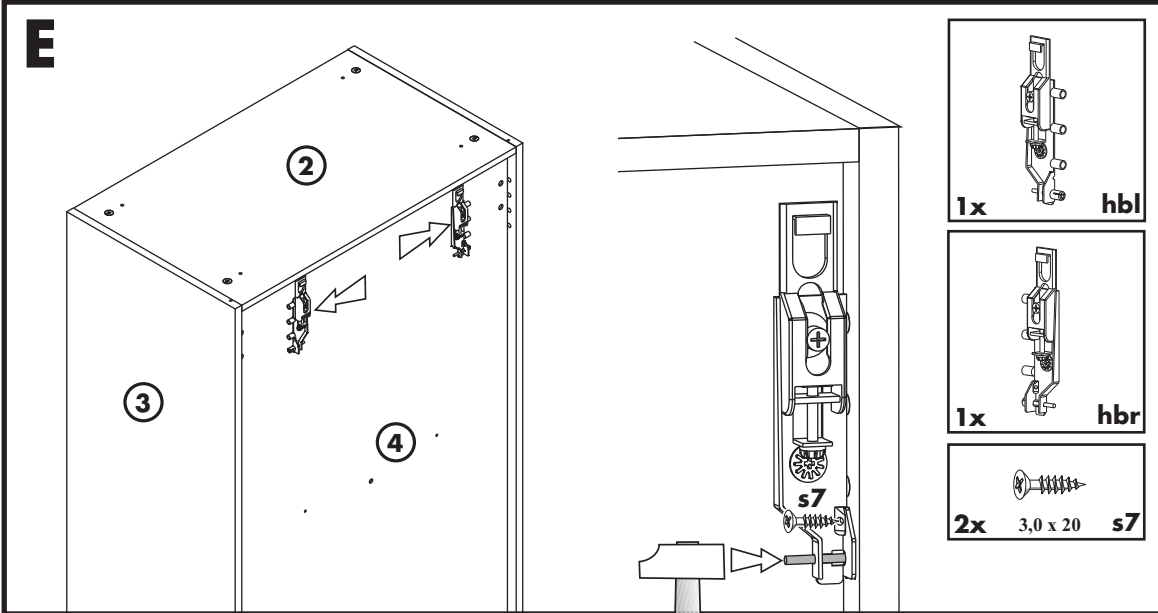


1x hbl

1x hbr

2x 3,0 x 20 s7


G

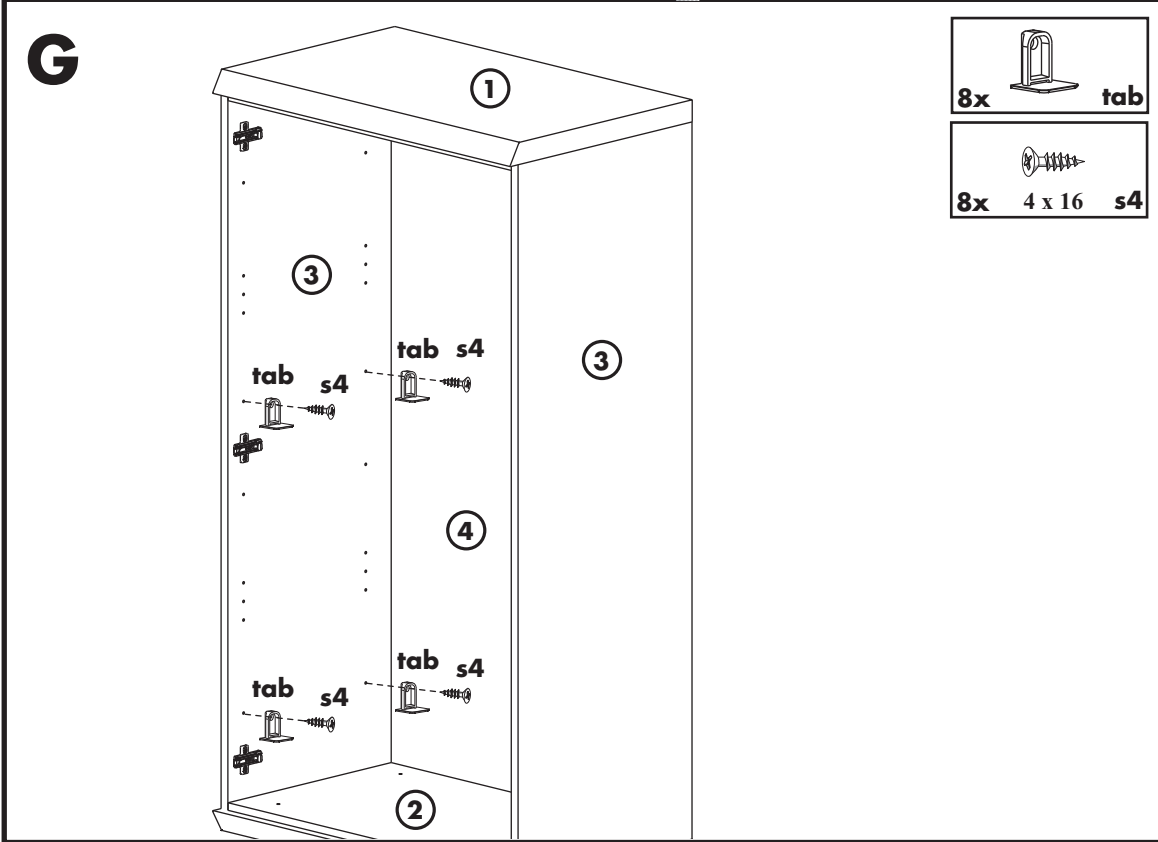

8x tab

8x 4 x 16 s4

F

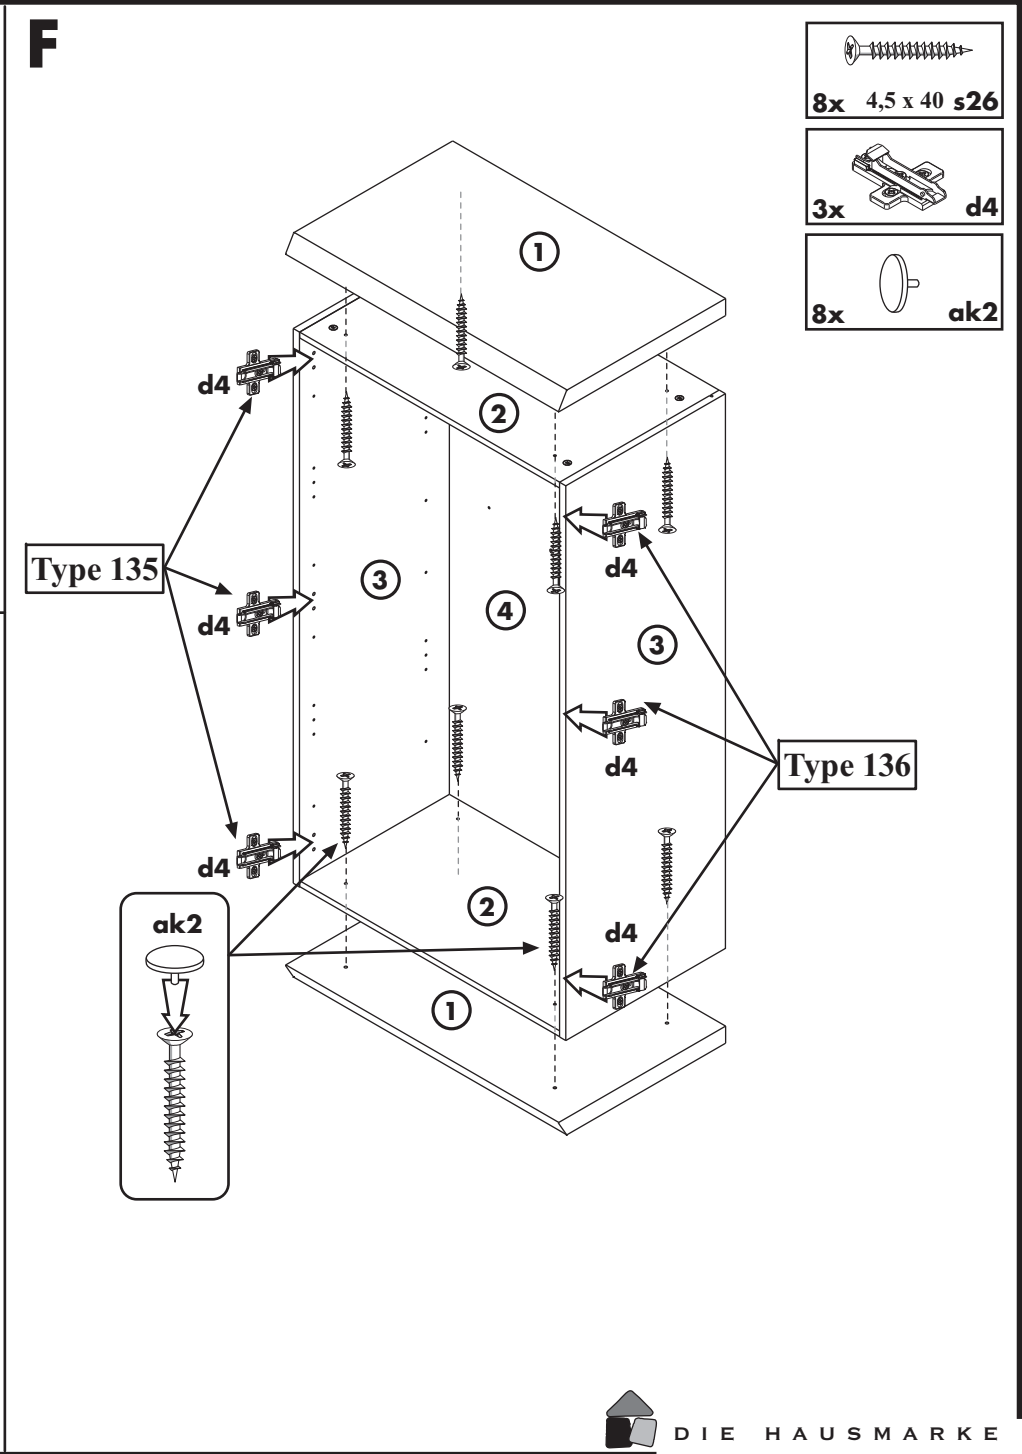

8x 4,5 x 40 s26

3x d4

8x ak2

Type 135

Type 136

ak2



s26



DIE HAUSMARKE


H

6 x  ak








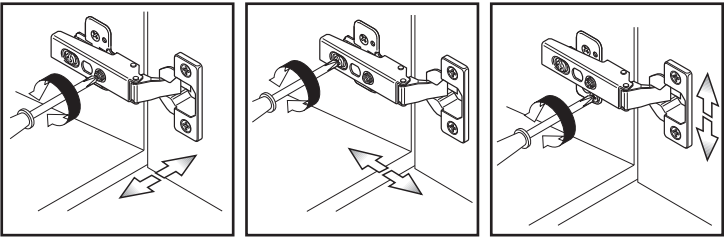
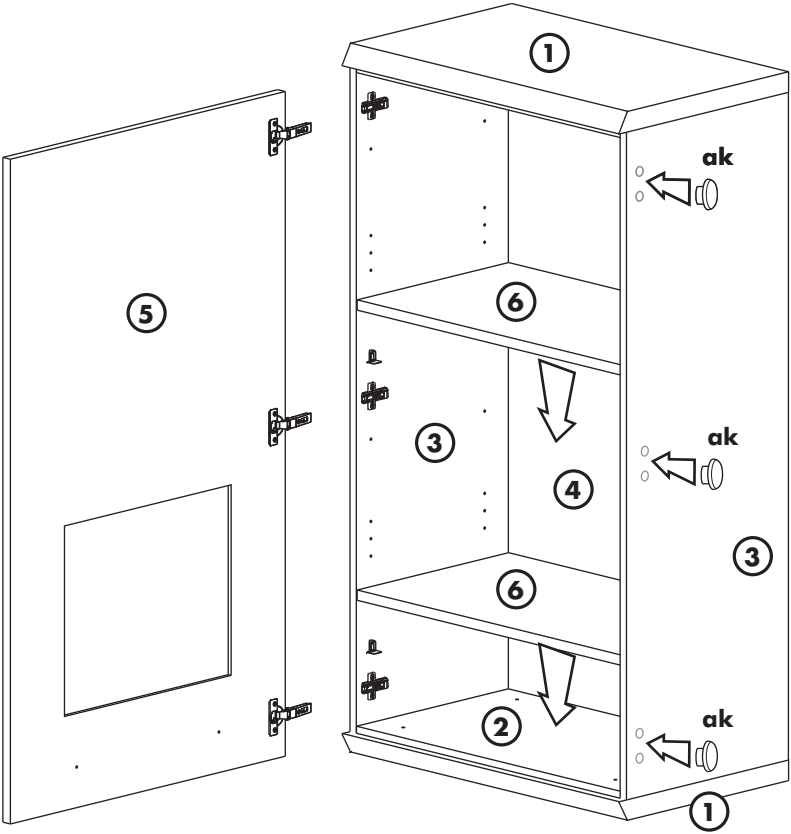


I



2 x  3 x 20 rw1
8 x  rh
8 x  3 x 20 s7

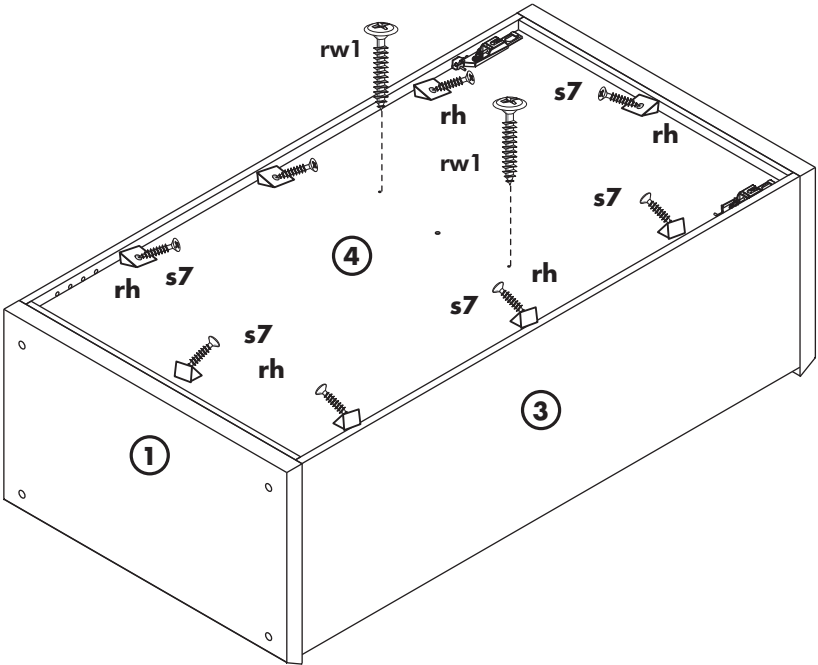

J

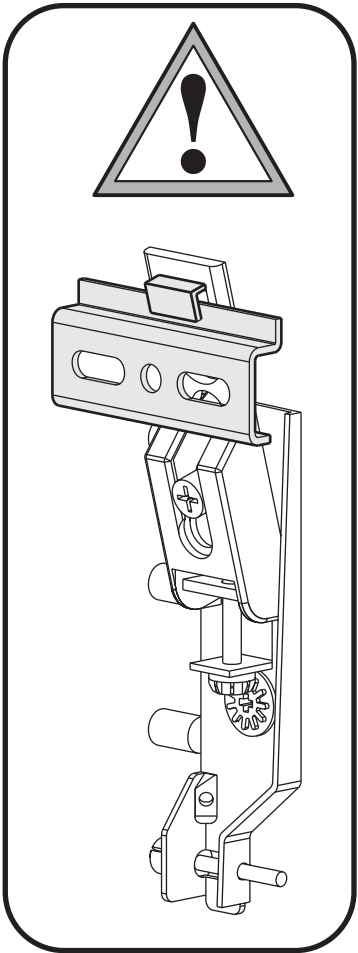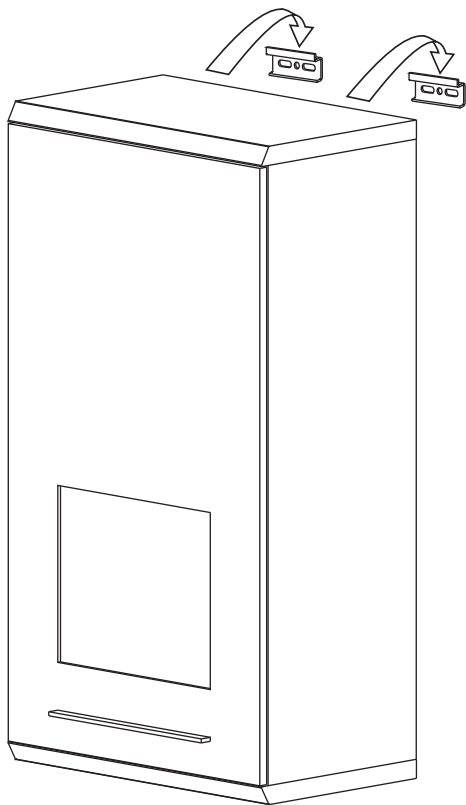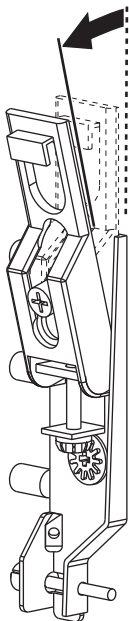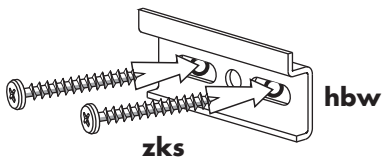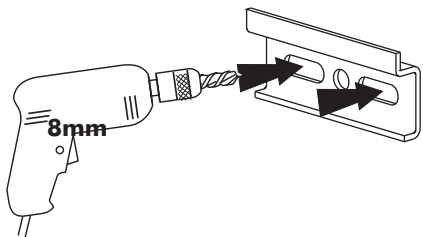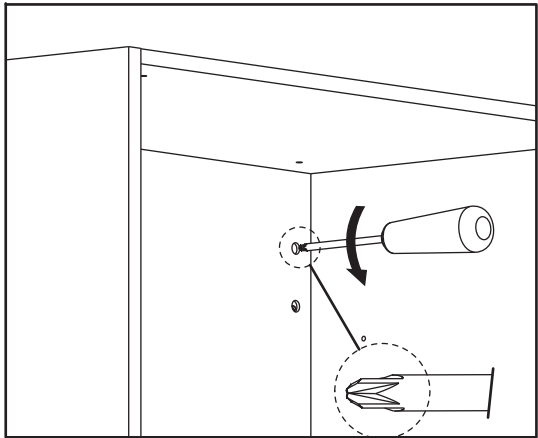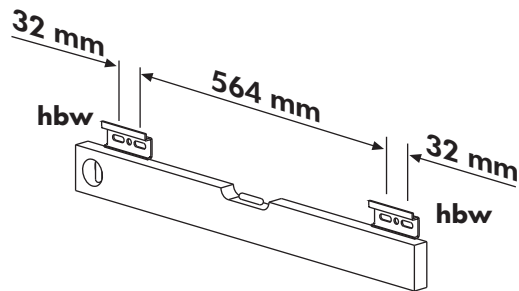

K

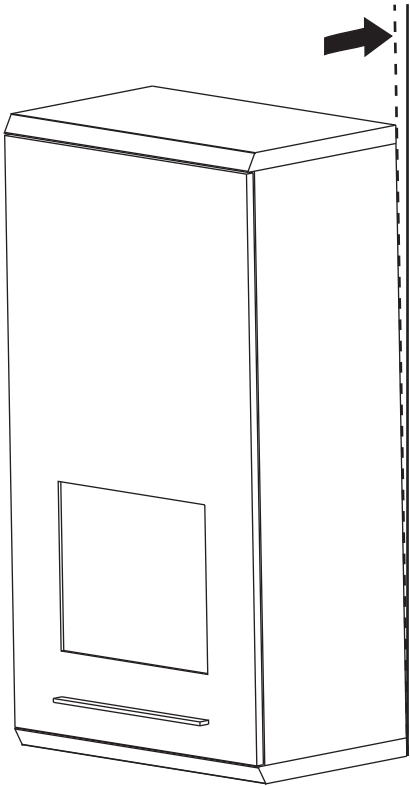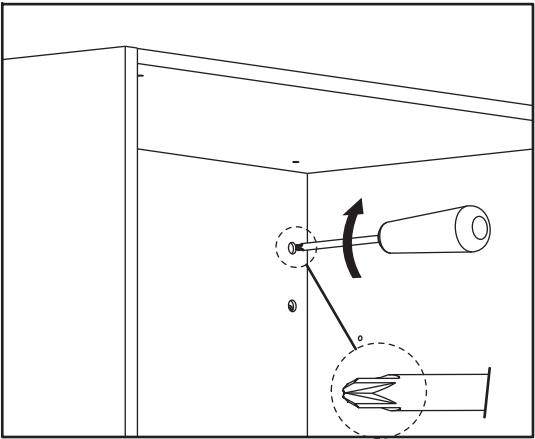

**Bitte überzeugen
Sie sich nach der
Montage davon,
dass das Element
sicher montiert
wurde**

**After assembly,
please ensure
that the element
has been safely
mounted**

