
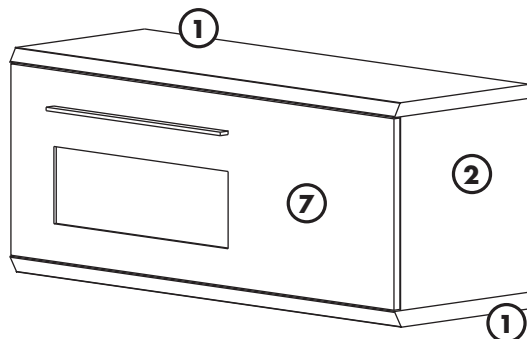


Type 185

Sie brauchen:
You need:

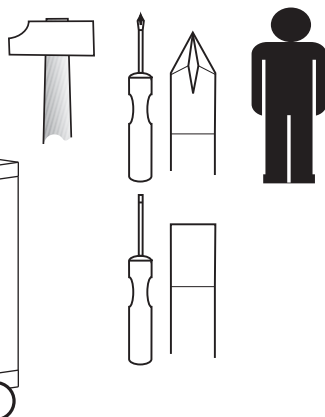

Wichtige Information!

Sehr geehrter Kunde, lesen Sie bitte vor dem Aufbauen die Montageanleitung sorgfältig durch und überprüfen Sie die Vollständigkeit und Richtigkeit der Möbelteile und Beschläge.

Sollte ein Teil fehlen oder beschädigt sein, wenden Sie sich bitte an Ihren Möbelhändler.

Nehmen Sie die Montage, konsequent nach der in der Montageanleitung angegebenen Reihenfolge vor.

Bewahren Sie die Montageanleitung im eigenen Interesse gut auf!

Nur mit einem Staubtuch oder feuchtem Lappen reinigen.
Keine scheuernde Putzmittel verwenden.

Important Information!

Dear customer, before you start please read through these instructions and make sure that all the pieces and fittings mentioned are there.











If a piece should be missing or damaged, report this to the store where you purchased this piece of furniture.

Assemble your piece of new furniture using the assembly instructions one step at a time as shown.

After assembly keep these instructions in a safe place, you may need them sometime later!





Only clean with a duster or damp cloth.
Don't use strong detergents or solvents.


Beschlagliste Fittings

8x  13 mm a3	12x  8 x 40 p1	8x  rh	2x  M4 x 23 gs3	1x  ak1
6x  4 x 16 s4	1x  mv	3x  d5	3x  c2	12x  ak2
4x  a4	2x  3 x 20 rw1	4x  M4 x 25 s30	8x  3 x 15 s6	12x  4,5 x 40 s26
12x  e2	2x  3,0 x 17 s15	1x  555 mm gr5	1x  light line ³	
1x  bkr1	1x  bkl1			

CAD und Design Light line 3 185 /05.17

Beschlagliste Fittings

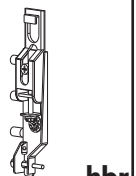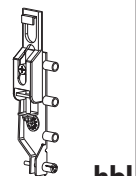4x  5,5 x 60 zks	10x  3,0 x 20 s7	1x  hbr	1x  hbl
4x  hbak	2x  hbw	4x  wd	

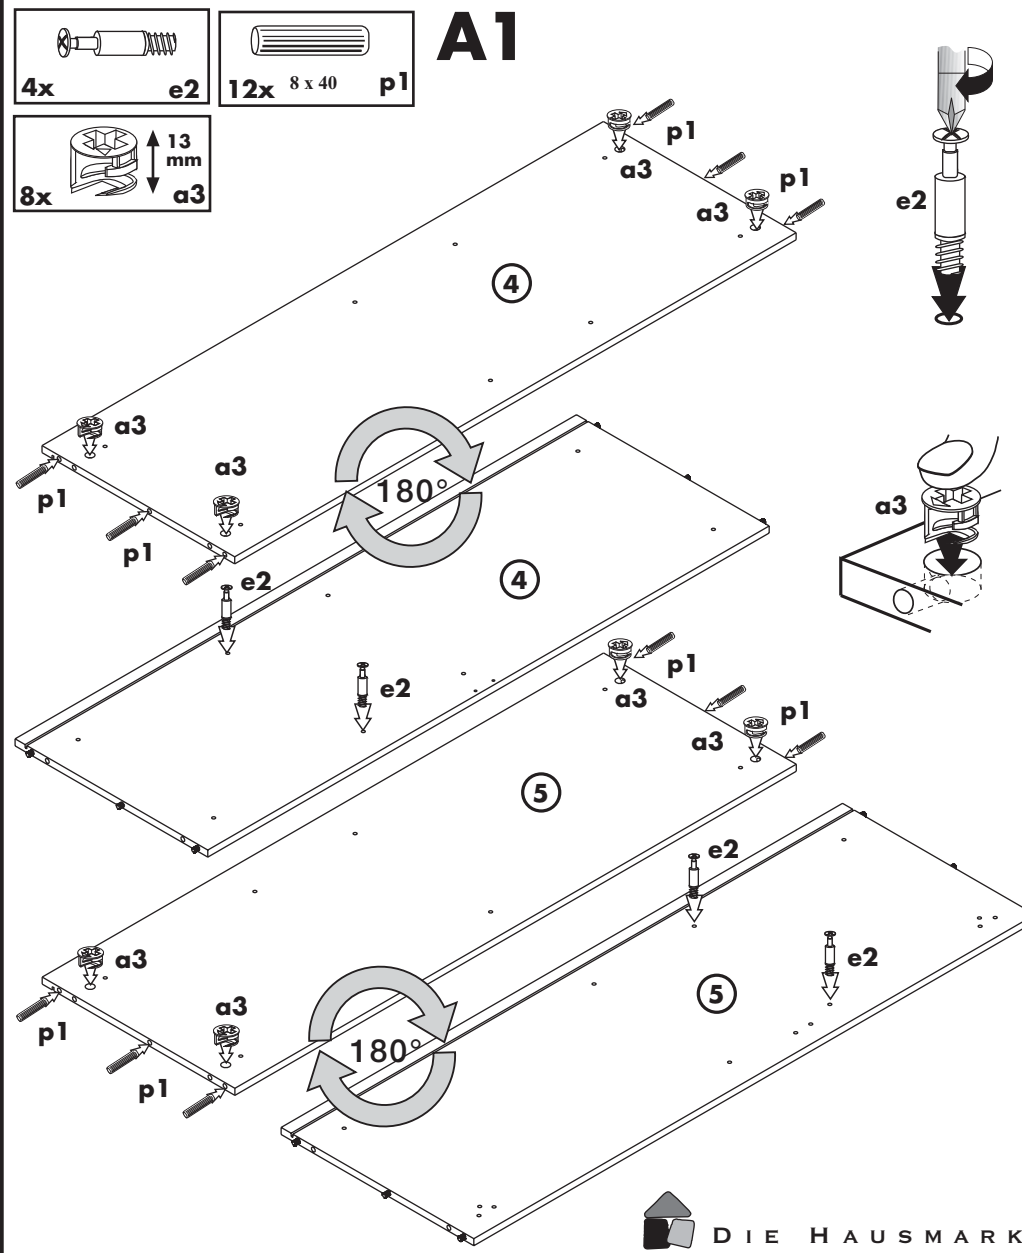

DIE HAUSMARKE

A2

8x **e2**

4x **a4**

2x **2**

a4

e2

C

4

3

6

5

180°

B

6

3

5

D

4

3

6

5

2

180°

E

Diagram E shows the assembly of the bottom panel (2) and side panel (5). The hinges (hbl, hbr) are attached to the side panel (5) using screws (s7). The bottom panel (2) is then attached to the side panel (5) using screws (s7). A hammer icon indicates the use of a hammer.

- 1x hbl
- 1x hbr
- 2x 3,0 x 20 s7

F

Diagram F shows the assembly of the top panel (6) and side panel (5). The hinges (rh) are attached to the side panel (5) using screws (s7). The top panel (6) is then attached to the side panel (5) using screws (rw1).

- 2x 3 x 20 rw1
- 8x rh
- 8x 3,0 x 20 s7


G

Diagram G shows the assembly of the door (3) and side panel (5). The hinges (bkl1) are attached to the side panel (5) using screws (s30). The door (3) is then attached to the side panel (5) using screws (s30). A callout shows the attachment of the hinge (mv) to the door (3) using screws (s15).

- 1x bkr1
- 1x bkl1
- 4x M4 x 25 s30
- 1x mv
- 2x 3,0 x 17 s15


H

**6x** 4 x 16 **s4**


**3x** **c2**


**2x** 3 x 15 **s6**

**1x** **mv**

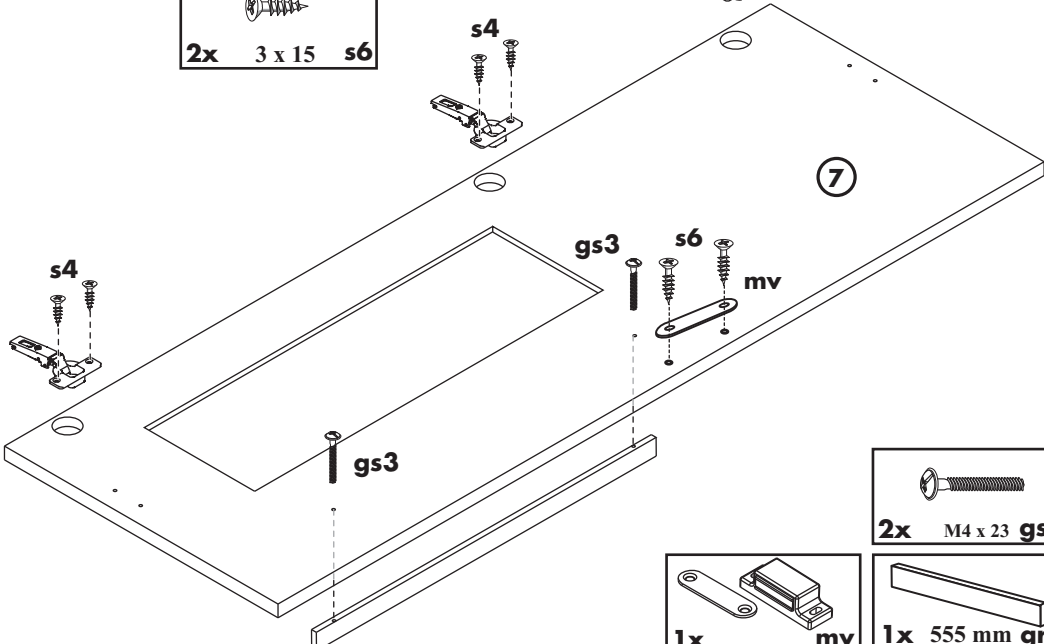



**2x** M4 x 23 **gs3**

**1x** **mv**


**1x** 555 mm **gr5**

J

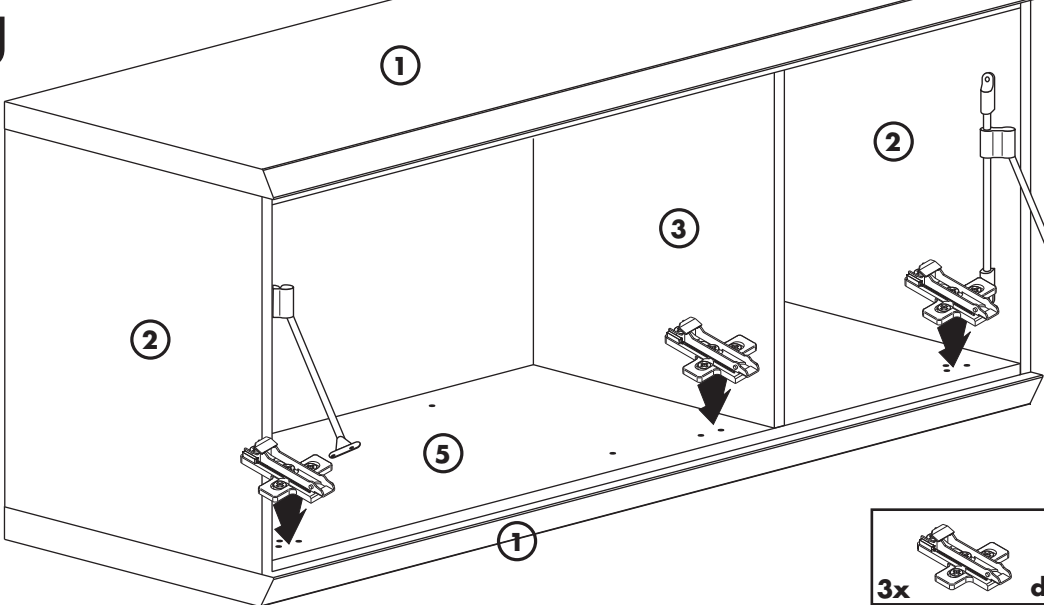


**3x** **d5**

I

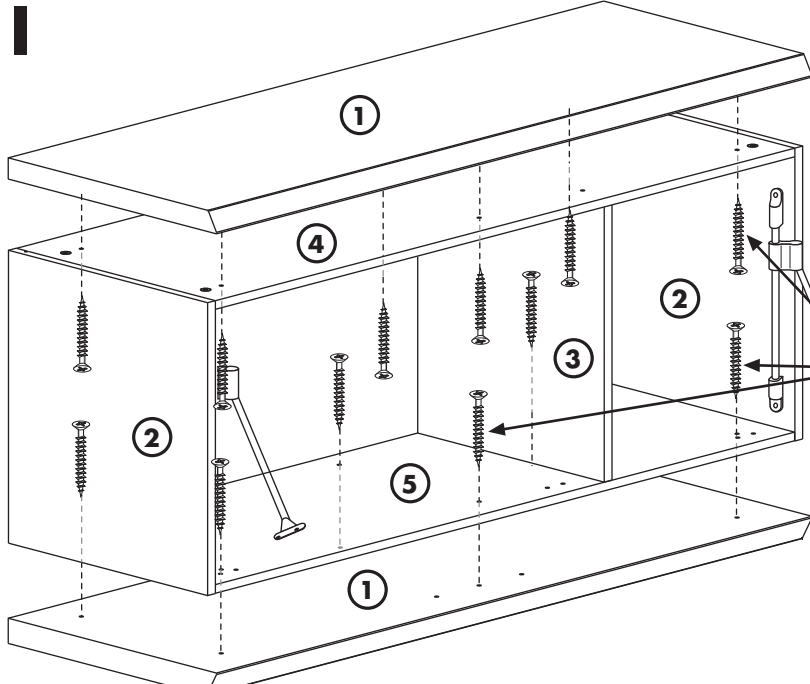


**12x** 4,5 x 40 **s26**


**12x** **ak2**









K

**6x** 3 x 15 **s6**

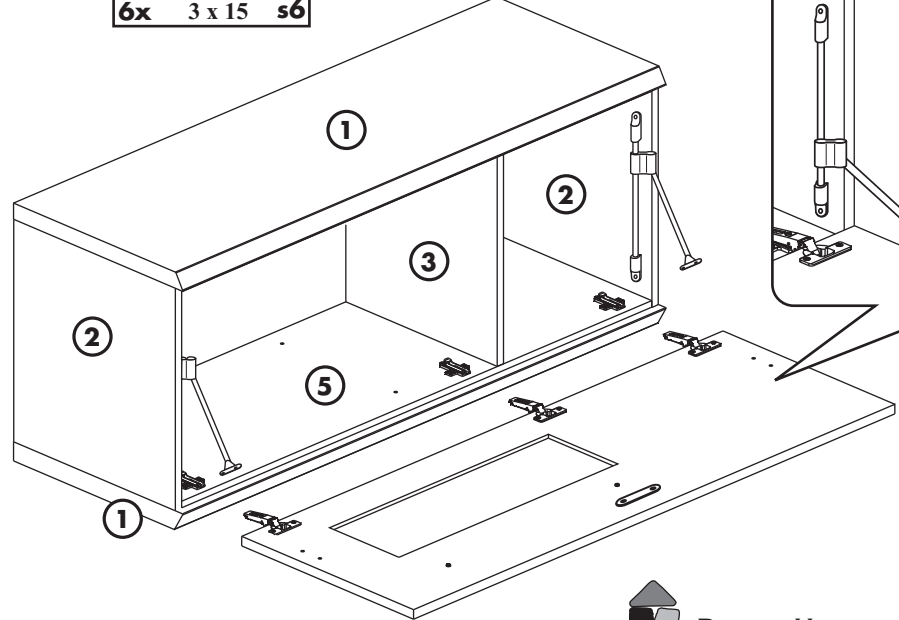


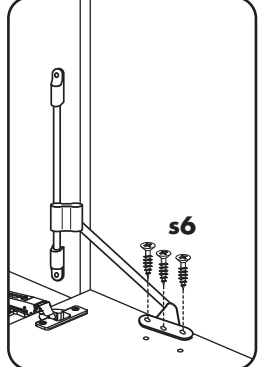


L

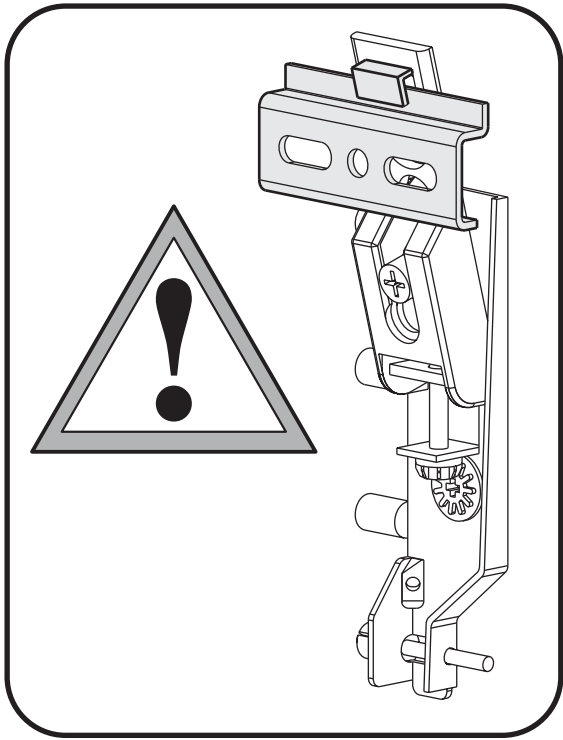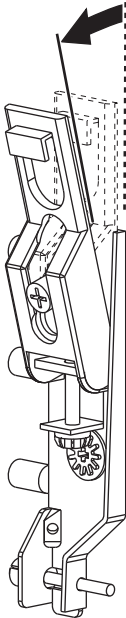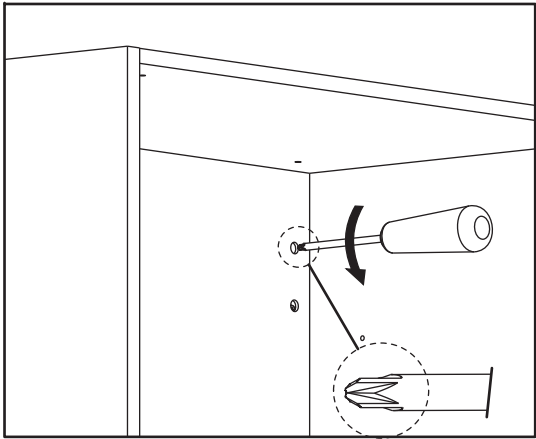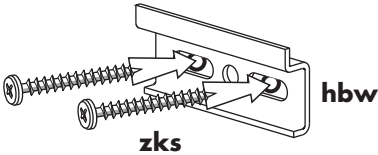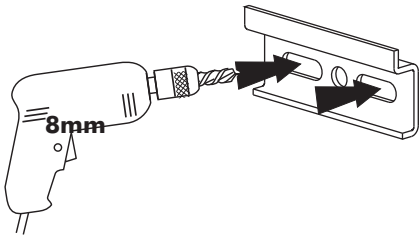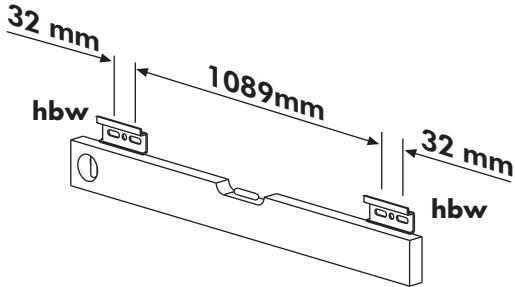

- 4x 5,5 x 60 zks
- 4x wd
- 2x hbw

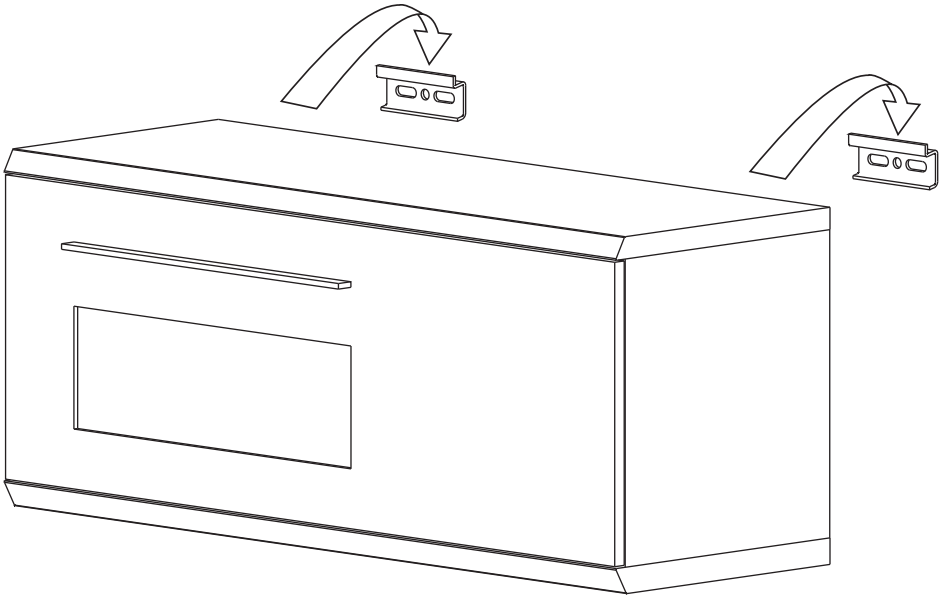

M

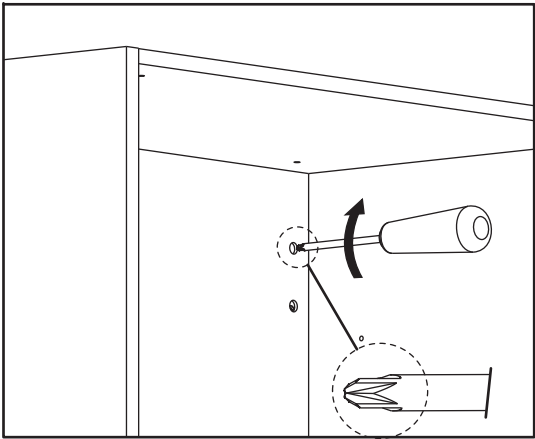

Bitte überzeugen
Sie sich nach der
Montage davon,
dass das Element
sicher montiert
wurde

After assembly,
please ensure
that the element
has been safely
mounted

- 1x light line³
- 1x ak1
- 4x hbak

